 
 
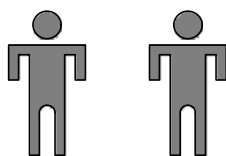 
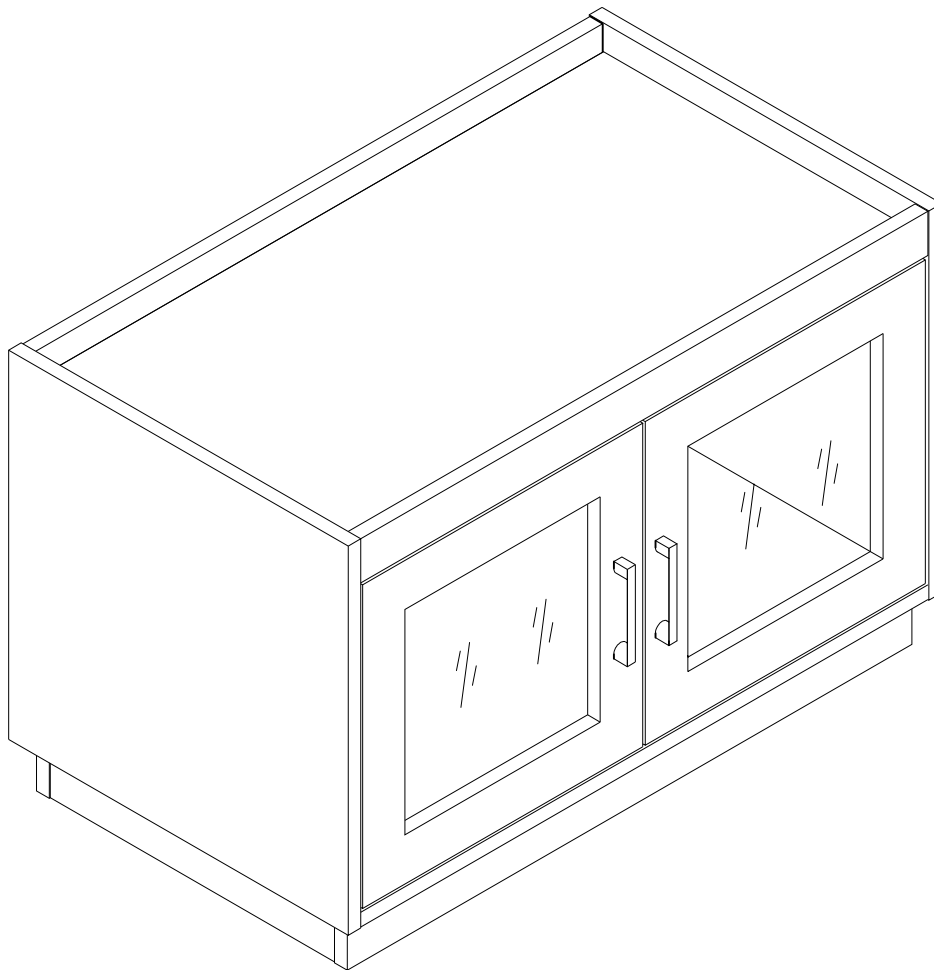 
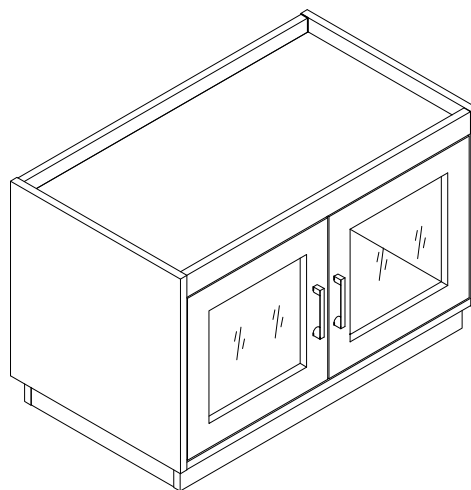 
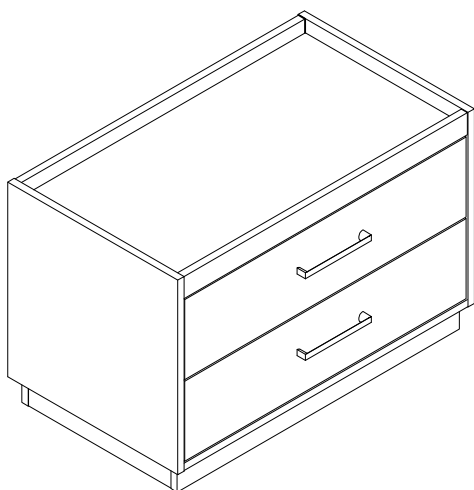 



ASSEMBLY INSTRUCTIONS

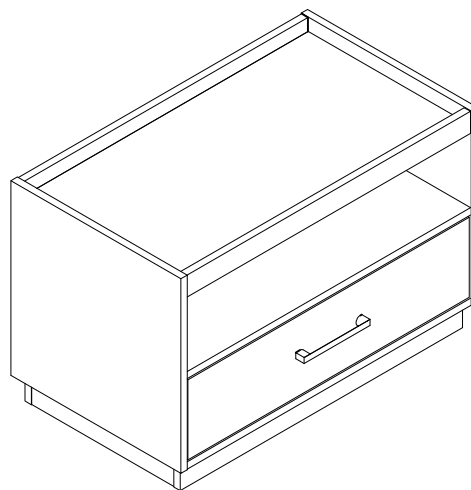









2 people for assembly

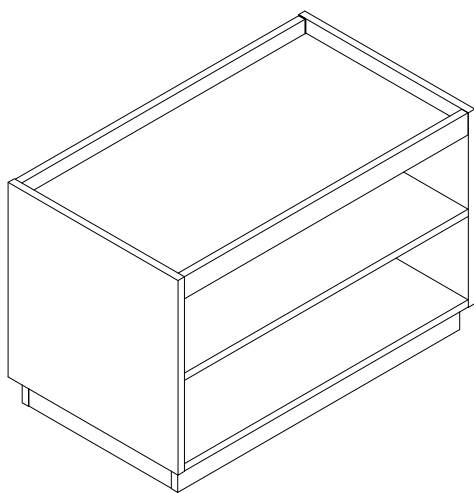

 
PACKAGE INCLUDE

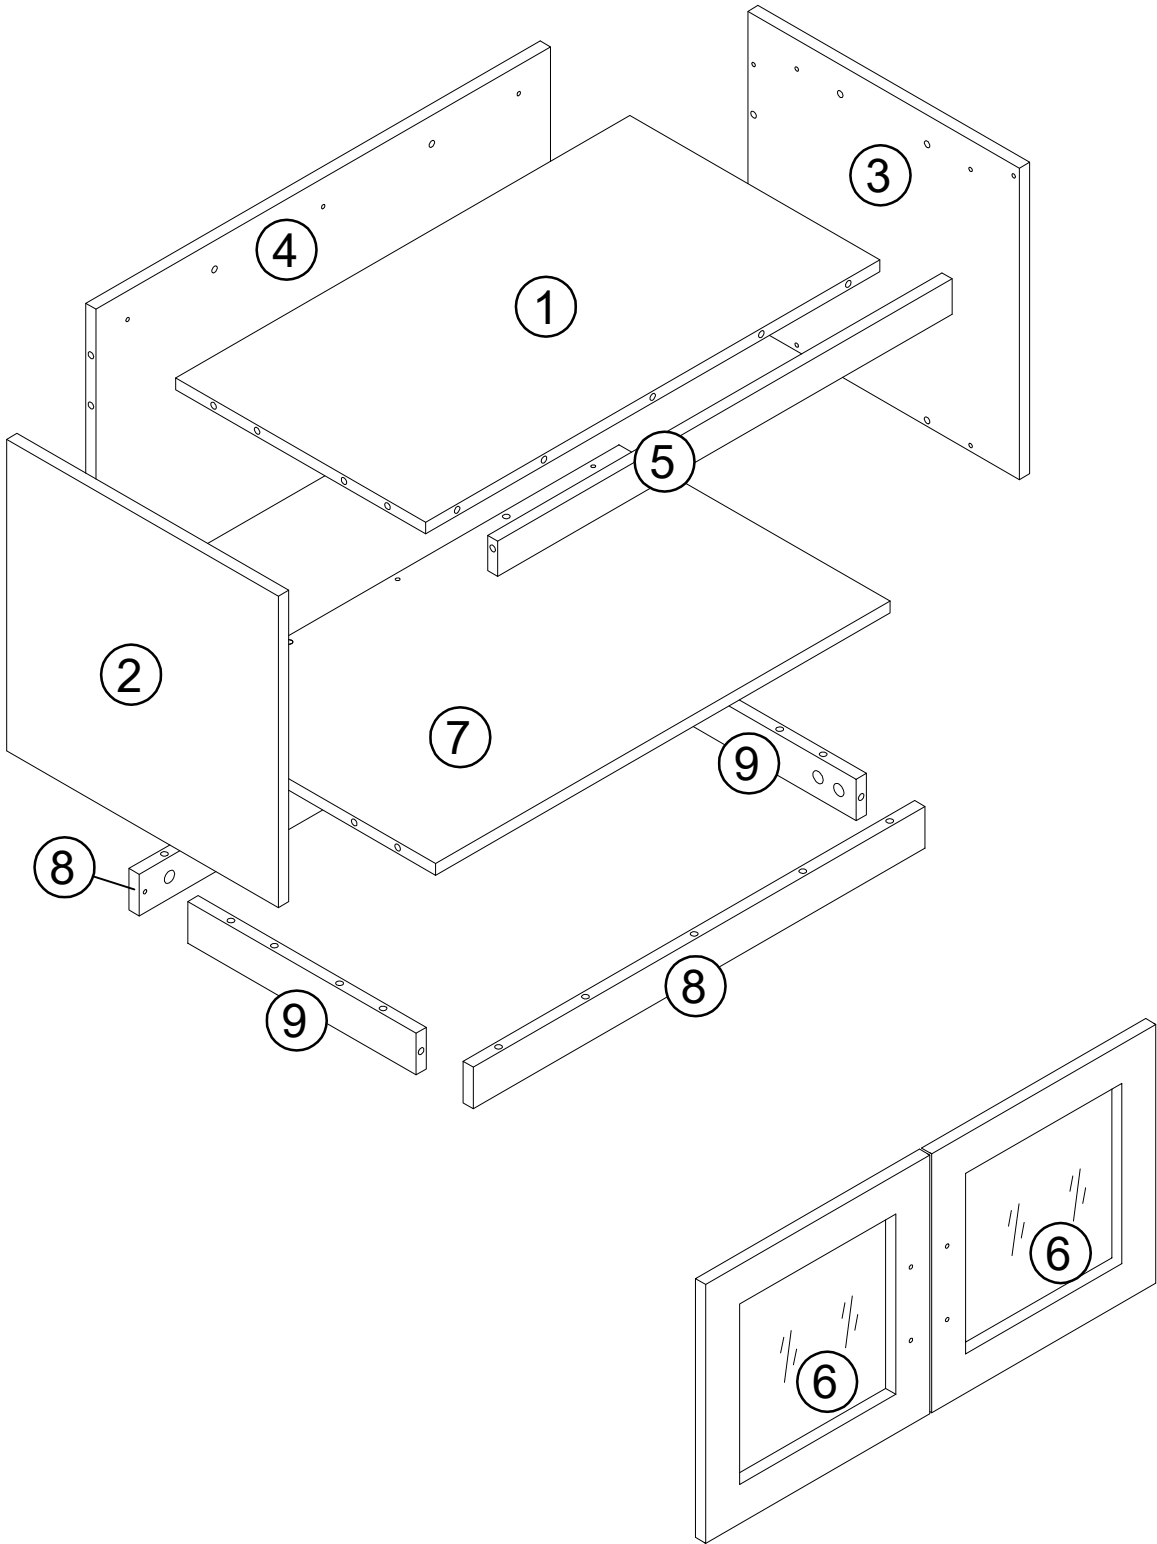


PACKAGE CONTENT

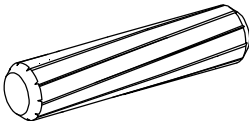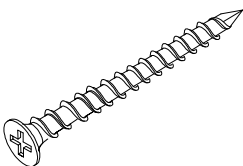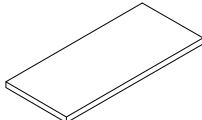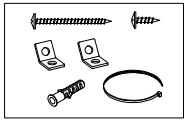        Ø7.8X30MM  A 26X+1	B 12X+1 	Ø6X34MM  C 34X+1	Ø15X12MM  D 34X+1
Ø4X38MM  E 3X+1	Ø3X12MM  F 6X+1	G 2X 	H 4X 
Ø4X14MM  I 24X+1	J 4X 	K 2X 	L 1X 
M 4X+2 	N 1X 		

 
How to use the cam lock system

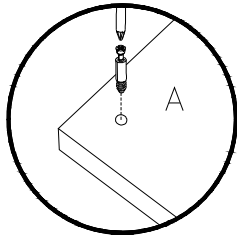

 
1. Screw cam bolt into panel

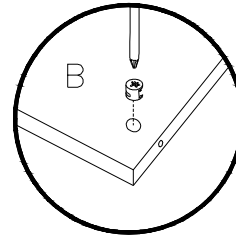

 
2. Push cam into panel - arrow feature on cam top points to panel edge

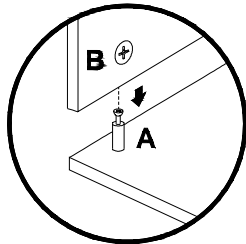

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

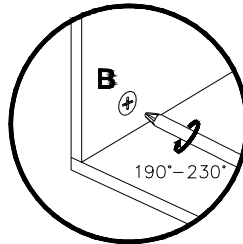


 4. Rotate cam(s) clockwise 190°-230° to lock panels together

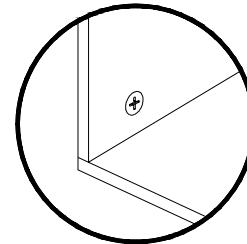

5. Panels should be tight against each other and connection should be rigid

 
Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

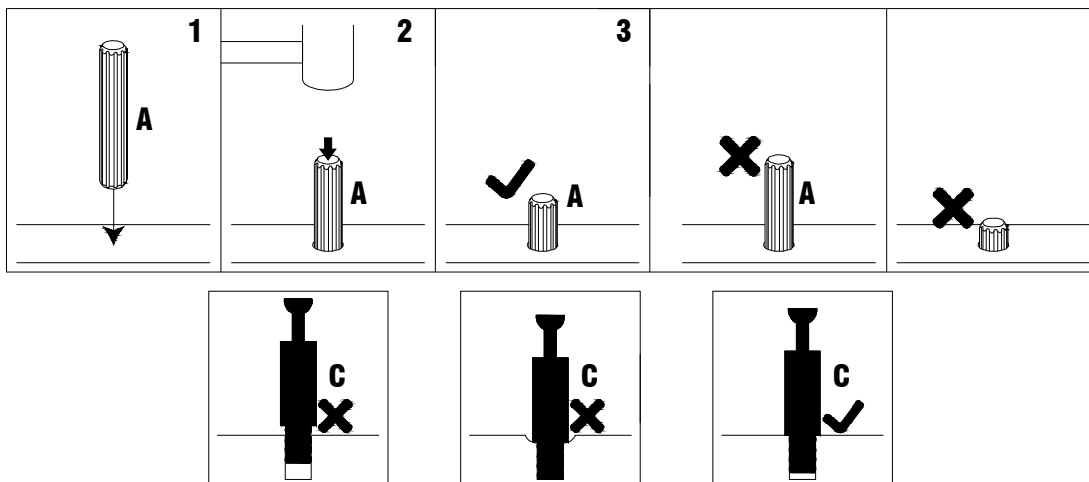

⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

 Now you can assemble the item.

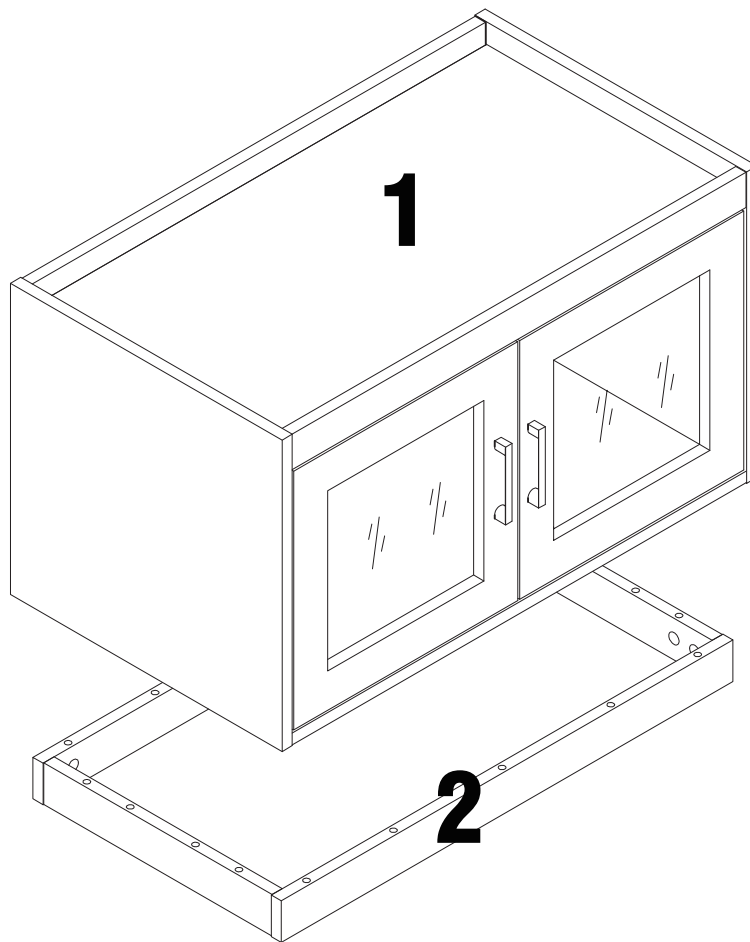







The installation process is divided into two parts:


1. Install the cabinet body
2. Install the base parts

Tip:


Using an electric screwdriver will make assembly easier.

      STEP 1




 ② X1	 ③ X1	 ④ X1	 ⑦ X1	 ⑤ X1
 ⑧ X2	 Ⓒ X34			

 



Philips
Screwdriver
(Not Included)

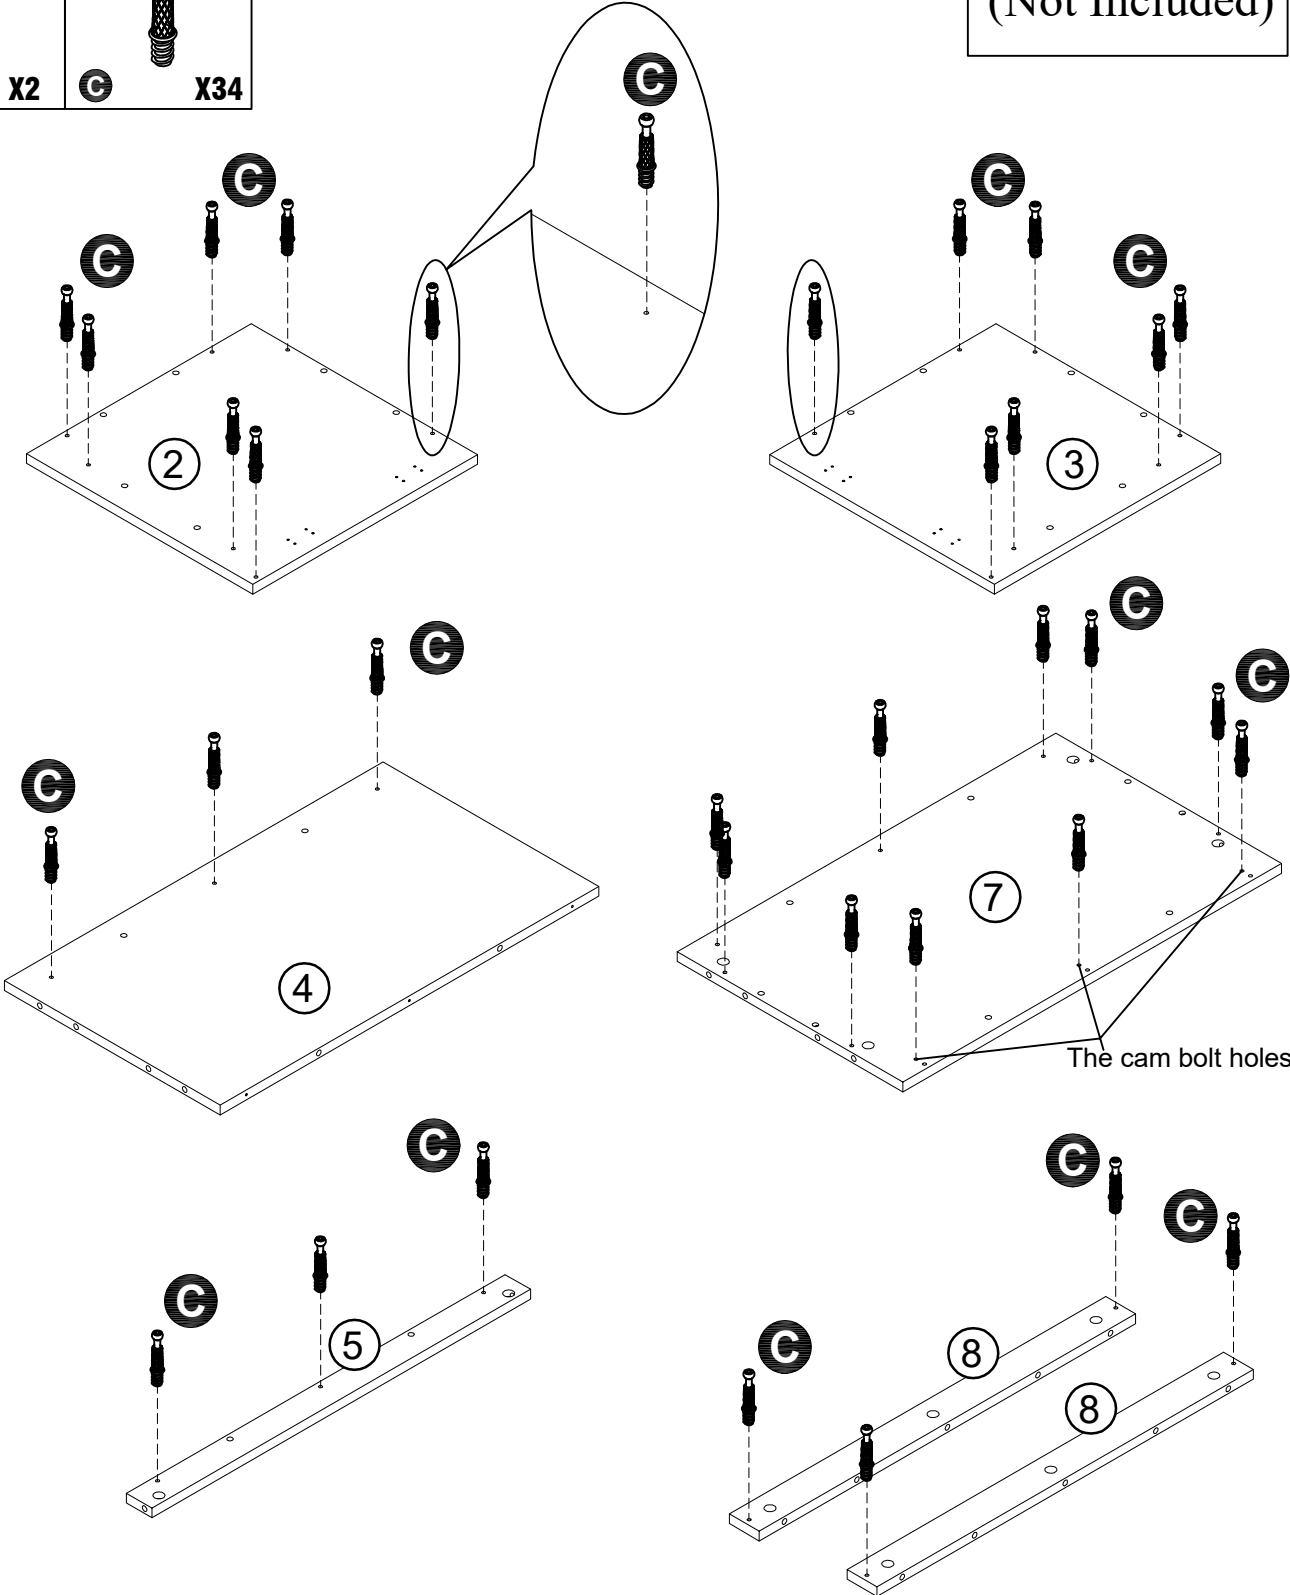 

   
STEP 2

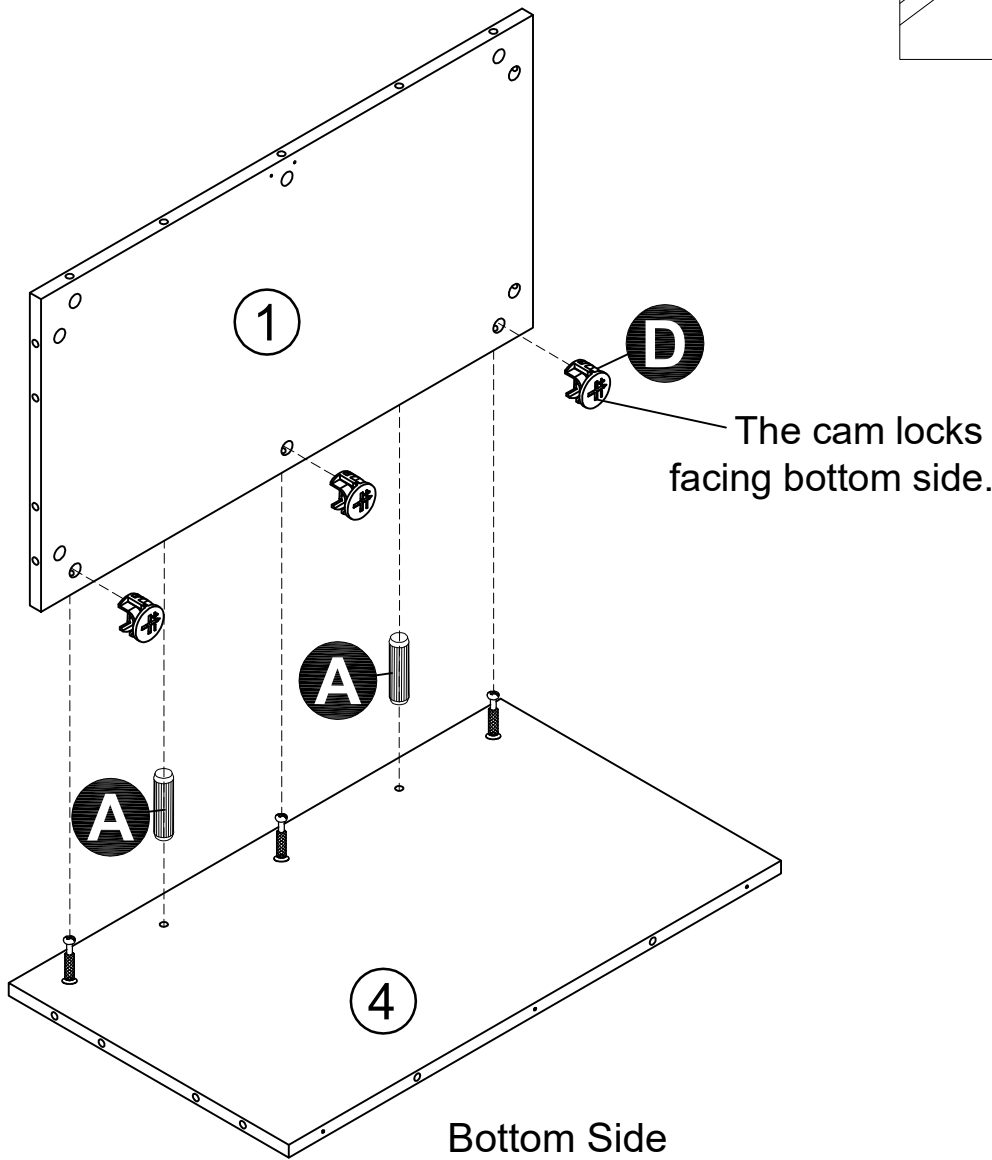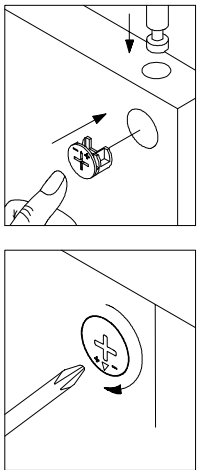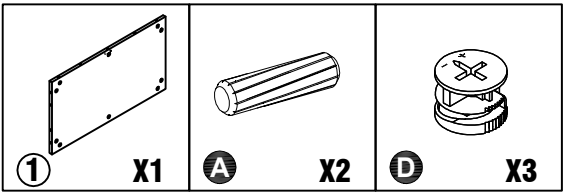

 
 
STEP 3

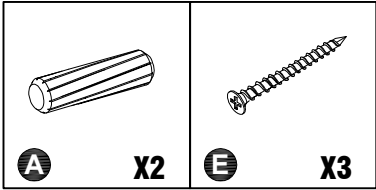


Philips
Screwdriver
(Not Included)

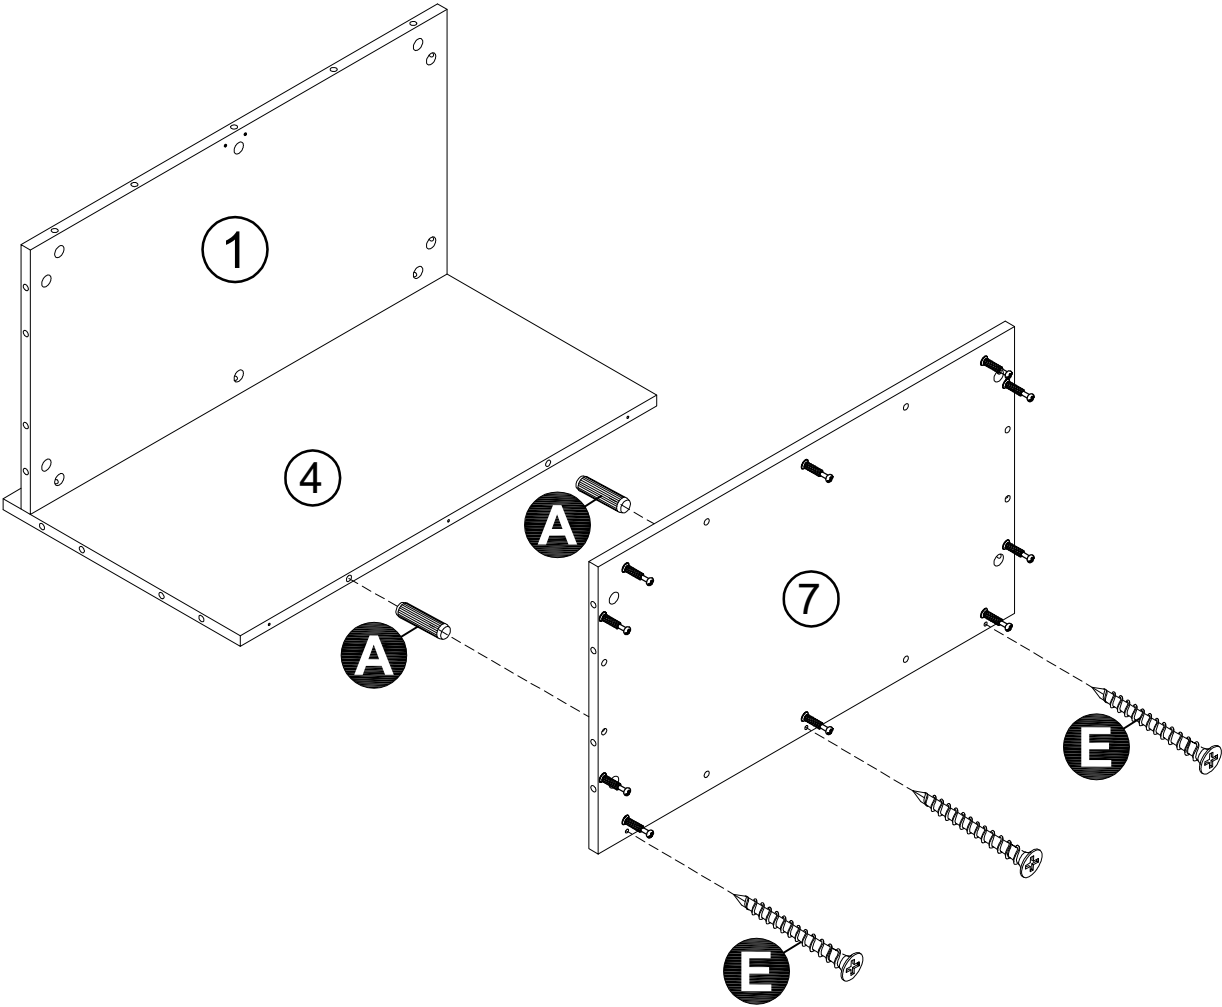 


 
 
STEP 4

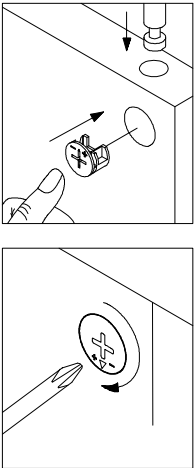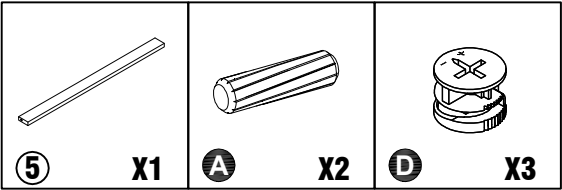




The cam bolt hole
facing upward

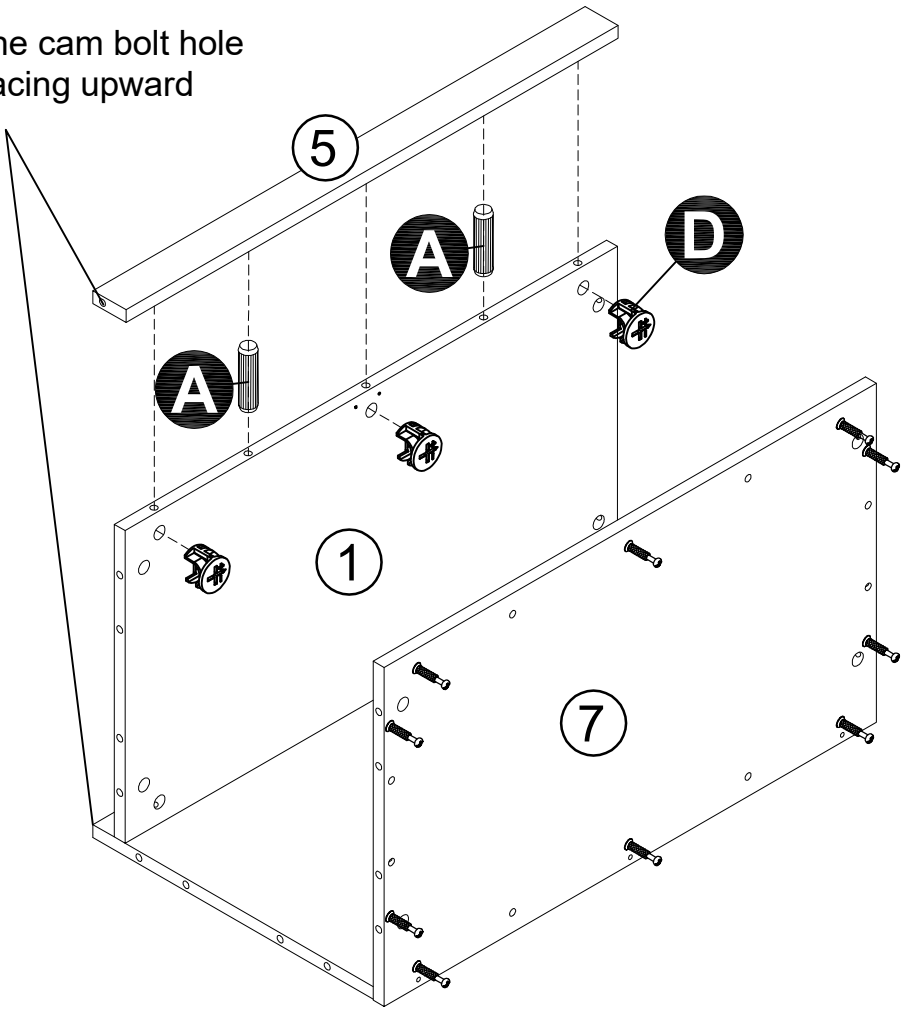 

   
STEP 5

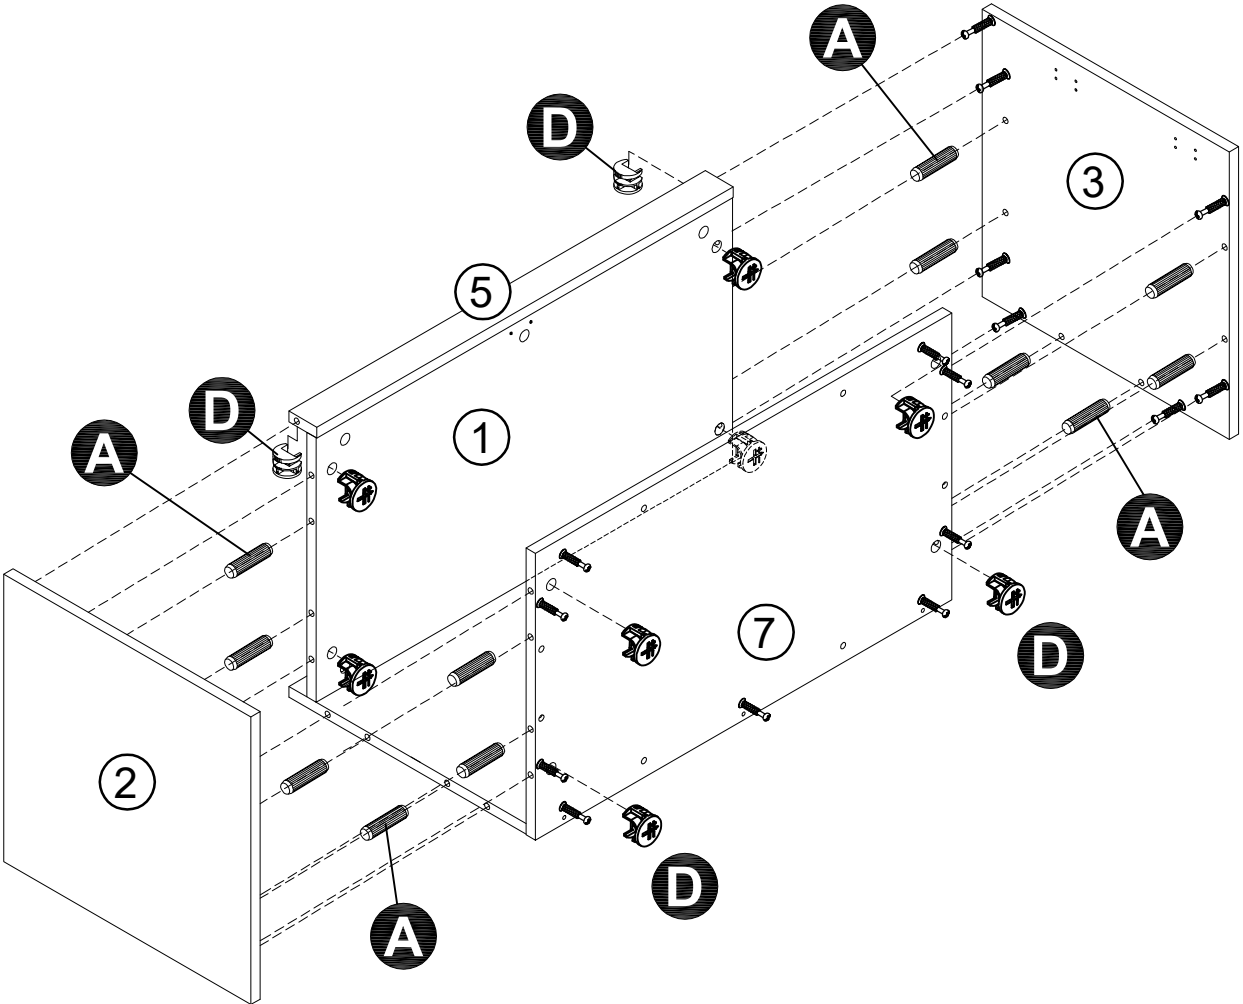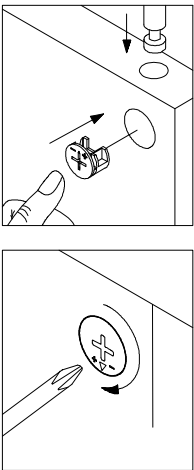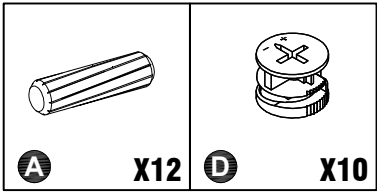

   STEP 6

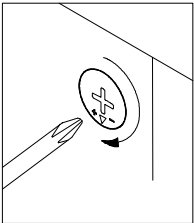
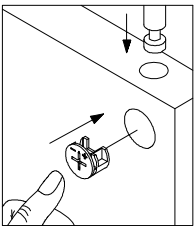
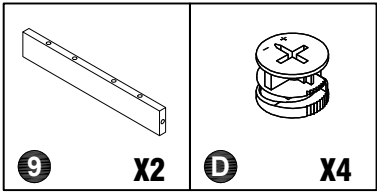


 The cam bolt holes
facing the same direction



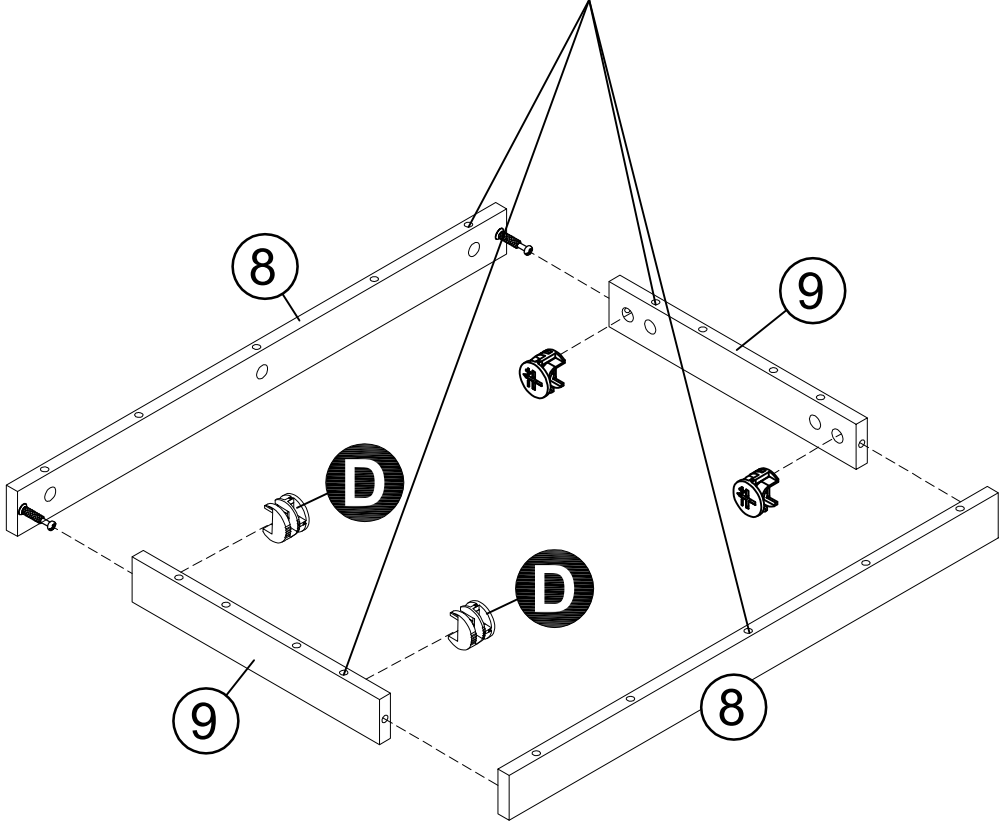


STEP 7




			
A X8	D X10	L X1	F X2

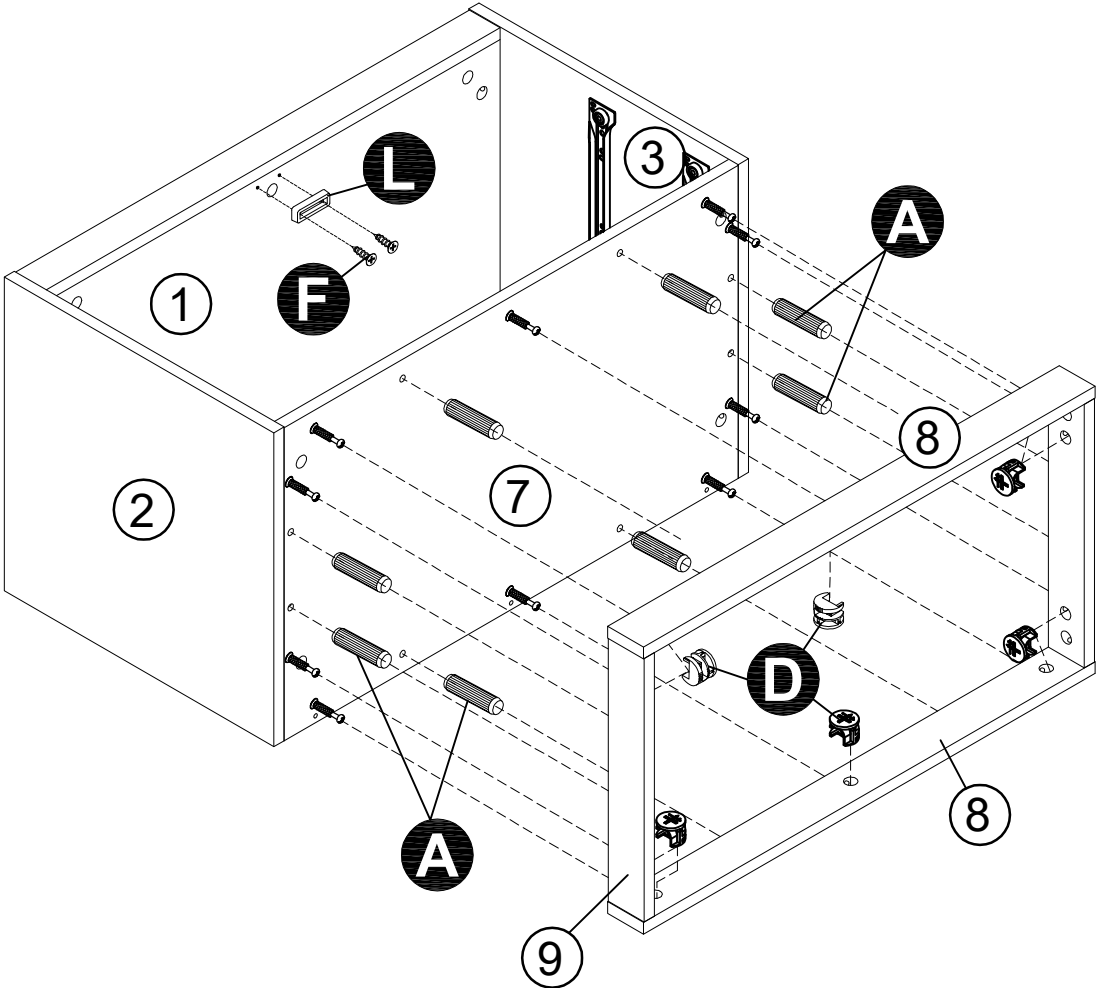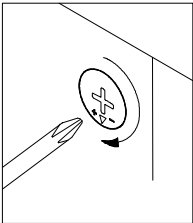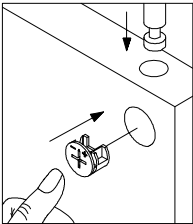   


   
STEP 8

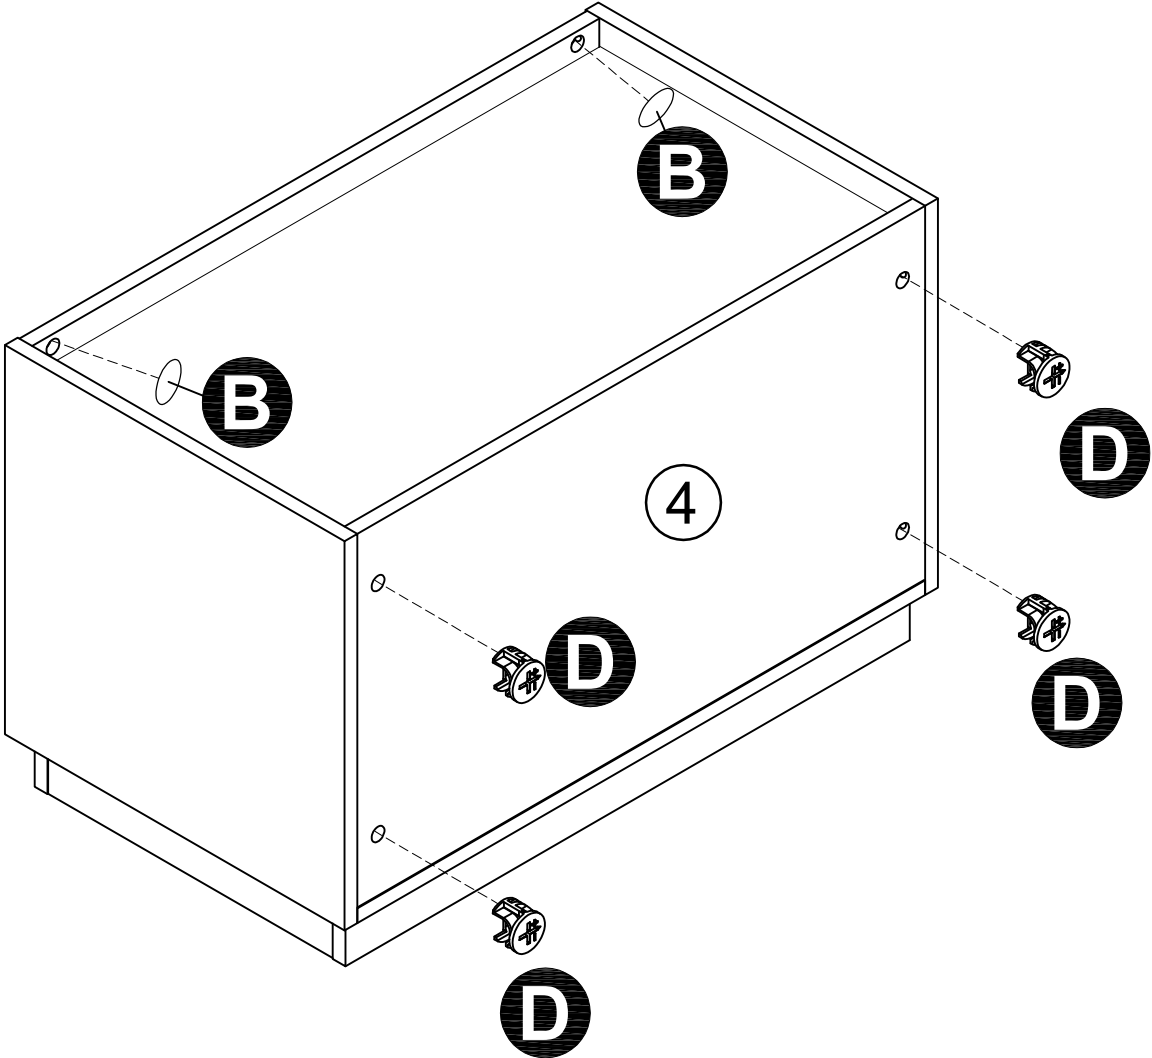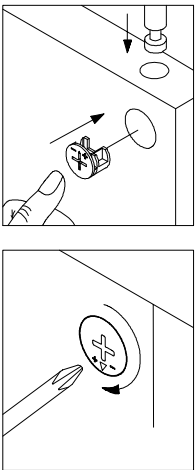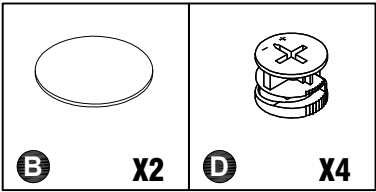

  
 
STEP 9

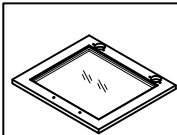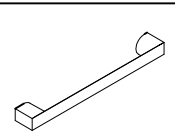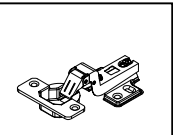				
6 X2	G X2	H X4	I X8	J X4

 
Philips
Screwdriver
(Not Included)

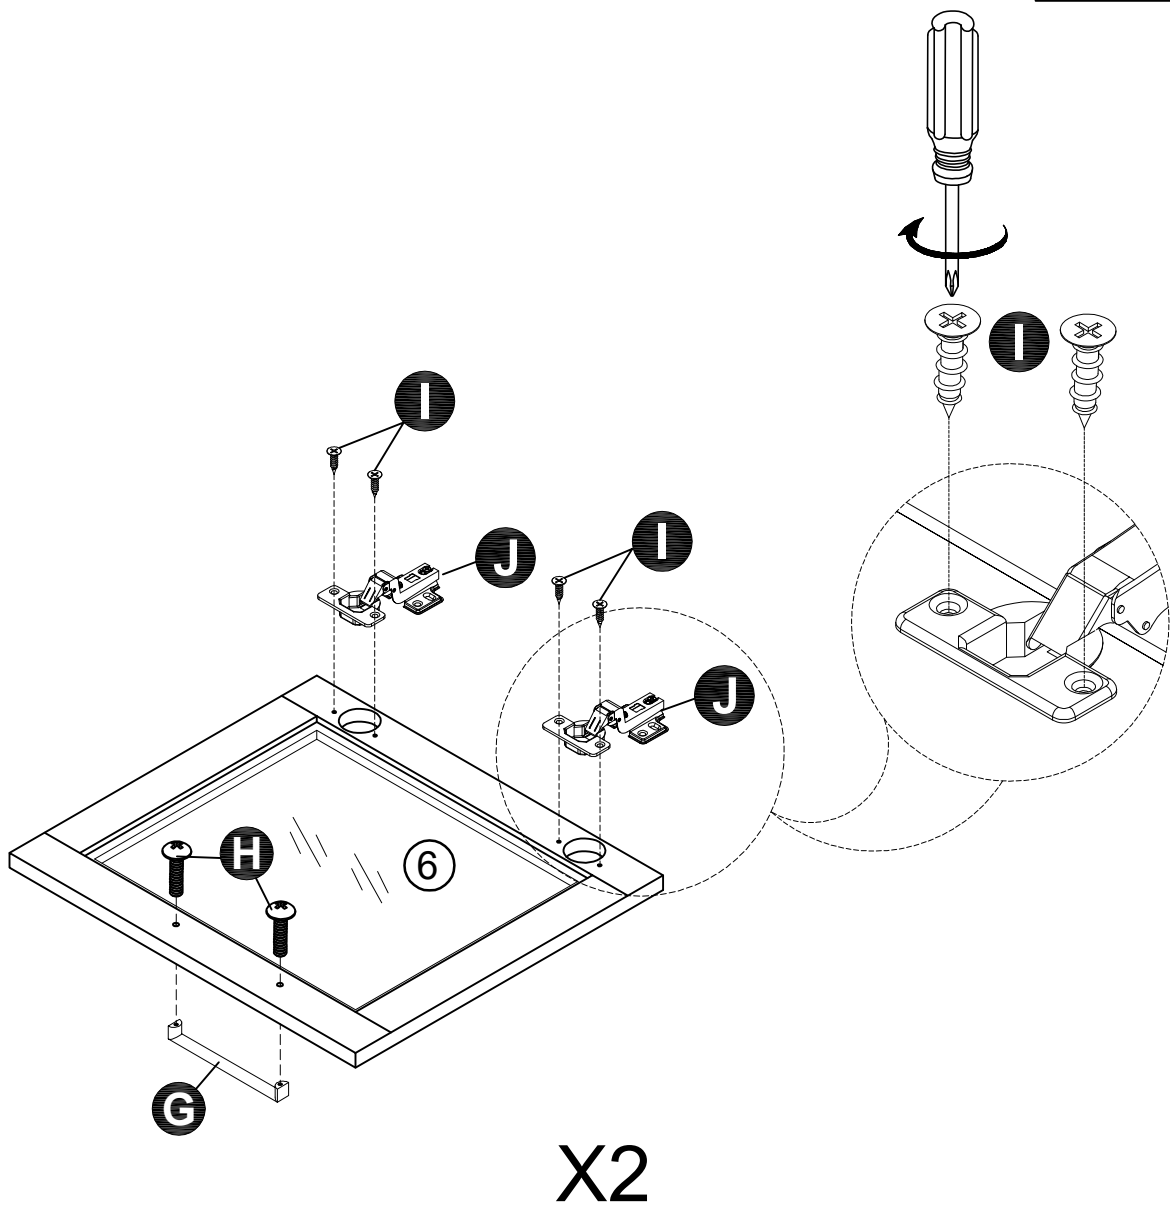 

  STEP 10

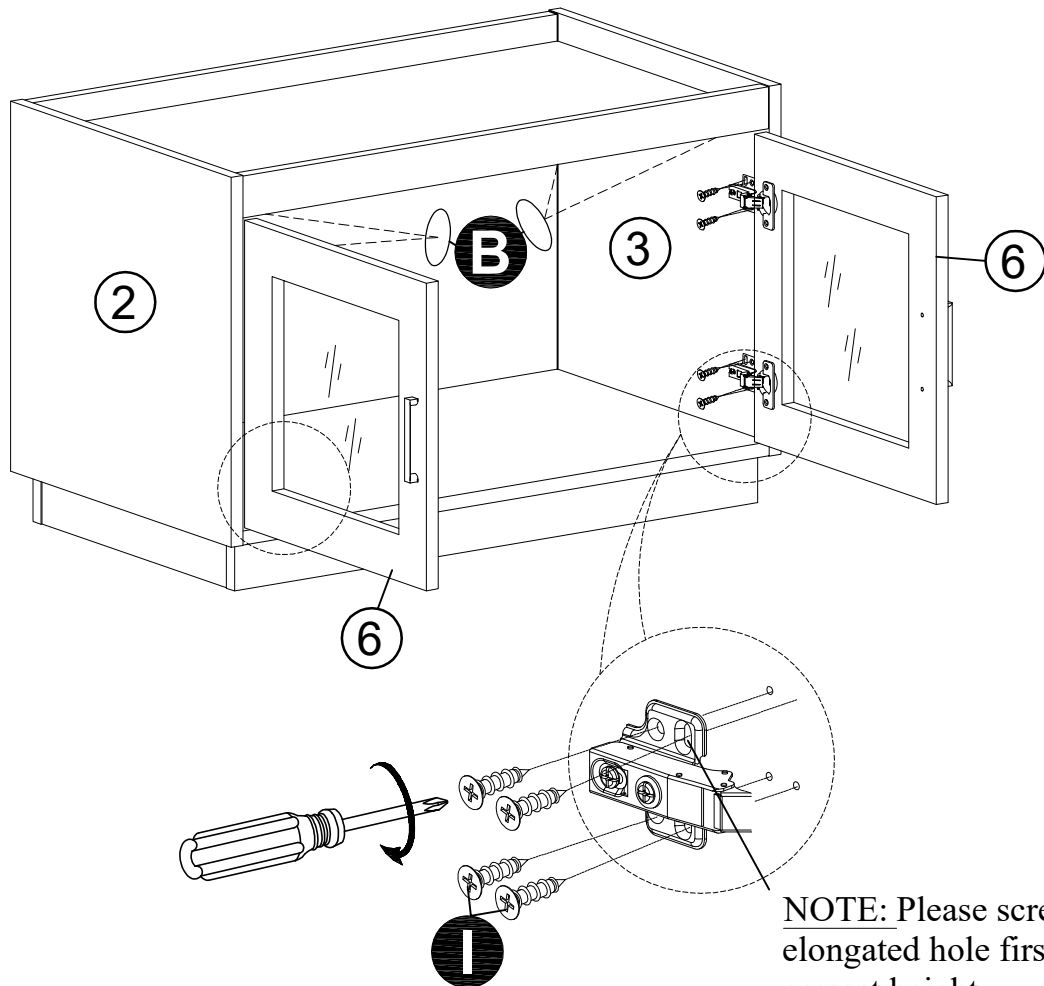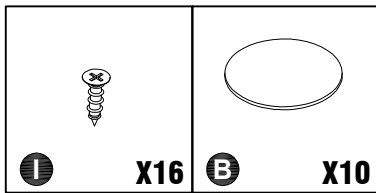


How to adjust the Euro-style adjustable hinges on doors

Shipping may cause doors to become out of alignment. If you find that the doors need to be adjusted slightly, turn the appropriate screw as illustrated below.


1. TO ADJUST THE DOOR FORWARD OR BACKWARD.

2. TO ADJUST THE DOOR TO RIGHT OR TO LEFT.

 3. TO ADJUST THE DOOR UP OR DOWN.

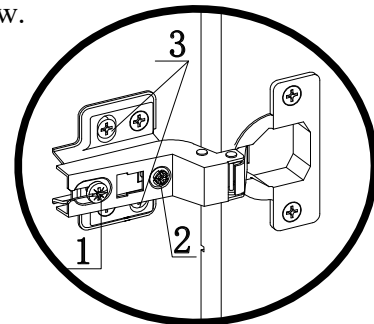

 STEP 11

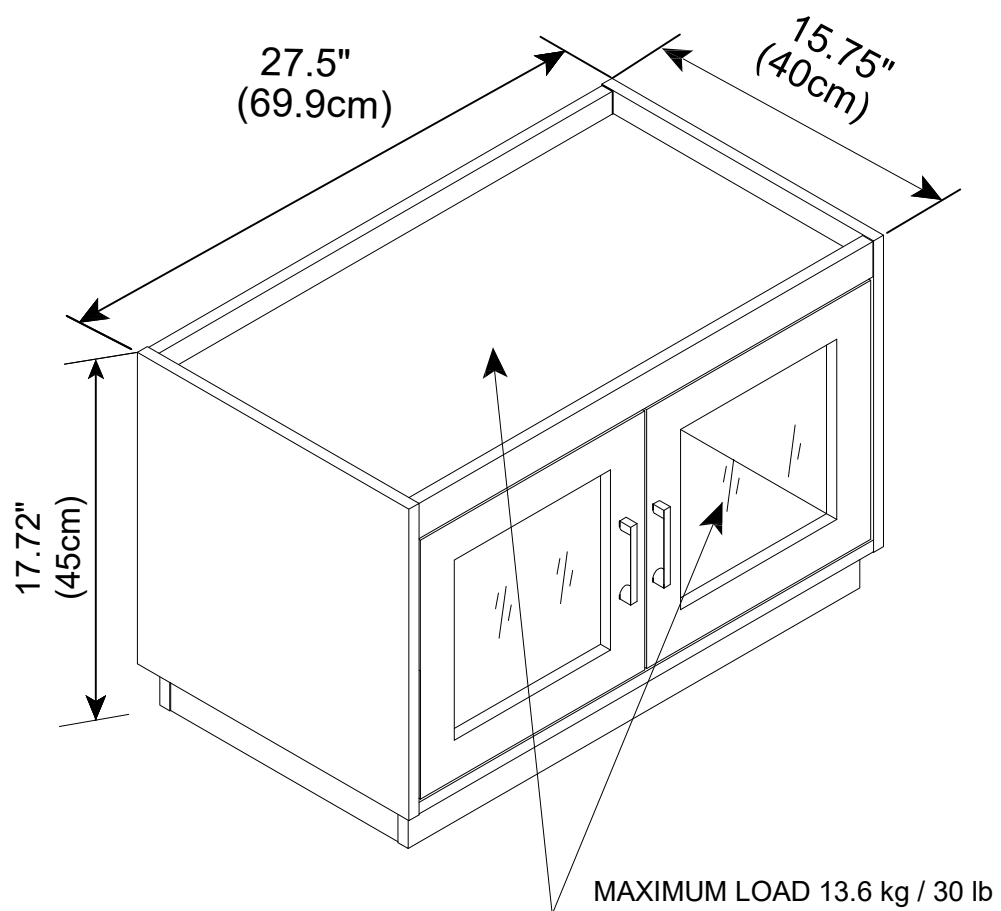

SPECIFICATIONS

ASSEMBLED DIMENSIONS(W x D x H)

 
27.5" x 15.75 " x 17.72"

69.9 x 40 x 45 cm



MAXIMUM WEIGHT CAPACITY

Top: 30 lb


STEP 12

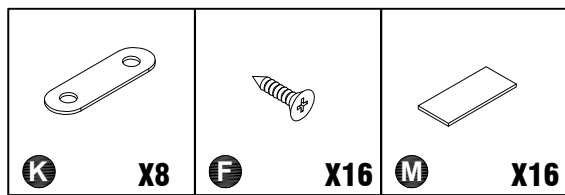

  
NOTE: Please remove the protective film before use.

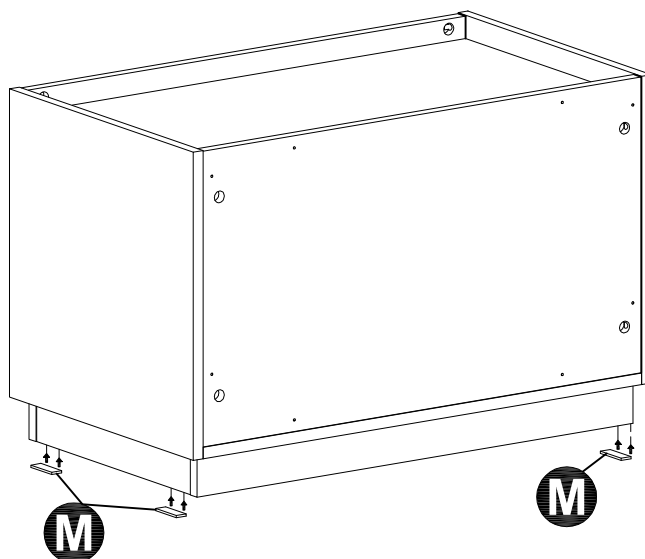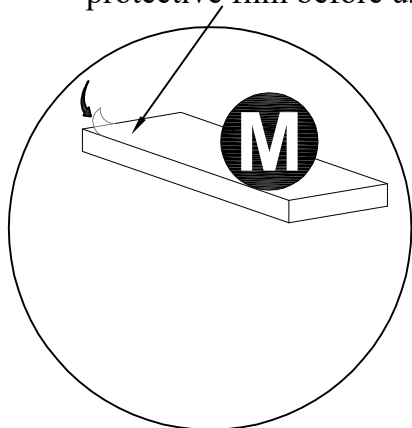

According to your needs. ↓

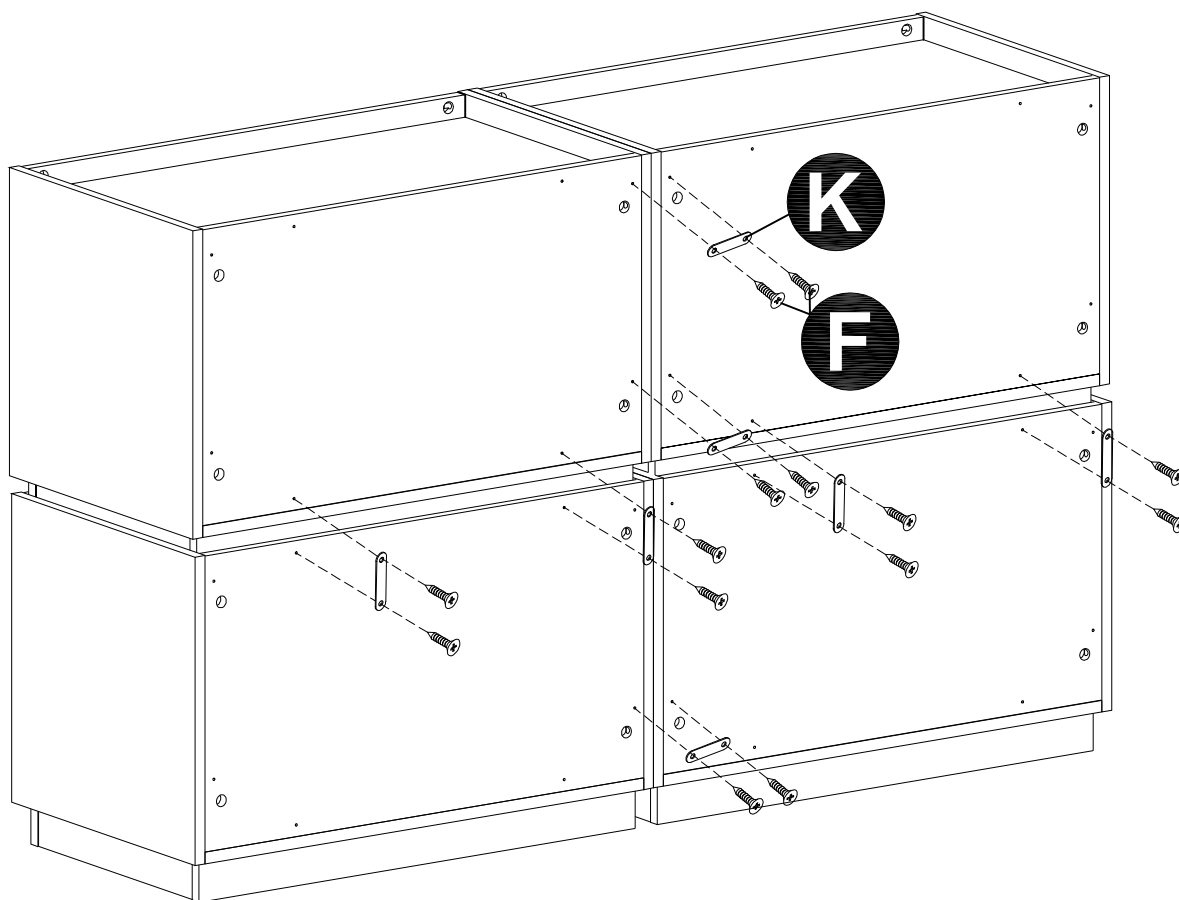 

 
STEP 13

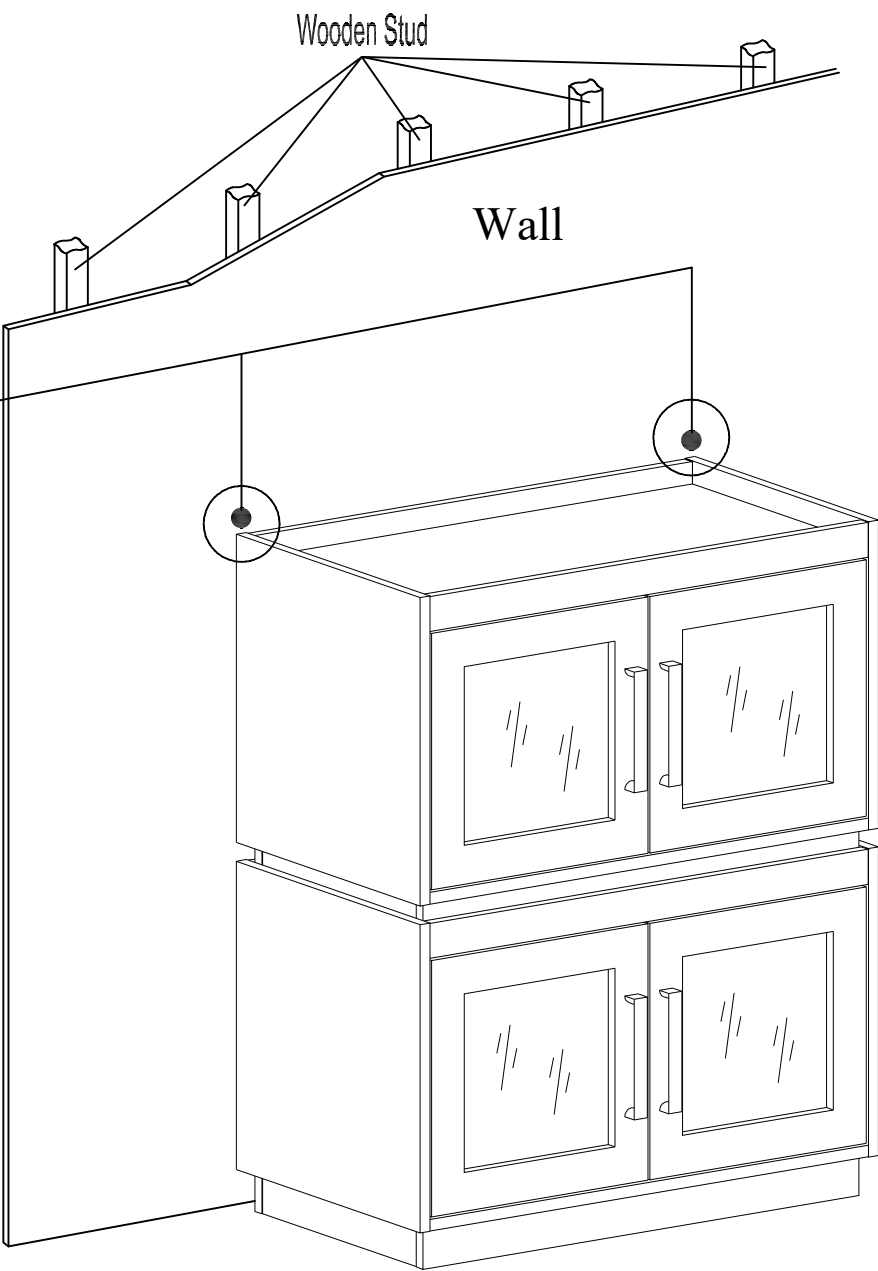

Wooden Stud

Wall

 Using the pilot
holes as a guide
Short Screw

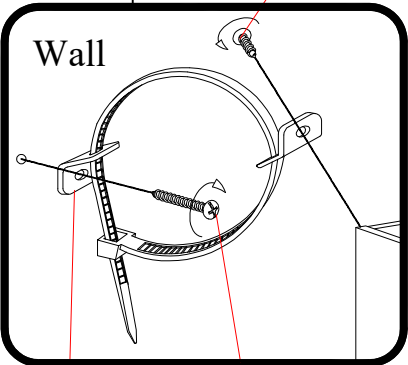

Wall

Metal
Bracket

Long Screw