

MILK FROTHER USER MANUAL

Model: MF06S-T



Thank you for purchasing our product.

In order to bring you a better experience, please read this manual carefully before using the product, and please keep it for future reference.

CATALOGUE

Important Safety Precautions	1
Components	3
Control Panel	4
How To Choose The Whisk/Mixing Disc	5
How To Use Your Milk Frother	6
Care,Cleaning & Storage	8
Troubleshooting	10




IMPORTANT SAFETY PRECAUTIONS

- Carefully read all instructions before use and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the milk frother for the first time.
- To eliminate a choking hazard for young children, please remove and safely discard the packaging bag and the protective cover fitted to the power plug of this appliance.
- This appliance can not be used by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance, by a person responsible for their safety.
- The appliance is intended to be used in household and similar applications, such as
 - staff kitchen areas in shops, offices, and other working areas;
 - farmhouses;
 - by clients in hotels, motels, and other residential-type environments;
 - bed and breakfast type environments
- The magnetic frothing whisk and mixing disc of the milk frother are choking hazards. Children must always be supervised and never left unattended with the appliance.
- This appliance is for household use only. Do not use outdoors. Misuse may cause injury.
- Do not place the appliance on or near hot surfaces, such as hot gas burners, hot plates, or similar.
- The appliance must not be immersed. Never immerse the power base of the appliance in water or other liquids. Don't pour liquid into the power base. Electricity and water together can cause a fatal electric shock. Misuse of the device can lead to possible injuries.
- Do not use the appliance if damaged. A damaged appliance can cause electric shocks, burns, and fire. Never dismantle or repair the milk frother by yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person in order to avoid hazard.

- Always switch off the milk frother at the power outlet and unplug it if the appliance is left unattended, not in use, before cleaning, before attempting to move the appliance, before disassembling or assembling, and when storing it.
- The milk frother has been designed specifically for the purpose of foaming milk and other dairy milk alternatives and is not intended to thicken or heat other food substances e.g. cream, custards, soups, gravies.
- The milk frother is not designed to mix a large quantity of dry ingredients or melt large food pieces e.g. cubed chocolate, ground nuts, whole spices, fresh herbs.
- The underside of the jug must always be dry before placing onto power base before use.
- The jug must only be used with the power base provided. Do not use attachments other than those provided with the milk frother.
- Attach the jug lid securely to the jug before operation. Do not open the jug lid during operation.
- Use caution when operating unit as heating the metal jug surface is liable to get hot during use.
- The heating element surface is subject to residual heat after use. Do not touch as it can cause serious burn injury.
- Use caution when pouring foamed milk from the jug after heating as hot milk may scald at high temperatures.
- Do not operate the appliance without liquid. Always fill to at least the 'MIN' marking and no more than the 'MAX' markings inside the jug.
- Ensure to use the correct frothing attachment as instructed in the instructions.
- Do not put metal or similar items into the jug as this may damage or affect the operation of the unit.
- Connect only to (✓) 120V 60Hz, () 220V~240V 50Hz power outlet.

COMPONENTS

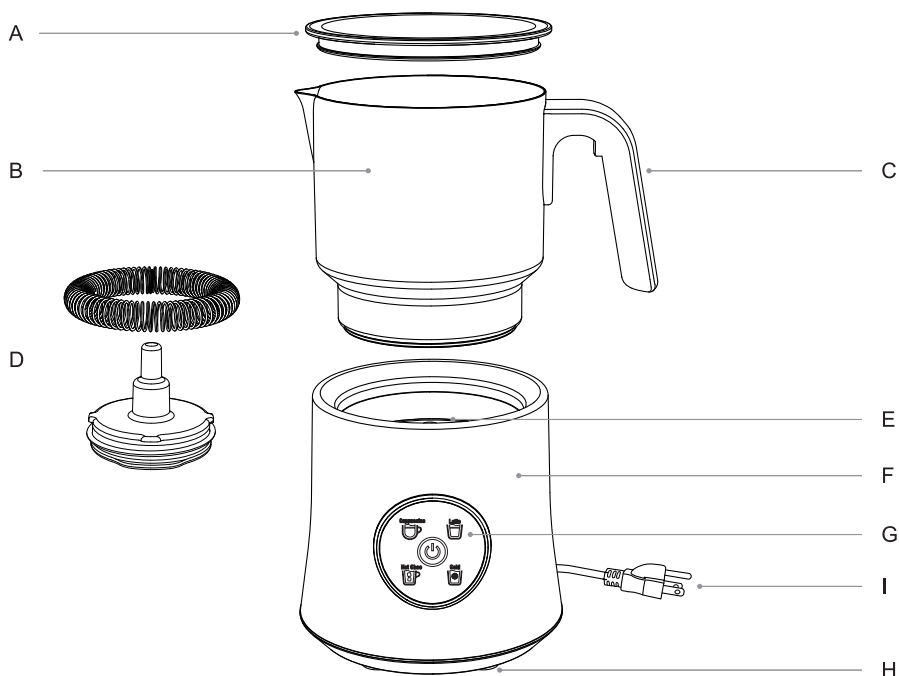

A. Transparent Jug Lid and Lid Seal

To ensure no spillage during operation, and act as a viewing window while in operation

B. Dishwasher-Safe Milk Jug

Stainless steel jug with inner measurement markings and pouring spout

C. Jug Handle

For easy handling pouring spout

D. Magnetic Frothing Whisk

Prepare smooth and creamy, hot or cold drinks in minutes

E. Heating Plate

For even & fast heating

F. Power Base

Provides gentle, even heat distribution

G. Control Panel


For easy operation

H. Non-slip feet

I. Power Cord

Product Specifications	
Model Number	MF06S-T
Power	500W
Voltage	120V~60Hz
Product Size	1.11*0.6*0.61 inches
N.W.	2.36 lbs
G.W.	3.02 lbs
Contents Of Packaging	
Milk Frother x1	
Instruction Manual x1	

 CONTROL PANEL

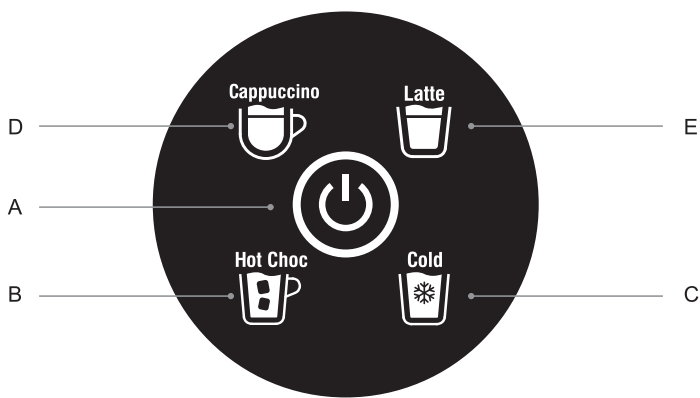

A. Power Switch

To select the desired function
and to turn the milk frother on and off

B. Hot Choc

To make hot milk for
hot chocolate

C. Cold

To make cold or room temperature
milk froth for iced coffees

D. Cappuccino

To make hot milk froth for cappuccinos

E. Latte

To make hot milk froth for lattes

🔄 HOW TO CHOOSE THE WHISK/MIXING DISC

TYPE	MILK(ml)	TEMP(°C)	TIME(mins)	WHISK/ MIXING DISC	PERFECT FOR
	150(Min)	68-78	2-3		Cappuccino
	300(Max)	60-70	4-6		
	150(Min)	68-78	2-3		Latte
	300(Max)	60-70	4-6		
 Milk+Chocolate	150(Min)	77-87	2-3.5		Hot Chocolate
	500(Max)	66-76	8-12		
 Milk	150(Min)	77-87	2-3.5		Hot Milk
	300	68-78	6-7		
	500(Max)	66-76	8-12		
	150(Min)	NA	3		Iced Coffee or Flavoured Milk
	300(Max)	NA	3		


ATTENTION: If you only want to hot your milk, remember to remove the spring ring from mixing disc to use.

⚠️ NOTE

1. Temperatures and times may vary depending on the initial temperature and type and function of the milk used.
2. Chocolate: Chocolate beans or chocolate powder are recommended.
3. Chocolate blocks must be cut into small pieces.

HOW TO USE YOUR MILK FROTHER

1. Place the milk frother on a dry, stable, and level surface. Insert the power plug into the outlet and switch on the power. The milk frother will beep once to indicate that it is in standby mode.
2. Lift the milk jug by the handle to remove it from the power base, and remove the transparent lid from the milk jug.
3. Insert the mixing or frothing disc onto the milk jug shaft. The magnetic pull will secure the disc.

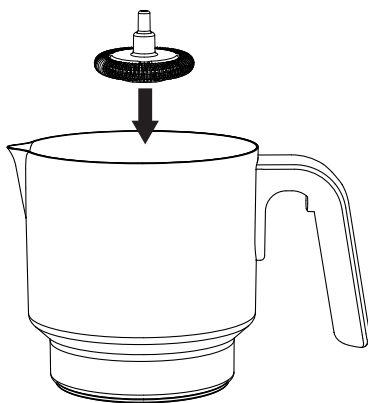

4. Pour the required amount of cold, fresh, or freshly opened milk into the milk jug, and replace the transparent lid.

NOTE

- For optimal milk froth, always use fresh, cold milk (about 2-8°C).
- Refer to the Guide to Milk Frothing table on page 5 for the disc, measurements, and milk types.
- Do not exceed the MAX lines marked inside the milk jug.
- The maximum level for the frothing disc is **300 ML**.
- The maximum level for the mixing disc is **500 ML**.



5. Place the milk jug back onto the power base. Press the  button until the desired function on the control panel is selected. The light above the function will flash three times, and the milk frother will start automatically.
6. To cancel a function at any time during operation, press the , and the milk frother will stop automatically. To restart the function, repeat step 5.
7. Once finished, the milk frother will stop automatically and beep three times.
8. Carefully lift the jug off the power base by the handle. Ensure the jug is not placed on a plastic surface, as it may scorch or melt. Lift the lid off the jug, ensuring that any escaping steam is kept away from your face or body. Pour the milk into a cup or glass.

TIP

Tip the jug slightly to the side while pouring the milk to allow for more froth.

9. Place the milk jug back onto the power base and allow it to cool completely before cleaning.

WARNING

- Do not place the hot jug on or near the power cord.
- The frothing and mixing discs are choking hazards. Children must always be supervised and never left unattended with the appliance.



CARE, CLEANING & STORAGE

CLEANING AFTER USE

The jug, discs and lid should be cleaned after each use to prevent build-up of milk residue.

WARNING

Never immerse the power base in water or any other liquid. The underside of the jug must always be dry before placing on power base prior to use.

1. Switch off and unplug the power cord from the power outlet before cleaning.
2. The jug and disc, if recently in use, will be hot. Wait until the milk frother has cooled down before removing both the disc from the base of the jug, and the jug from the power base.
3. Remove the seal from the jug lid. Wash the jug lid, jug lid seal, jug and discs in warm, soapy water. Rinse and dry thoroughly.

NOTE

The milk jug can be washed in the dishwasher (top shelf only), can not be washed at a temperature higher than 70°C/158F. However, the time performance may be affected. Wipe the exterior of the milk frother and the heating plate, with a soft, damp cloth and dry thoroughly before storage.

WARNING

Do not use alkaline or abrasive cleaning agents, steel wool or scouring pads as these can damage the surface.

WARNING

Surface of the jug will be hot after operation.
Do not place hot jug on heat sensitive surfaces.

STORAGE

1. Turn the power base over and secure the frothing disc inside the magnetic disc storage compartment.
2. Place the mixing disc inside the jug and replace the lid.
3. Store the milk frother in an upright position.

NOTE

Never store anything on top of the milk frother.

? TROUBLESHOOTING

PROBLEM	WHAT TO DO
The milk frother does not heat when turned on.	1. Make sure the milk frother is plugged into the power outlet and switched on. 2. Make sure the milk jug is properly on the power base.
When turned on, the indicator light lights up, and the milk frother starts to heat, but the whisk does not work.	1. Make sure the whisk is mounted on a shaft on the inner bottom of the jug. 2. Ensure the whisk is not broken.
Selecting any functions, but too little or too much milk foam.	1. For optimal milk froth, always use fresh, cold milk(about 2-8°C) 2. Make sure the pure milk is within its sell-by date. 3. Be sure to use the frothing whisk.
Why the product make noise while it is working?	When frothing, the milk will resonate to make the foam more dense. Resonance will make a little sound, which is normal.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Email: us-customer@seller-us.com



Email QR code

HOUSEHOLD USE ONLY
MADE IN CHINA



此页不印刷

成品尺寸：A5/四色印/105g铜版纸 骑马钉

技术要求：印刷清晰，不得错印，露底不得有污迹