


ASSEMBLY INSTRUCTION

ITEM NO.N715P406064

Dining Chair

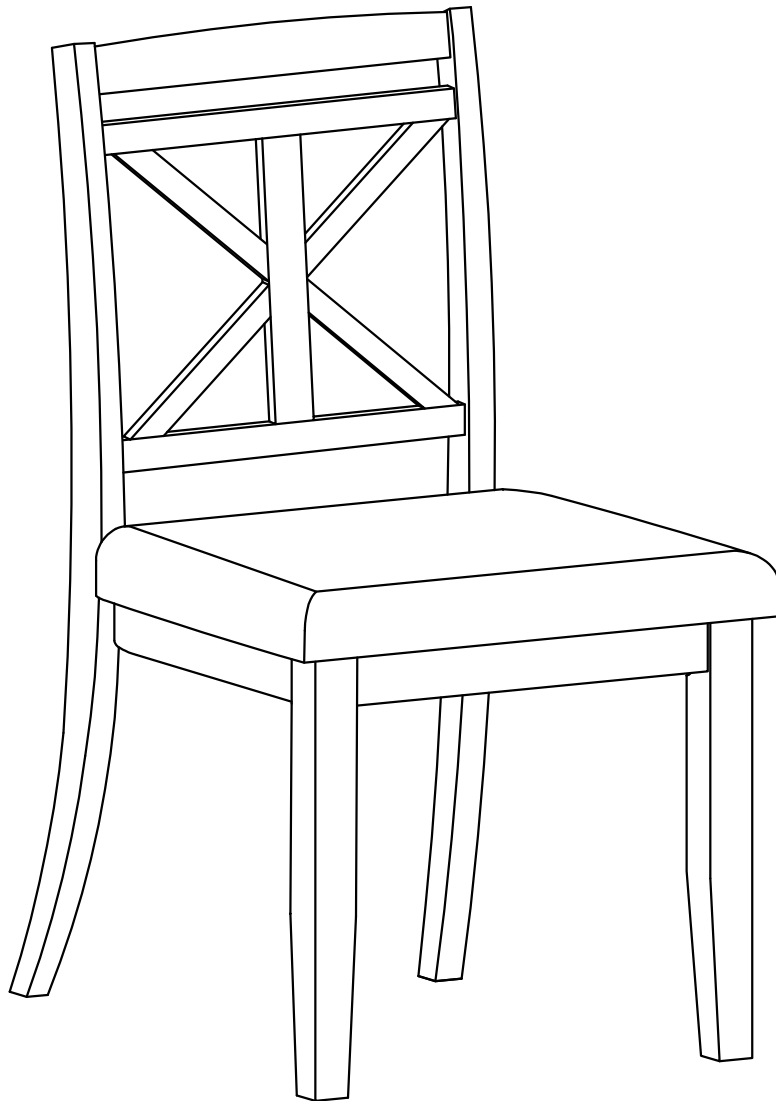

ASSEMBLY INSTRUCTION

ITEM NO.N715P406064


Please read these instructions fully before starting assembly:

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

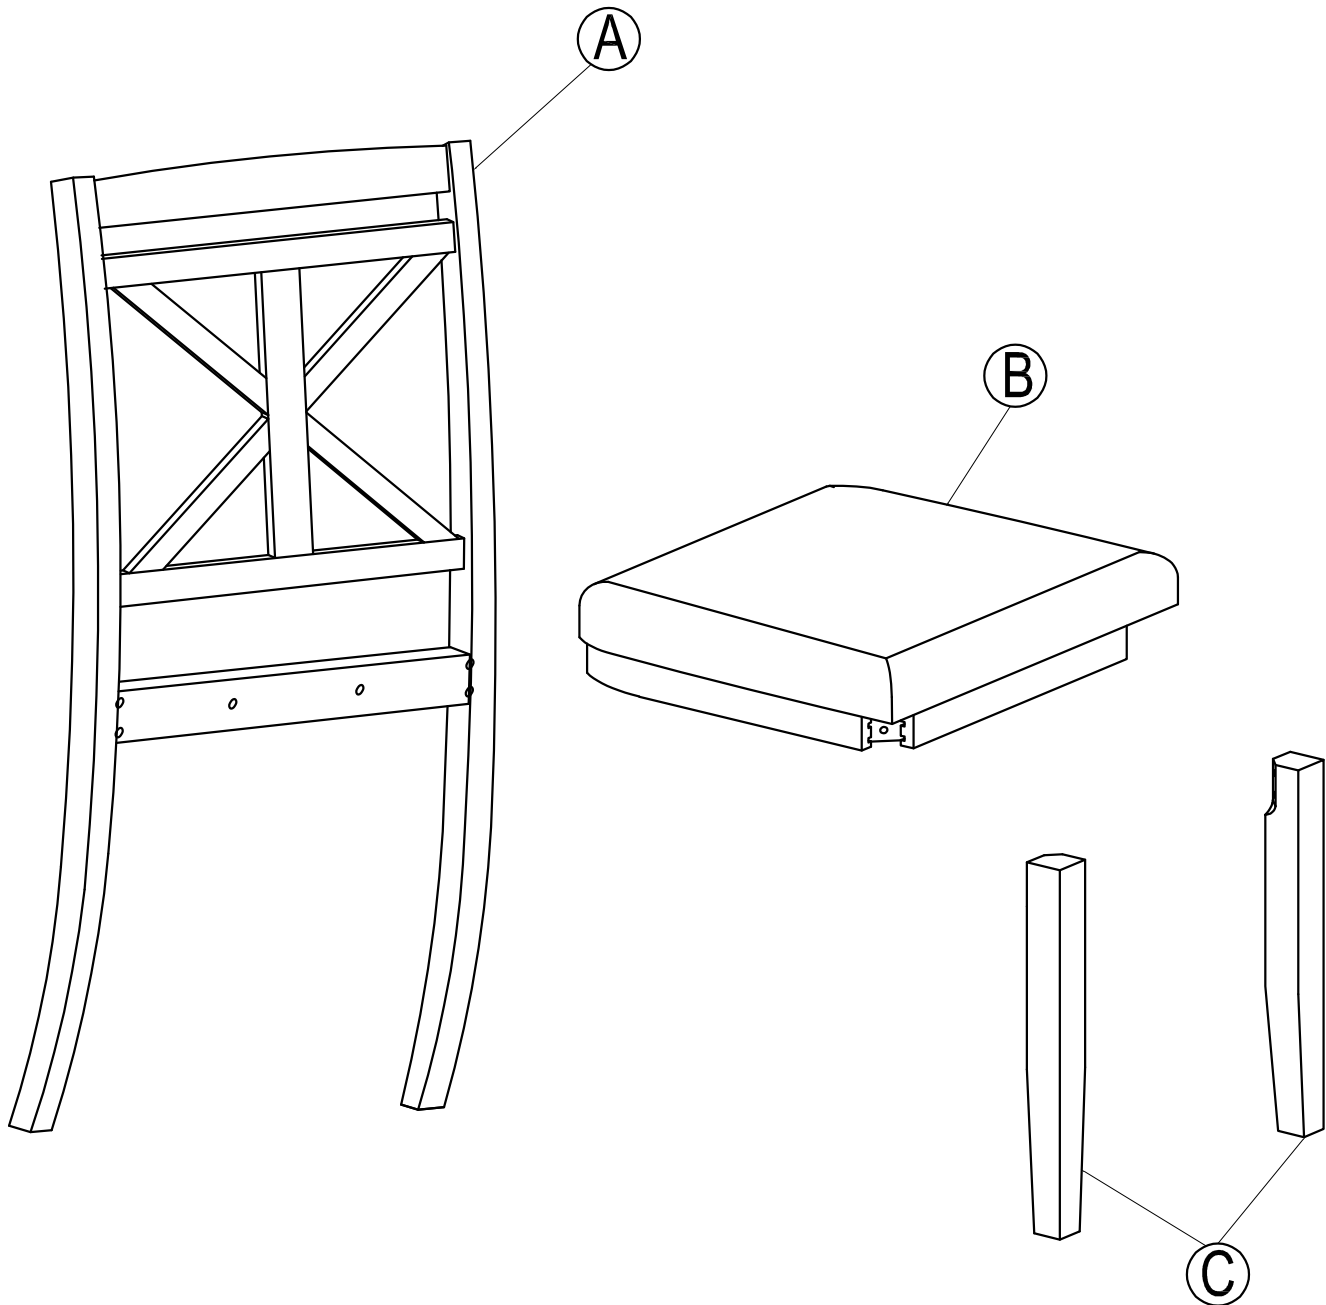


ASSEMBLY INSTRUCTION

ITEM NO.N715P406064


Part List

Ⓐ

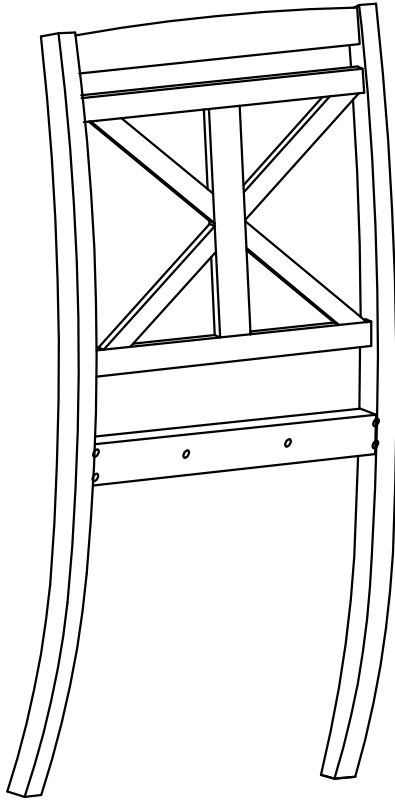


BACK FRAME (2 pcs)

Ⓑ

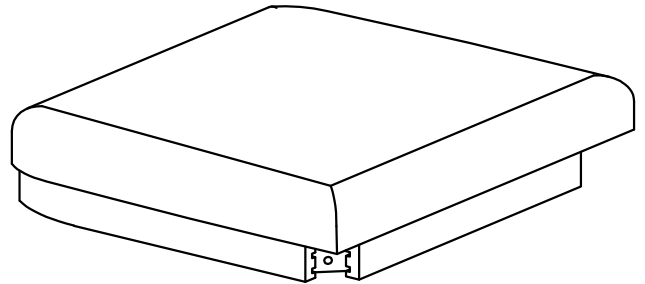

SEAT FRAME (2 pcs)

Ⓒ

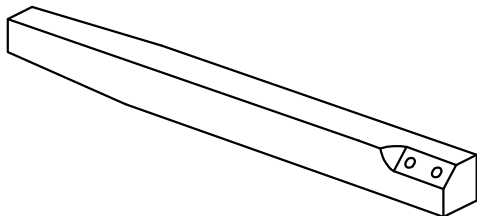


LEG (4 pcs)

ASSEMBLY INSTRUCTION

Hardware List


①

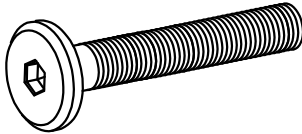

Ø 1/4" x 40 mm

BOLT (4 pcs)


②

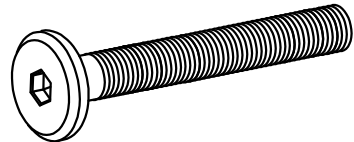

Ø 1/4" x 55 mm

BOLT (8 pcs)

③

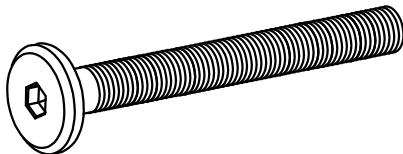

Ø 1/4" x 75 mm

BOLT (8 pcs)


④



Ø5/16" x 13 mm

LOCK WASHER (20 pcs)

⑤

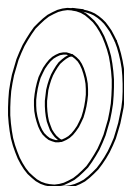

Ø5/16" x 19 X 2 mm

FLAT WASHER (20 pcs)

⑥




4 mm

ALLEN KEY (1 pc)

ASSEMBLY INSTRUCTION


ITEM NO.N715P406064

STEP 1:

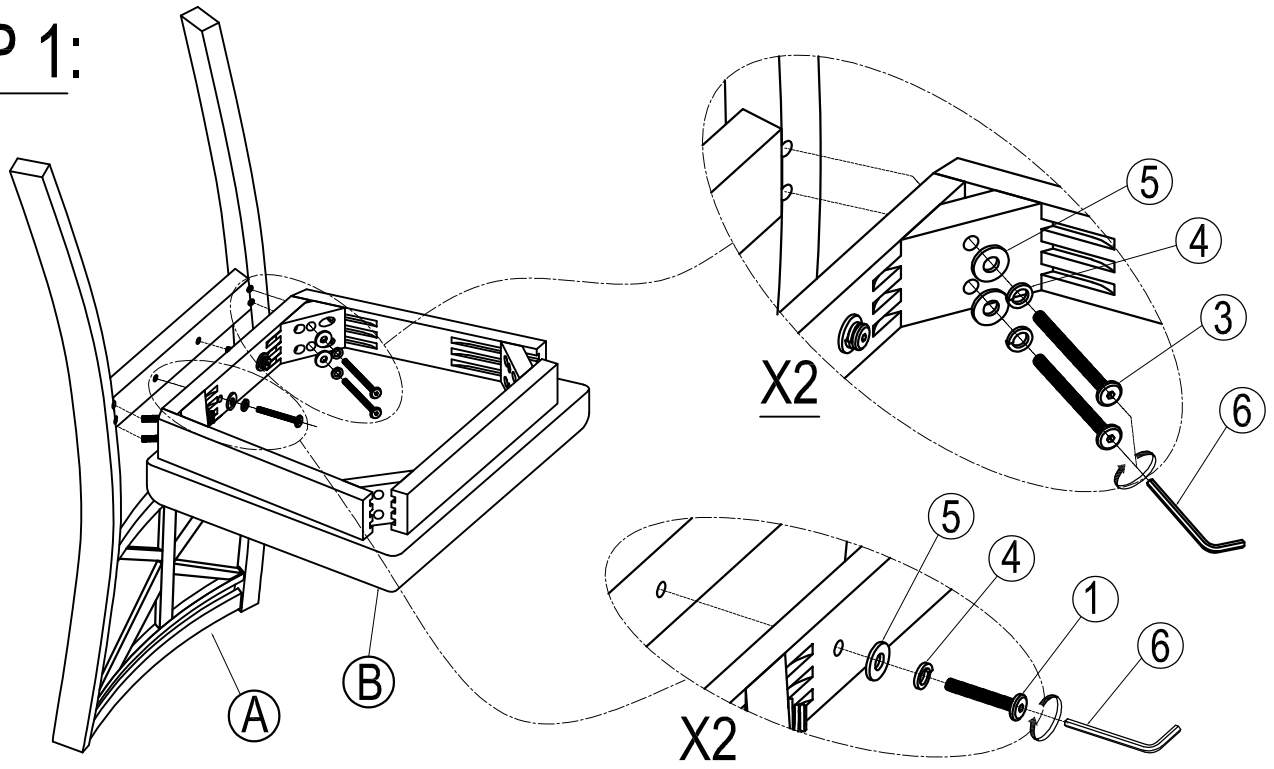

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 X 2 mm	ALLEN KEY 4 mm x 75mm
				
① x 4	③ x 8	④ x 12	⑤ x 12	⑥ x 1

STEP 2:

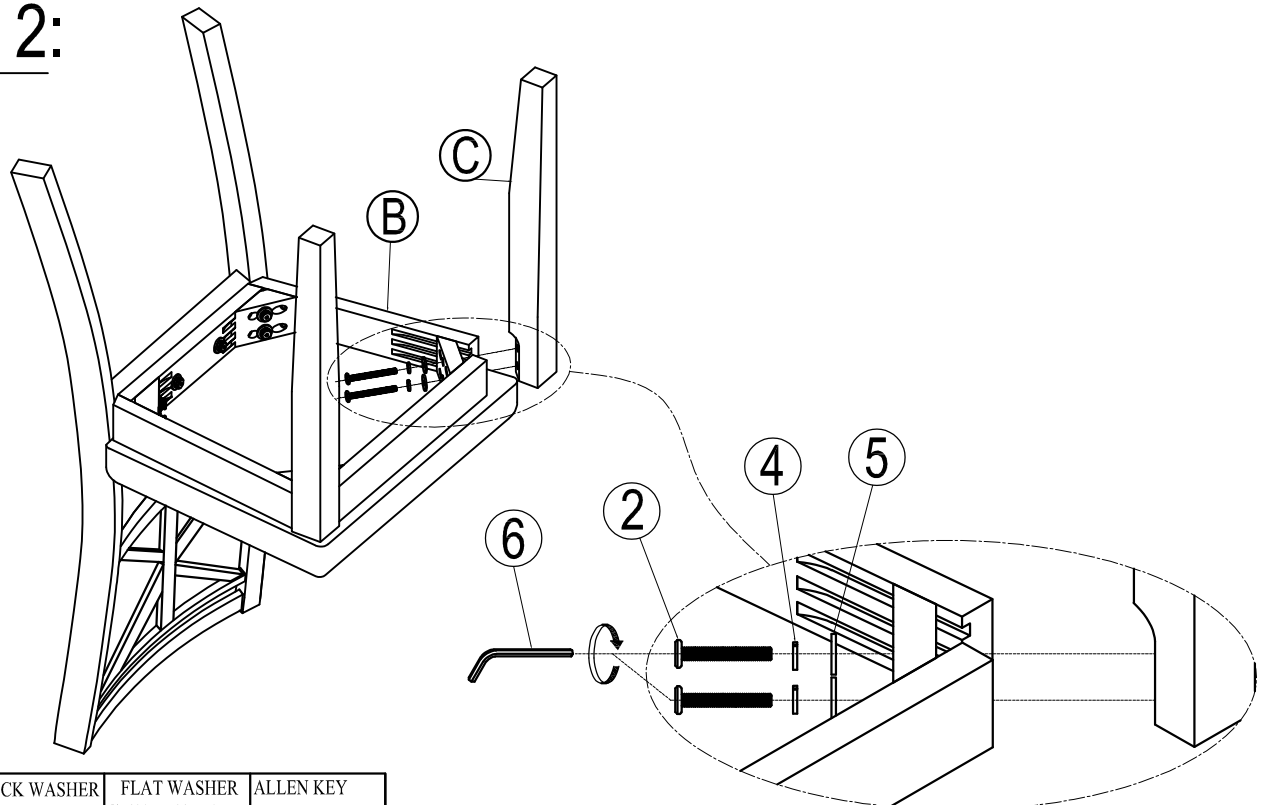

BOLT Ø 1/4" x 55 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 X 2 mm	ALLEN KEY 4 mm x 75mm
			
② x 8	④ x 8	⑤ x 8	⑥ x 1

X2

ASSEMBLY INSTRUCTION

ITEM NO.N715P406064

COMPLETE

