


**SMART COFFEE TABLE WITH ALL-IN-ONE
REFRIGERATOR & FREEZER DRAWERS**

USER GUIDE

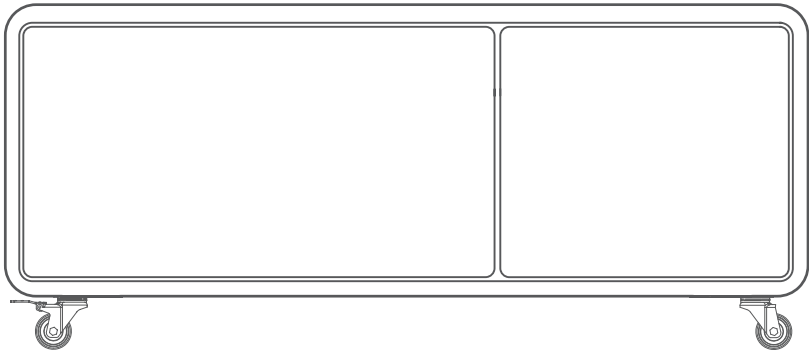



In case you might need to return this product, please keep all the packaging materials and return only in its original packaging and in excellent condition.






Parts & features	01
Specifications	02
Packing list	02
Precaution before use - unpacking	03
Notice	04
Installing the power cord	06
Functions and features	07
User guide	08
Daily maintenance	11
Delivery and outage	13
Non-failure	14
Trouble shooting	15

PARTS & FEATURES


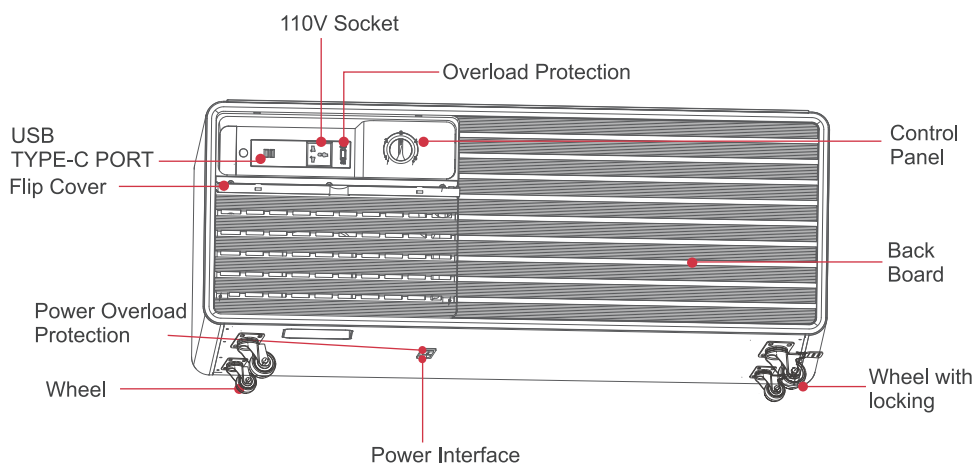
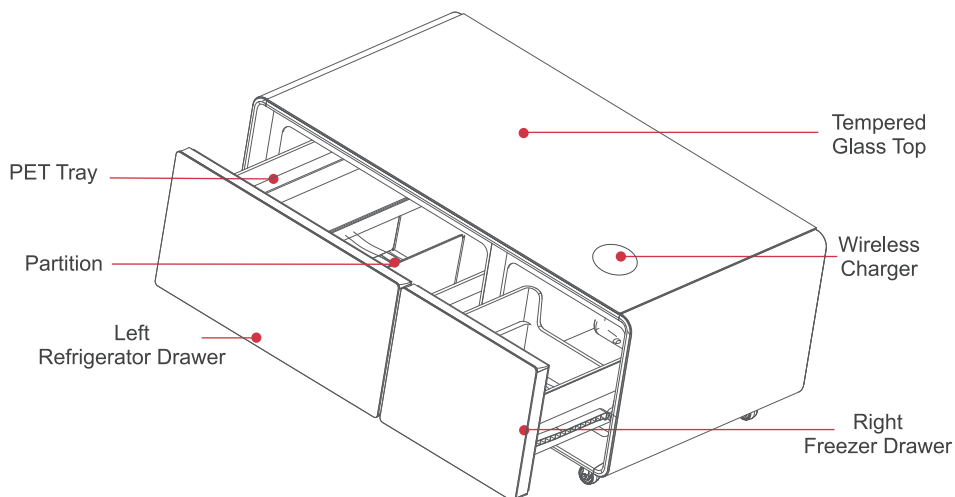


SPECIFICATIONS

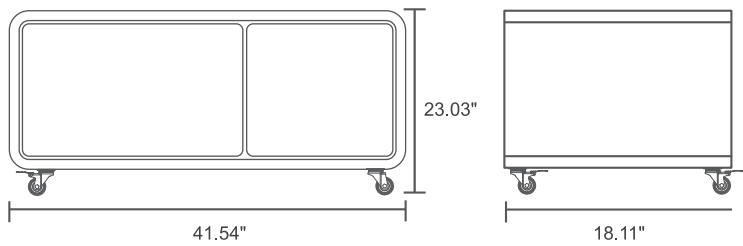


Consumption	128kWh/year	Packing Size	45.24"x28.98"x19.88"
Noise Level	36db	Temp Control	Mechnica 1
Voltage	110V-120V/60HZ	Refrigeration Mode	Compressor
Net Weight	95.9 lbs	Refrigerant/Wt	R600a/42g
Gross Weight	115.96 lbs	Volume	65L + 28L
Controlling	Mechanical Knob	Left Drawer Temp Range	34°F~46°F1°C~8°C
Product Dimensions	41.54"x23.03"x18.11"	Right Drawer Temp Range	-13°F~3.2°F -25°C~-16°C
Wireless Charger	10W	USB	5V/1.5A

PACKING LIST

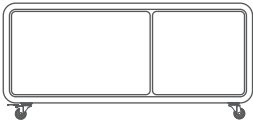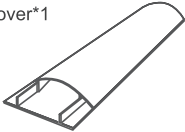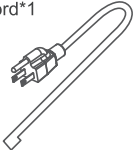Main Body*1 	Partition*2 	PET Tray*1 
Cable Cover*1 	Power Cord*1 	User Manual*1 

 PRECAUTION BEFORE USE - UNPACKING





For better heat dissipation, remove the foam base, peel off the adhesive tape and the transparent film from the surface of the table. Fail to do so may result in personal injury or property damage.

ENSURE ALL ACCESSORIES ARE INCLUDED ACCORDING TO THE PACKING LIST IN PAGE 2.

TABLE PLACEMENT CONDITIONS

1. Please use the cable cover to protect the power cord if your floor is not installed with power socket and carpet.
2. Avoid high humidity, super cold environment and directly sunlight places.
3. Make sure that there is enough space on all sides around the Smart Coffee Table to ensure adequate ventilation for the refrigerator (see attached picture). Do not place the back of the Smart Coffee Table against a wall as this may result in overheating.
4. The table should be put on flat and solid ground. After determining the position and placing it smoothly, it is necessary to step on the brake device of the brake wheel and fix the position of the table to prevent random sliding.
5. Universal wheel: change the direction of travel at will, and pass easily on complex roads. Brake wheel: It stops with one tap, and the steering and wheels are both fixed

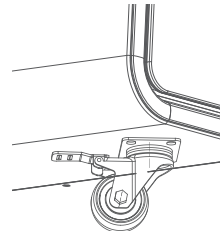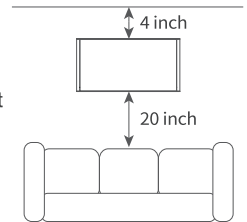


PLEASE CLEAN THE TABLE BEFORE USING

Please refer to page 15 for daily maintenance and repair.

RESTING

After leveling and cleaning the table, do not power on at once. Before connecting the appliance to an electrical power supply, let the smart coffee table unplugged for about 2 hours in its final location. This will reduce the possibility of a malfunction in the cooling system due to mishandling or jostling in transport.

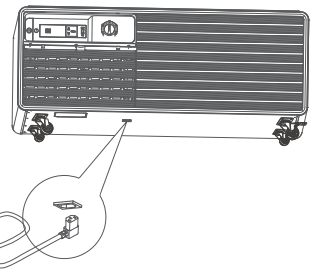

POWER ON

After unplug for 2 hours, carefully check if there is any water or foreign object around the power socket and USB ports, then connect the power cable under the bottom of the table, see picture above. Please make sure the cable is safely installed and can come in handy, to minimize daily wear and tear of the power cord and avoid users being accidentally tripped over.



The maximum power draw on the smart coffee table is 960 watts for all the outlets combined. Please do not connect to a multipurpose power outlet.

NOTICE

NOTICE

ELECTRIC WARNINGS

1. After powering on the unit, please install the cable cover to prevent any damage of the cable. Do not step on the cable, otherwise it will raise the risk of electric leakage.
2. The power cord should be kept in firm contact with the power source. Fair to do so may result in property damage, personal injury or fire.
3. To avoid damage to the cable, please do not step on the cable. Do not roll over the cable when moving the table.
4. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord. Before cleaning, repairing or replacing any parts, unplug the table to avoid electric shock.
5. Do not use if the power cord is damaged or the plug is worn. Please make sure to go to the manufacturer's designated repair center or online authorized dealer for replacement.
6. For this R600a refrigerator, please ensure that maintenance is carried out by professionally trained technicians. If the equipment is damaged, please send it to a nearby service center for inspection, repair or adjustment.

POWER SUPPLY WARNING

This table should be powered by AC110V. If the voltage fluctuation is out of range, it may cause unit failure, property damage or personal injury.

GROUND POWER WARNING

Use a dedicated socket and ground the device properly. The power cord is equipped with a three-wire (grounding) plug and should be used with a standard three-wire (grounding) socket. Under no circumstances should the third prong (grounding) of the power cord be cut off or removed.

STORAGE WARNING


This table should not be used to store any products that are inflammable, explosive or dangerous, as well as any chemicals. Blood or other biological products is prohibited to be stored in it.

USB

Keep liquids away from USB ports. Do not use wet cloth to clean the ports.

110 POWER PORT

1. Keep liquids away from socket. Do not use wet cloth to clean.
2. The rated power of connecting this electric appliance cannot exceed 960W. Overloading will lead to over heating and will cause fire. Even will cause property damage or personal injury.
3. Please do not connect to a multipurpose power outlet

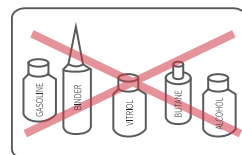

■ WIRELESS CHARGER

- 1.If the device is equipped with a thick protective shell or a metal protective shell, the charging efficiency may be affected. Remove the shell and try again.
- 2.The wireless charger may generate heat when charging. If the battery overheats, the software may limit the charging. It will begin to charge once the temperature drops.
- 3.Wireless charging and the USB charging should not be used in the same time.

■ SPEAKER

This product should by all means avoid any contact with water, moist, heat, or devices that may generate magnetic and/or electric field. In case of a malfunction of the said devices, please cut off the power first, then relocate the devices and turn them back on.

Please place this product on a flat, level floor, with ample space (>10cm or 3" in) on all sides around the table to ensure adequate ventilation.

■ REPAIR

It is strictly prohibited to disassemble or modify the table and damage the refrigeration pipeline by yourself. Maintenance of the table must be carried out by professional personnel.


■ PLACEMENT ENVIRONMENT

- 1.Smart Coffee table should be placed far away from any heat source and do not expose to direct sunlight.
- 2.Smart Coffee table should be placed in a well ventilated area, please refer to TABLE PLACEMENT CONDITIONS.
- 3.Do not place the smart coffee table in damp areas or where the equipment may come into contact with water. Do not place power sockets, voltage stabilizers, or small appliances on the refrigerator coffee table.
- 4.Do not put unstable objects on the smart coffee table to avoid damage to the table top.
- 5.Be cautious when placing objects with liquid on table. Spilling liquid can result in property damage, personal injury or electric shock.
- 6.Do not store gas or any other flammable materials in or near the smart coffee table to avoid possible fire hazard.
- 7.If there is any gas or other flammable material leak around the unit, close the gas valve and open all doors and windows immediately. DO NOT PULL OR TOUCH THE SMART COFFEE TABLE ELECTRIC PART.

■ PLACEMENT OF POWER CORD

SUG 1. Please leave enough place for ground plug if your house is under decoration orrenovation.


Ground Plug set suggestion:

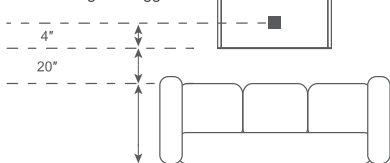

SUG 2. You can buy a carpet to hide the ground power cord.



 SUG 3. You can also use the attached cable cover to hide the power cord to avoid any tripping.




INSTALLING THE POWER CORD

GROUNDING INSTRUCTIONS


This appliance must be plugged into a grounded socket. The power cord that is supplied with the appliance contains the appropriate grounding conductor and grounding plug.

The plug must be inserted into a outlet that has been grounded in accordance with the existing local codes and ordinances. The required nominal voltage and frequency are indicated on the rating label. Consult a qualified electrician for other concerns.


1. Have one partner lift the right side of the Smart Coffee Table table off the ground. Rest the opposing side on a foam insert or cushion for protection.

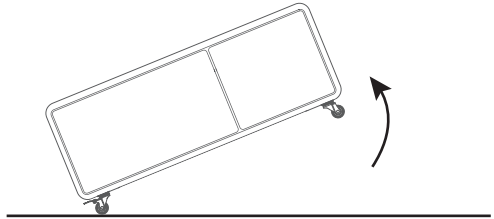

2. The power socket is located on the bottom of the Smart Coffee Table towards the back right corner. Locate the socket and unwrap the power cord before attaching. Plug in the adaptor end of the cord to the socket in the indicated location below.

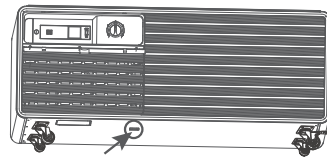

3. After installing the power cord or moving the Smart Coffee Table, you must let the refrigerator coolant settle for a minimum of 2 hours before plugging in the Smart Coffee Table.

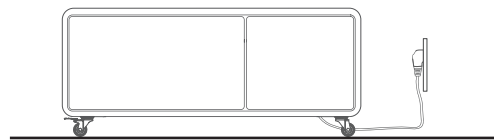


Use proper lifting technique!

Exercise caution! If you have a history of back pain or injury do not attempt to lift table. ARTISAN will not accept responsibility for any injury that may occur during set up process.

FUNCTION AND FEATURES

Left Refrigerator Drawer 37.4°F~46.4°F

Right Freezer Drawer -13°F~-3.2°F

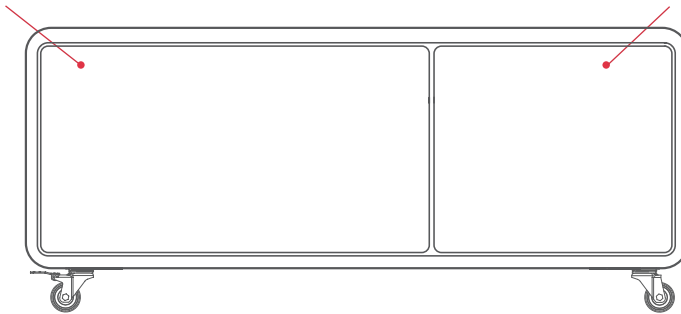

REFRIGERATOR DRAWERS

The Smart Coffee table is designed with two drawers that can be manually controlled for the temperatures. Refrigerator drawer comes with two partitions and one tray to organize all your favorite beverages and snacks.

CHARGERS

There are two types of chargers, one is 10W wireless charger located on the top and the other is USB Type chargers which is located on the backside.

110V POWER SOCKETS

The smart coffee table is equipped with 110V power sockets, to supply power to other devices. The power sockets have a separate safety switch to detect high input or overload. If the safety switch detects either, it will cut off power automatically to avoid any dangerousness.

HIGH EFFICIENCY COMPRESSOR


The smart coffee table is equipped with a high efficiency compressor to keep your unit working at optimum performance. It can automatically adjust the ON/OFF time according to the changes in temperature inside and outside the refrigeration compartment, as well as the amount of stored food. It has powerful refrigeration capability and it is environmentally friendly, energy-saving and operate quietly.

PARTITION STORAGE

To make better use of the storage space, there are two partitions and a tray in the refrigerator drawer, which facilitate the classification and storage of food.

REMOVABLE DOOR SEAL

The removable door seal will ensure the long-term sealing of the smart coffee table, making it easier for daily cleaning and maintenance, and reducing energy consumption.

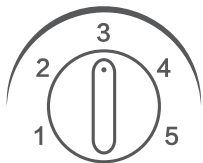

This smart coffee table adopt mechanical manual temp control, the factory default is level 3 .The fridge temp is divided into 5 levels. The higher the level, the lower the temperature.

e.g: the factory default is level 3, adjust to 4-5 level to decrease the temp; adjust to 1-2 level to increase the temp.



Individual Quick Freezing (IQF): Please preset the temperature mode at Level 5 in advance. Once the items have cooled down to your ideal temperature, adjust the temp mode back to within level 4.

When the temperature setting has been adjusted, it would take some time for the temperature inside the drawers to reach to a fine balance. The length of this time depends on temperature differences, ambient temperature, and the frequency of door openings, etc.

REFRIGERATOR DRAWER

NOTE

- 1.Fill this refrigerator only with fresh food.
- 2.Do not store food that requires the refrigerator to outperform its designed temperature range.
- 3.Do not store food while it is hot. This would drive up the drawer temperature, thus affecting all other items inside.
- 4.Do not open the drawers all too often, nor leave it open for a long time. This would also destabilize the inside temperature.
- 5.Do not store food that is about to expire. Keep food properly sealed to avoid odor build-up.

Storage Suggestion

- 1.The food should be washed and clean thoroughly before putting into the refrigerator.
- 2.The bottles should be closely placed to prevent tilting and falling when the door is opened.
- 3.Food placed in the drawer should not exceed a certain height, otherwise it may prevent the drawer from closing properly.
- 4.The partition can help organize different types of food, and can be adjusted according to your needs.
- 5.The sliding tray can be used for storing the washed fruits, (such as grapes and strawberries) without the need for a fruit plate.
- 6.Adjust the refrigerator temperature according to the food characteristics.

■ USB

The smart coffee table is equipped with two USB charging interfaces. When connected to commonly used devices such as mobile phones, tablets, and desktop speakers via a data cable in a power-on state, it can be used for charging or starting smart devices. The carefully designed cable storage box can hide excess and messy power cables inside, making the whole setup look neat and tidy!

■ FREEZER

NOTE


- 1.Do not place hot food in the freezer.
- 2.Do not put damaged or opened packages of frozen food directly into the freezer. Please make sure all food is properly sealed to avoid spoilage or deterioration.
- 3.Do not overfill the table drawers as this will affect the ventilation.
- 4.Do not store chemicals in any of the drawers.

■ 110V POWER

This table is equipped with two power ports, with a required rated current of 10A and a rated power of 960W.It can accommodate the use of both two-prong and three-prong electrical appliances.

CAUTION: DO NOT DROP WATER OR LIQUID IN ANY OF THE POWER OPENINGS.

Please do not connect to appliances that fails to match the required nominal voltage and frequency on the rating label. Please do not connect to a multipurpose power outlet.

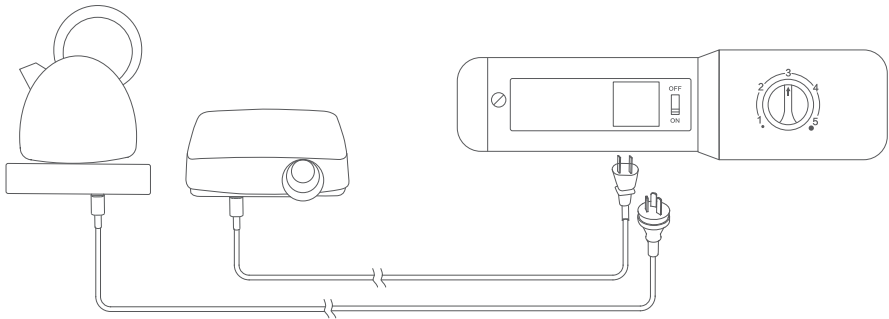

MULTI PROTECTIONS / SLUṡP:

Overload Protection	5000 times of plugging test	Shell with 750°C flame retardant	Double acting safety door	Hidden warning light	New national standard sockets
---------------------	-----------------------------	----------------------------------	---------------------------	----------------------	-------------------------------

■ **WIRELESS CHARGING**

Wireless charger only works for devices that are equipped with wireless charging and meet the Qi standard.

NOTE


1.Wireless charging is enabled once the table has been plugged in.

2.Please put the device to the center of the wireless charging area.

3.Make sure there is no metal barrier between the charger and the phone to avoid overheating.

4.If the charging surface is overheated, please remove it and stop charging.

5.The wireless charger and USB charger should not be used at the same time, otherwise the USB charger won't be able to work.

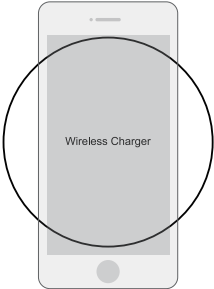

Voltage	12V Input
Output	10W (max)
Sensing Distance	≤4mm
Work Frequency	105K-205K Hz
Work Temperature	14°F-149°F
Work Humidity	10%RH-75%RH

DAILY MAINTENANCE

CLEANING

Clean the Smart Coffee Table regularly to avoid dust accumulation. Wipe the surface of the table with the microfiber cloth. Do not store expired food in the drawers.

1. Before cleaning the Smart Coffee Table, please make sure to turn off the power and remove the plug.
2. Please do not forcefully disassemble this table, as it may cause damage.
3. Clean the unit with a soft cloth and neutral detergent. Dry the unit with a clean and soft cloth.
4. Clean the shell gently to avoid deformation or short circuit caused by the water flowing into the device through the mesh.
5. Inspect the unit after cleaning. Do not use if any damage is found.
6. Make sure the table is completely dry before powering on.

NOTE: Be sure to clean the door seal thoroughly to ensure a long lasting period and preserve power consumption.



NOTE

In order to prevent leakage accident, do not spray water to wash the table. Please use dry cloth to clean the power socket, knob, plug and USB socket.

In order to prevent damage to the unit, please do not use following material to clean the table:

1. Acidic or slightly alkaline kitchen cleaners.
2. Similar powdered detergent products.
3. Chemicals such as benzene, sodium bicarbonate, alcohol, carious acids, petroleum.
4. Hard brush, abrasive sponge brush.
5. Hot water.

Due to the substantial weight of this table, please be cautious and avoid any scratch or damage to your floor when attempting to move the table for either cleaning or maintenance. Always keep the tempered glass top upright while doing so.


Please do not use hot water to clean the inside of the drawers including the glass shelves, partition panels or PET trays. Drastic temperature differences might cause fracture, breakage or explosion of the above, resulting in personal injury and property loss.

Please do not touch the inside of the drawers with wet hands while cleaning. Do not reach your hands underneath the bottom of the table, as the metal components might accidentally cause scratch or cut.

■ DISASSEMBLY AND CLEANING OF THE REFRIGERATOR DRAWER

Before dismantling the refrigerator drawer, please take out the PET tray, drawer partition and all items inside from the refrigerator. Fully pull the door and the drawer, lift up the whole drawer and pull out the sets.

You can use water to wash the drawer, PET tray, partition, and then use soft cloth to dry them.

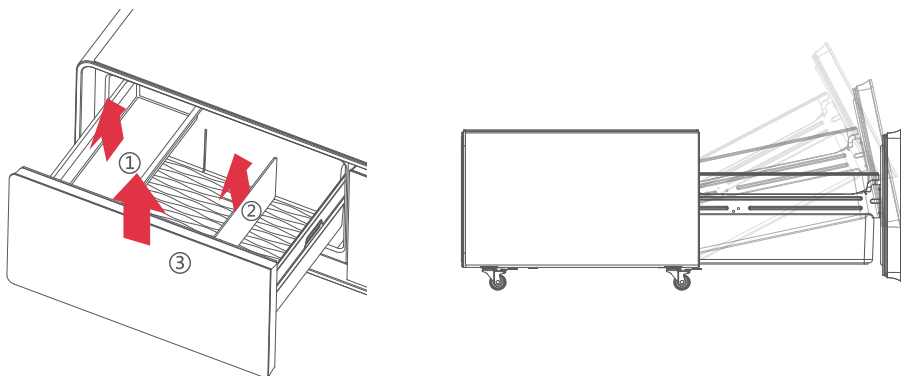

■ DEFROSTING

The refrigerator can defrost automatically. The defrosting water flows out to the water tray at the back of the table through the bottom back of the water tank. The water will be evaporated naturally by the heat of the compressor.

■ DOOR SEAL CLEANING

The doors and door seals of smart coffee table can become dirty and easily lead to aging and damage. This can cause the door to not close properly and result in air leakage, so it is important to keep them clean. When cleaning the door seals, it is necessary to use clean water and wipe them dry with a dry cloth.

■ SAFETY INSPECTION AFTER CLEANING

1. Please check if the power plug is completely inserted into the socket.
2. Please check if the power cable has scratches.
3. Please check if the power plug has abnormal heating condition.
4. Please check if the power base and USB has foreign object or liquid left.

 
DELIVERY AND OUTAGE

TRANSPORTATION

1. Unplug the product.
2. Take out all the items inside the Smart Coffee Table.
3. Use adhesive tape to secure the partition and PET tray inside the Smart Coffee Table.
4. Close the drawer and use adhesive tape to secure it.



Do not lay down the refrigerator at any time.
To avoid affecting the refrigerate system, The maximum inclination angle should be less than 45° during delivery.



POWER OUTAGE

Even in summer, the temperature in the refrigerator can keep 1-2 hours after power outage. Please do not put more food into the unit and do not open the door when power off. You can put some ice with a container in the drawer if you had known about the outage.



An increase in the temperature of the refrigerator due to power outages or other failures can shorten the life of food and affect its quality.

POWER OFF

If the refrigerator will not be used for a long period of time, please unplug and cut off the power, and clean the unit. Please keep the door open to avoid any bad odor created by the food debris.



After unplugging the power cord, please wait for at least five minutes before plugging it back on. To extend the lifespan of the product, avoid opening and closing the drawers too frequently. If you want to dispose of this item, please properly disposed of or handed over to professionals for disposal. Do not dispose of it casually to avoid harm to the environment or other hazards.

GO OUT FOR HOLIDAY

1. Cut off the power
2. Take out all the food inside the unit.
3. Clean the unit properly.

NON-FAILURE

1	Foggy condensation on the surface: In rainy season with high humidity, condensation may occur on the surface of the refrigerator, which is not a malfunction, please dry it with a clean cloth.
2	"hissing" sound occur: This is the flow water sound of the refrigerate, which is normal phenomenon.
3	Compressor can not be started: The voltage is too low, please stop powering on the refrigerator and wait the voltage to get back to normal.
4	Long boot time: In summer, it is normal to start the device for a long time due to the indoor high temperature.
5	"Papa" sound: It is caused by thermal expansion and contraction of the inner tank and refrigeration pipe.
6	"humming" sound: When the refrigerator is working, the compressor will produce "humming" sound. If the device is not placed on a flat surface, vibration and noise will occur, just adjust the feet of the device according to the manual.
7	Wireless charger can not work: The charger of mobile phone can not meet the standard. Please make sure the phone charger meet the Qi standard.
8	Delay charging of the wireless charger: Please check the phone to make sure it places on the right area and remove the shell of the phone.
9	110 V plug can not work: Please make sure there is no water or foreign object in the socket. Check the refrigerator whether is connected properly and whether the switch on the right socket is turning on or not. If still doesn't work, please contact the after-sales service.
10	USB can no longer work: Check the refrigerator whether is connected properly and whether the switch on the right socket is turning on or not. If still doesn't work, please contact the after-sales service.
11	Refrigerator bottom is wet: Please check if the outlet hole is blocked.
12	The compressor runs continuously for a long time: Please check if the setting temperature is too low, the door of refrigerator is left opening for a long time, hot food has put inside, the refrigerator is exposed to direct sunlight or there is too much food in it to influence the air circulation.

TROUBLE SHOOTING

Fault	Causes	Solutions
Power light is on, compressor is working but making "humming" sound.	Power Voltage is lower than 90V.	Stop powering on the refrigerator and wait the voltage to get back to normal.
Compressor starts but stops after about one minute, and then starts and stops ongoing.	Power voltage is higher than 120V	
Compressor runs for a longtime, but evaporator surface is frost free.	Leak	Professional inspection is required.
	Blockage	Professional inspection is required.
There is frost on the surface but the compressor is keep working.	Too much frost on evaporator.	Defrost.
	Opening the drawers for a longtime.	Do not open drawers frequently.
	Drawers are filled with too many items.	Remove some of the items inside.
	Bad heat dissipation of condenser	Move to a ventilated area.
	Bad heat dissipation of condenser	Professional inspection is required.
The refrigerator doesn't work and refrigerated.	Fuse is blown and the power light is off.	Replace fuse.
	Input controlling circuit has fault and the power light is off.	Professional inspection is required.
Excessive noise	Machine places uneven.	Adjust the feet of the refrigerator.
	Inner fastener is loose.	Secure the fastener.
	Collision between pipes.	Separate the pipes.
It can refrigerate but when touch the surface, there is a slightly hump and the electroprobe test with a light bright.	Induced electricity is leaking.	Check the earthing conductor.

