

ASSEMBLY INSTRUCTIONS



Thank you for selecting the Christmas Tree by Ktaxon
As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, please contact us and we guarantee you complete satisfaction. Please attach your user name, order ID, where you buy this product, details of your problem, you can mark the broken/missing parts on the instruction book, and take a photo to show us, so that we can assist you better.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS






CAUTION:

- a) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use.
- b) This seasonal use product is not intended for permanent installation or use.
- c) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- d) If you use other light product to decorate the Christmas tree, please use it safely.
- e) Do not use this product for other than its intended use.

STORAGE:


Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.

Part list

Item No.	Image	Quantity
Stand		1 Pc
Bolts		3 Pcs
Bottom Section		1 Pc
Middle Section		1 Pc
Top Section		1 Pc

Assembly Instruction


1



Please check all the accessories included:
Base*1 + Bolt*3 + Bottom Section*1 +
Middle Section*1 + Top Section*1

This panel shows the components for assembly: three sections of the Christmas tree (bottom, middle, and top), the metal stand, three screws, and a bolt.

2



Place the stand in the shape of "X"

The image shows the metal stand with its four legs crossed at the top to form an 'X' shape.

3



Screw in 3 bolts to the base hole, and don't screw too tight

The image shows the stand with three screws being inserted into the base holes.

4



Insert bottom section into the stand, turn the screws to fix the tree

The image shows the bottom section of the tree being inserted into the stand.

5



Open bottom section

The image shows the bottom section of the tree with its branches opened.

6



Insert middle section

The image shows the middle section of the tree being inserted into the stand.

7



Insert top section

The image shows the Christmas tree fully assembled on the stand.

8



Please remember to open the small branches and tips fully, the tree will more lush(Please See "Shaping Instructions" Below)

The image shows the Christmas tree fully assembled and fluffed.

Shaping Instruction

How to fluff the branches

Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in a genuinely beautiful and appealing holiday centerpiece.



Fig.1

Every tree style is shipped from the factory with the tips of each branch compressed to the center(Fig1).

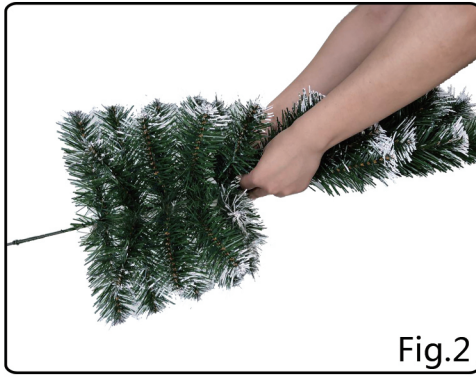


Fig.2

Each branch tip must be shaped to it's proper position to give the treenatural look. Spread tips away from the branch gently(Fig2).



Fig.3

Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance(Fig3).

Fig.3 shows a typical tree branch after shaping. Branch tips should be carefully pressed back toward center tip when tree is disassembled for storage in original carton.