


SPINNING WHEEL

SKU # AG938-400

Please read this entire document before installing and using your Spinning Wheel.

FOR RESIDENTIAL USE ONLY

Hang your spinning wheel from the swing hangers on your swings set as you would a standard swing. The area around the Spinning Wheel should be clear of all obstructions.

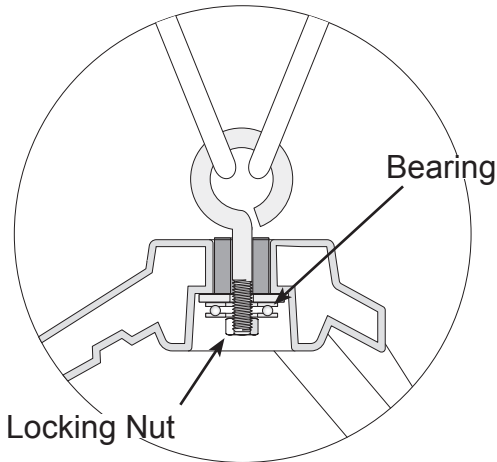

Maintenance: Periodically check that the Locking Nut on the bottom of the center of your spinning wheel is fully engaged. Every year the Stainless bearing should be lubricated with a light household oil or light grease. Too much grease will attract dirt. Wipe away any excess lubricant.

The proper installation of your swing accessories is vital for the safety of your children. All Creative Playthings accessories are designed for use as replacements for metal or wood playset accessories. You must be sure that your playset uses swing hanger assemblies that contain nylon bushings. This product will fail and cause injury if used without proper swing hangers. If the intended installation does not have the appropriate swing hanger assemblies we recommend the use of Creative Playthings Ny-Glide™ swing connectors. Ny-Glide™ swing connectors are available at your Creative Playthings dealer. In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should never wrap the rope or chain around any part of their body.

SPINNING WHEEL

19659-100 Rev B (11-17)


SPINNING WHEEL

SKU # AG938-400

Please read this entire document before installing and using your Spinning Wheel.

FOR RESIDENTIAL USE ONLY

Hang your spinning wheel from the swing hangers on your swings set as you would a standard swing. The area around the Spinning Wheel should be clear of all obstructions.

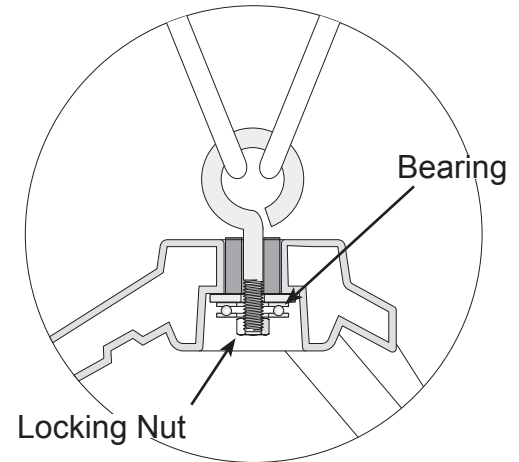

Maintenance: Periodically check that the Locking Nut on the bottom of the center of your spinning wheel is fully engaged. Every year the Stainless bearing should be lubricated with a light household oil or light grease. Too much grease will attract dirt. Wipe away any excess lubricant.

The proper installation of your swing accessories is vital for the safety of your children. All Creative Playthings accessories are designed for use as replacements for metal or wood playset accessories. You must be sure that your playset uses swing hanger assemblies that contain nylon bushings. This product will fail and cause injury if used without proper swing hangers. If the intended installation does not have the appropriate swing hanger assemblies we recommend the use of Creative Playthings Ny-Glide™ swing connectors. Ny-Glide™ swing connectors are available at your Creative Playthings dealer. In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should never wrap the rope or chain around any part of their body.

SPINNING WHEEL

19659-100 Rev B (11-17)