

INSTALLATION

 
Product Manual

Version: 200328US-01-26A-AA



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

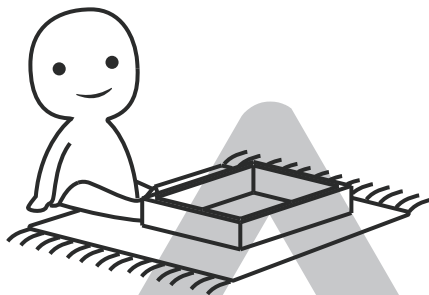

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

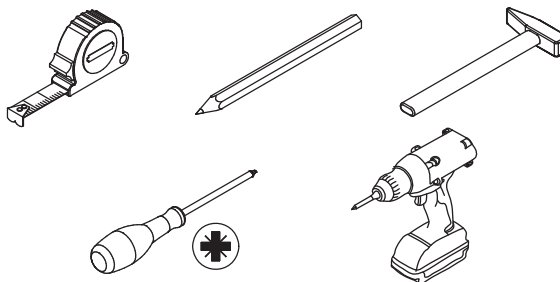

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 44 Ø 15 x 10 mm	B x 44 Ø 6 x 35 mm	C x 44	D x 48 Ø 6 x 30 mm	E x 8 Ø 5 x 40 mm
F x 4	G x 8 Ø 4 x 18 mm	H x 2	J x 16 Ø 3.5 x 20 mm	K x 4
L x 8	M x 74 Ø 3.5 x 14 mm	N x 2	P x 2 Ø 3.5 x 35 mm	Q x 2
R x 32	S x 32 Ø 3 x 14 mm	T x 4	U x 4	V x 2

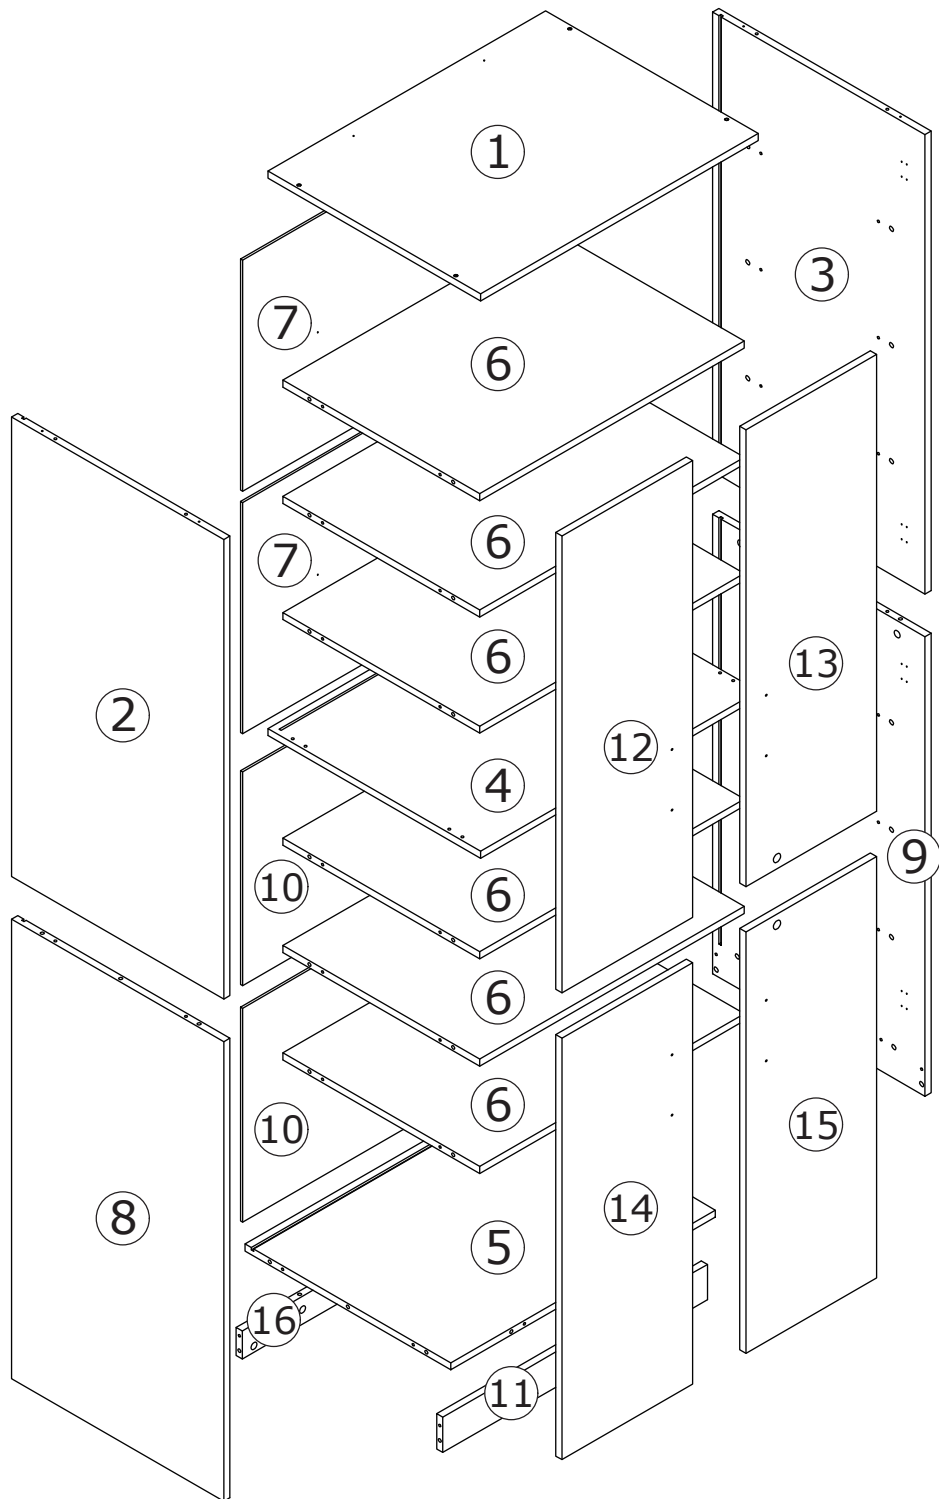 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




 
*This is a permanent label.
Do not remove!*

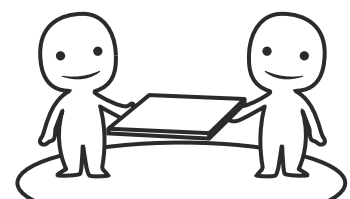




ASSEMBLED BY 2 ADULTS

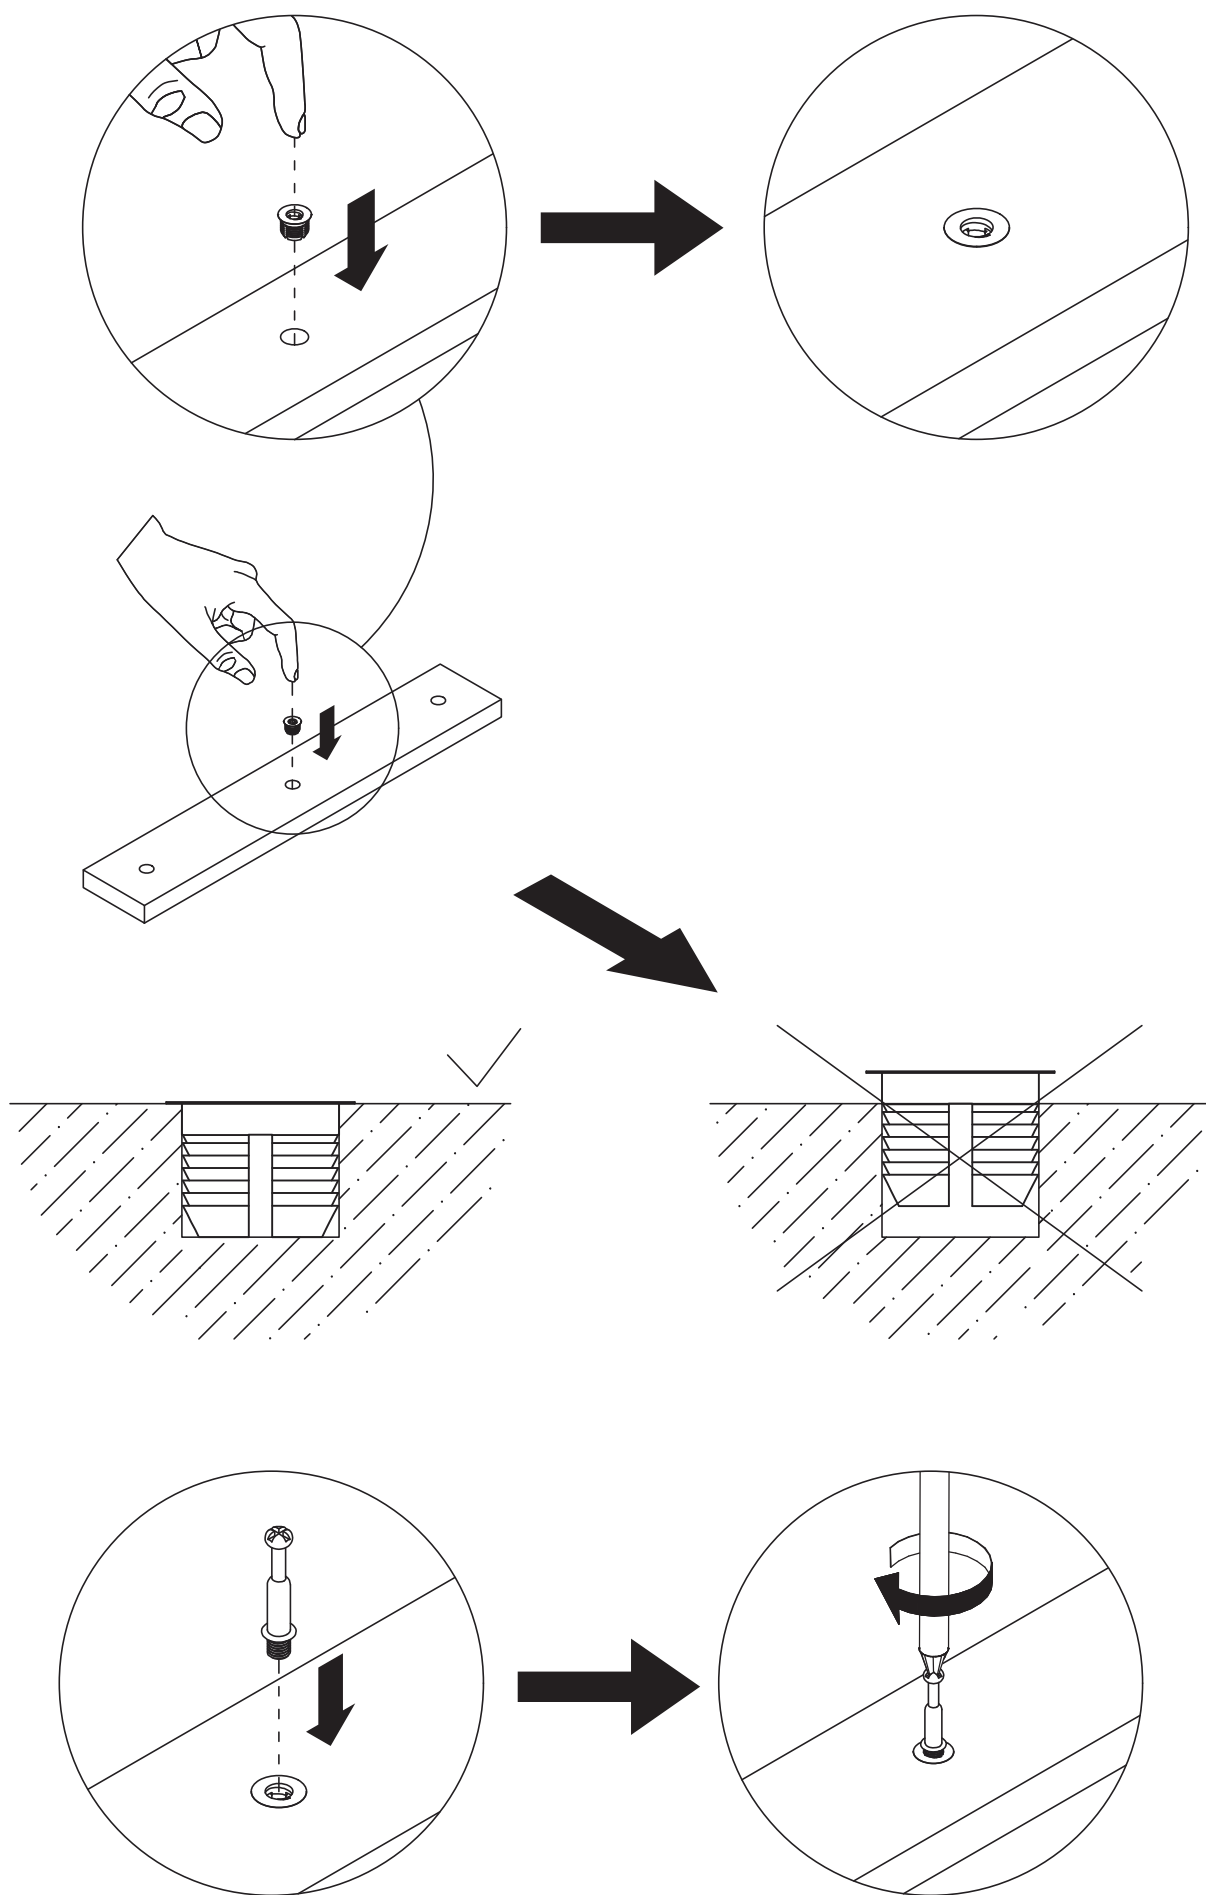 




1

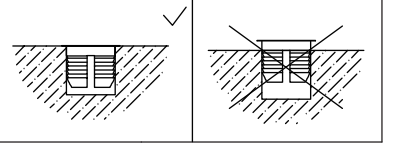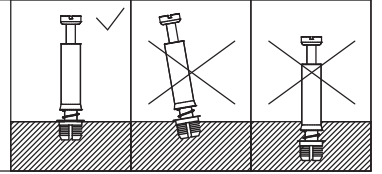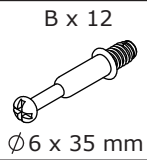    

 
 
 
Insert plug (C) into panels 2 and 3, then screw self-tapping rod (B) onto the holes.

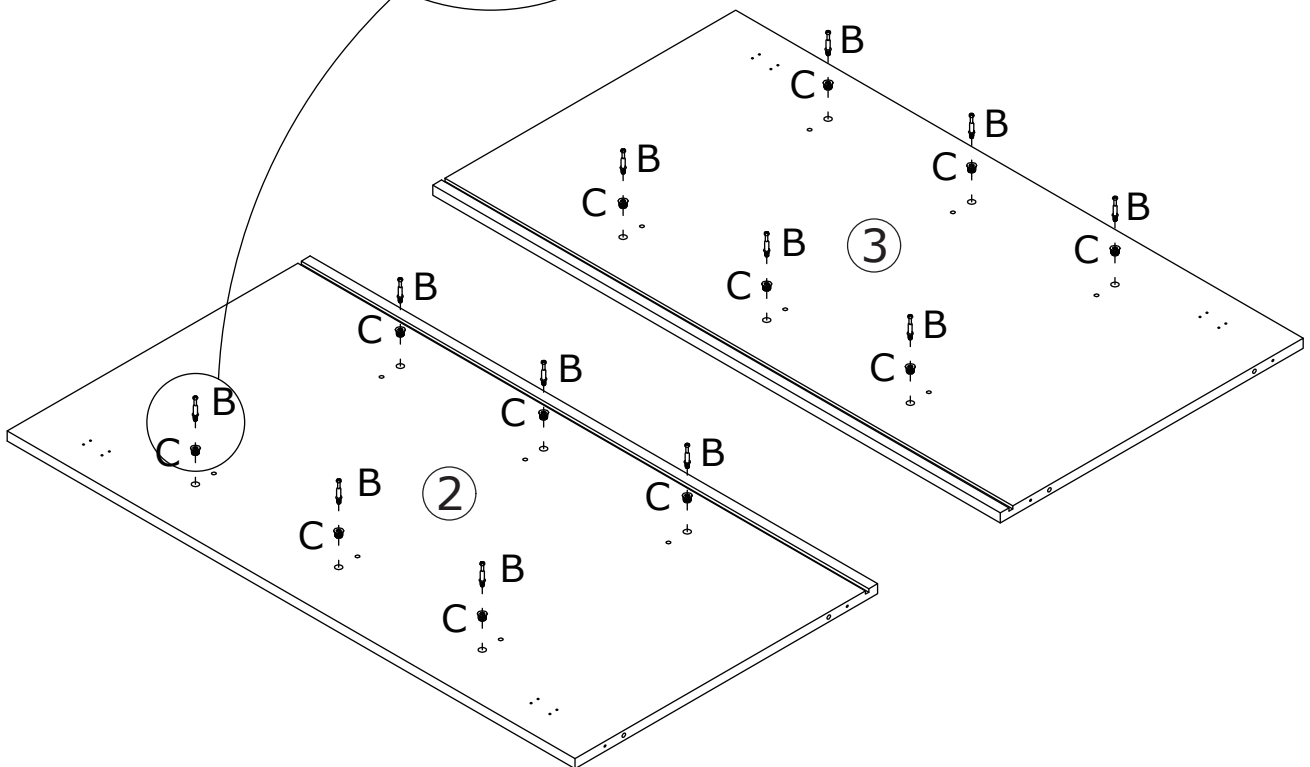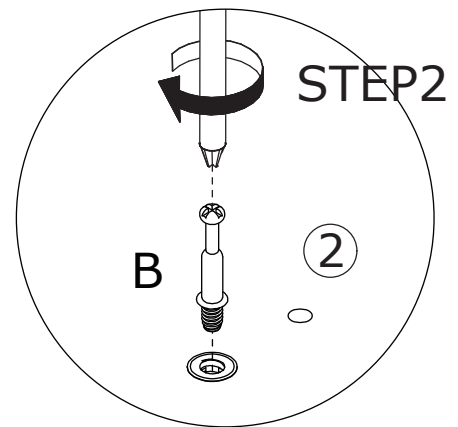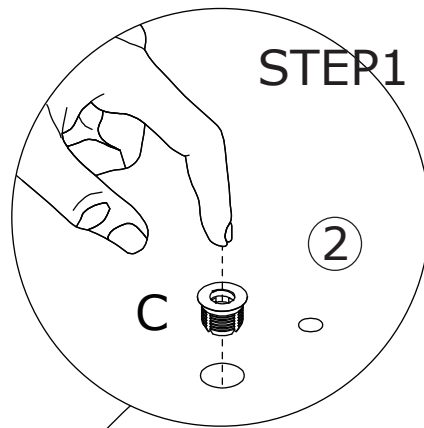

2

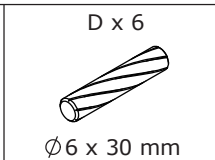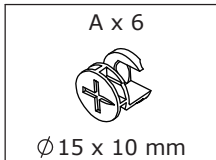   

  
 
Connect panel 6 to panel 2 using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

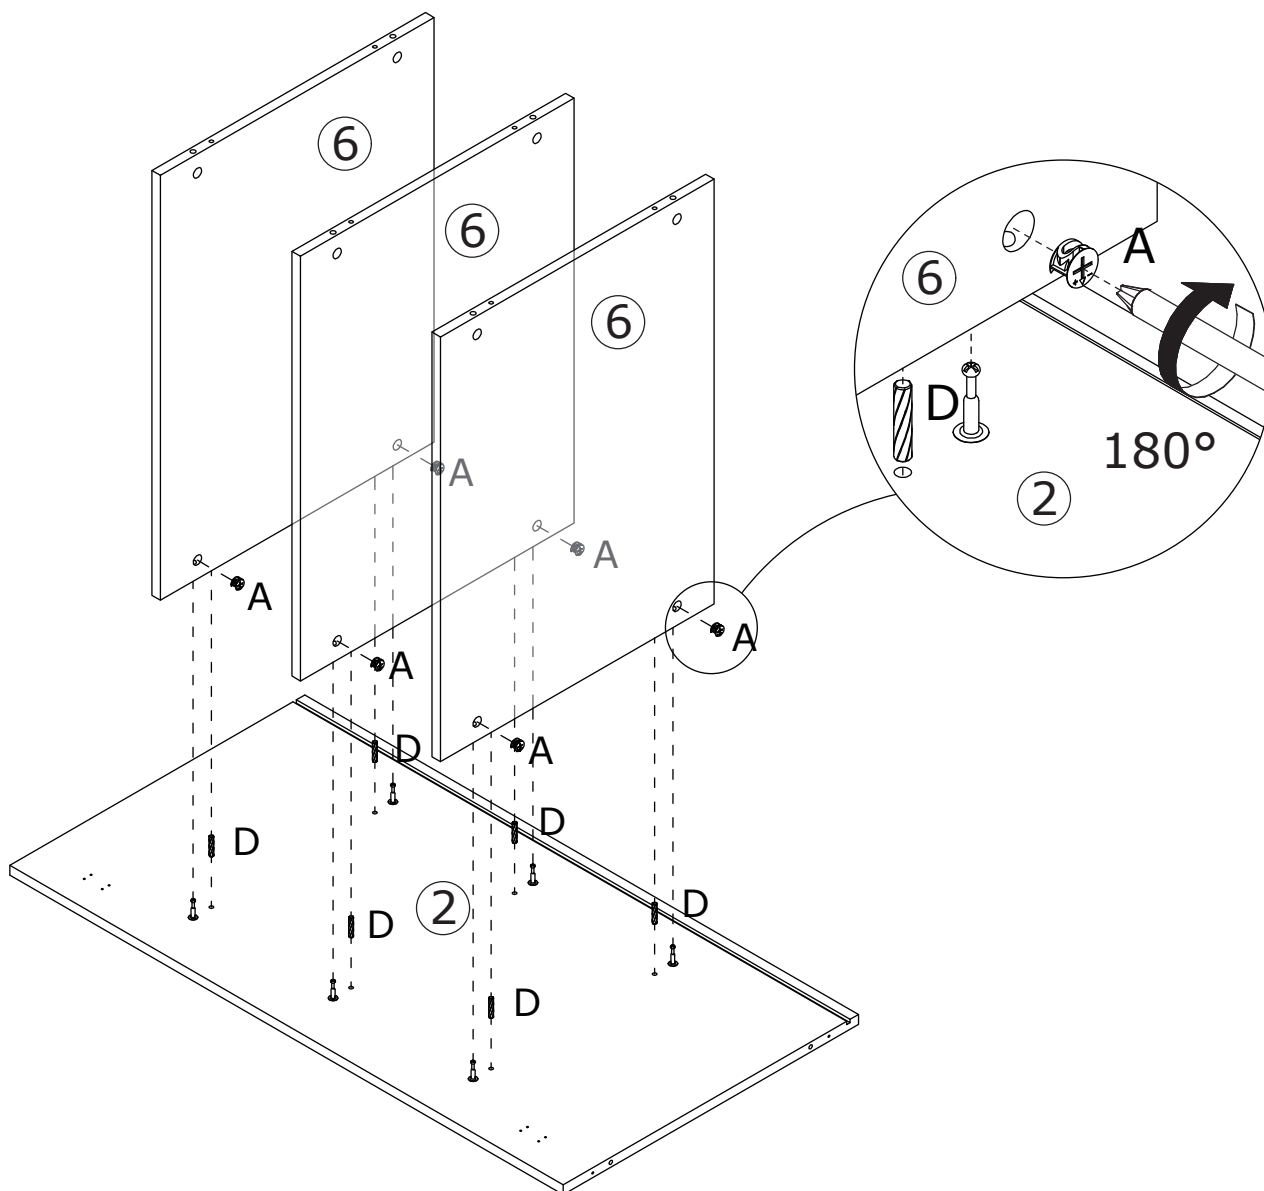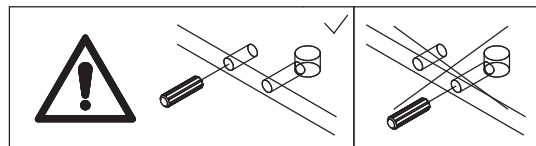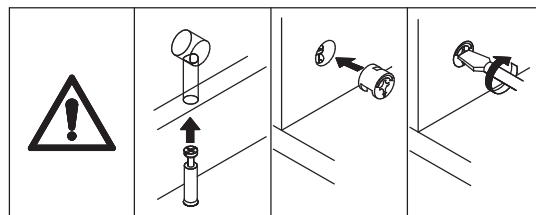

3



  Connect panel 3 to panel 6 using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

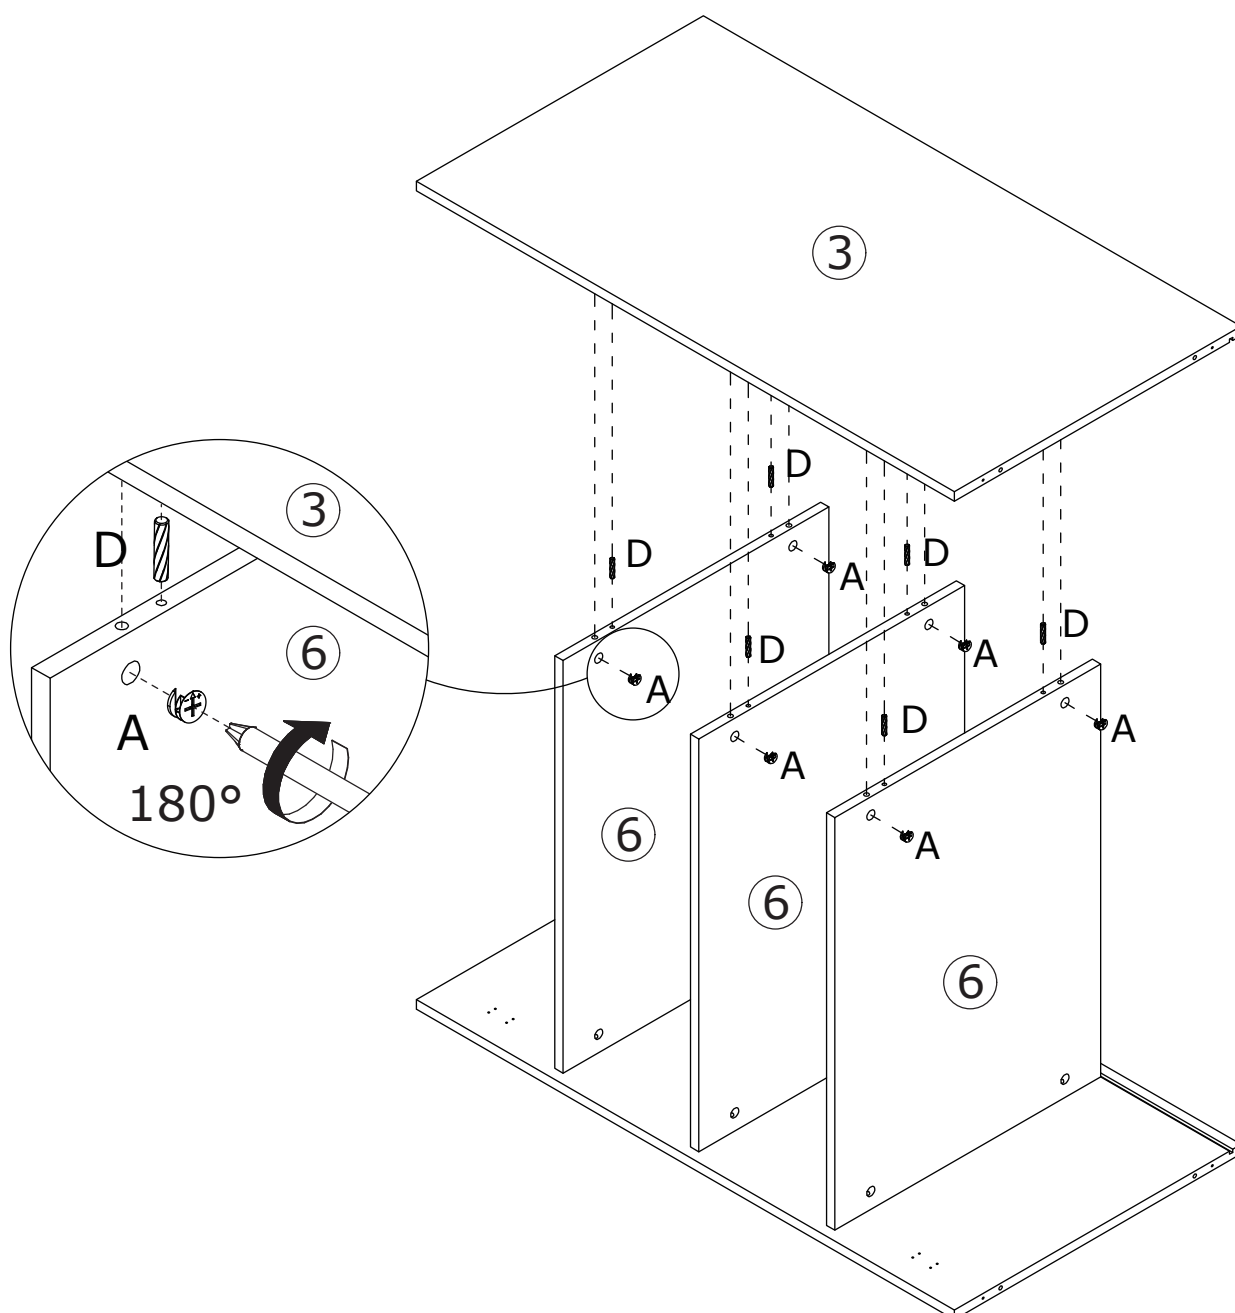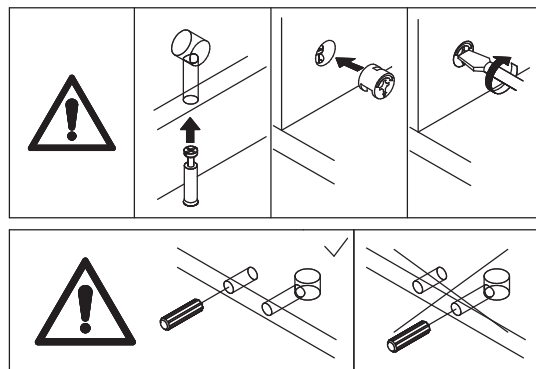



4

M x 2



Ø 3.5 x 14 mm

  N x 2




M




Ø 3.5 x 14 mm

 S




Ø 3 x 14 mm

 
Secure bracket (N) to panel 1 using screw (M).

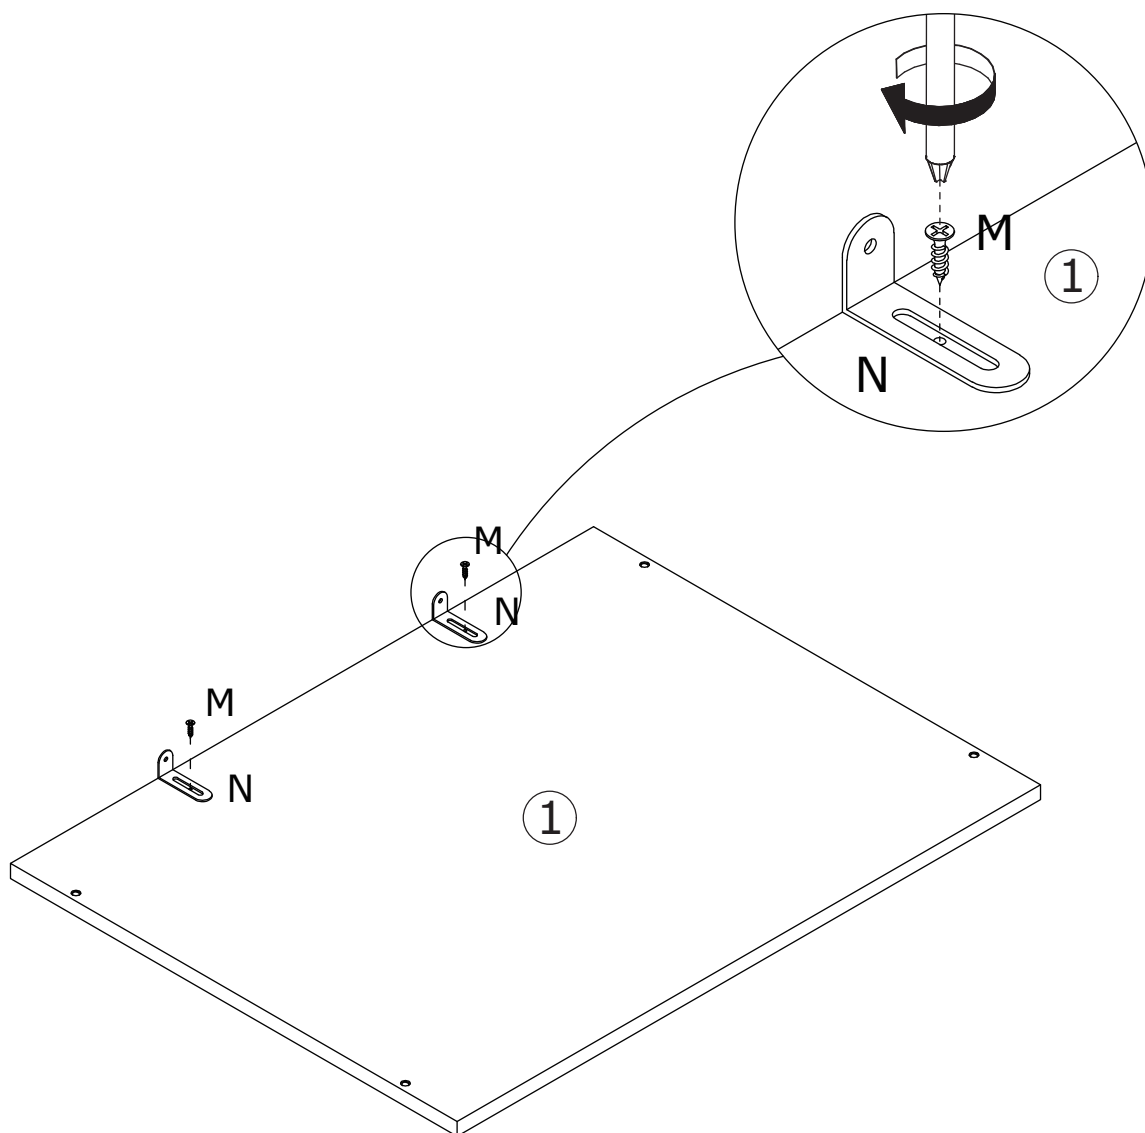

5

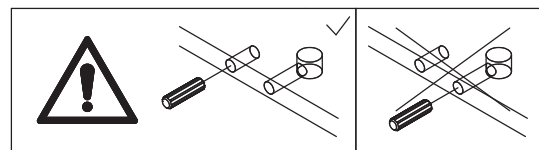 


 Connect panel 1 to panels 2 and 3 using wooden dowel (D), then secure them with screw (E).


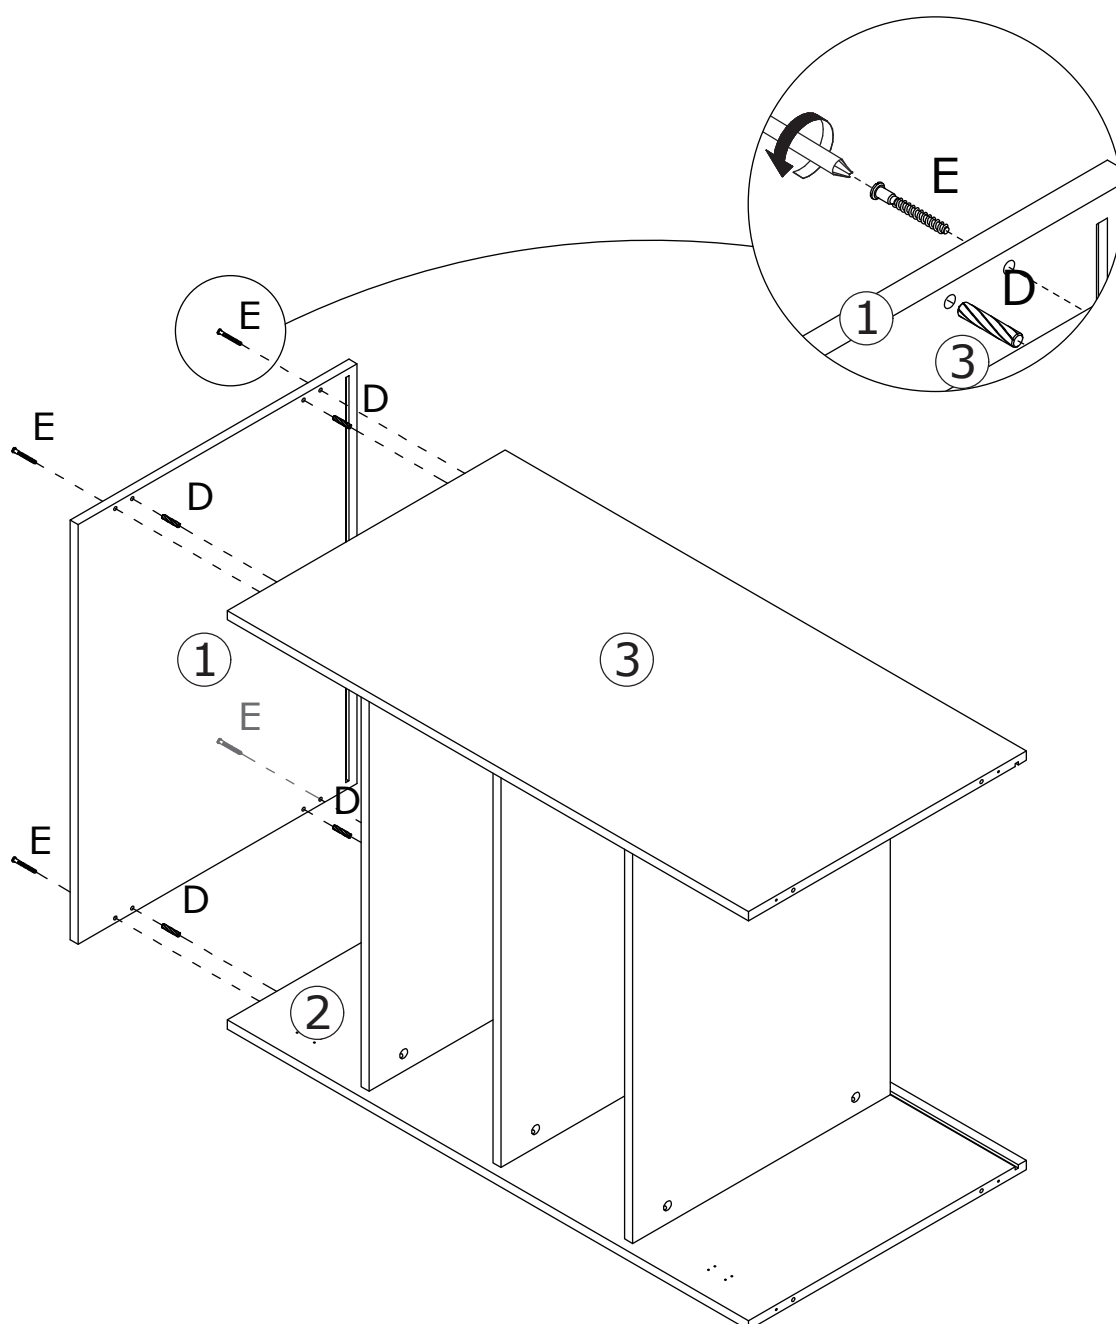


6


 
Insert panel 7 along the available grooves.

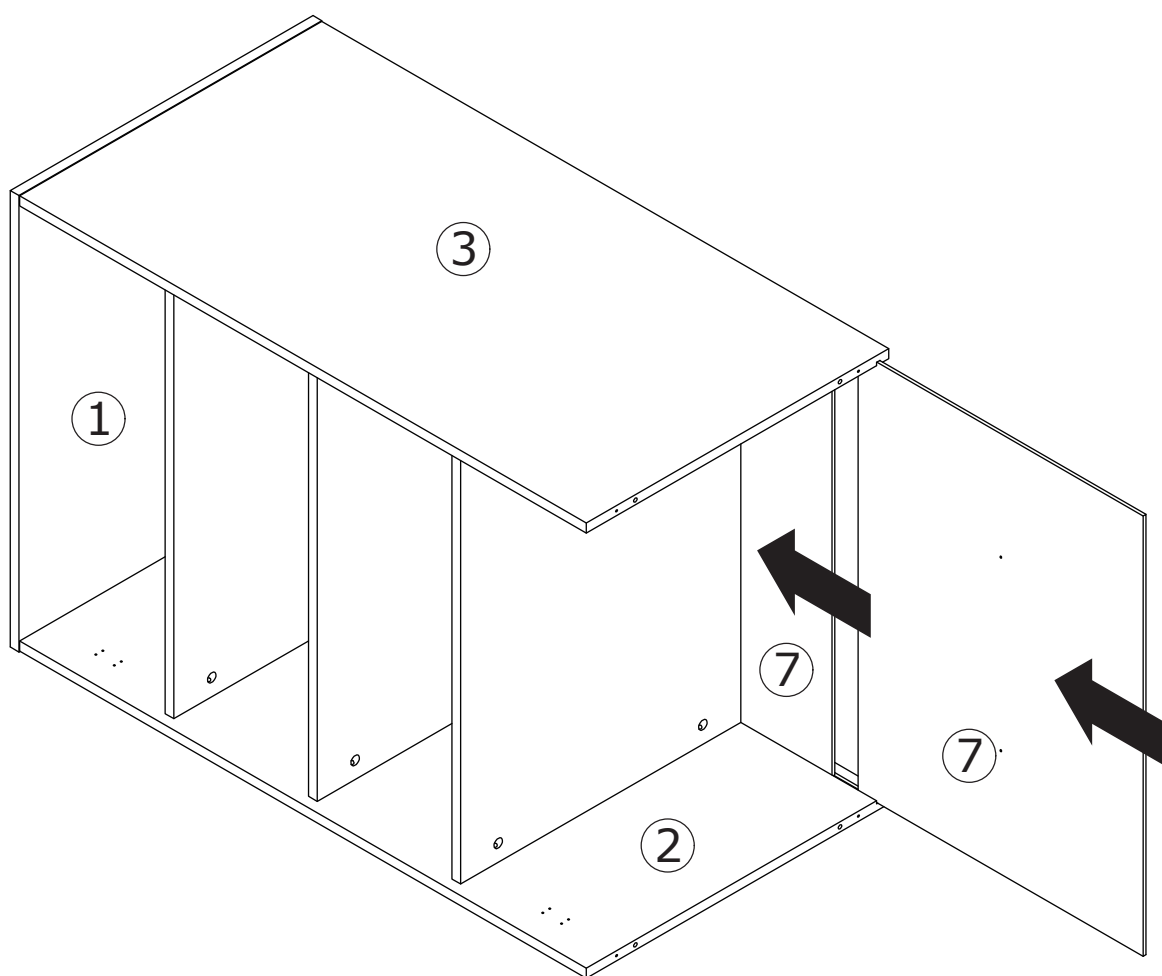


7

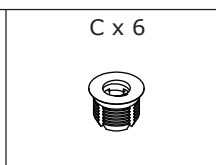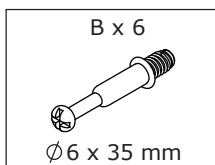  

  
Insert plug (C) into panel 4,
then screw self-tapping rod (B)
onto the holes.

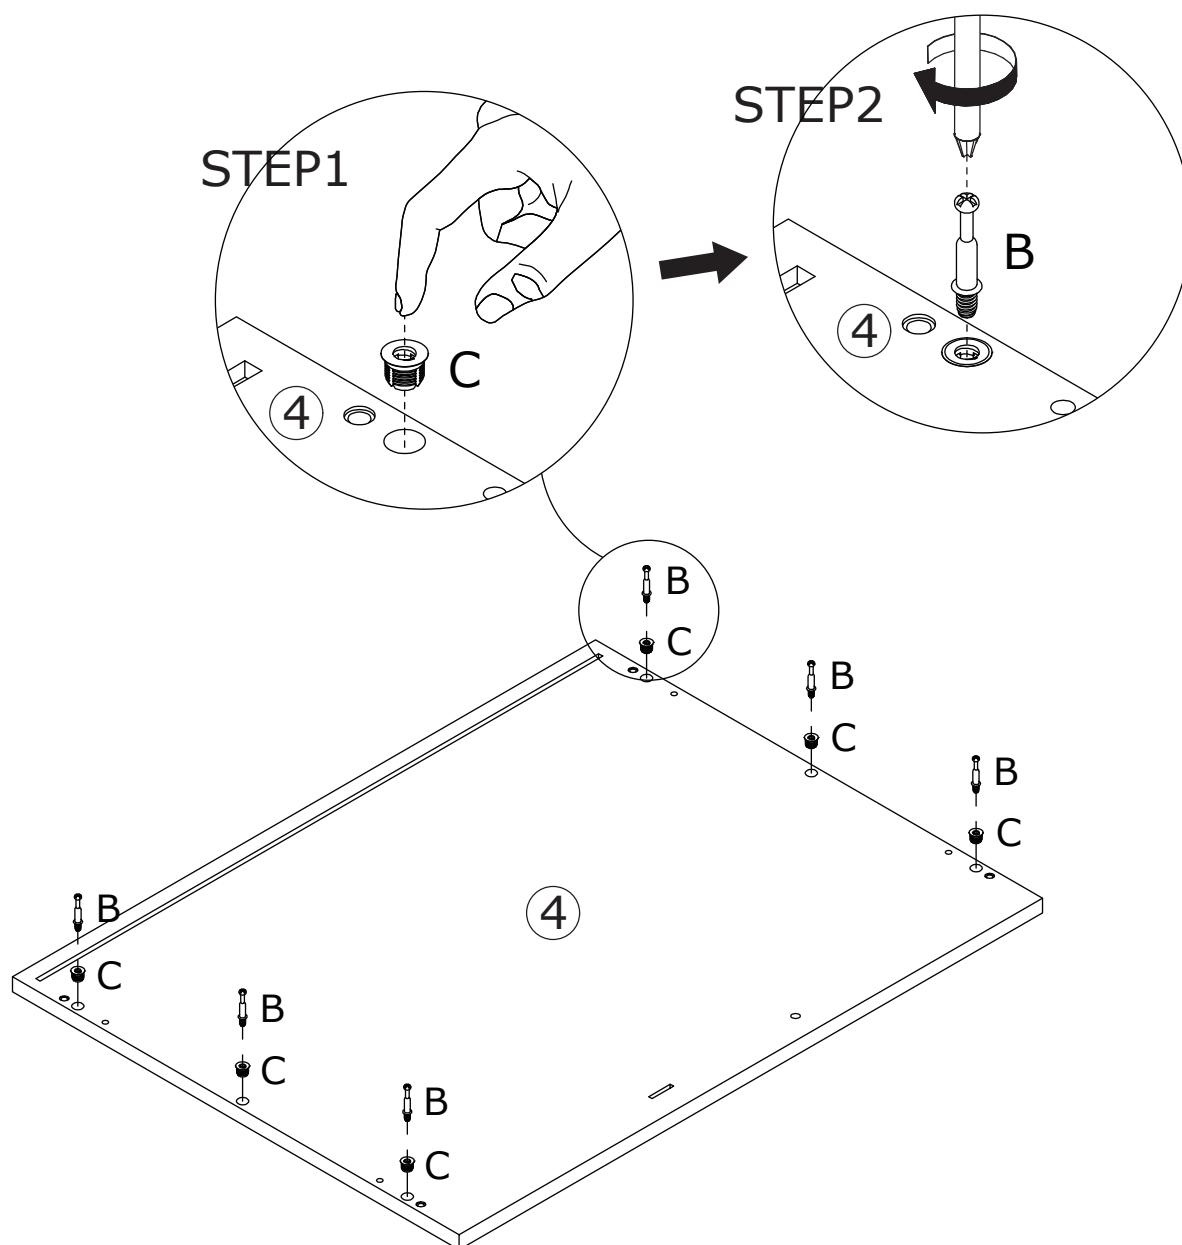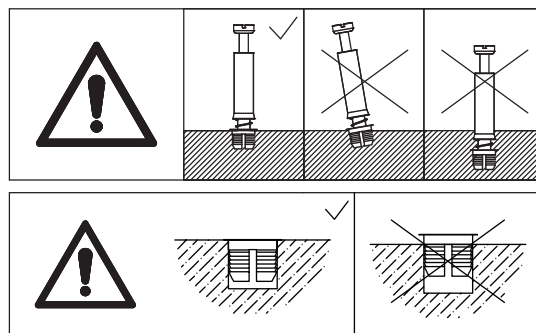

8

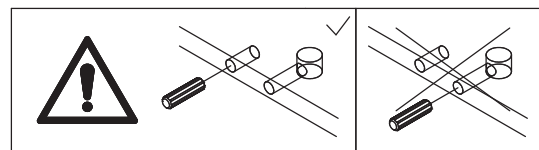 


 
Connect panel 4 to panels 2 and 3 using wooden dowel (D), and secure them with screw (E).

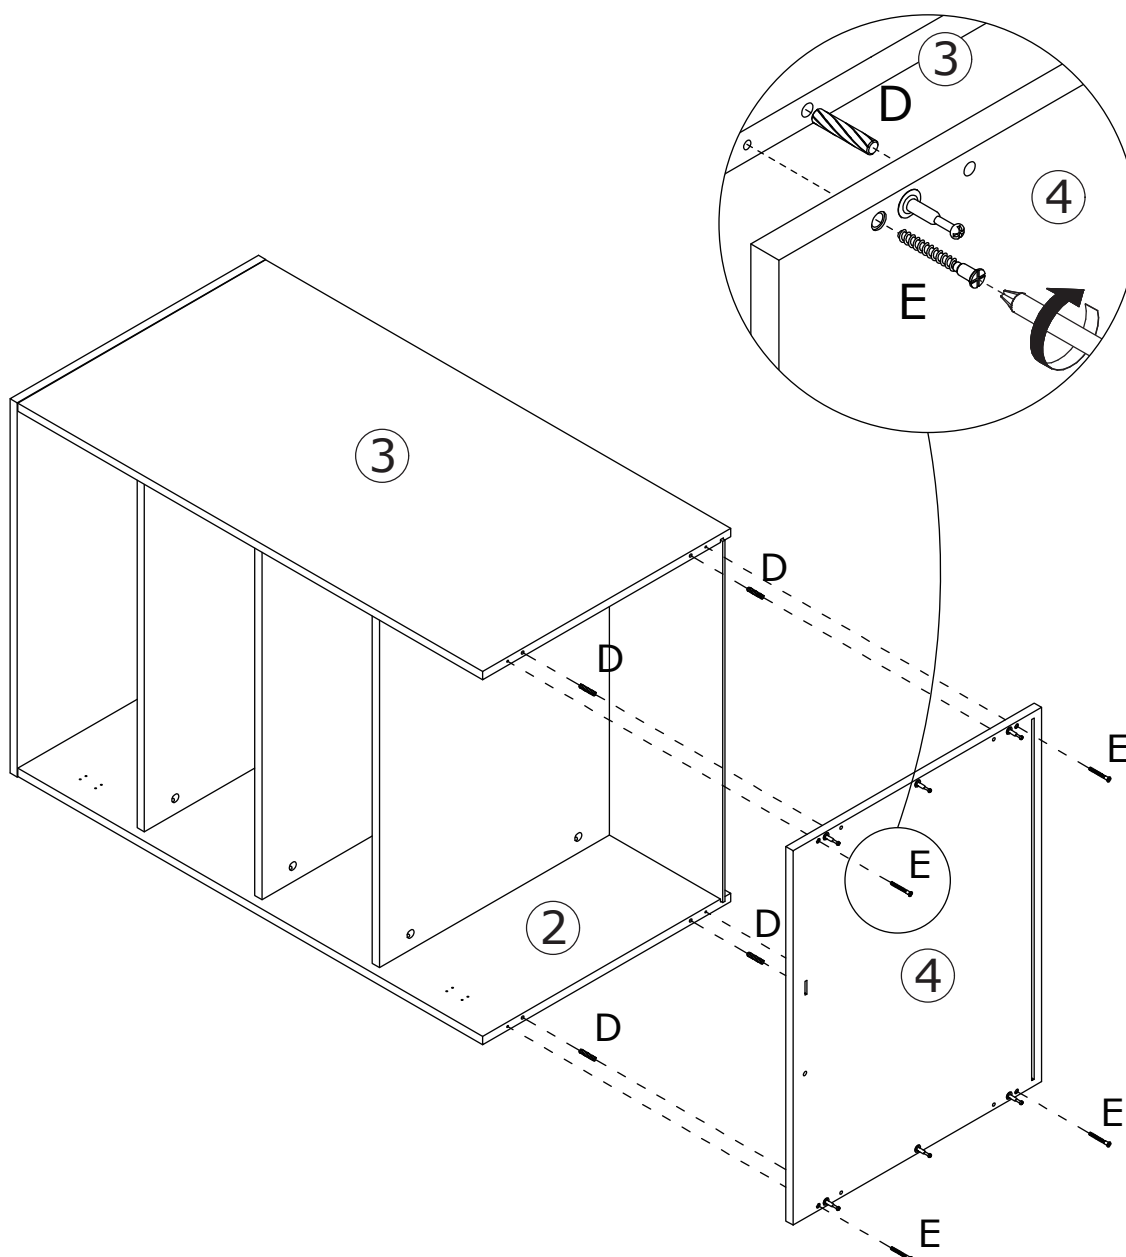

9



  Insert plug (C) into panels 5 and 11, then screw self-tapping rod (B) onto the holes.

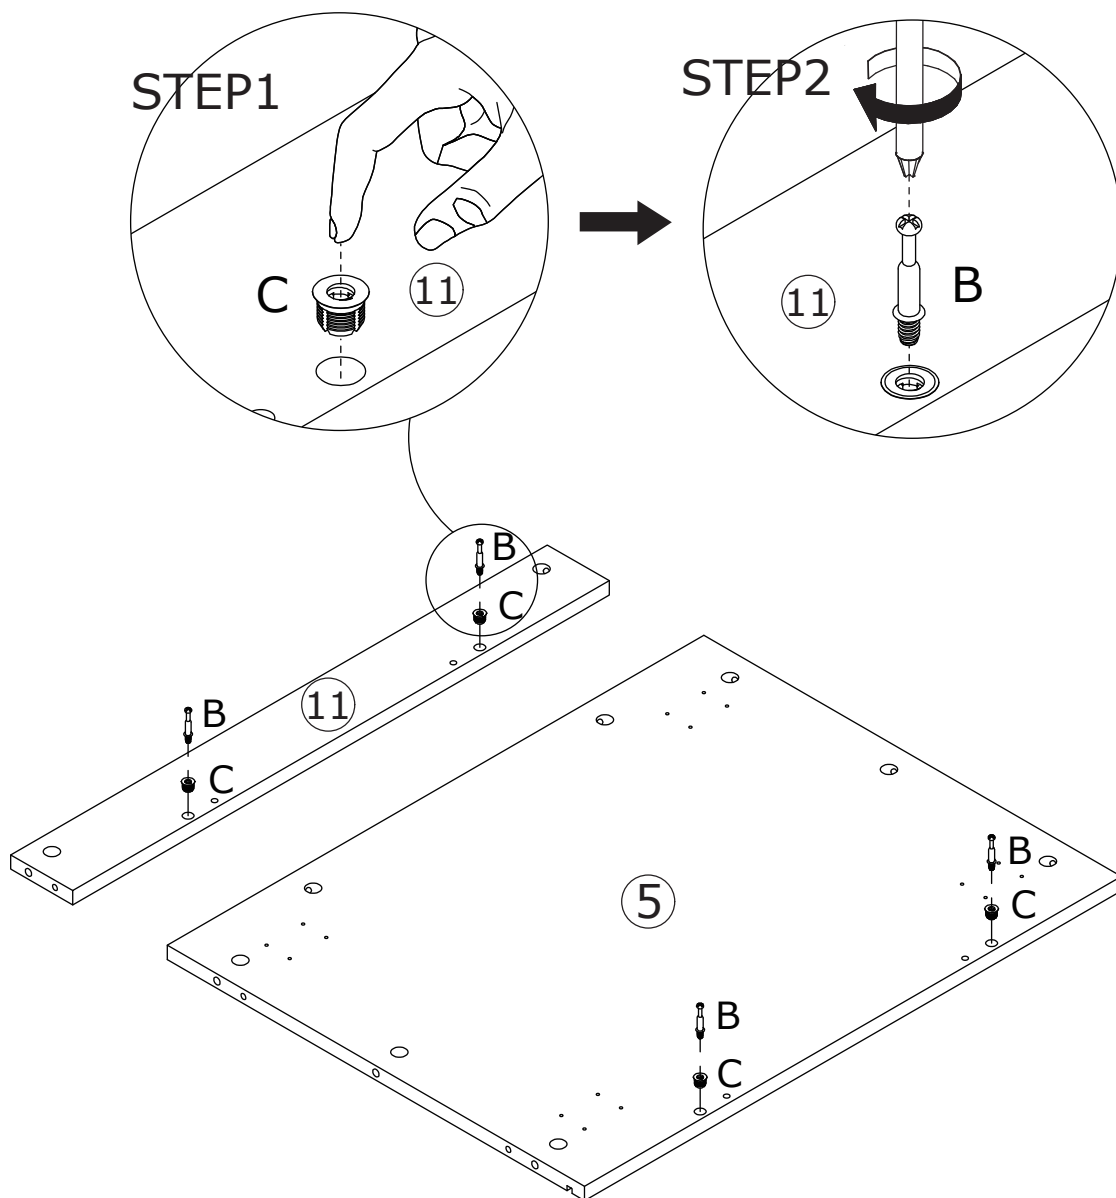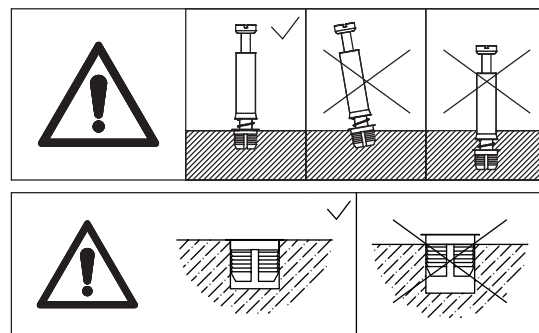


10

A x 4









Ø 15 x 10 mm

 
D x 4




Ø 6 x 30 mm

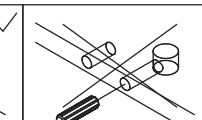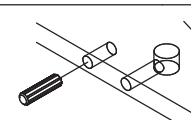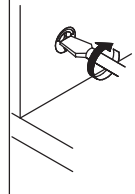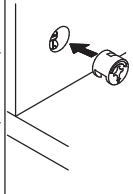      

 
Connect panels 11 and 16 to panel 5 using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

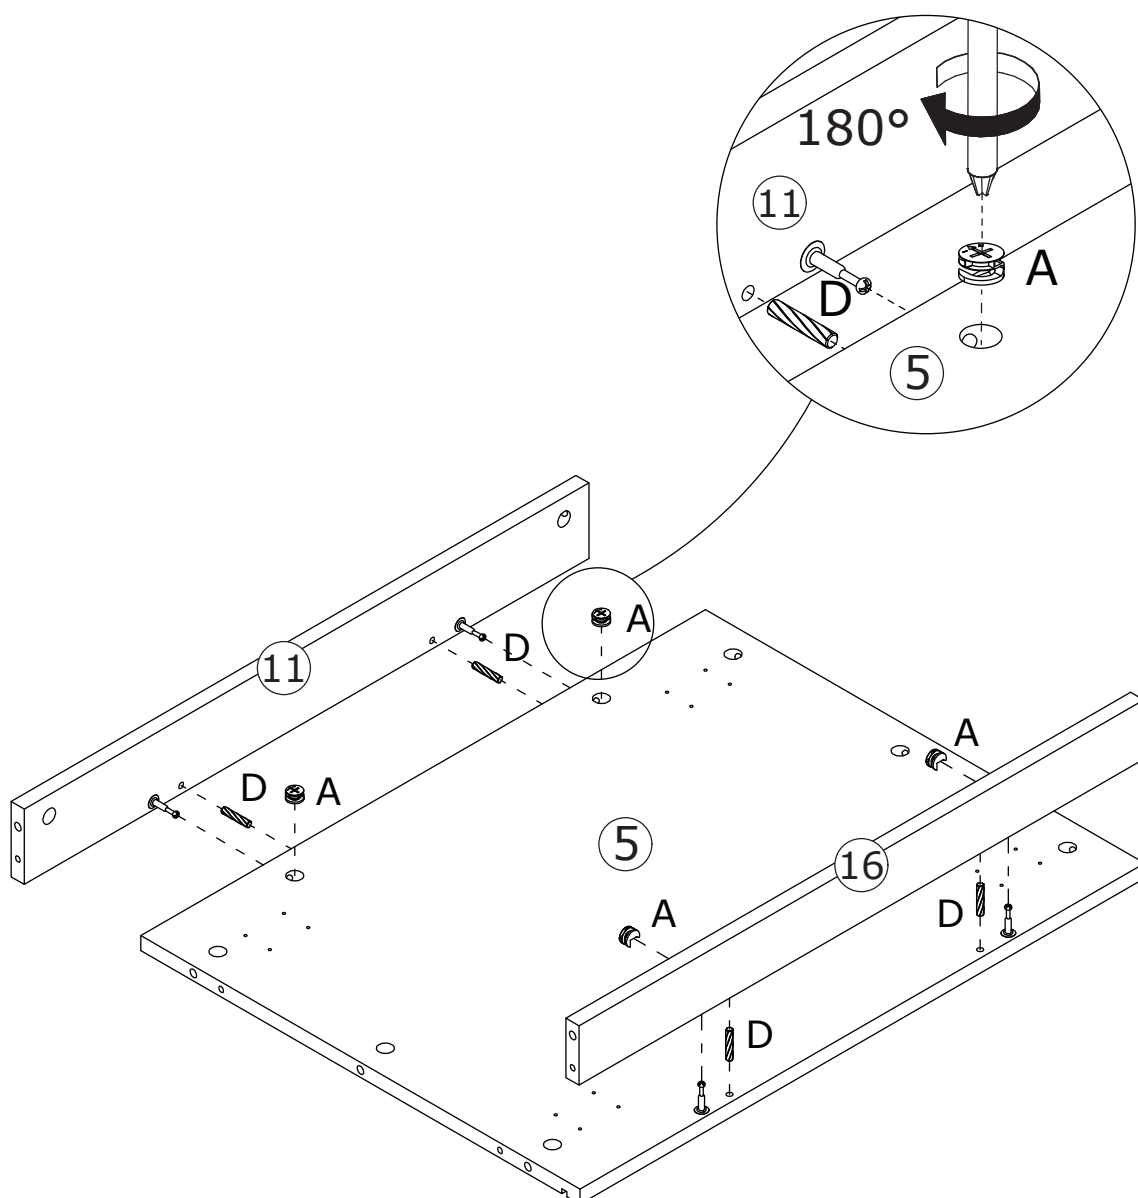

11

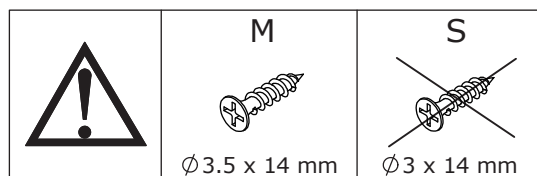 

 Secure leg (K) to panel 5 using screw (M).

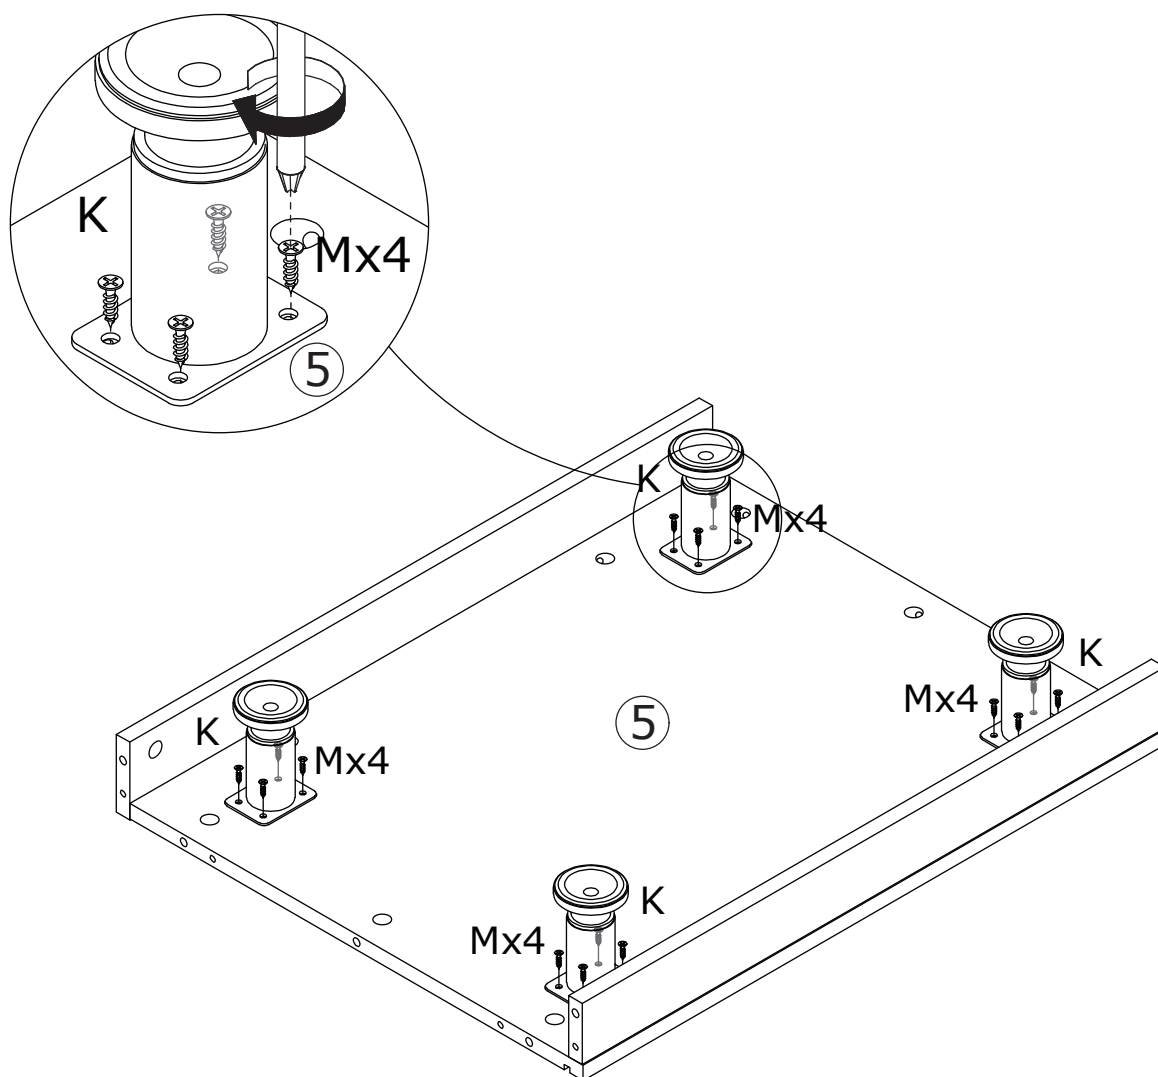


12



B x 22



 C x 22



  Insert plug (C) into panels 8 and 9, then screw self-tapping rod (B) onto the holes.

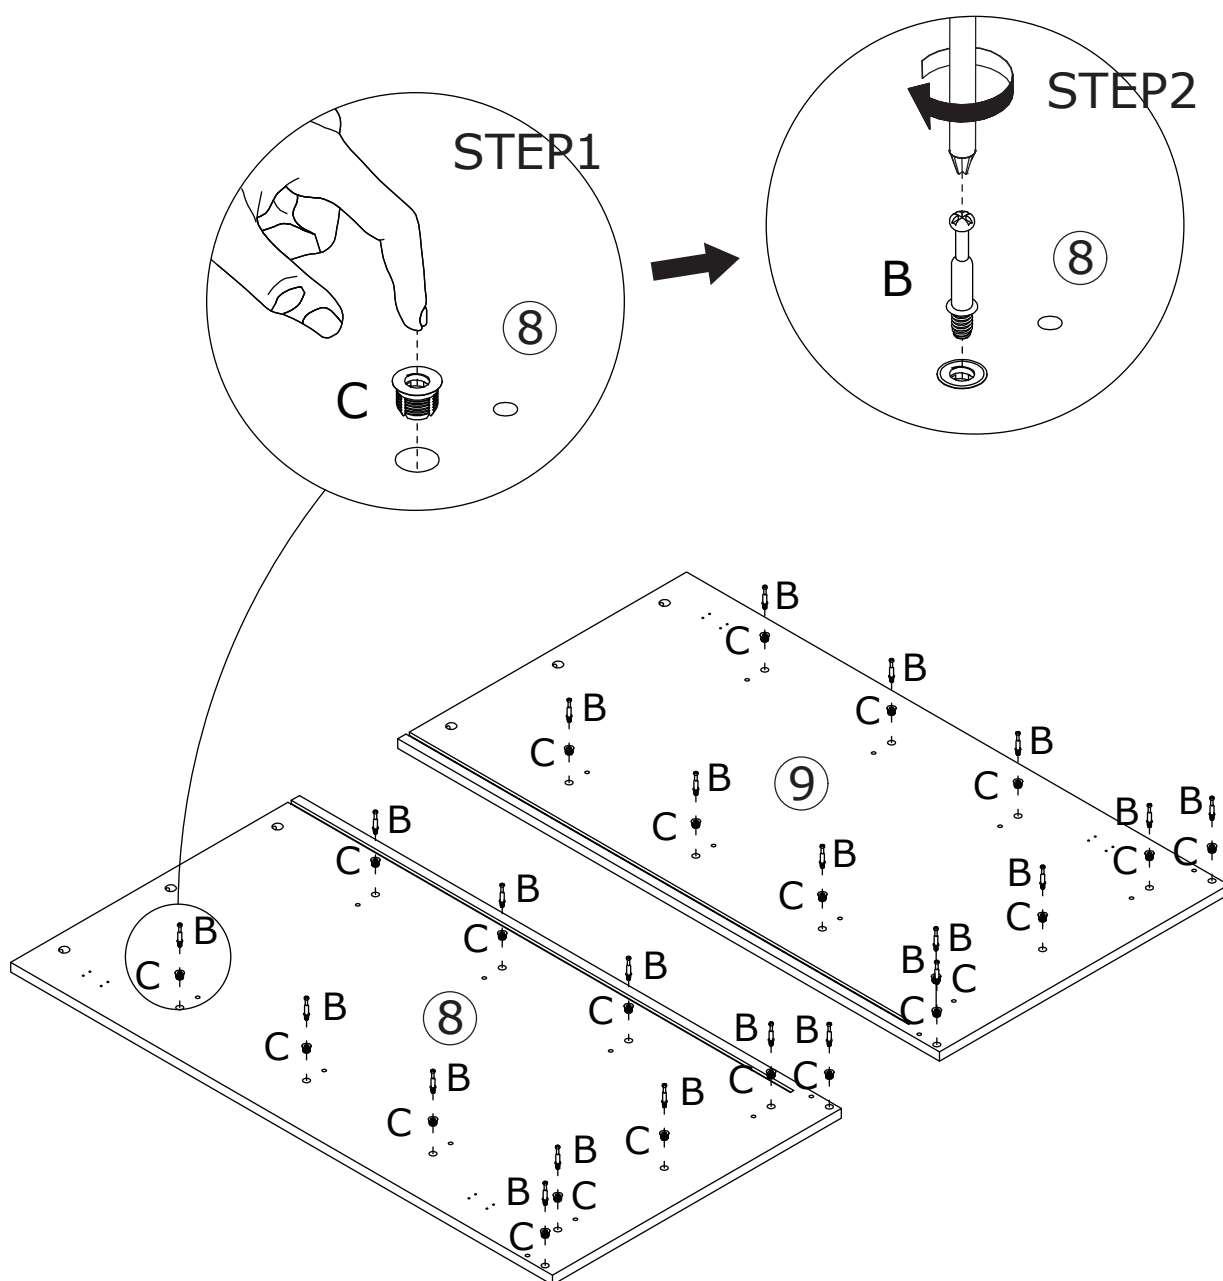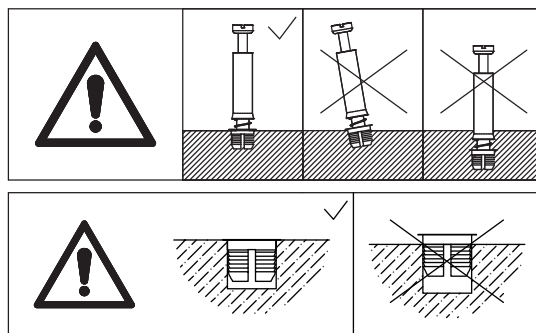


13

A x 11





Ø 15 x 10 mm

 
D x 10



Ø 6 x 30 mm

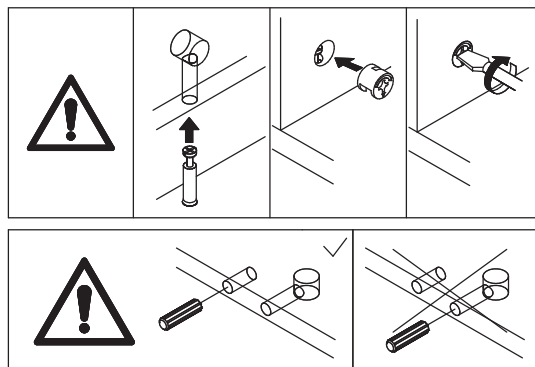  

 Connect panels 5, 6, 11 and 16 to panel 9 using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

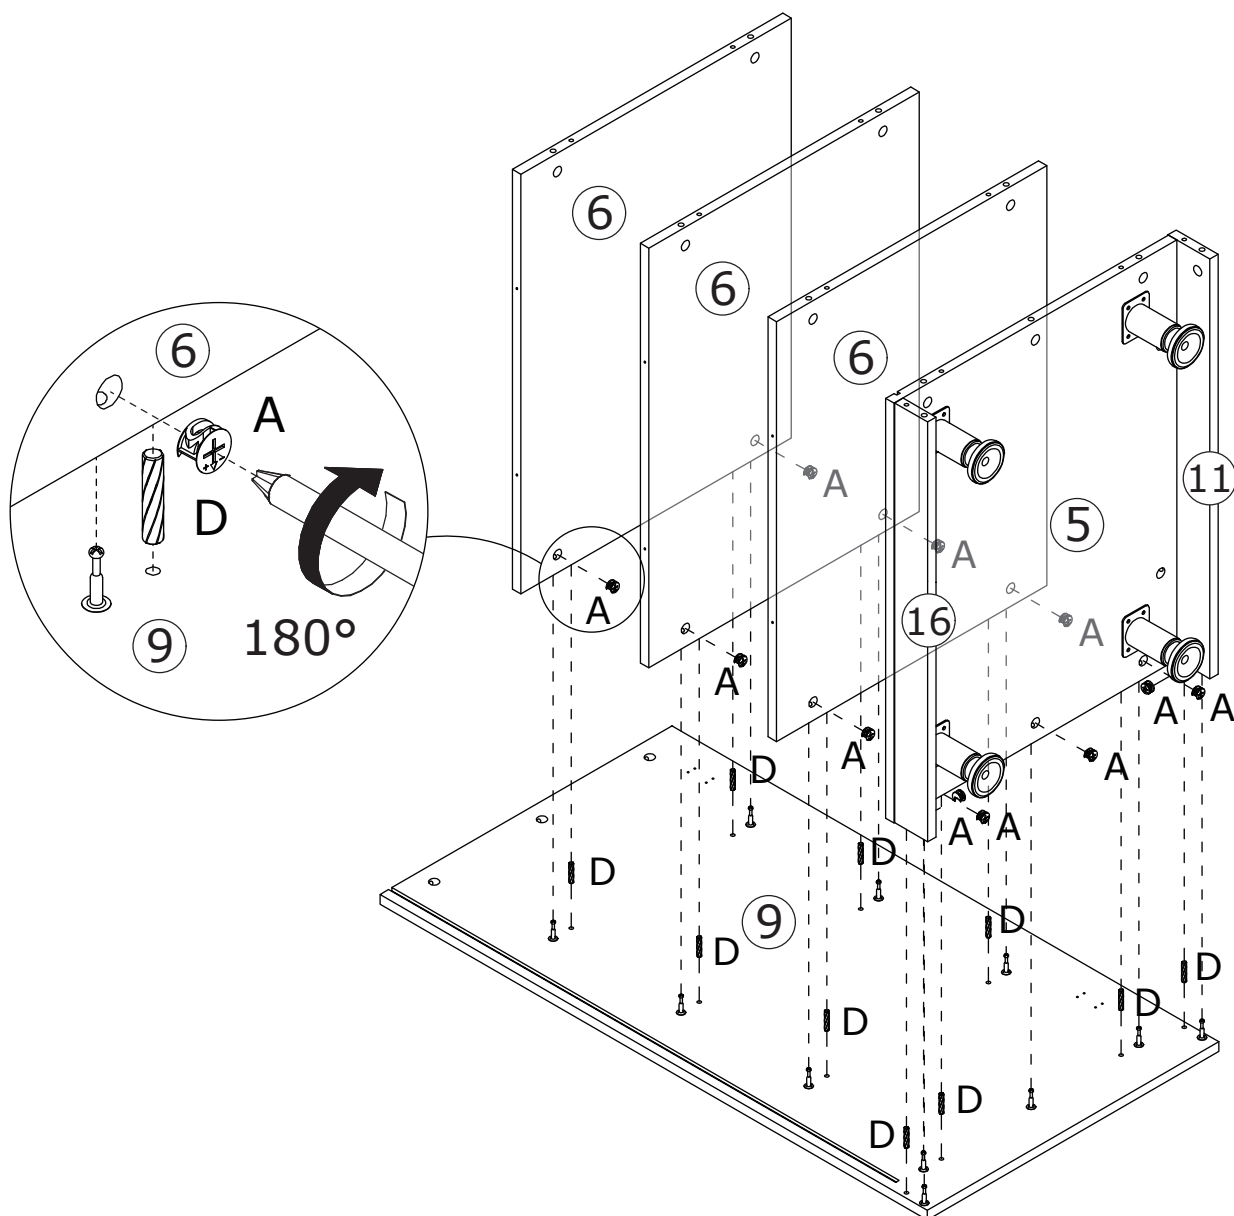


14

A x 11









Ø 15 x 10 mm

 
D x 10



Ø 6 x 30 mm

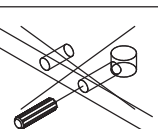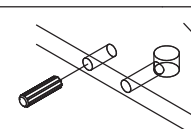      


 Connect panel 8 to panels 5, 6, 11 and 16 using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

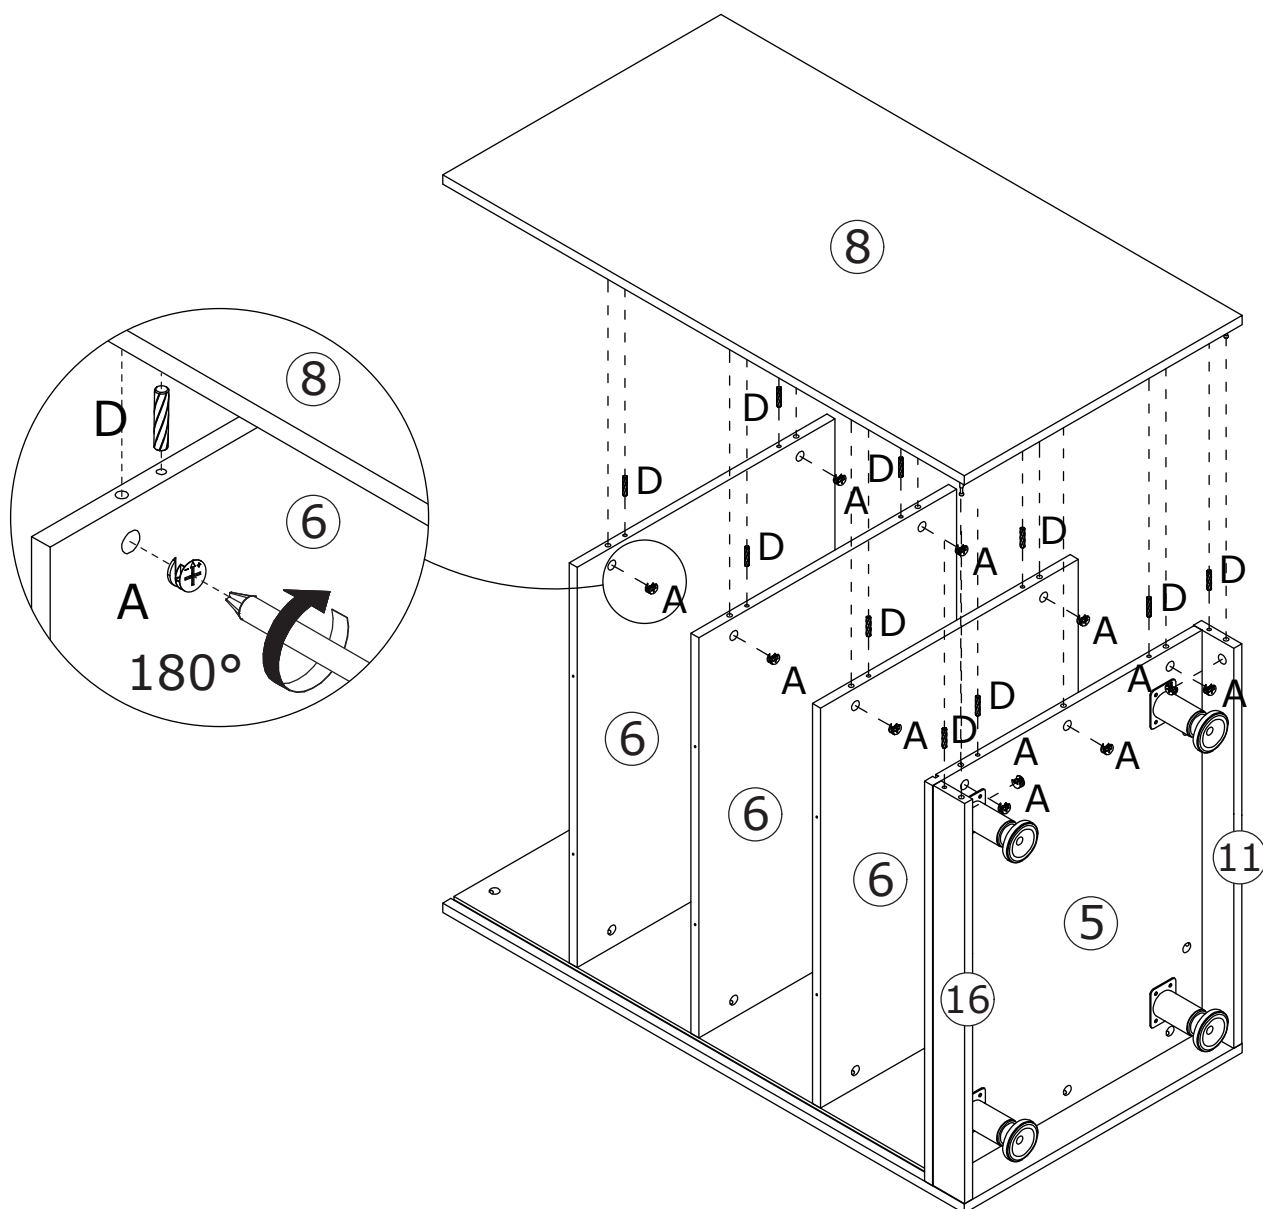


15

 Stand the cabinet upright.
If the cabinet is unstable, lay it back
down and adjust legs.

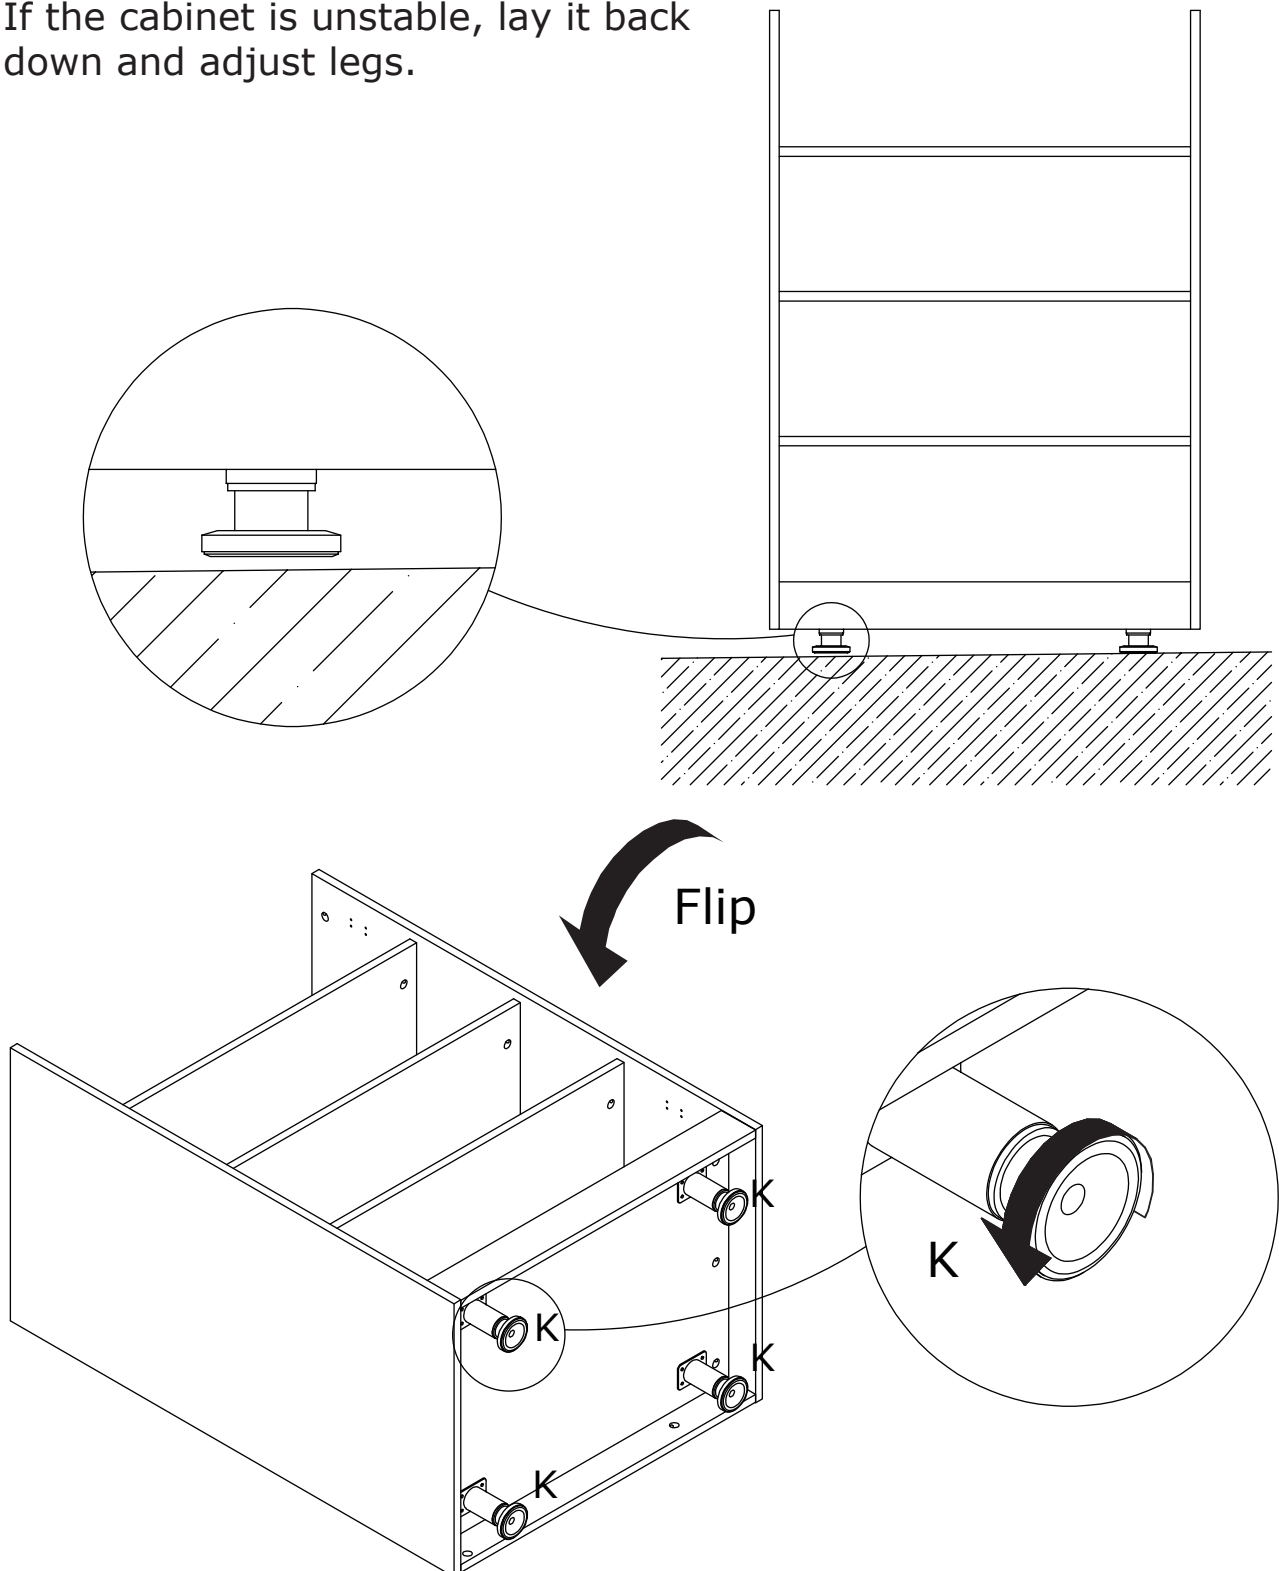

16

 Insert panel 10 along the available grooves.

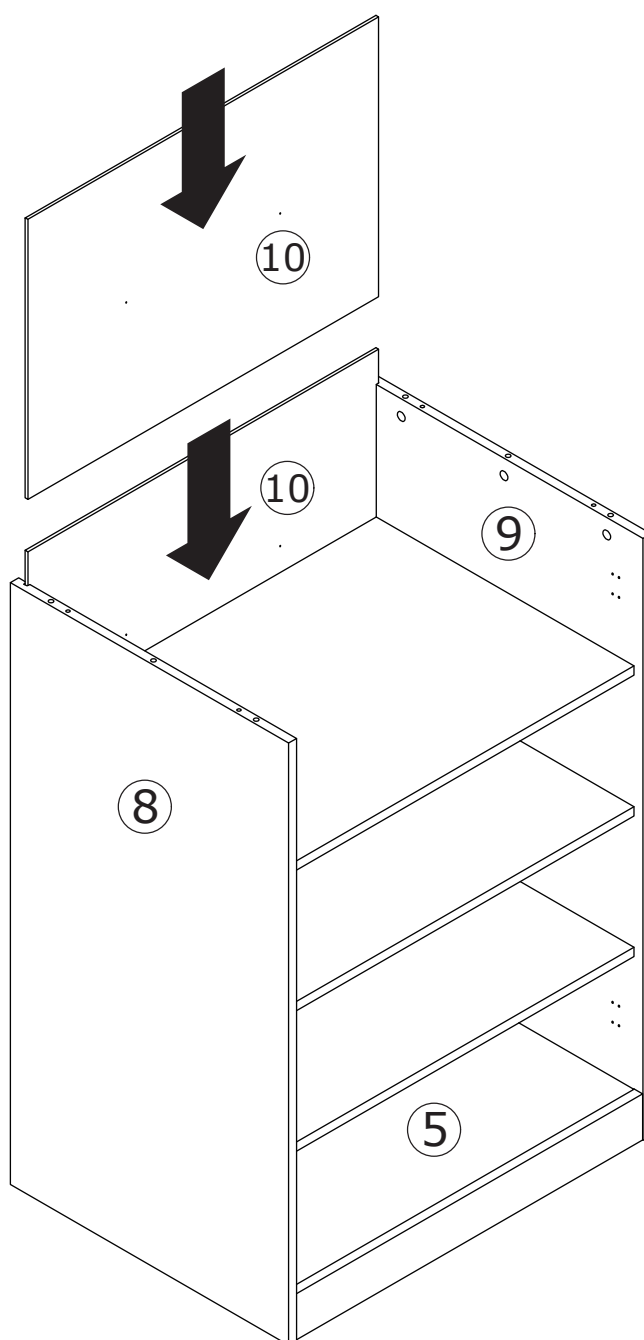


17

A x 6










Ø 15 x 10 mm

 
D x 4



Ø 6 x 30 mm

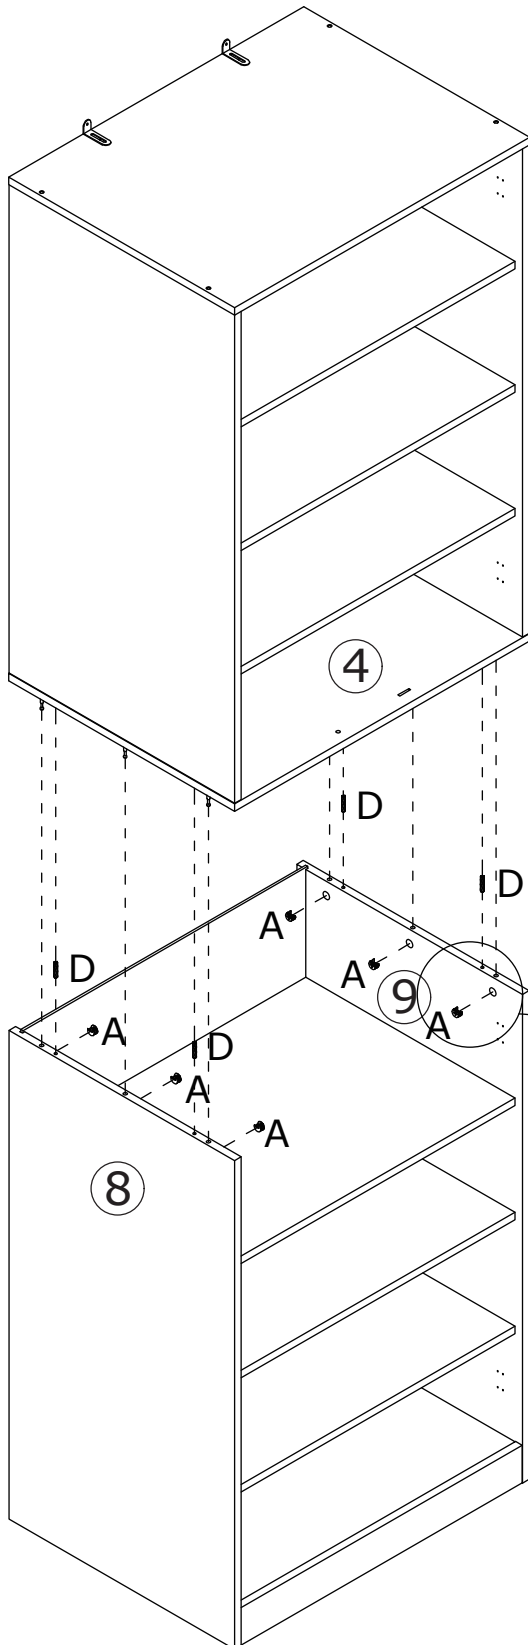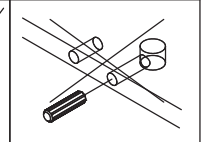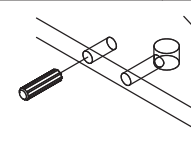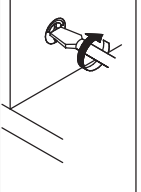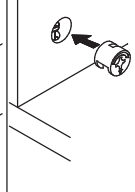       


 Connect the two assembly components using wooden dowel (D), then tighten by turning eccentric wheel (A) clockwise.

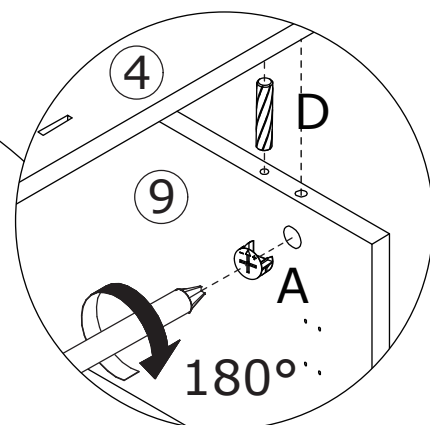


18

 J x 8




Ø 3.5 x 20 mm

 
T x 4



U x 4

 

 Secure panels 7 and 10 to the back of the unit using screw (J).
Attach part (T) to the back of the unit using screw (U).

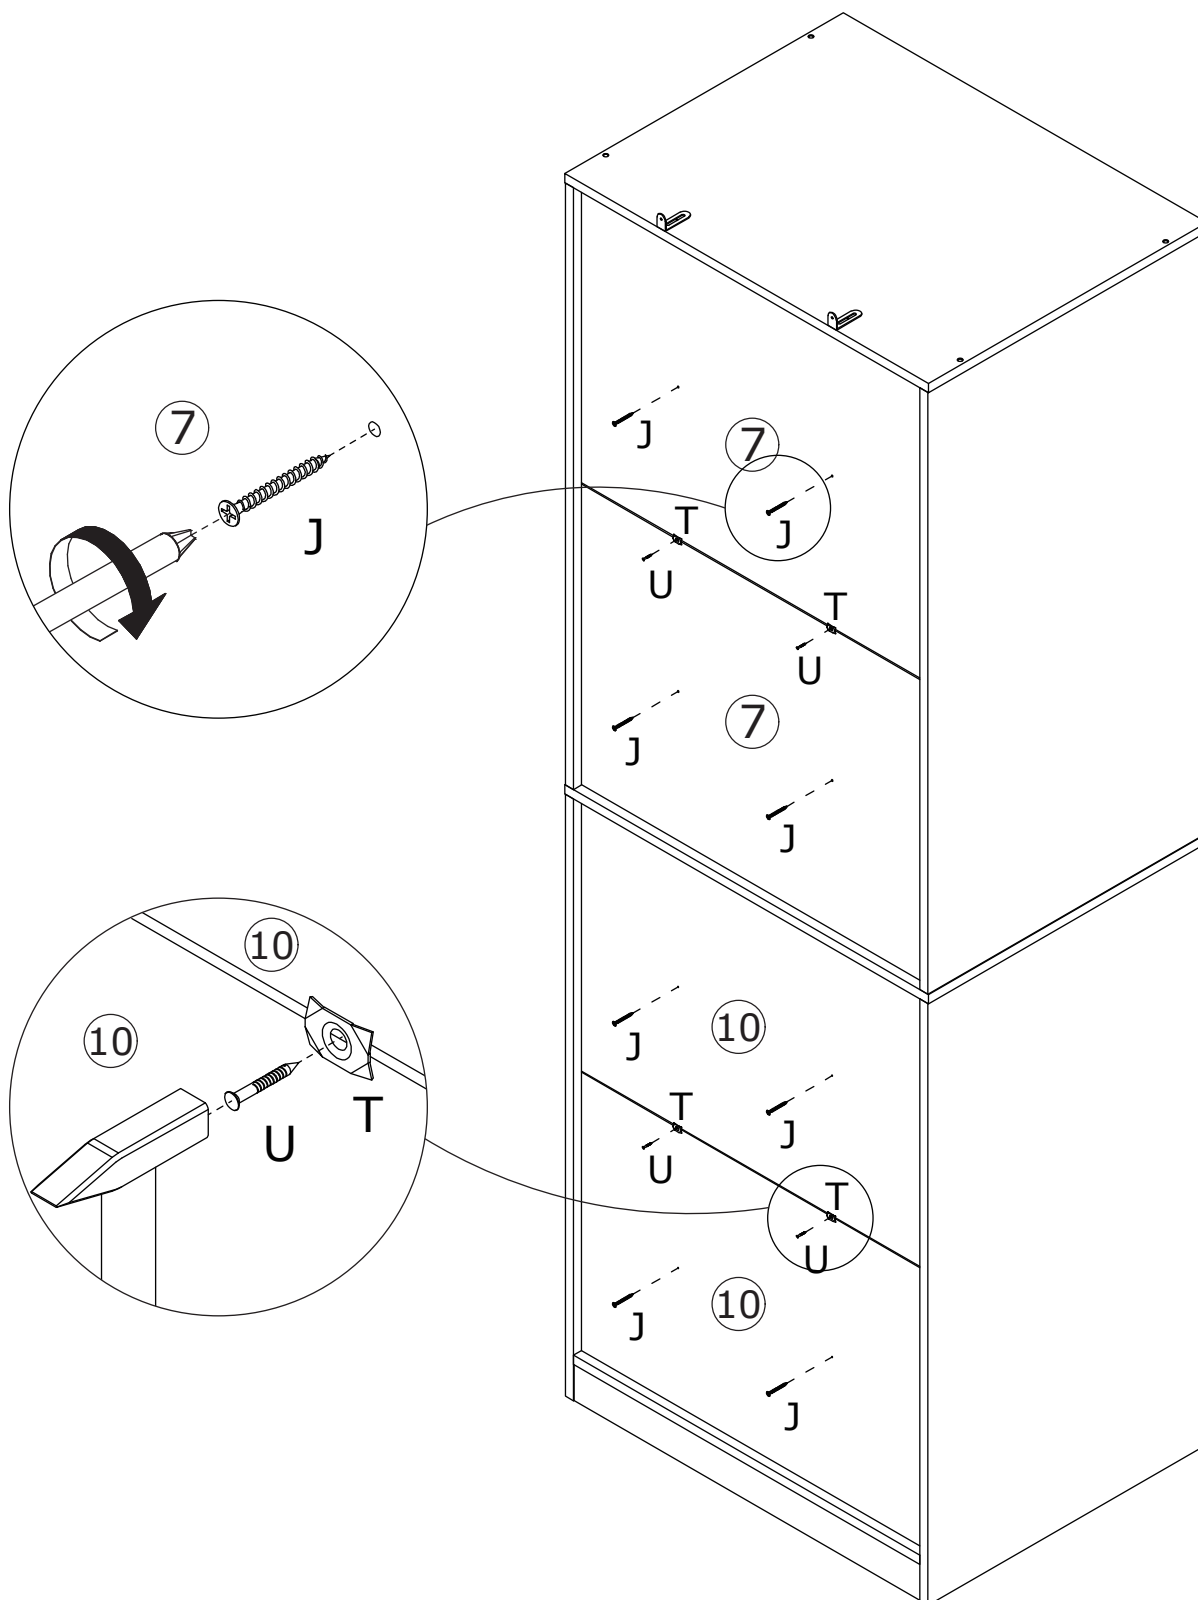

19

 
R x 32




S x 32



Ø3 x 14 mm



M

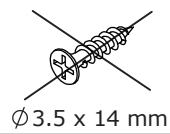 


Ø3.5 x 14 mm

S






Ø3 x 14 mm






 
Insert clip (R) into the back slots and secure it using screw (S).

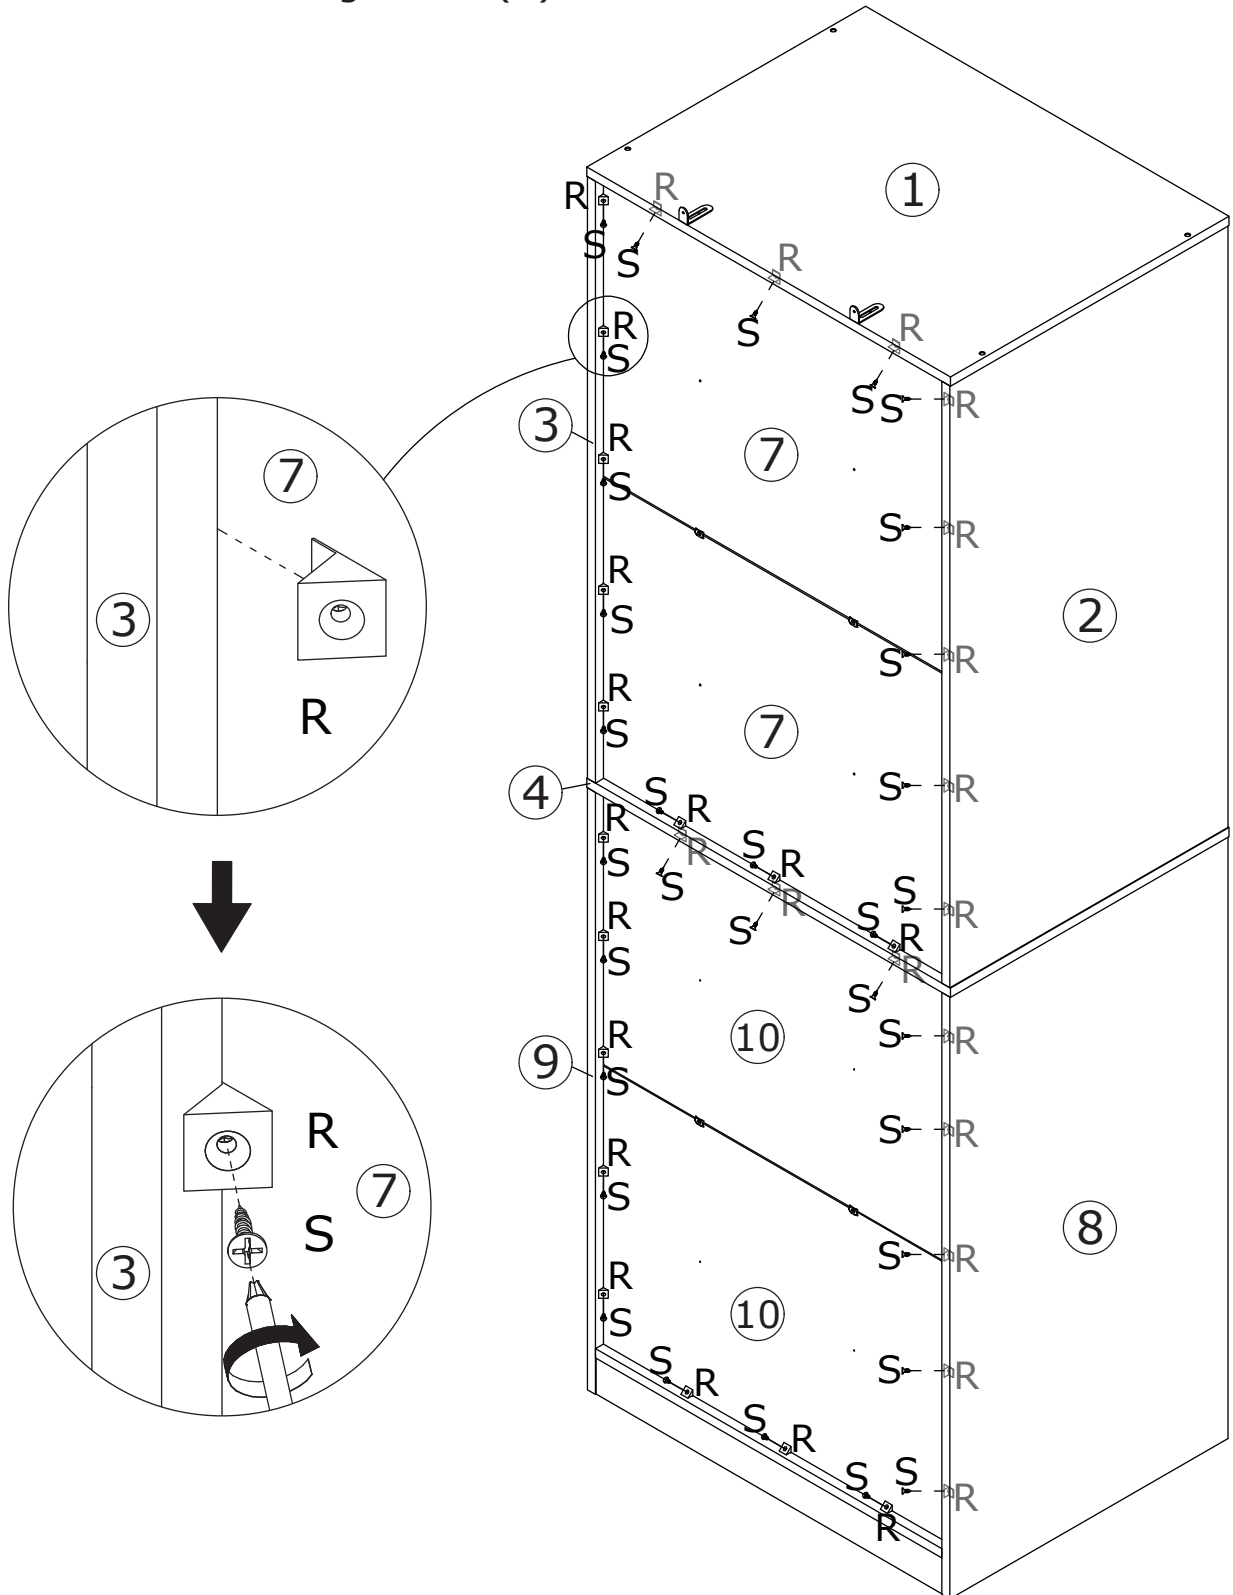

20

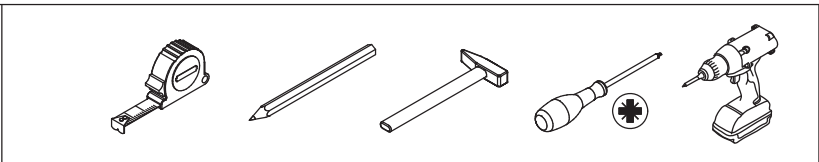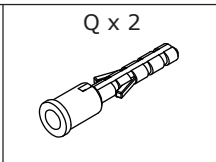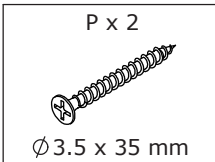   

Install the anti-tip device.

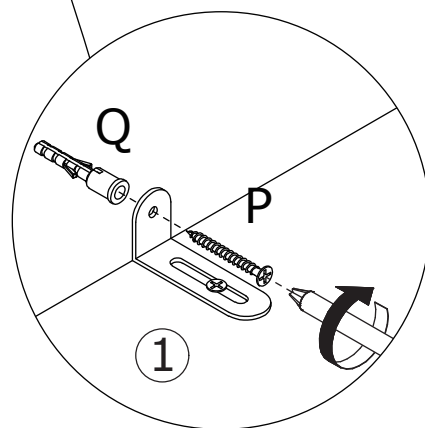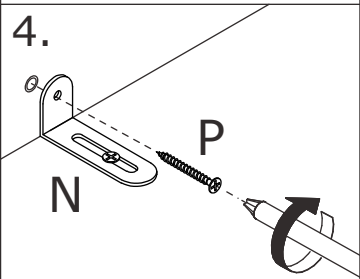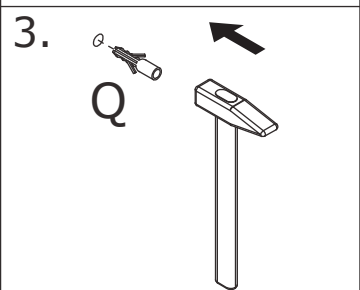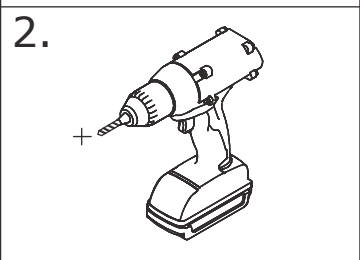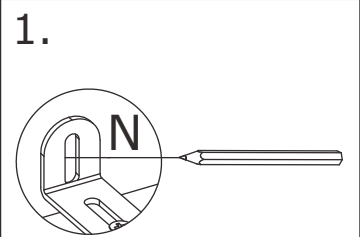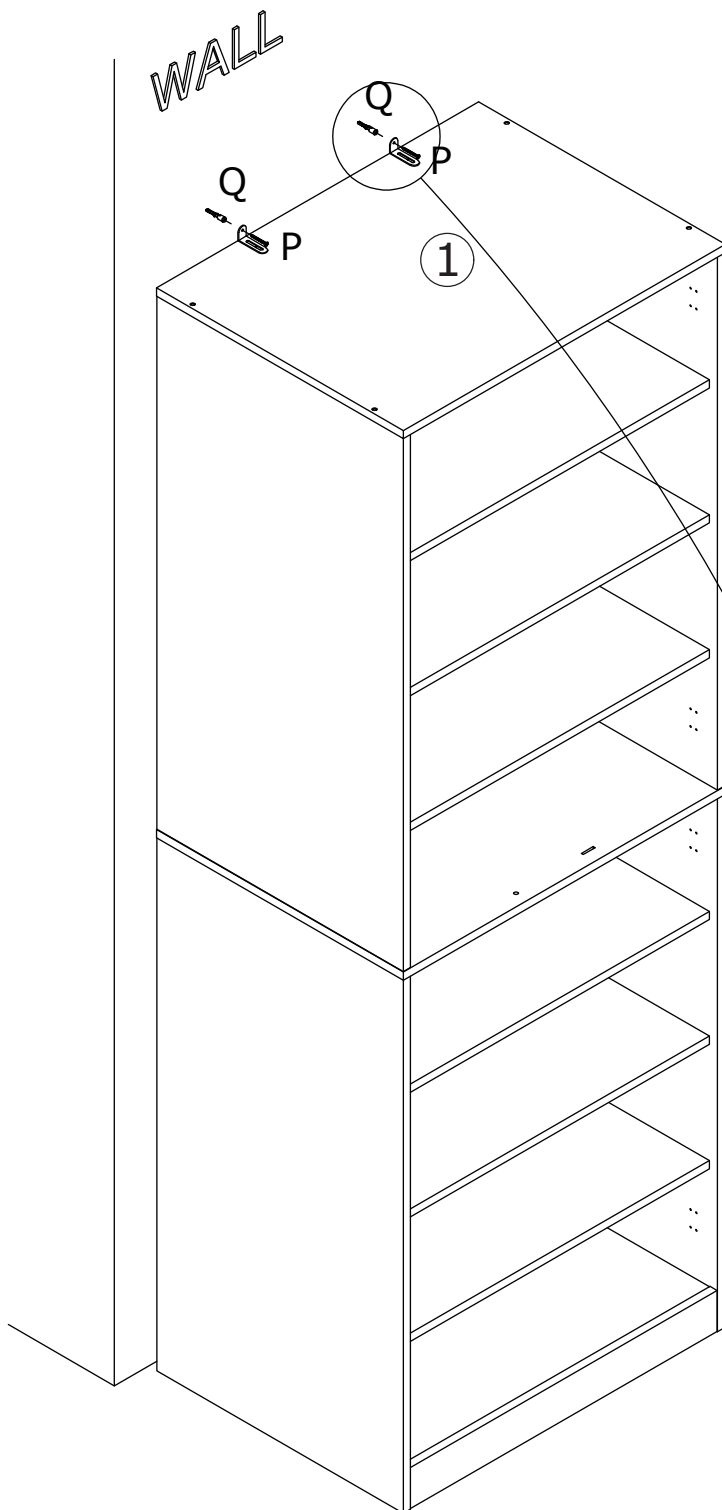      



21

M x 8



Ø 3.5 x 14 mm

  V x 2




M




Ø 3.5 x 14 mm

 S




Ø 3 x 14 mm

 
Unlock

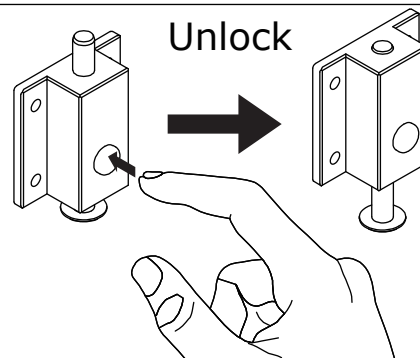

 
Secure part (V) to panels 12 and 14 using screw (M).

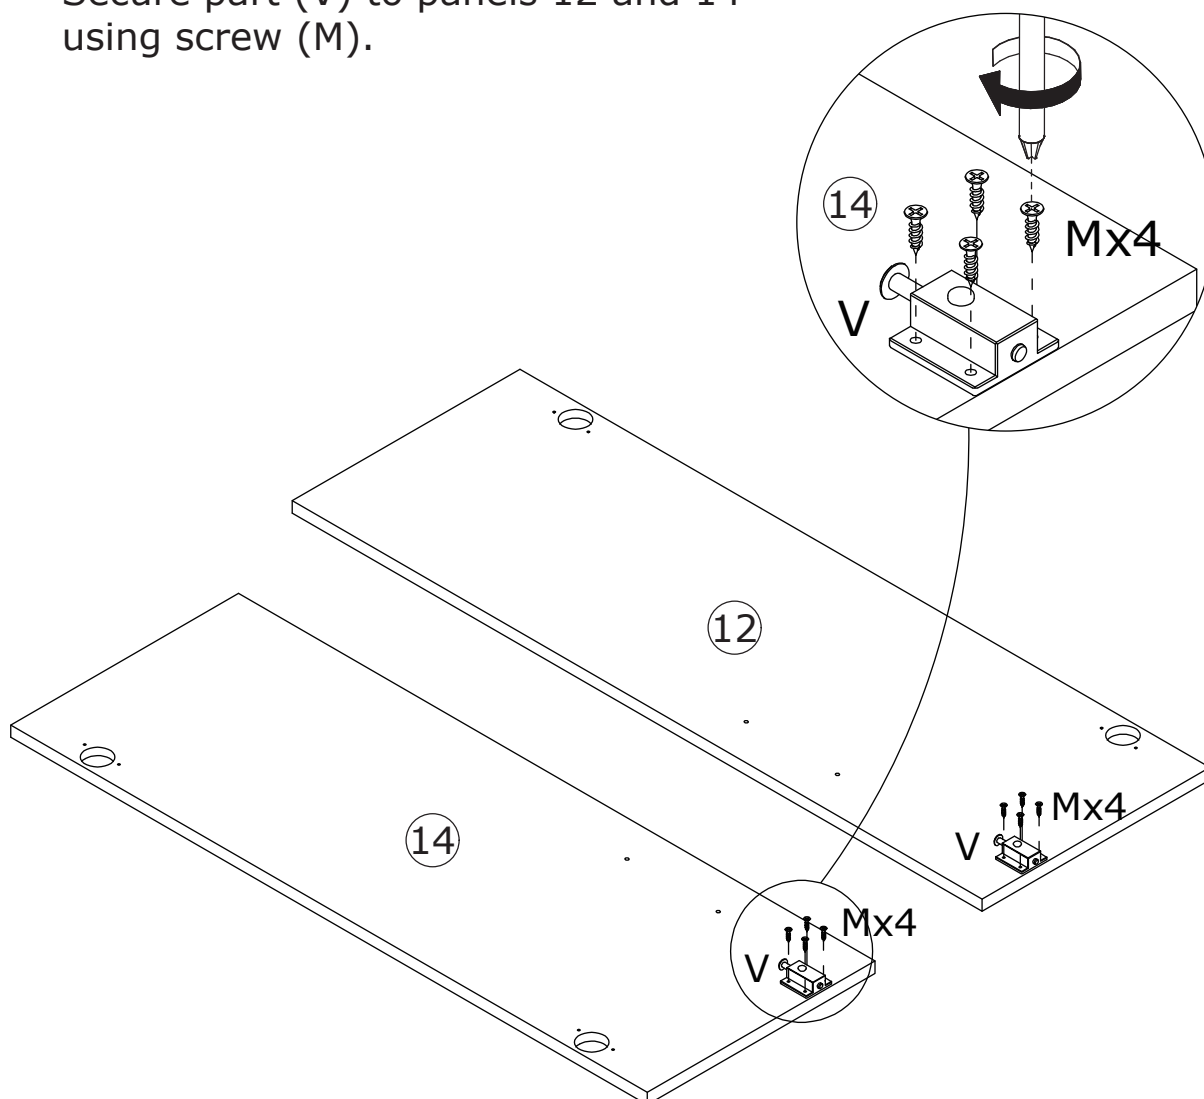

22

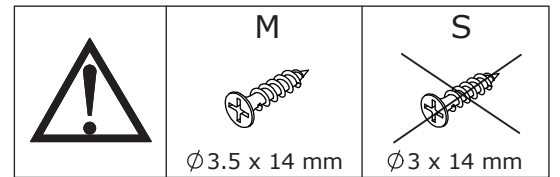 

 Secure hinge (L) to panels 12 and 14 using screw (M).

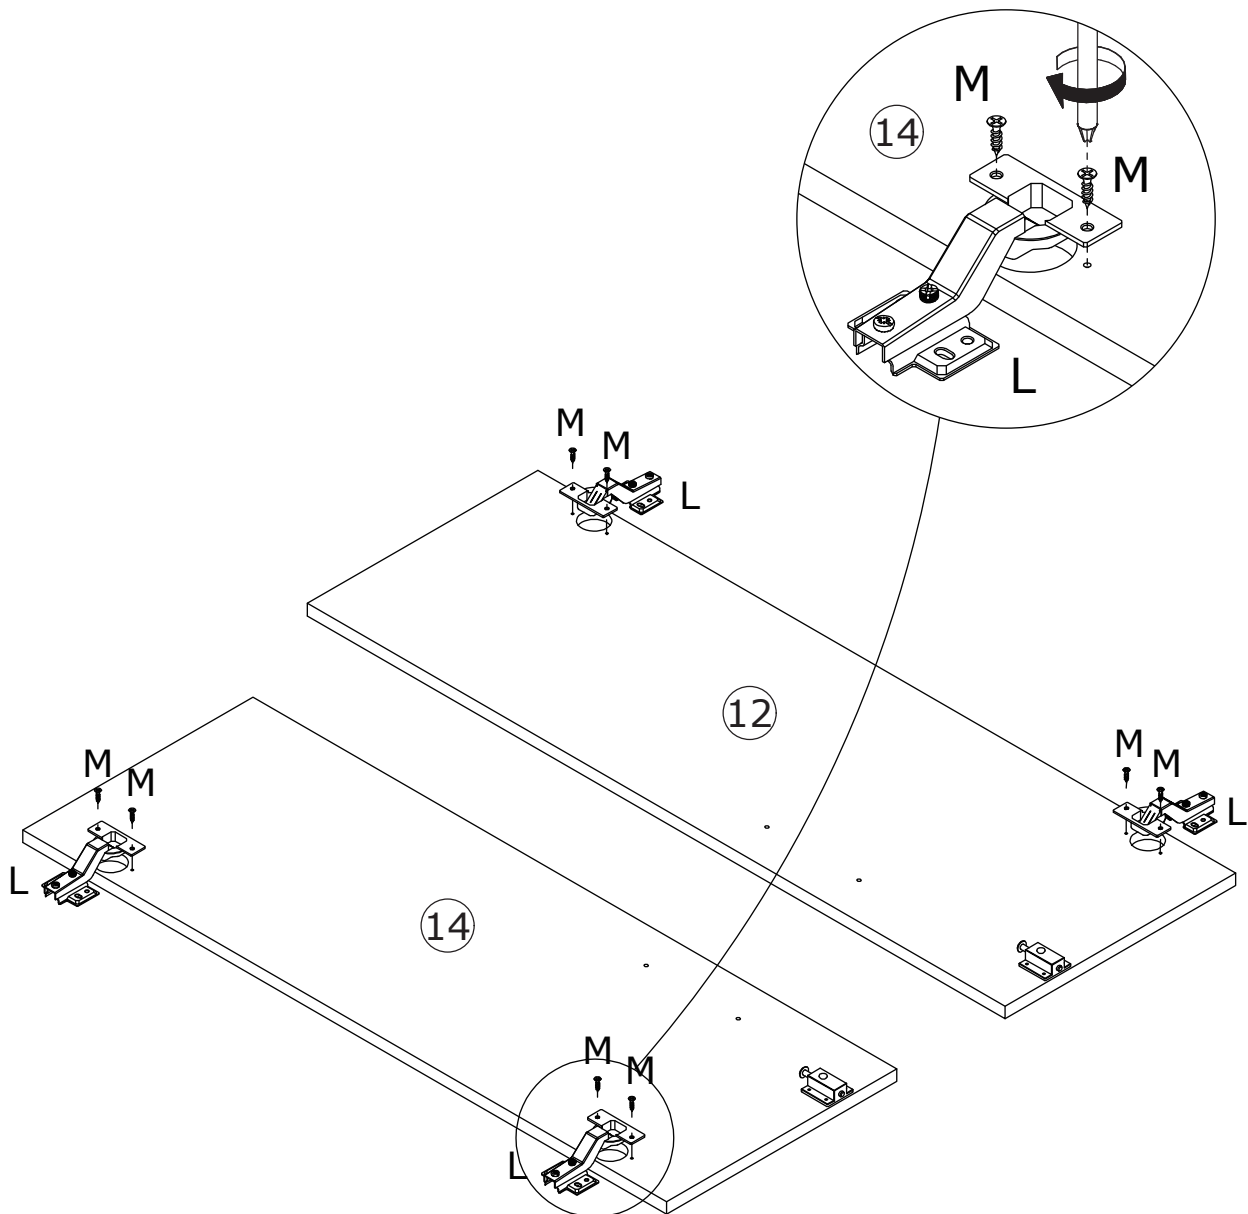


23

M x 16



 Ø 3.5 x 14 mm




M




Ø 3.5 x 14 mm

 S




Ø 3 x 14 mm

 Secure panel 12 to panel 2, and panel 14 to panel 8 via hinges using screw (M).

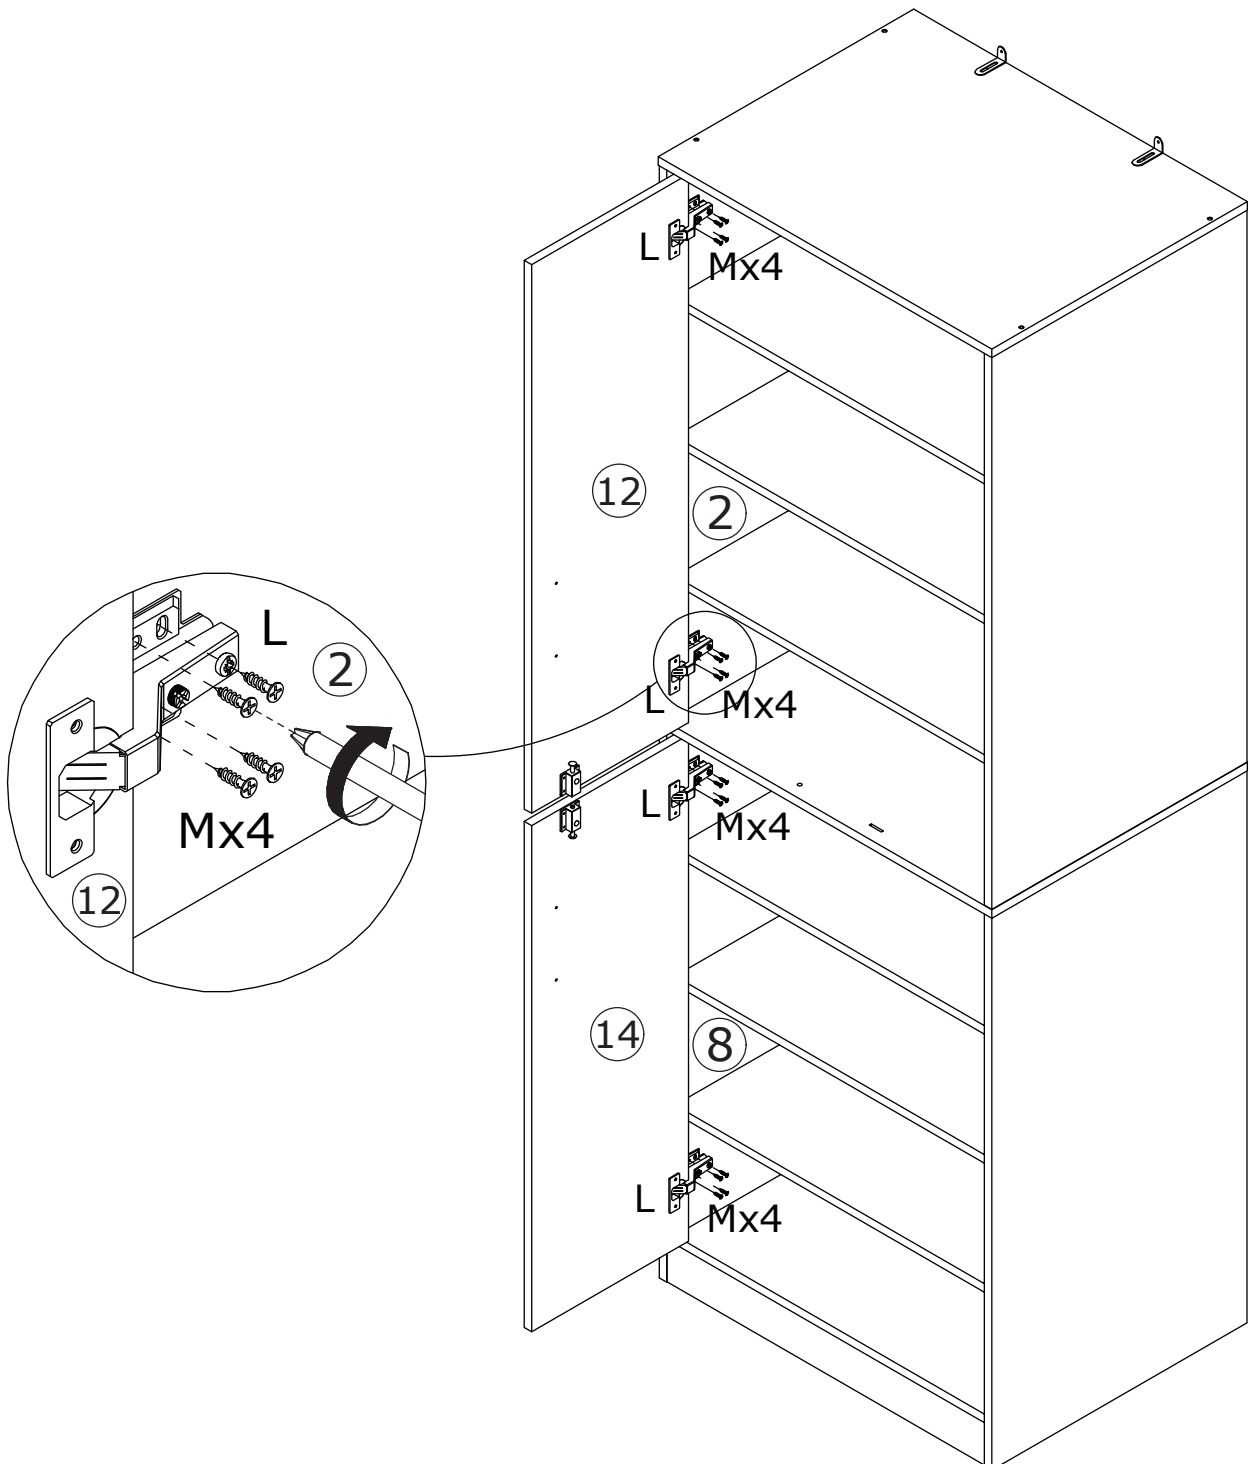

24

 
F x 2




G x 4



 Ø4 x 18 mm



 Secure handle (F) to panels 12 and 14 using screw (G).

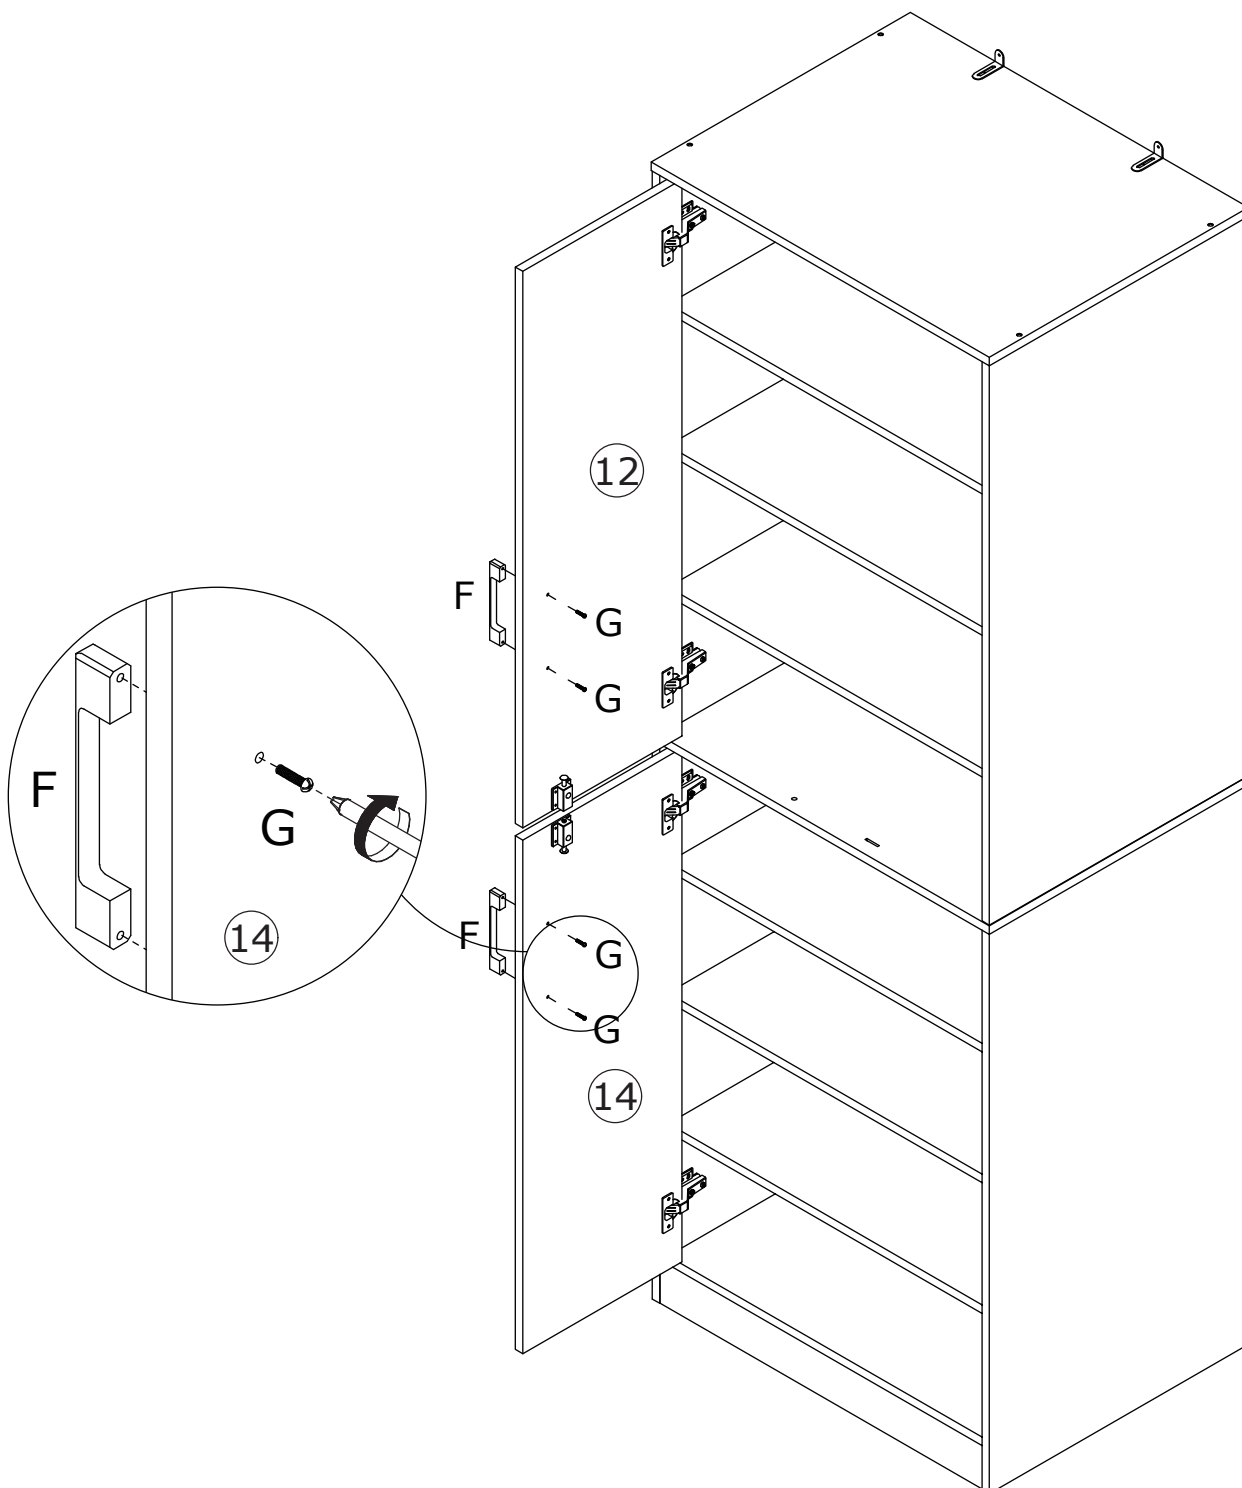

25

 
L x 4



M x 8



Ø 3.5 x 14 mm




M




Ø 3.5 x 14 mm

 S



Ø 3 x 14 mm

 Secure hinge (L) to panels 13 and 15 using screw (M).

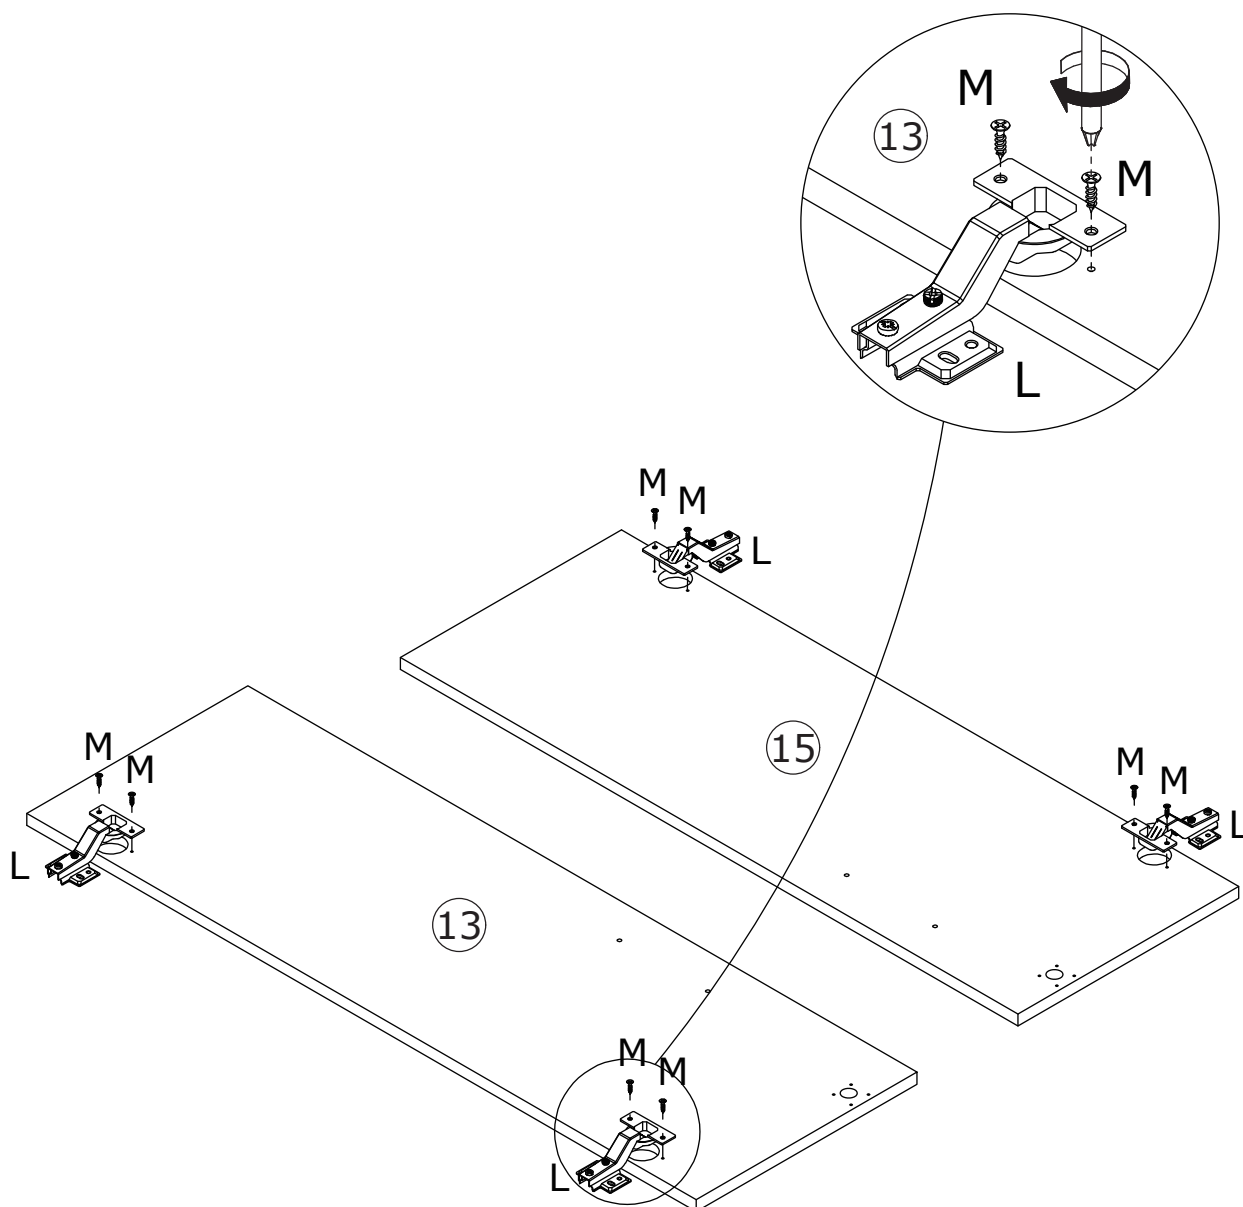


26

M x 16



 Ø 3.5 x 14 mm




M





Ø 3.5 x 14 mm

 S




Ø 3 x 14 mm

  Secure panel 13 to panel 4, and panel 15 to panel 9 via hinges using screw (M).

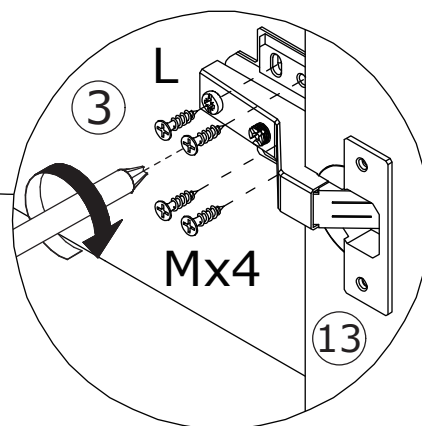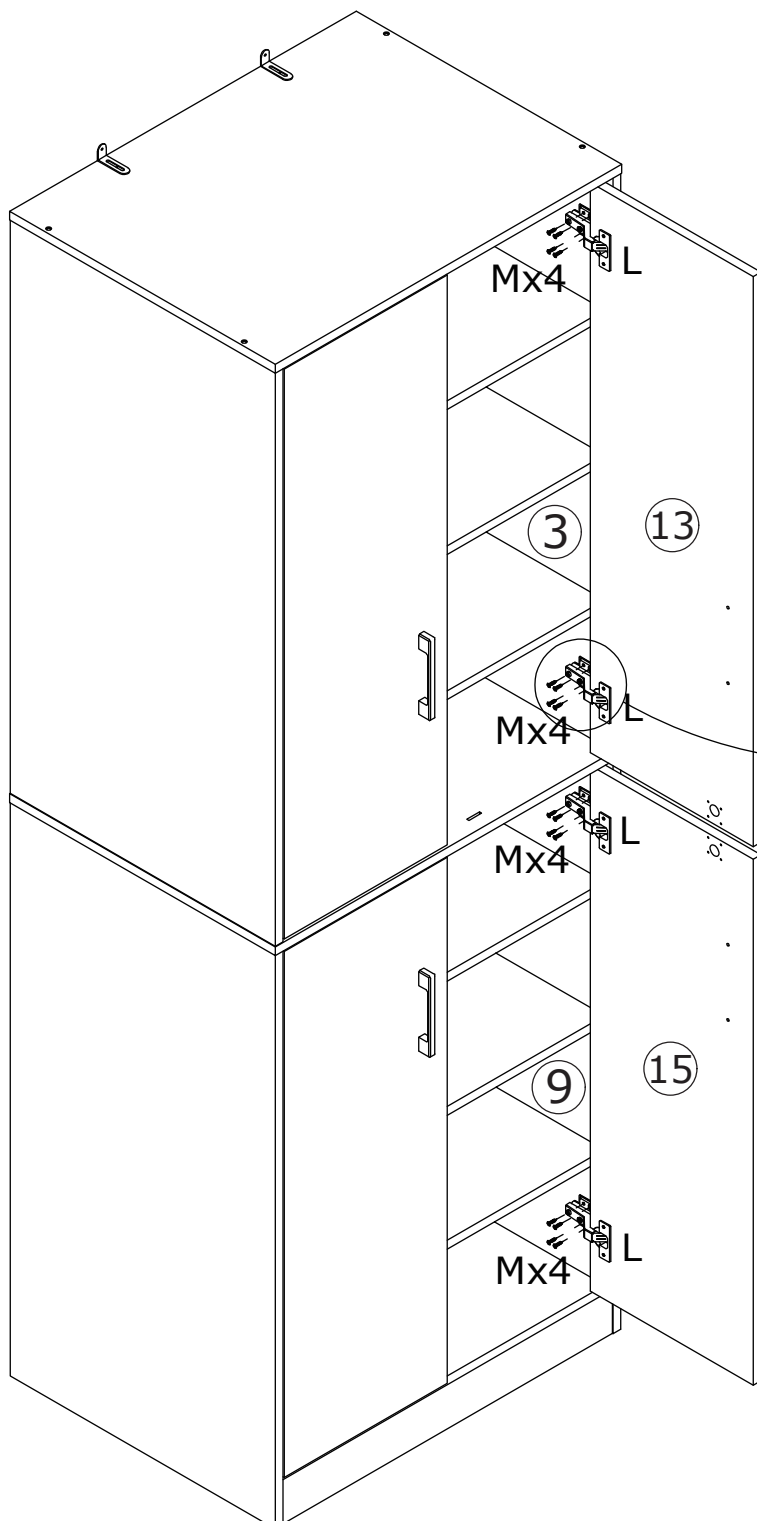

27

 
F x 2




G x 4



 
Ø4 x 18 mm



 
Secure handle (F) to panels 13 and 15 using screw (G).

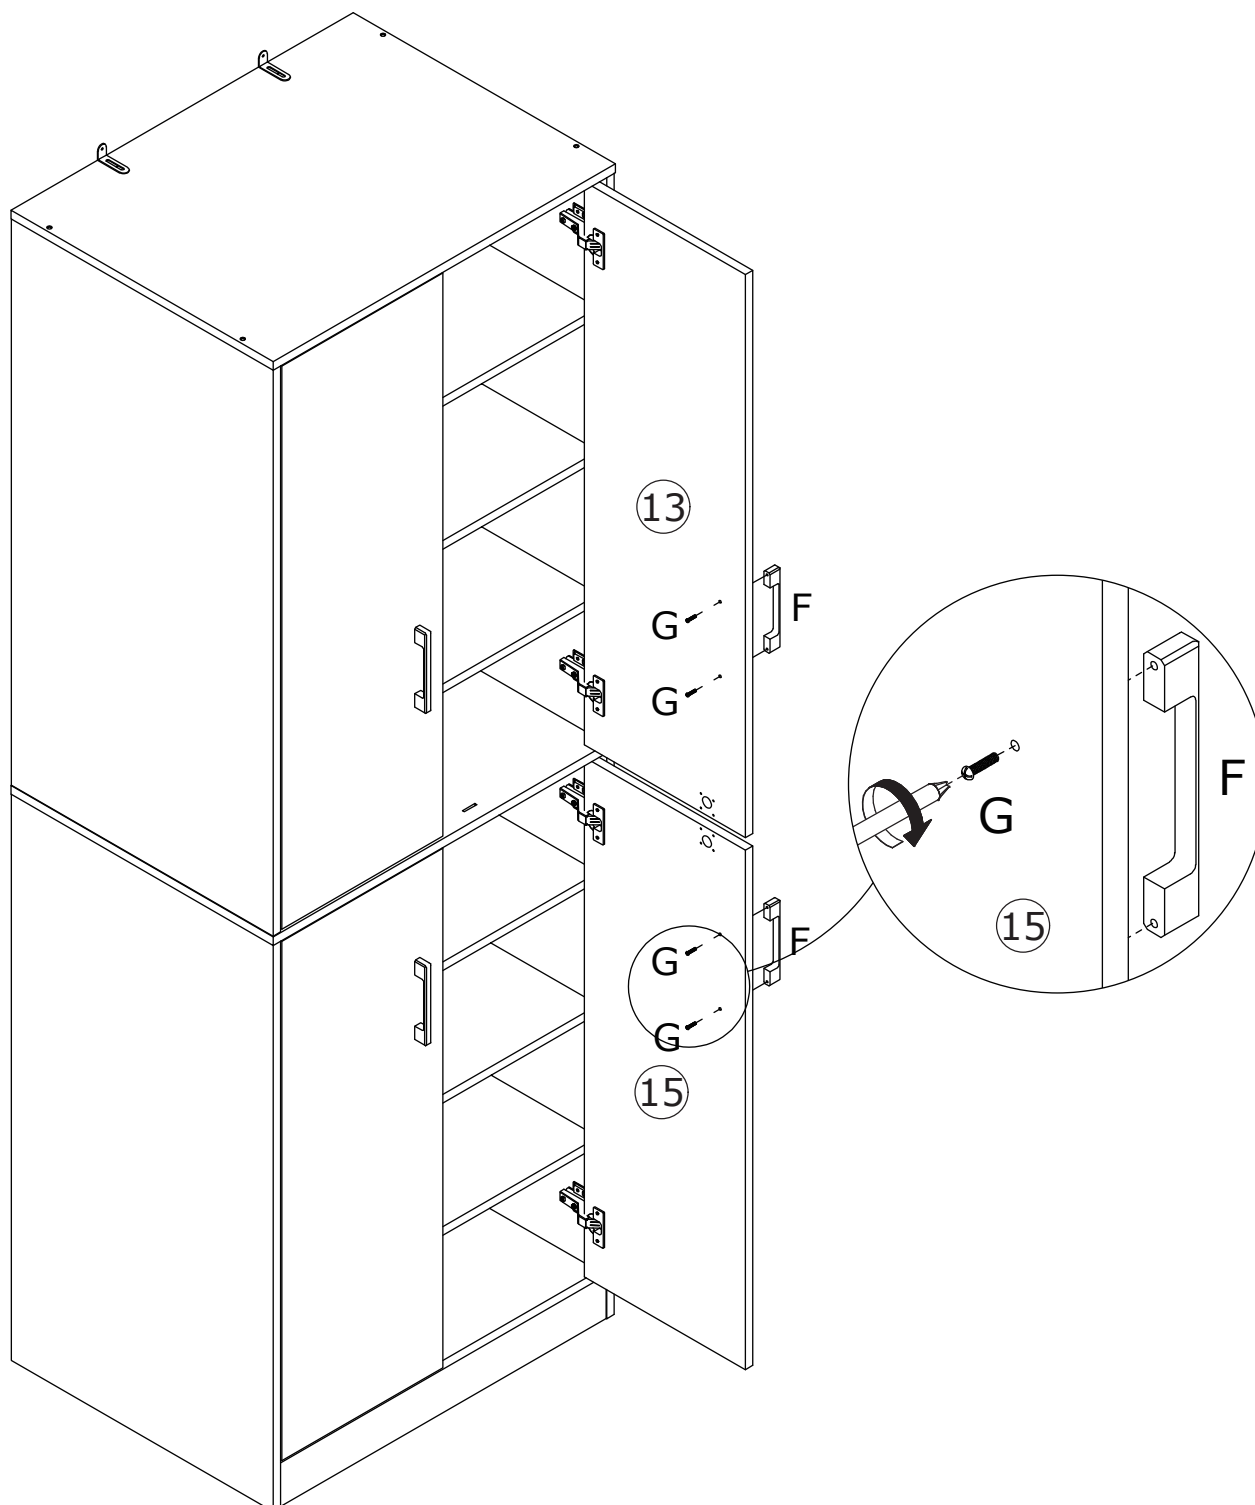


28

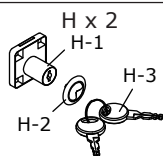 






J x 8

 



Ø 3.5 x 20 mm

 


     Secure part (H-1) and (H-2) to panels 13 and 15 using screw (J).

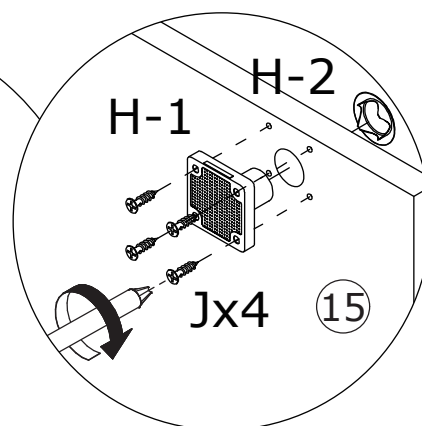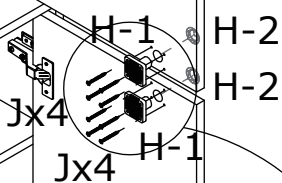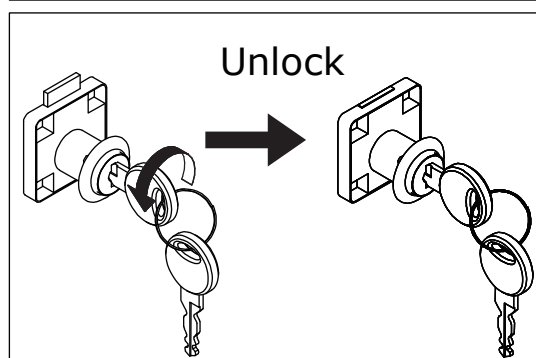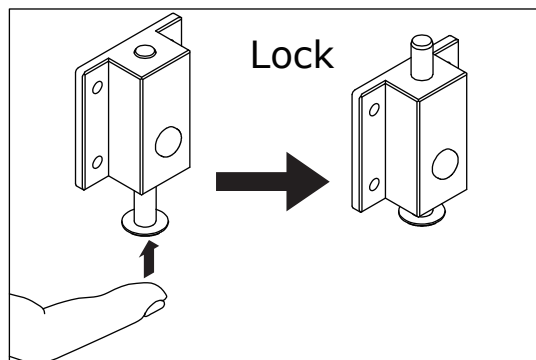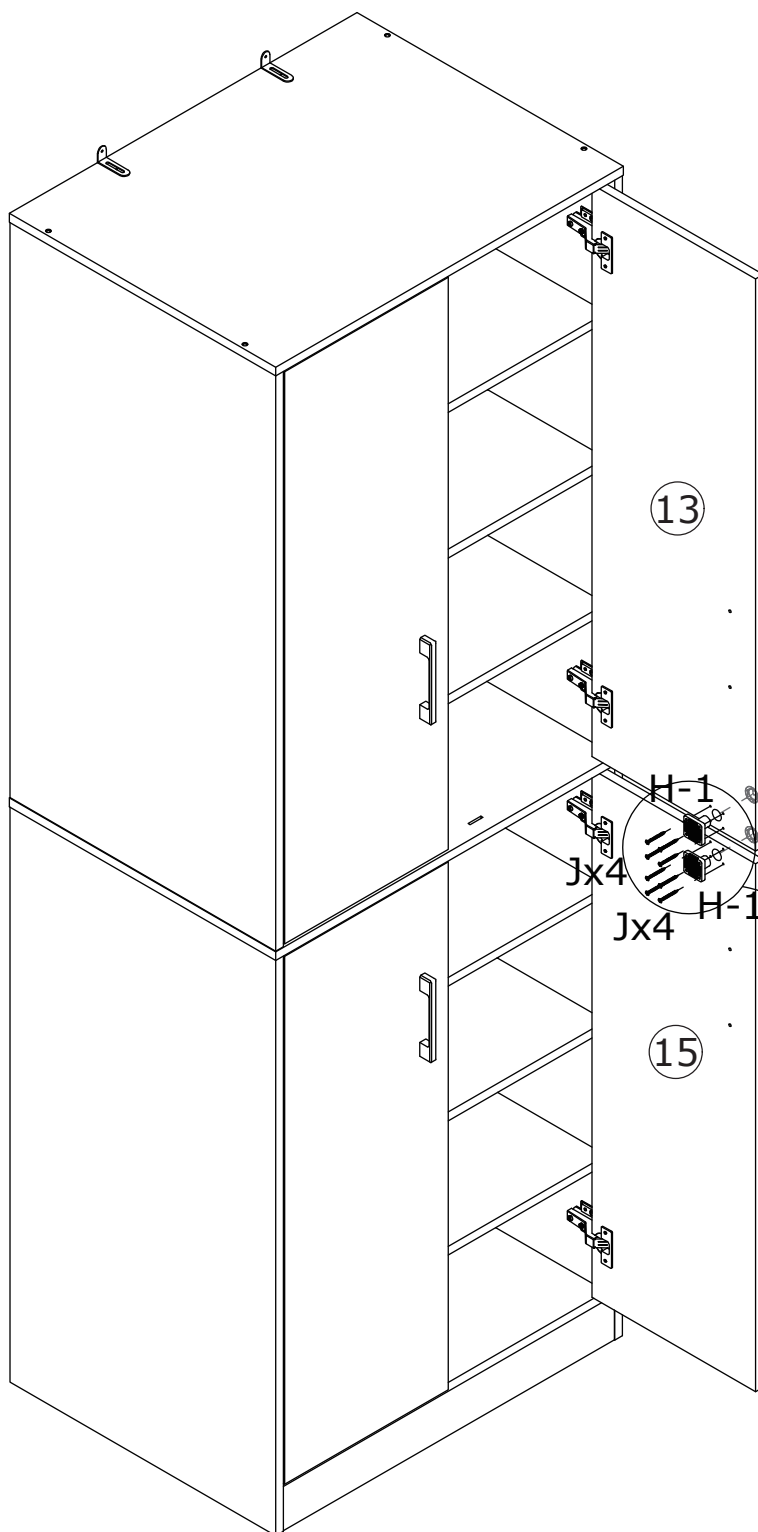

29

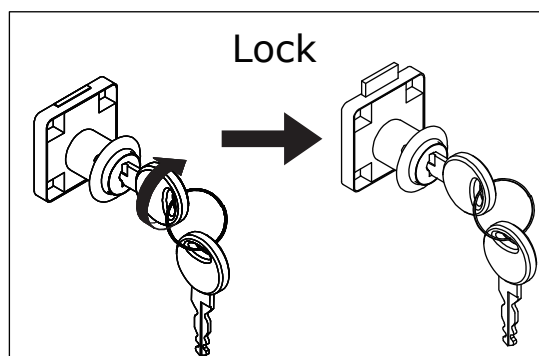 
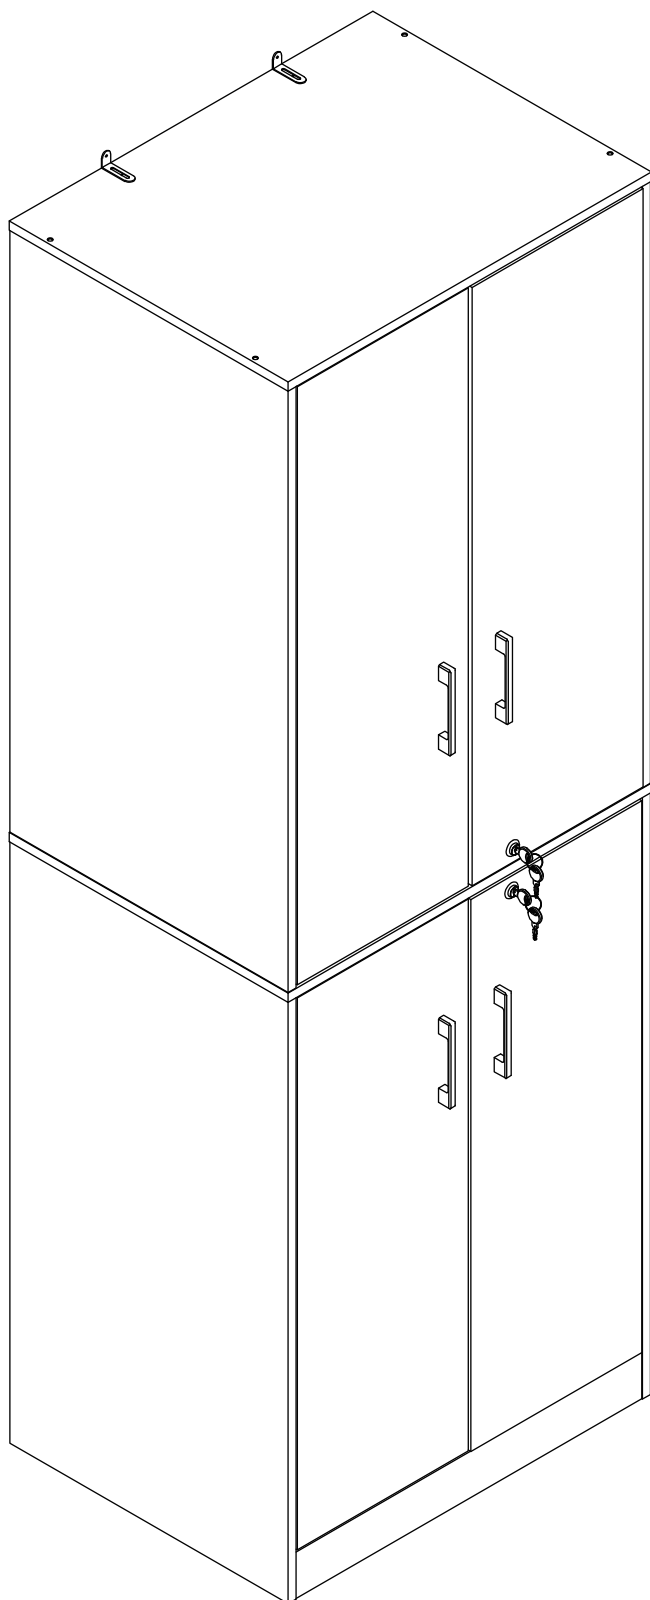 


 


If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.


 
 
<https://youtu.be/n0Lb36SoODM>

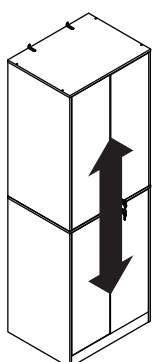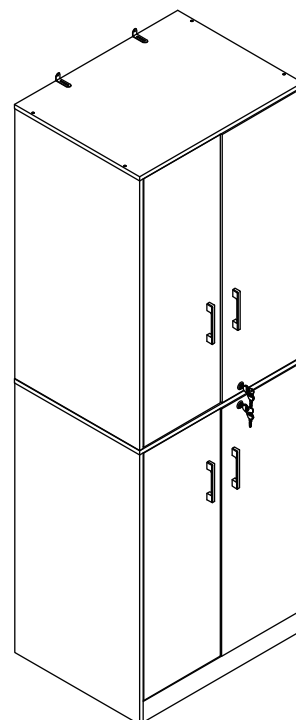


I

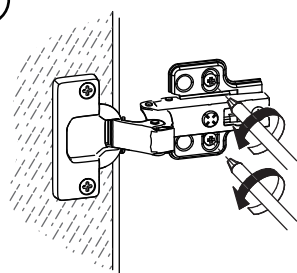 






II

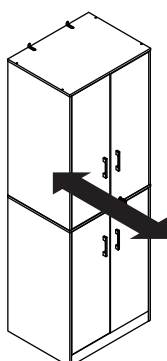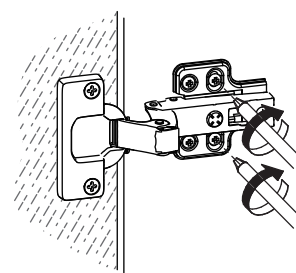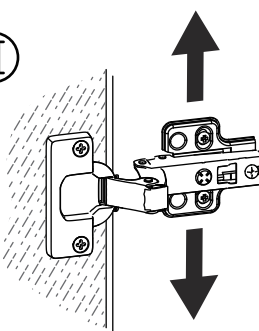   

I

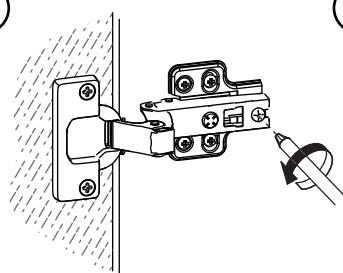 

II

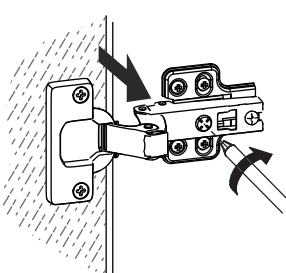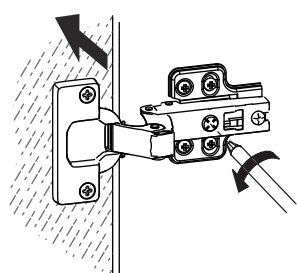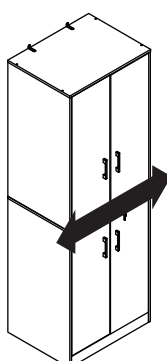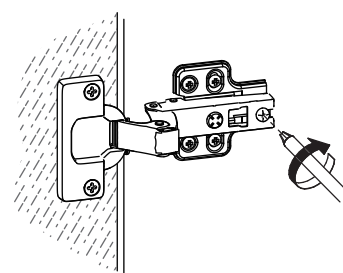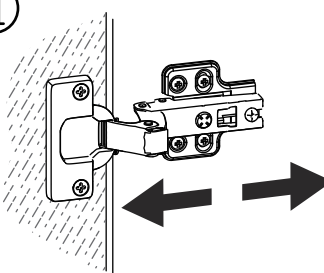     

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068