Safe box instruction

Operation instruction

- 1. Each time you press the operation key, the yellow light flashes and the buzzer beeps.
- 2. The B function on the operation panel indicates confirmation.
- 3. After pressing any key for 20 seconds, no subsequent key input will enter the sleep state.
- 4. Once you enter the sleep state, all operations are terminated, and pressing any key wakes you up to enter the functional operation.

Personal password Settings and changes

Directly press the red button on the inside of the door cover, the buzzer beeps, the yellow indicator lights up, and the personal password starts to be set or changed. Then enter any 3-8 digits and press B. The buzzer beeps and the yellow indicator goes off, indicating that the password is successfully set or changed.

User use

Open and lock the door

- 1. After entering the correct personal password, press the "B" key to confirm. The buzzer beeps and the green indicator lights up, indicating that the password is correct. After the electromagnet closes for 5 seconds, the door can be opened or locked.
- 2. After about 5 seconds, the green light goes off and the electromagnet is released.
- 3. If the password is incorrect, press B to confirm the password. After the buzzer beeps and beeps 5 indicates an error.
- 4. If the input is incorrect for three consecutive times, the operation key will be locked for 20 seconds, and the keyboard will be unlocked after 20 seconds. If you enter incorrect keys for three consecutive times, the operation key will be locked for 5 minutes. After 5 minutes, the keyboard will be unlocked. When the keyboard locks, the buzzer beeps every second.

Undervoltage indication

- 1. Under voltage, when the green light is on, you will see the red indicator light at the same time, at this time, it can still work for a while but hope to replace the battery as soon as possible.
- 2. This model does not contain a memory chip, and the password is restored to the factory password: 159 ,after 10 minutes of power failure. Remember to be clear.

Warning users:

Do not lock the emergency key, external battery box and operating instructions into the safe deposit box. Please keep them separately.