

Beelicious Pro

USER MANUAL



19QT Digital Countertop Air Fry Oven

BAF-809

REGISTER
NOW!

for an additional
12 months
Warranty

As a special thank-you for registering your Beelicious unit, you'll automatically receive an additional 12 months added to your limited manufacturer's warranty!

All you need to do is send your order ID to our service Email: support@beelicious.shop, or enter your order ID to activate the warranty online at www.beelicious.shop/?vipwarranty.

This warranty only cover orders from authorized brand online stores and our official website. We are not responsible for any purchases from other distribution channels.



FREE upgrade to FULL Replacement Guarantee - no need to return.



Once registered, you will be ensured that if anything goes wrong with your product, we will either send you a brand new unit as a replacement (Absolutely FREE) or provide a FULL refund of your order.



Get simple, delicious and healthy recipes updates.



Just send your Order ID to Email support@beelicious.shop to activate the extended warranty.

NOTE: Must register within 7 days after receiving your new product.



Tag us in your **#Beelicious #Beeliciousairfryoven** creations for a chance to GET prizes.

CONTENTS

IMPORTANT SAFEGUARDS.....	01
BEFORE USING YOUR PRODUCT.....	03
GET TO KNOW YOUR PRODUCT.....	04
CONTROL PANEL.....	06
OPERATION GUIDE.....	08
PRESET MENU.....	10
CAUTION.....	11
CARE, CLEANING&STORAGE.....	12
TROUBLESHOOTING.....	14

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your Air Fryer Oven.

READ ALL INSTRUCTIONS BEFORE USE.

- Make sure to unplug the Air Fryer Toaster Oven from the outlet when it's not in use and before you start cleaning. Allow it to cool down before handling, putting on, or taking off any parts.
- Never touch hot surfaces without wearing heat-protective gloves. Be extremely cautious when removing hot accessories or disposing of hot grease to avoid burns.
- Do not submerge the cord, plug, or any parts of the Air Fryer Toaster Oven in water or any other liquid to prevent electrical hazards.
- To prevent potential hazards, avoid placing the product near children or allowing them to use it.
- Do not operate the appliance if the cord or plug is damaged. If the appliance is dropped or damaged, please contact our customer service via support@beelicious.shop.
- To avoid potential injury, only use accessories or attachments recommended for the unit.
- Do not use the appliance outdoors.
- Ensure that the cord doesn't hang over the edge of a surface where children or pets could interact with it.
- Keep the appliance away from hot gas or electric burners.
- Only use the appliance for its intended purpose.
- Exercise extreme caution when using containers made of materials other than metal or glass in the Air Fryer Toaster Oven.
- Only store manufacturer-recommended accessories in the appliance when it's not in use.
- Do not place materials like cardboard, plastic, paper, or anything similar in the appliance.
- Avoid inserting oversized foods and utensils into the Air Fryer Toaster Oven, as they may pose a risk of fire or electric shock.

IMPORTANT SAFEGUARDS

- A fire may occur if the appliance is covered or comes into contact with flammable materials such as curtains, draperies, or walls while in operation.
- Do not place any items on top of the appliance while it is in operation. Avoid cleaning the appliance with metal scouring pads, as pieces can break off and come into contact with electrical parts, posing a risk of electric shock.
- Warning: Never leave the appliance unattended during use to avoid the possibility of fire. Always use recommended temperature settings for all functions.
- Do not place cooking utensils or baking dishes on the glass door of the appliance.
- Do not operate your appliance in an appliance garage or under a wall cabinet. When storing the appliance in an appliance garage, always remember to unplug it from the electrical outlet.
- Before connecting the appliance, check if the voltage indicated on the appliance matches the local main voltage. (Rated voltage: 120V)



Friendly Reminder:

When baking fresh pizza, toast, or other foods with high moisture content, you may notice white smoke, which is actually steam. This is a normal occurrence.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS



BEFORE USING YOUR PRODUCT

1. Place the air fryer oven on a stable, level, heat-resistant surface, away from any items that can be damaged by heat. Maintain a minimum distance of 4 inches between the electrical outlet and the wall, furniture, etc.

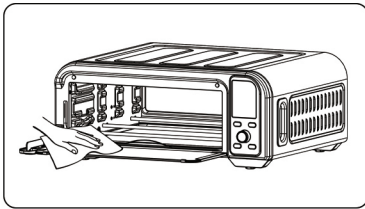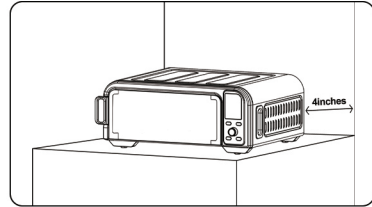

2. Wash all accessories and clean the interior of the Air Fryer Oven. Dry them and place the accessories back in the oven.

3. Do not cover the device with anything while it's in operation.

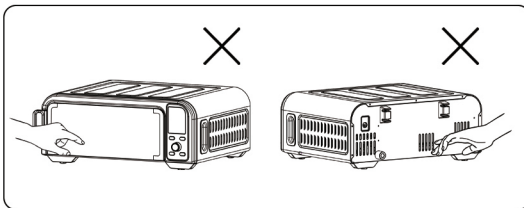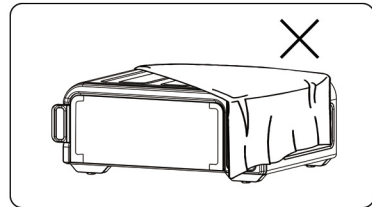


4. Hot surface & Hot exhaust vent. Do not touch.


5. For the initial use, it's necessary to run the oven at 450°F for 20 minutes to sterilize and eliminate any manufacturing odors. The Air Fryer Toaster Oven may emit odors or smoke due to the protective film on the heater.

GET TO KNOW YOUR PRODUCT

MAIN COMPONENTS

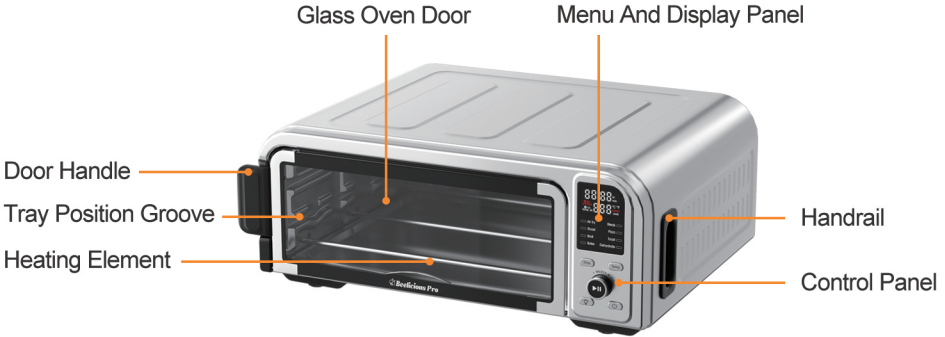

Baking Pan

 

Oven Rack



Drip Pan



Air Fryer Basket

Baking Pan

1. Baking pan cannot be inserted directly into the oven. It needs to be used in conjunction with the rack, placed on the rack during use.
2. Used for cookies, cake, turkey etc.



Oven Rack

1. Depending on the food, it can be used on the first or second oven rack.
2. Used for meat, bread, pizza etc.

Drip Pan

1. It is used at the bottom of the oven to catch drippings from food placed above it.
2. Always place it beneath the bottom heating element.

Air Fryer Basket

1. It needs to be used in conjunction with a drip pan.
2. Use the Air Fryer Basket in conjunction with the Air Fry function to optimize your cooking results. It's ideal for fries, chicken wings, onions, etc. Additionally, it can also be used as a dehydrator basket.

GET TO KNOW YOUR PRODUCT



The first layer of the slide track is for placing the air fryer basket.



Place the baking pan on top of the oven rack.

The second layer of the slide track is for placing the oven rack.

The drip pan always remains at the bottom.


Product features

An air fryer oven uses high-speed air circulation technology to make delicious French fries with up to 80% less fat than traditional deep fryers! The unique combination of rapid circulation of hot air and oven components allows you to quickly and conveniently fry various delicious foods, snacks, and seafood. Since it uses only air for frying, it generates fewer odors and steam compared to traditional frying methods. It's easy to clean in everyday use, making it both safe and cost-effective!

TECHNICAL SPECIFICATIONS

Power	Voltage	Frequency	Capacity
1700W	120V	60Hz	18L/19QT

CONTROL PANEL

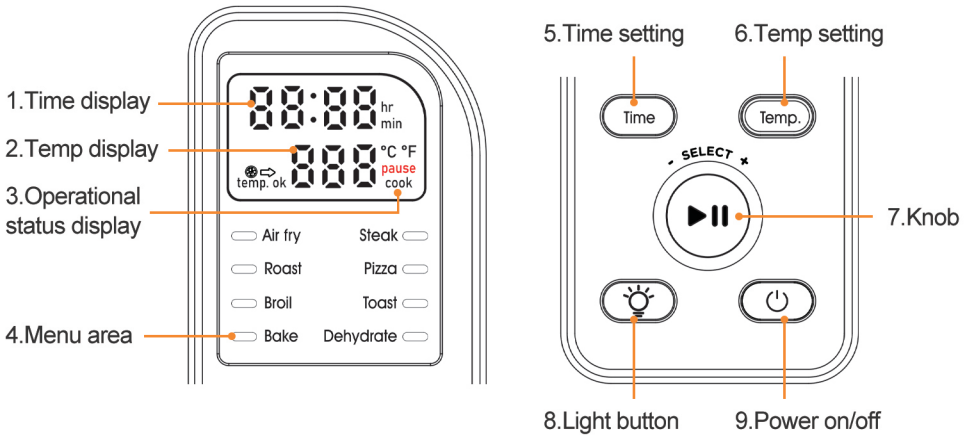

1. Time display

Displaying set and remaining work time.

2. Temp display

Displaying set and remaining work temp.

3. Operational status display

When the oven is operating, "cook" lights up, and when it's paused, "pause" lights up.

4. Menu area

• Air fry

Air frying is a healthy cooking alternative that often requires minimal or no oil, using rapid hot air to cook meals faster.

• Roast

Roasting is a cooking method that enhances flavor through caramelization and browning on the surface, resulting in moist and juicy food on the inside.

• Broil

This method is commonly used for meats like beef, chicken, or pork. It's also utilized for achieving a golden-brown top on casseroles and gratins.

• Bake

This method is recommended for foods that are typically cooked in a traditional oven.

CONTROL PANEL

- **Steak**

Recommended for fresh steak.

- **Pizza**

The default program is set for fresh pizza. If baking frozen pizza, set the temperature to 430°F and the timer to 22 minutes.

- **Toast**

Use the toast function to achieve perfectly toasted bread: crispy on the outside and soft on the inside.

- **Dehydrate**

Cooks food using convection style on low heat, preserving various types of food. Excellent for dehydrating fruits, vegetables, and meats (such as beef jerky).

5. Time setting

To select the set time, use the knob for adjustment.

6. Temp setting

To select the set temperature, use the knob for adjustment.

7. Knob

- Simply turn the knob to select your desired menu function.
- After pressing the time button, rotate the knob to set your desired time.
- After pressing the temp button, rotate the knob to set your desired temperature.
- Press the knob to start the oven, and press it again to pause the oven while it's in operation.


8. Light button

Press this button to turn on/off the oven light. (It will automatically turn off after 2 minutes of inactivity).

9. Power on/off

Press this button to open/close the oven.

OPERATION GUIDE

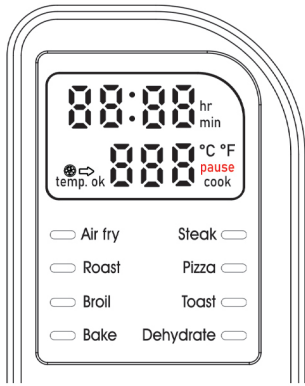

POWER
ON

MENU
SELECT

TIME/TEMP
SELECT


ACCESSORIES
POSITION

START

01



POWER ON

Plug in the power, select the  button, and turn on the air fryer oven. The screen will light up.

02




MENU SELECT



Rotate the knob to select the desired menu. The default temperature and time will be displayed on the screen.

NOTE: When the temperature or time digits on the screen are flashing, you cannot select the menu. You need to wait for 3 seconds until the digits on the screen stop flashing before you can rotate the knob to select the menu.

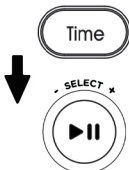03




TIME SELECT

After selecting the menu, press the  button to set the cooking time. The time digits on the screen will start flashing, then rotate the  knob to set the cooking time.

OPERATION GUIDE

04

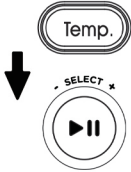

TEMP SELECT

After selecting the menu, press the **Temp.** button to set the cooking temperature. The temperature digits on the screen will start flashing, then rotate the **Start/Stop** knob to set the cooking temperature.

05

 
ACCESSORIES POSITION

Insert accessories with food in recommended position according to the overview diagram below, then close the door.

ACCESSORIE



Baking Pan



Oven Rack



Drip Pan



Air Fryer Basket



06



START/PAUSE

Please press the middle knob 'Start/Stop' button to begin cooking until the first program is completed. When the cooking is finished, the oven will emit 3 beeps, and the screen will display 'END'.

NOTE: After the job is done, the oven fan will continue to run for a few minutes to help the machine dissipate heat better. This is a normal phenomenon.

PRESET MENU

Overview of the Air Fry Oven functions.

PRESET	DEFAULT TEMPERATURE	DEFAULT TIME	ADJUSTABLETEMP RANGE	TIME RANGE
Air fry	450°F	23mins	160°F-550°F	1-60mins
Roast	420°F	22mins	160°F-550°F	1-60mins
Broil	500°F	15mins	160°F-550°F	1-60mins
Bake	380°F	25mins	160°F-550°F	1-60mins
Steak	550°F	7mins	160°F-550°F	1-60mins
Pizza	550°F	12mins	160°F-550°F	1-60mins
Toast	550°F	6mins	160°F-550°F	1-60mins
Dehydrate	150°F	8hr	130°F-160°F	1-12hr

NOTE:

1. When cooking, if the food has a high water content, you might see some water vapor and steam on the oven door. This is normal.
2. When the oven is in operation, if you need to open the oven door, please press the pause button first, then open the oven door. Opening the door directly will not stop the operation; the timer will continue running
3. Time and temperature need to be adjusted if food size is different.

CAUTION



The device and its accessories will become very hot during use. Do not touch heated parts while using or after using the device. Only touch the handle and control dials when the device is in operation or immediately after it's been turned off. Allow the device to cool completely before moving, cleaning, or storing it. Use oven gloves when handling the hot accessories.

- Children under 8 years of age and pets should be kept away from the device and its connecting cable.
- Do not cover the device while it's in operation, and ensure that the ventilation openings remain clear to prevent the risk of fire.
- Do not connect the device along with other high-wattage appliances to a power strip to avoid overloading and potential short circuits.
- Do not use this device at high temperatures for more than 3 hours.
- Do not leave the device switched on when it's empty, except for 'burning off' before its first use.
- Do not place food that is still wrapped in plastic or in plastic bags into the device.
- Ensure that the food does not touch the heating element of the device.
- Ensure that food items containing oil and fats are not overheated, as they could ignite.
- Usually, either no oil or just a small amount (2 to 3 teaspoons) is needed for food preparation.
- Cooking time depends on the size, quantity of food, and temperature. However, cooking time is typically shorter than in a conventional oven. Until you are familiar with the device, begin with a shorter cooking time and increase it gradually if needed. Regularly check the progress of the cooking food.

CARE, CLEANING&STORAGE

Before cleaning, unplug the power cord from the socket. Make sure the air fry oven and all accessories have fully cooled down before starting to disassemble and clean.

Cleaning the glass door

Please note: The oven door glass can be cleaned directly with a soft damp sponge or a soft plastic scrubber along with glass cleaner or mild detergent.

Cleaning outer body

- 1.Clean the exterior with a soft, damp sponge. Use a non-abrasive liquid cleaner or mild spray solution to prevent buildup of stains. Apply the cleaner to the sponge, not directly onto the oven surface, before cleaning."
- 2.Wipe the LED screen with a soft, damp cloth. Apply the cleaner to the cloth, do not apply the cleaner directly to the LED. Using a dry cloth and/or abrasive cleaner on the LED screen surface may cause scratches.



Warning: To prevent electric shock, do not immerse the appliance or power cord in water or any other liquids.

Clean the interior

To clean any splatters that may occur during cooking, wipe the walls with a soft, damp sponge. Use a non-abrasive liquid cleaner or mild spray solution to prevent buildup of stains. Apply the cleaner to the sponge, not directly inside the oven, before cleaning.



Warning: Be extra cautious when cleaning the heating elements. Allow the oven to fully cool, then gently rub along the length of the heating elements with a soft, damp sponge or cloth. Do not use any type of cleaner or detergent. Allow all surfaces to thoroughly dry before plugging the power plug into the power outlet and turning on the oven.

CARE, CLEANING&STORAGE

Before cleaning, unplug the power cord from the socket. Make sure the air fry oven and all accessories have fully cooled down before starting to disassemble and clean.

Cleaning the Oven rack, baking pan , Air Fryer Basket , Drip Pan.

- 1.After each use, wipe with a soft, damp sponge. Use a non-abrasive liquid cleaner or mild spray solution to prevent buildup of stains. Apply the cleaner to the sponge, not directly on the tray.
- 2.To remove oil stains, soak the accessories in warm soapy water, then clean with a soft sponge or soft plastic scrubber. Rinse thoroughly, air dry completely, and if oil stains are difficult to remove, soak the accessories for around 6 hours before cleaning.
- 3.After cleaning, be sure to reinsert the crumb tray into the oven before plugging the power plug into the power outlet and turning on the oven.

Storage

- 1.Make sure the oven and all accessories are clean and dry.
- 2.Ensure the door is closed.
- 3.Place the appliance upright, standing on its feet, and on a level surface. Do not store the appliance in damp or hot conditions.
- 4.After each use, clean the inside of the oven, and to save countertop space, you can flip it upside down and place it on your kitchen countertop.

NOTE: That the oven should not be placed upside down while in operation; it should be placed flat on the kitchen countertop.



Lay Flat



Flip Upright

TROUBLESHOOTING

POSSIBLE PROBLEM	POSSIBLE CAUSE	EASY SOLUTION
The device does not work.	The main plug is not properly inserted into the socket.	Adjust the fit of the main plug.
	The plug socket is defective.	Attempt using a different electrical outlet.
	There is no mains voltage.	Inspect the fuse of the main power connection.
	Selected the menu but didn't press the start button.	After selecting your menu, press the start button to begin the operation.
	The overheating protection has been triggered.	Pull the mains plug out of the plug socket and allow the device to cool down completely. Then try again.
	Having multiple devices connected to the same circuit has caused the fuse in the circuit breaker fuse box to trip.	Reduce the number of devices on this circuit.
The food hasn't been cooked evenly.	The food is too full.	Please reduce the amount of food and spread it evenly on the baking accessory.
	Various foods with distinct cooking times or temperatures have been prepared.	Prepare items of food with different cooking temperatures one after the other. Place food with a longer cooking time in the device first, then add ingredients with a shorter cooking time later.
	The set cooking time was too short or the temperature was too low.	Increase the cooking time or temperature.
1.An unpleasant smell is noticed during use. 2.Smoke is coming out of the device.	The device is being used for the first time.	A smell may develop when new devices are initially used. The smell should dissipate after the device has been used several times.

TROUBLESHOOTING

Black smoke is coming out of the air fry oven.	The food got burnt.	Immediately turn off the air fry oven and be cautious when removing the food.
White smoke coming out of the air fry oven.	This food has too much moisture content or there is a thick layer of frost on its surface.	This is normal. The door is ventilated to release steam from high-moisture foods, such as steam from frozen bread.
	Drip pan was not used.	Please place it under the heating element to catch any food drippings.
	The drip pan was not cleaned thoroughly of residual grease before use.	Please clean it thoroughly before use.
	There is residual grease on the heating element.	Please clean it thoroughly before use.
	There is a significant amount of moisture inside the baking pan.	Reduce the moisture inside the baking pan.
There is a lot of moisture on the machine.	The food has too high of a water content.	This is normal. The door is ventilated to release steam from high-moisture foods, such as steam from frozen bread.
Water is dripping from under the door onto the countertop.	The food has too high of a water content.	This is normal. High-moisture foods like frozen bread can generate condensation that may run down the inside of the door onto the countertop.
The food after air frying doesn't turn out crispy.	The food has too much moisture	To enhance crispiness, apply a light and even coat of oil onto the food.
E1	NTC open circuit (continues for 2 minutes after startup).	Disconnect from the power outlet and please contact customer support : support@beelicious.shop
E2	NTC short circuit (continues for 10 minutes after startup).	

TROUBLESHOOTING

E3	NTC failure (high-speed temperature unchanged for 10 minutes after startup).	Disconnect from the power outlet and please contact customer support : support@beelicious.shop
E4	Connection failure.	

If the product is not functioning properly or is experiencing abnormal operation, please first check the above list. If the issue is not listed, it indicates that the product might be malfunctioning. Please contact:

1-855-831-9989
www.beelicious.shop
support@beelicious.shop
facebook.com/Beelicious.shop

WELCOME

Enjoy your warranty and recipes

Extended Warranty



support@beelicious.shop | 1-855-831-9989
(M-F 9:00-17:00 EST)