

Instruction Manual

Important: Please read all instructions carefully before using this product.

Caution: Do not attempt to inflate during unusually strong wind. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions.

Caution: Electricity and water are a bad combination. Protect the electric fan and power cord from exposure to water.

If the external flexible cable or cord is damaged, please do not use it.

The repair of the damaged main connection cable is only allowed by a qualified technician.

Warning:

Remove unit completely from package before connection to power supply.

This item is designed to be safely used in winter weather and will operate under normal exposure to rain and or snow. However, the product should not be used under any conditions that could lead to it being completely submersed under water.

The plugs are indoor use.

Instructions:

1. Remove contents from packaging.
2. Place inflatable in a clean, open area, free from obstruction or other debris.
3. Roll out fabric and lay out the contents.
4. Make sure the air intake located on the bottom of unit is clear of fabric and free of obstruction.
5. Make sure the zipper is fully closed on the back of unit.
6. Using the clip on the end of tether, attach one end to a ring grommet on the side of the inflatable.
7. Secure the plastic stakes into ground and attach the nylon tethers.
8. Connect motor plug to power supply to inflate.
9. To deflate, simply unplug from the electrical outlet and open zipper on back of inflatable.

Trouble shooting checklist!

If the motor is not working, the problem may be...

The power source is interrupted or the cord may be unplugged.

Debris may be lodged in the motor.

Ensure zipper is securely closed so air stays inside figure.

Cleaning, Storage and maintenance instruction:

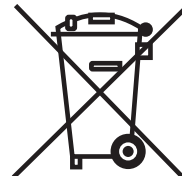
Only use mild detergent with cold water to wipe the figure clean.

Leave inflated until completely dry.

Unplug, roll up and store in original package or similar size box.

Do not clean the motor with any liquids, use a dry cloth only.

This unit is not intended for use by children.

| | |
|--|--|
|  | Environmental Protection |
| | Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centers (if available) |

NOTE:

To continuously improve its products, we reserve the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.