 




INSTALLATION

Product Manual

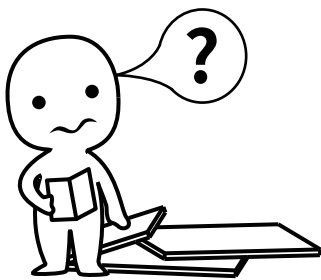


IMPORTANT INFORMATION!

  Please read the entire manual before starting to assemble and/or using this product follow the manual thoroughly and keep it for further reference.

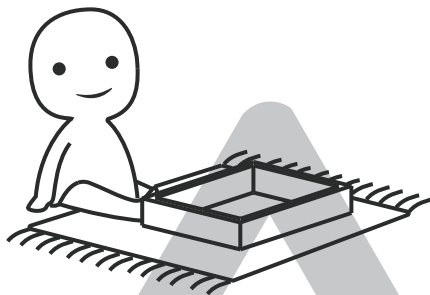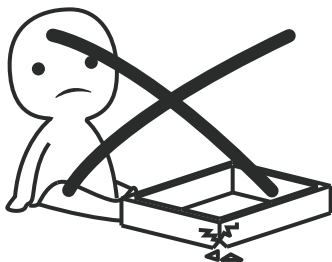



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

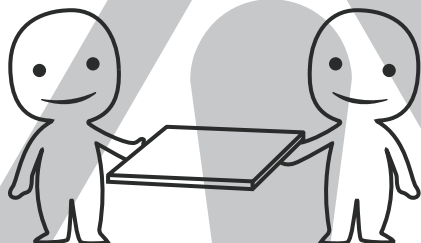

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

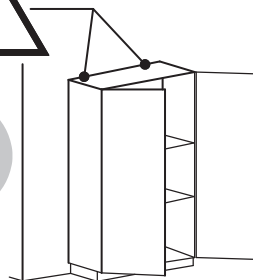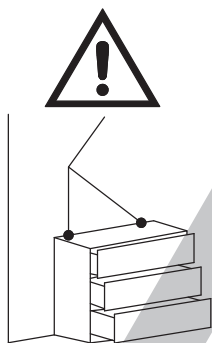

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

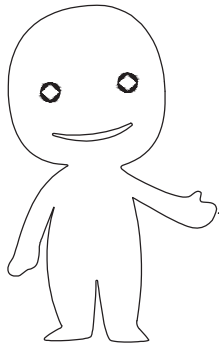


Please prepare the following tools

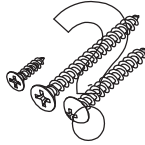    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax87



Ø6x35mm

Bx87



Ø15x10mm

Cx35



Ø6x30mm

Dx48




Ø4x35mm

Ex64



Ø3.5x12mm

 Fx16

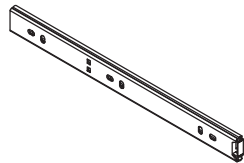

Gx20




Ø3x14mm

Hx2



 Jx2



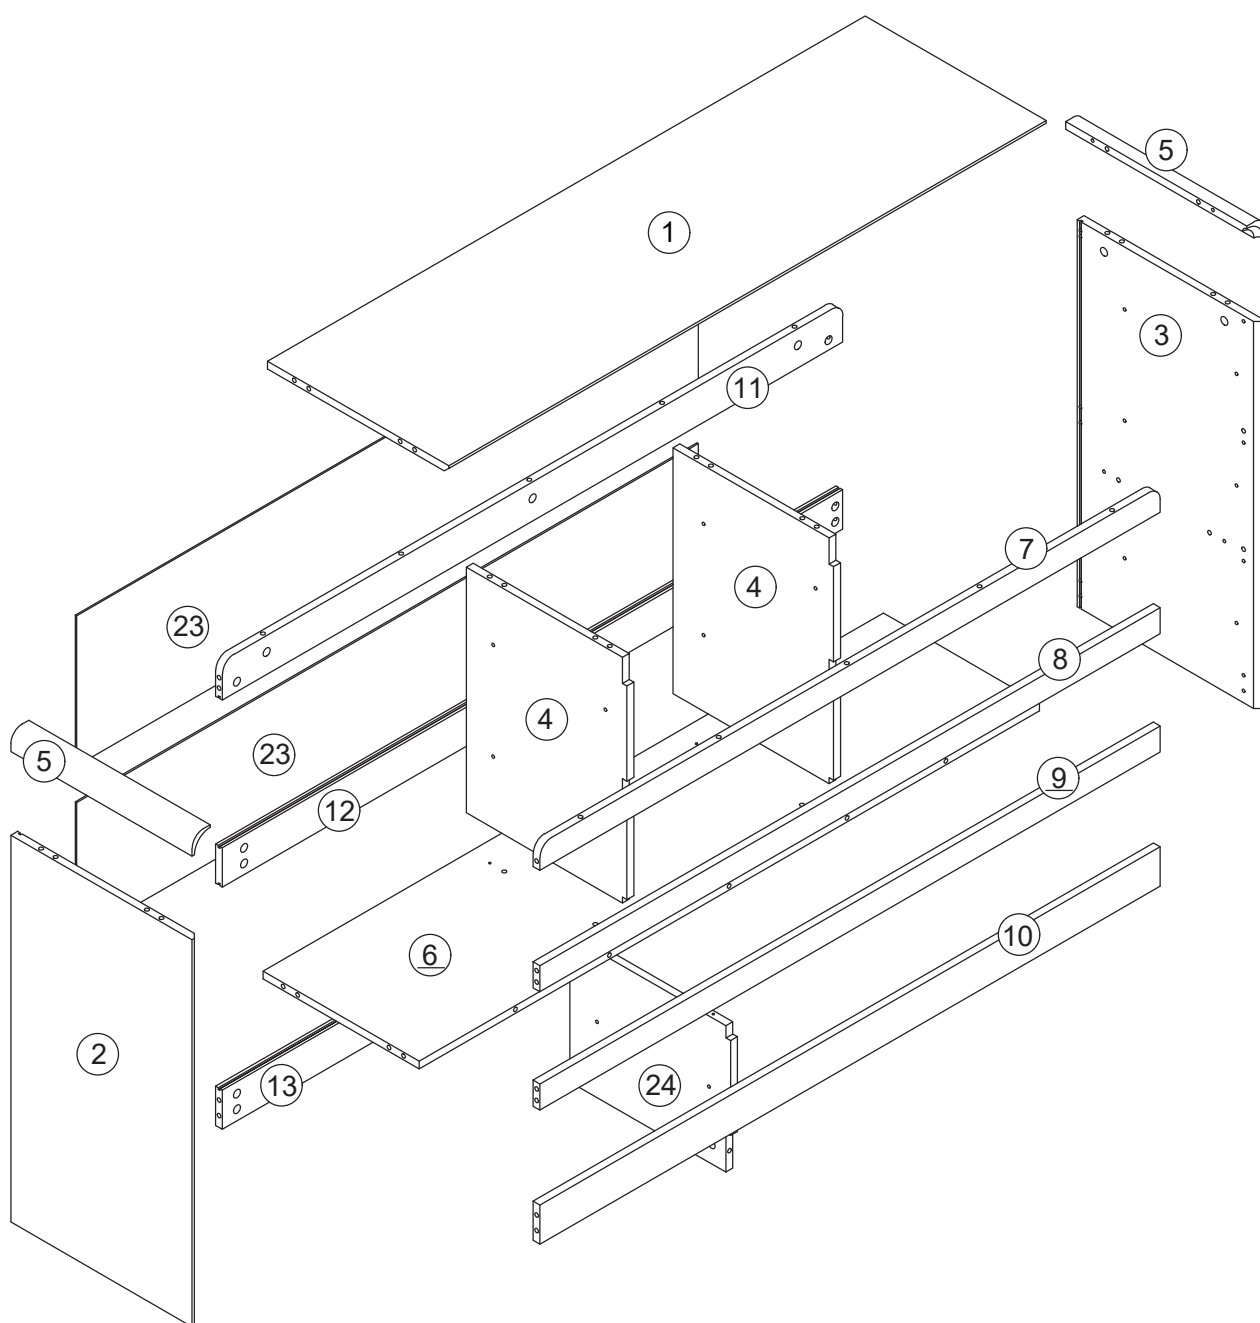


⚠ WARNING








Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.





 
*This is a permanent label.
Do not remove!*

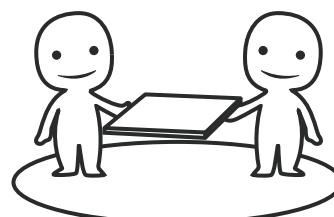

ASSEMBLED BY 2 ADULTS

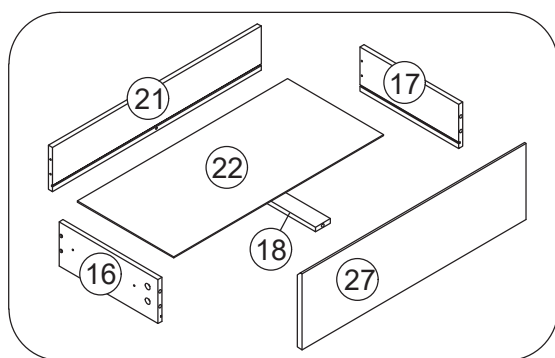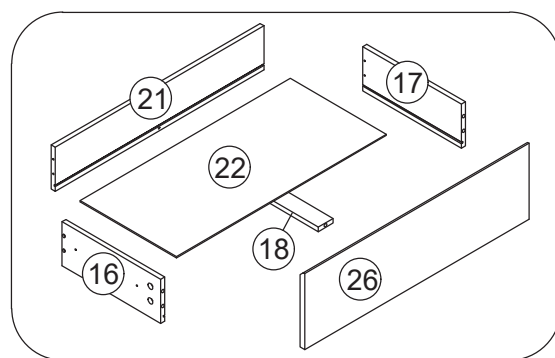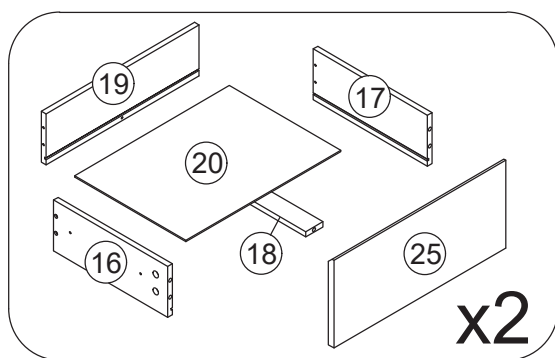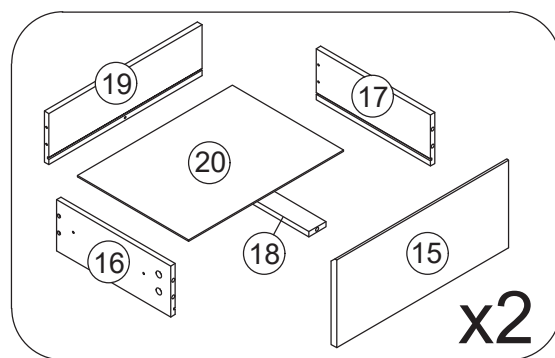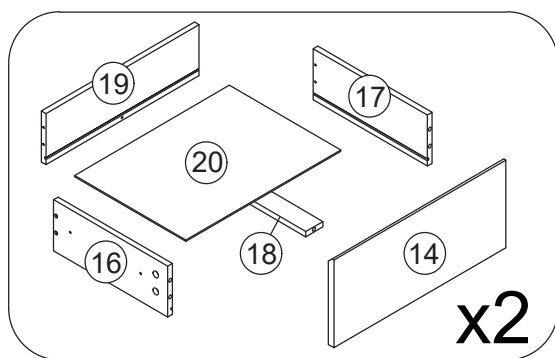     

1

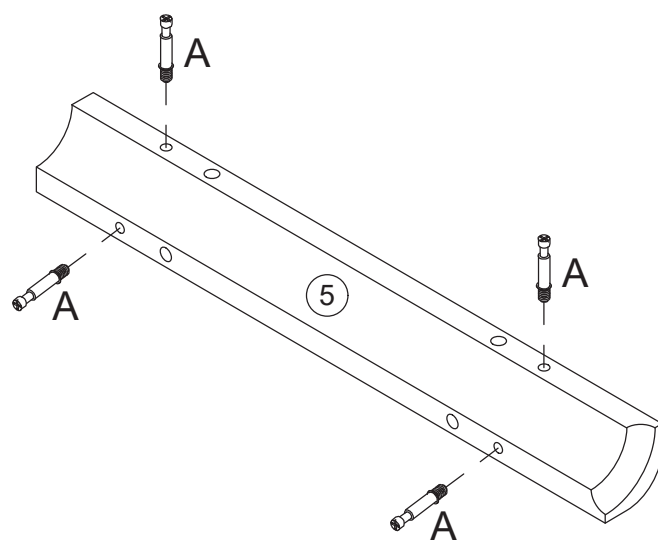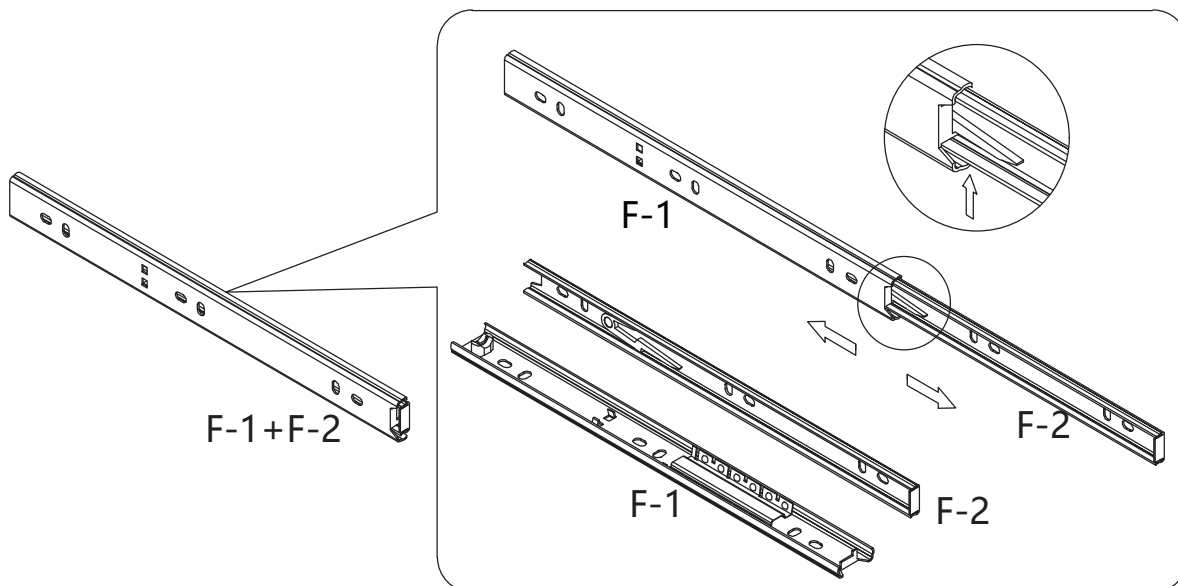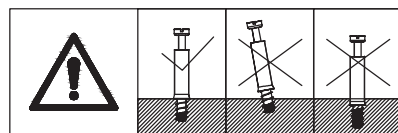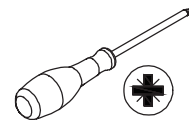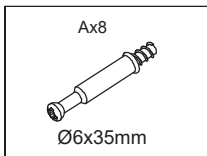     

x2


2

Ex16







Ø3.5x12mm

 
Fx8



F-1

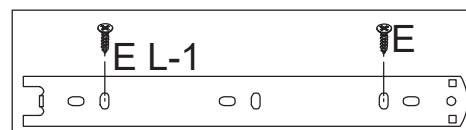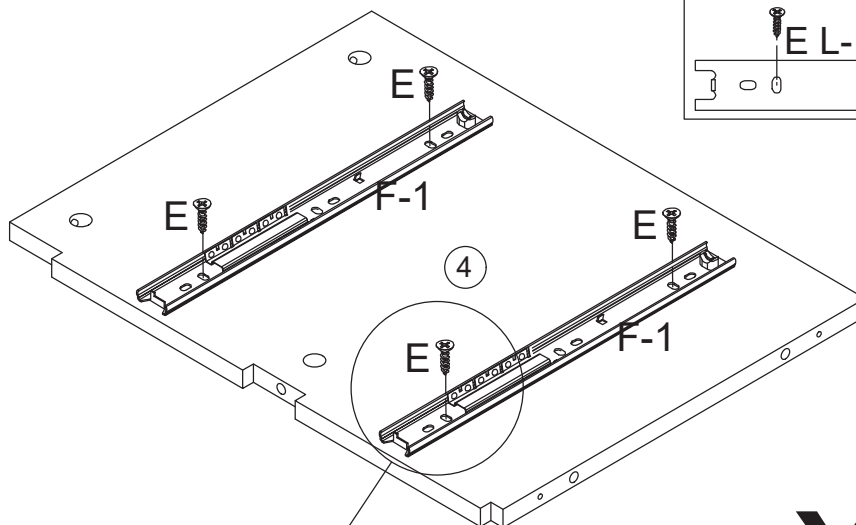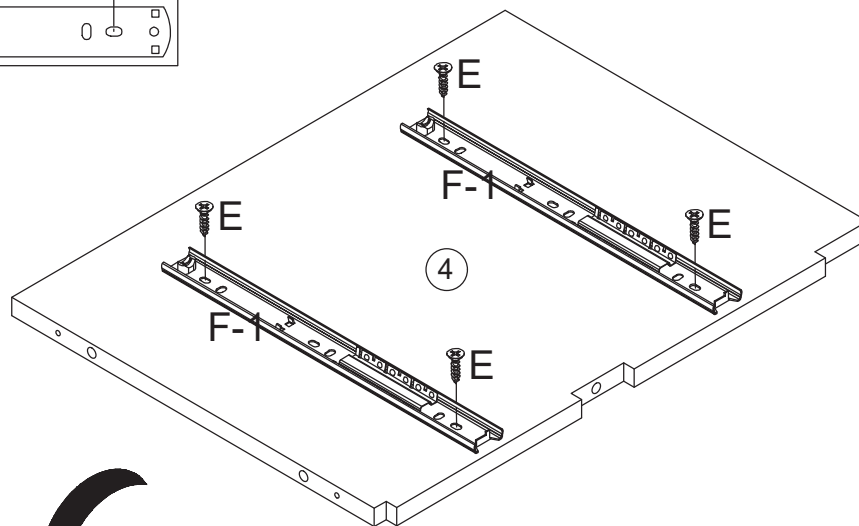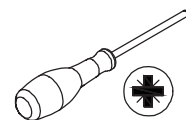    

x2

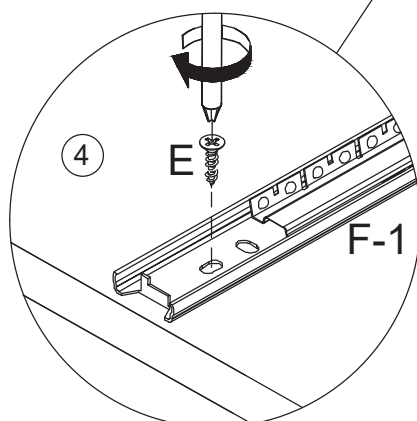 


3

Ex4









Ø3.5x12mm

 Fx2





F-1

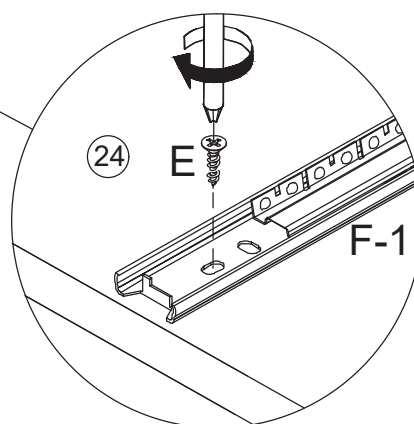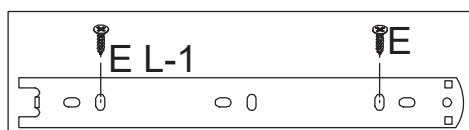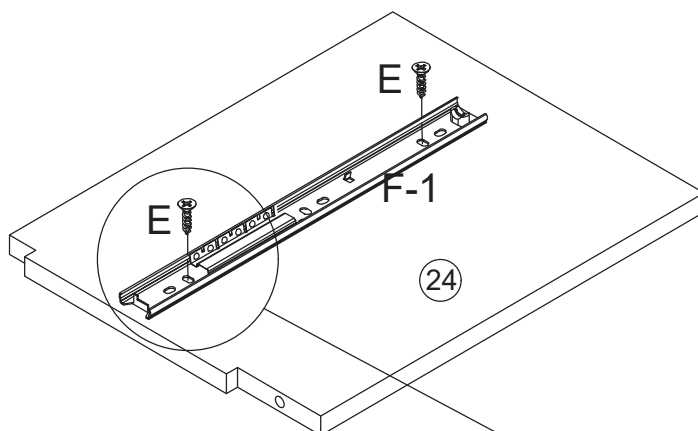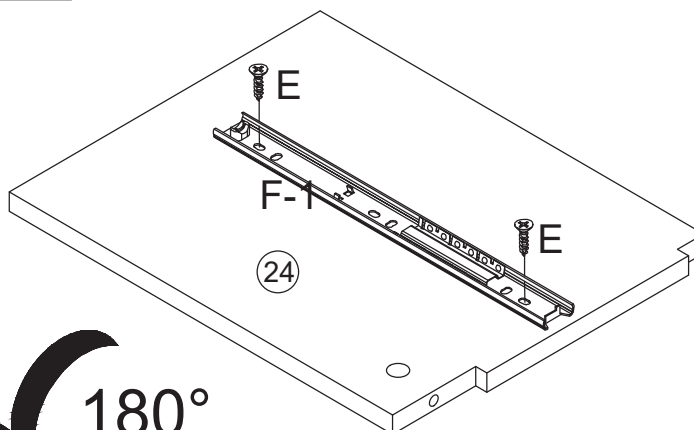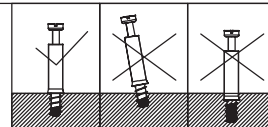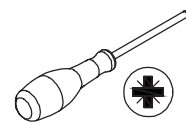      

4

  Ax24
Ø6x35mm

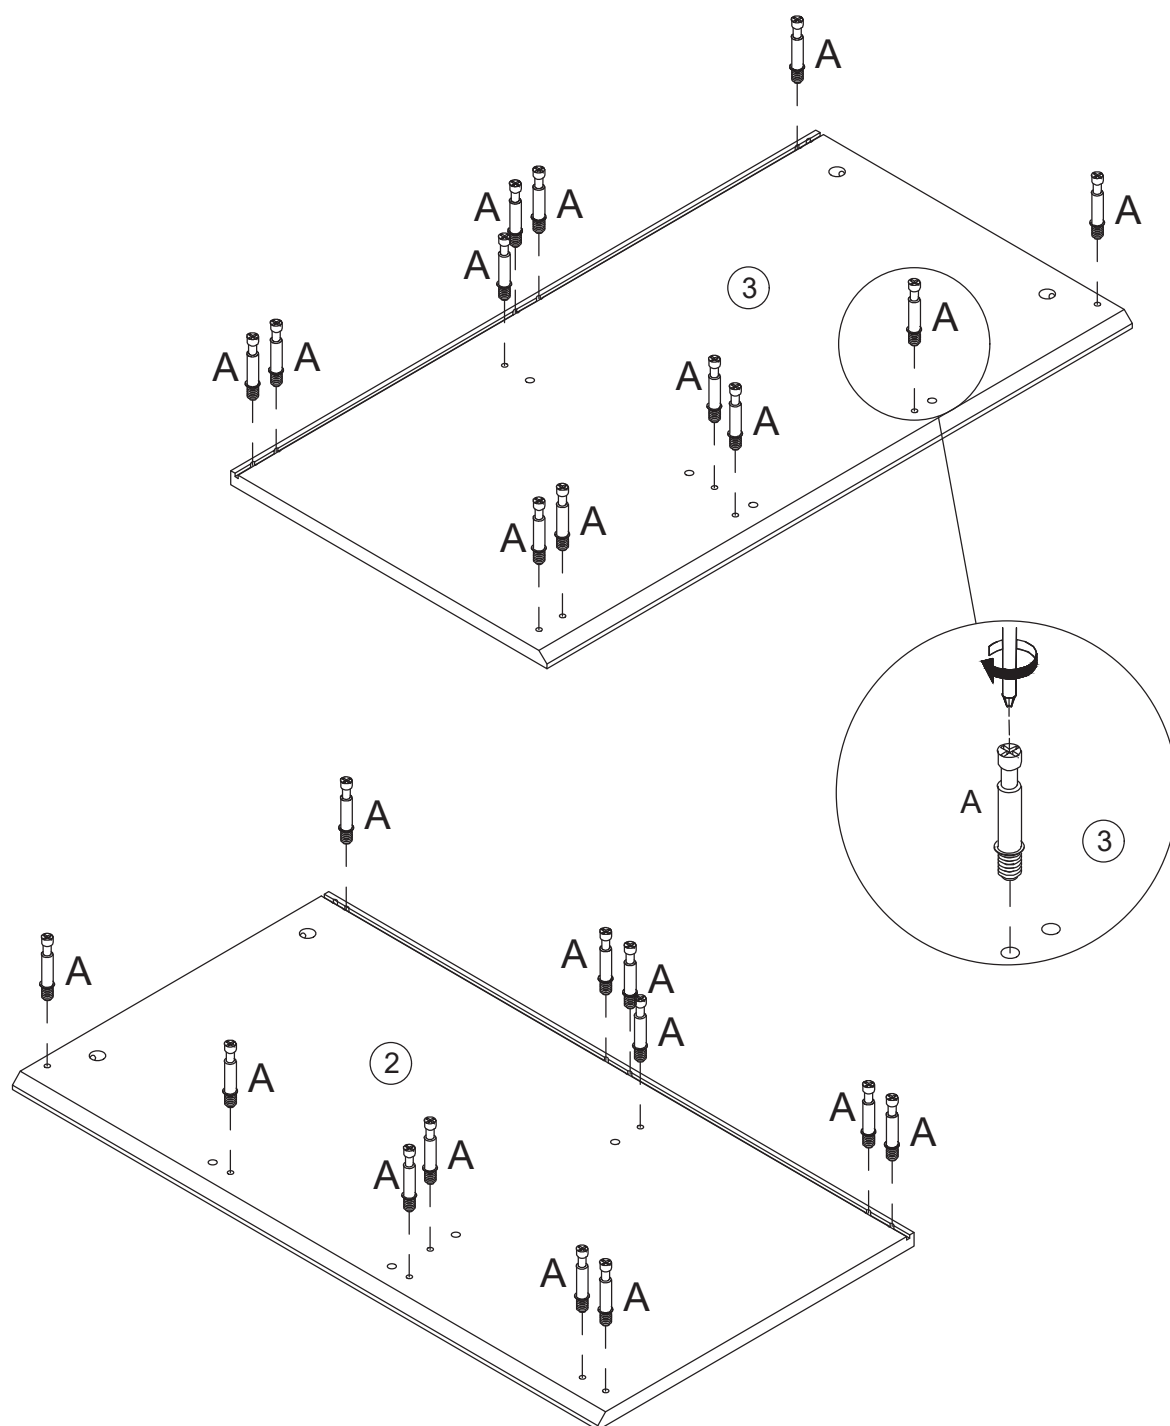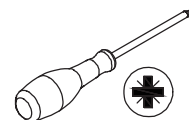


5

Ex12







Ø3.5x12mm

 Fx6



F-1

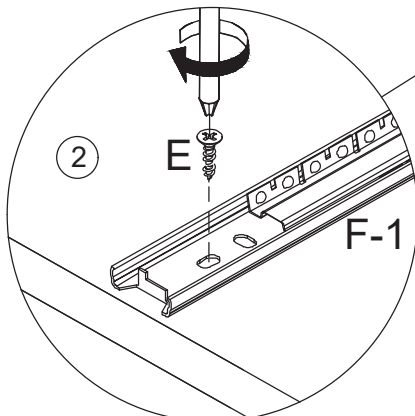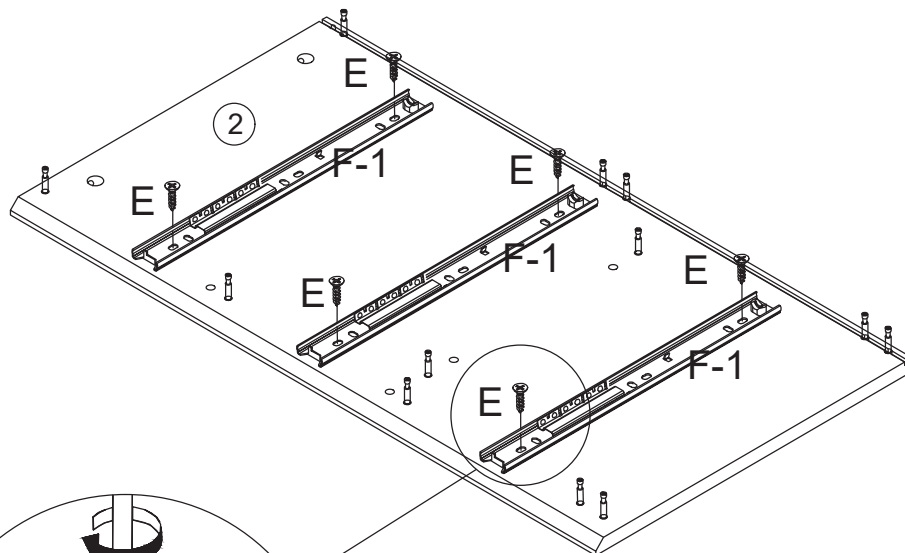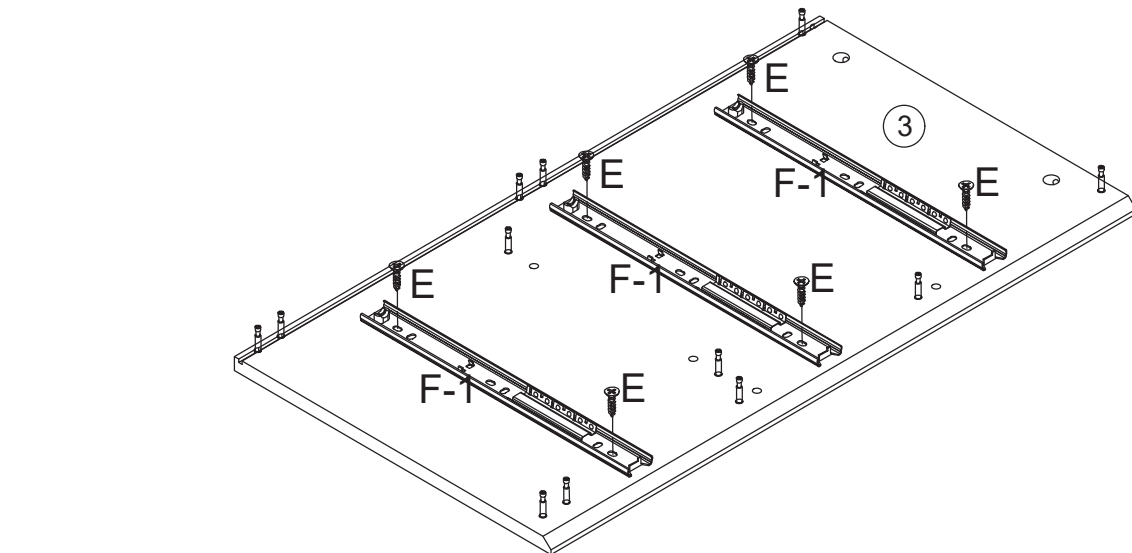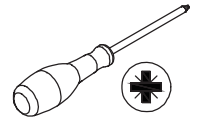    

6

Cx4







Ø6x30mm



Dx4



    Ø4x35mm

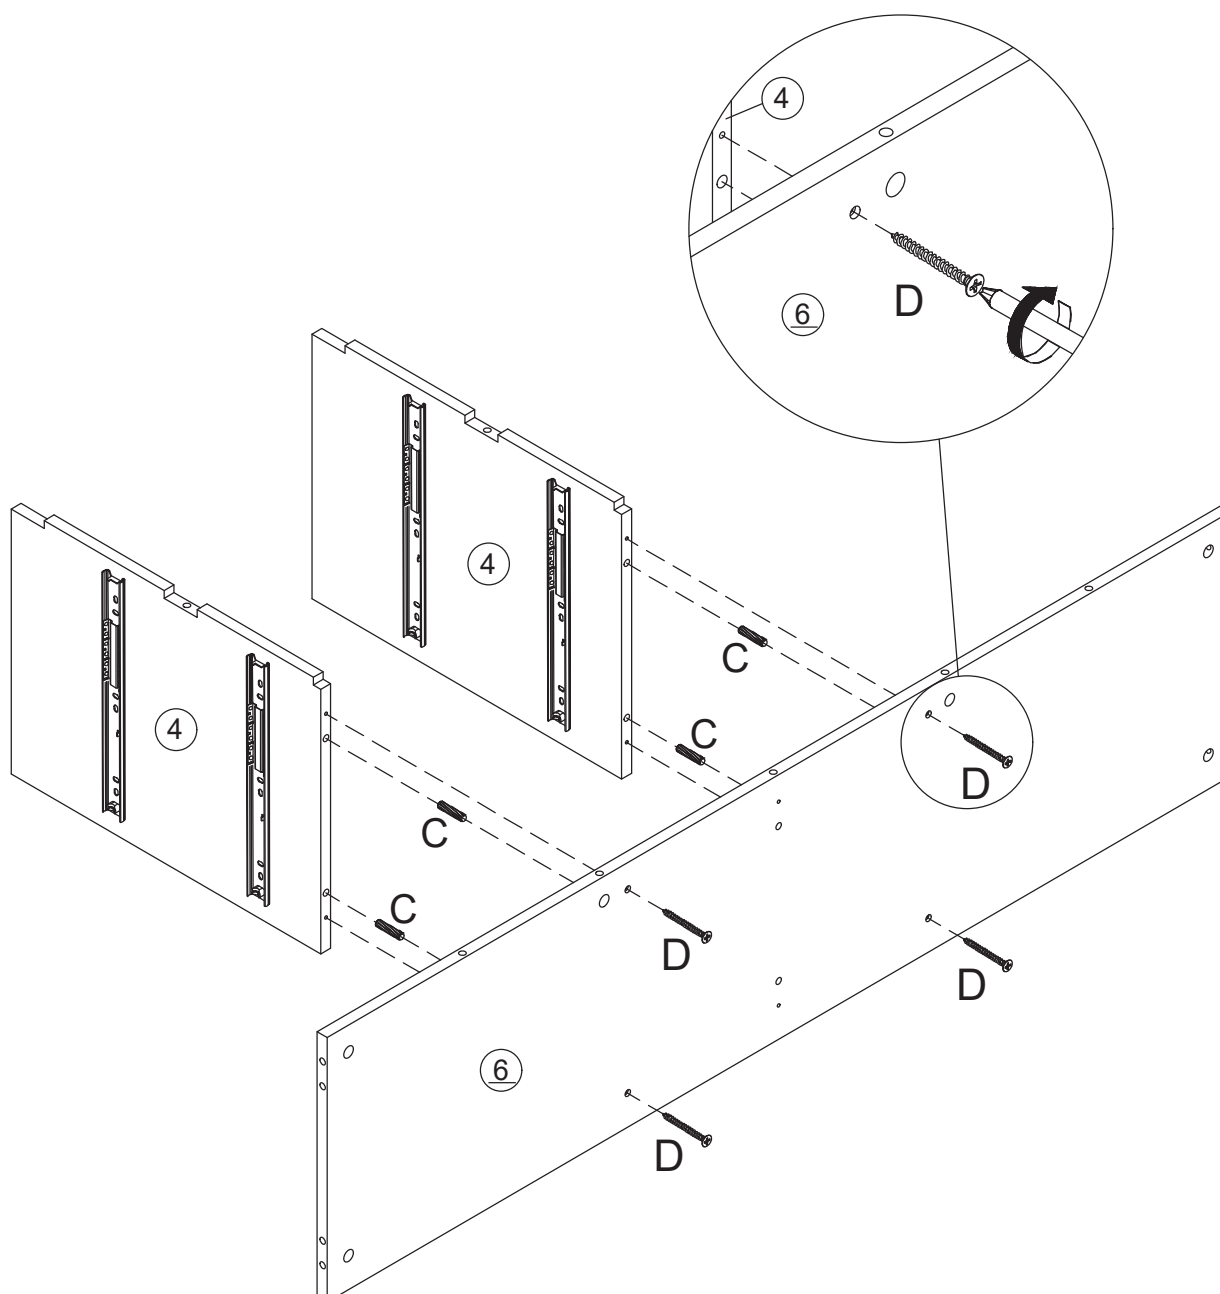


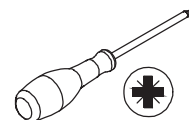


7

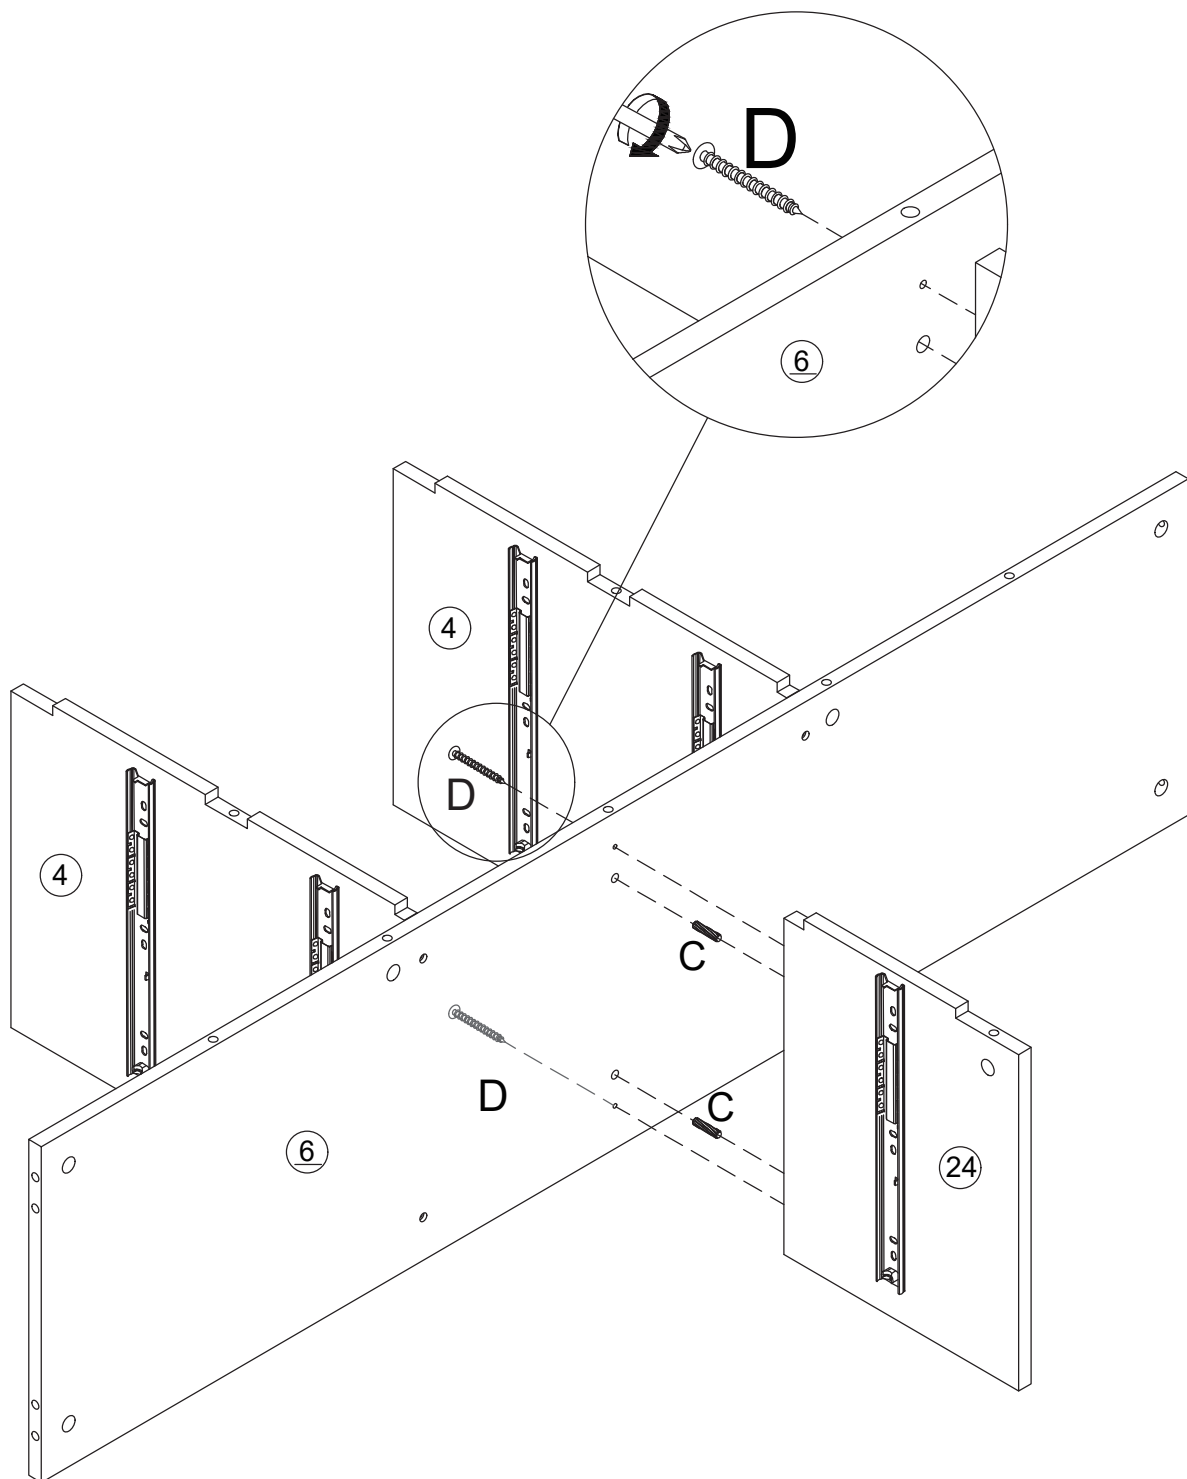  

8

  
 
 
Ax5
Ø6x35mm

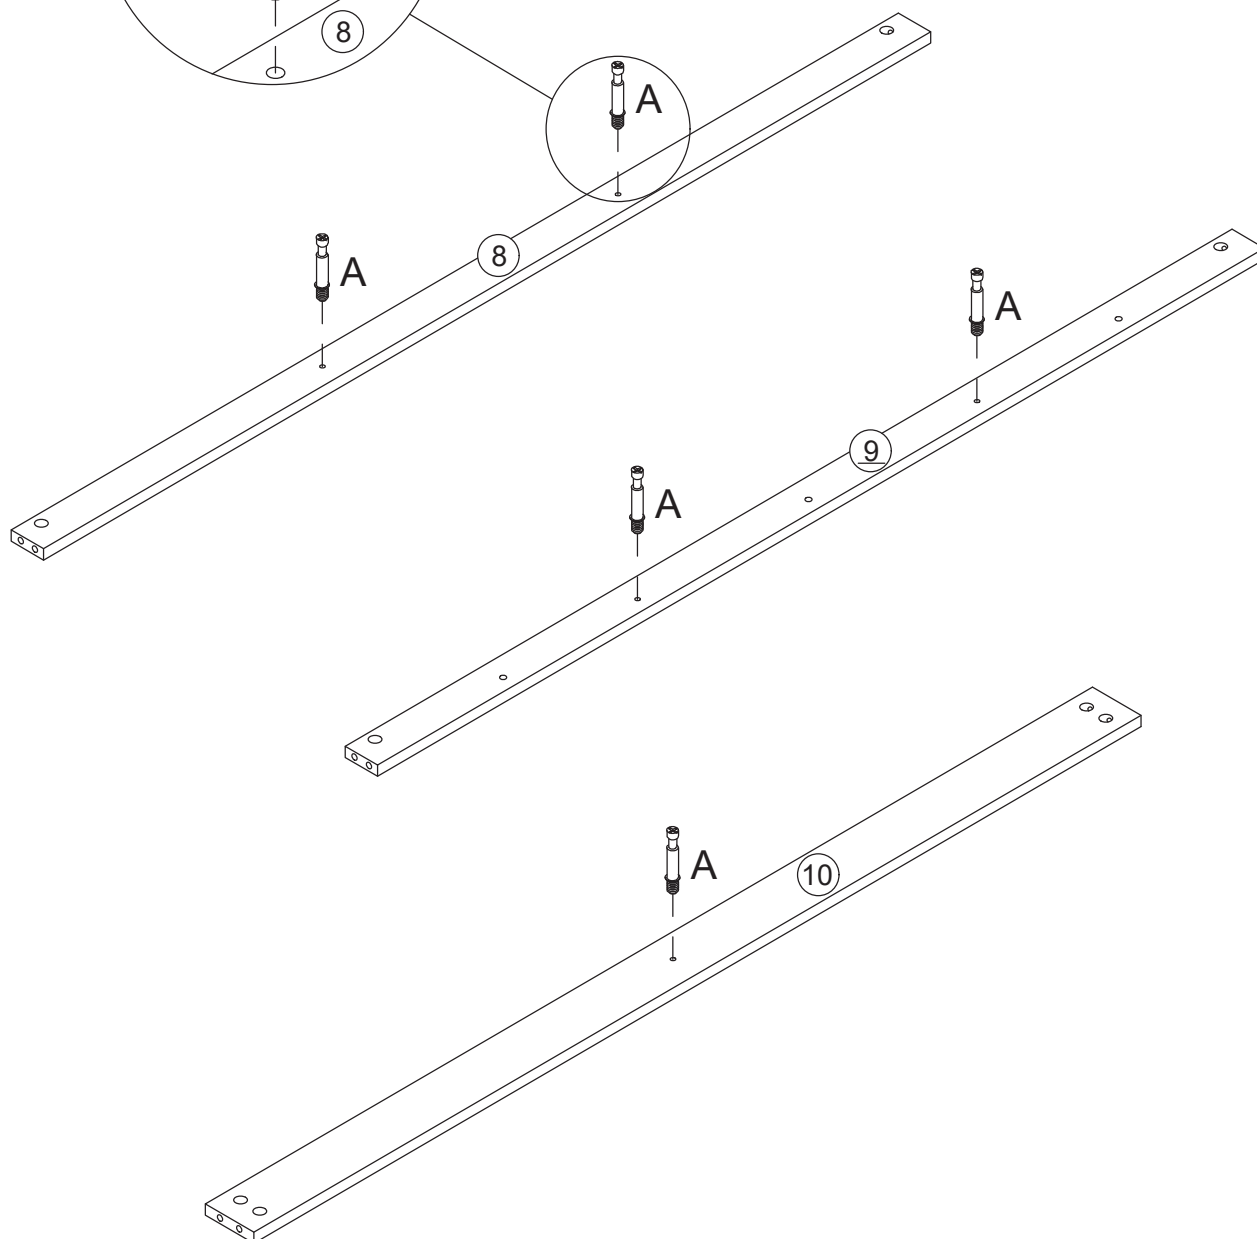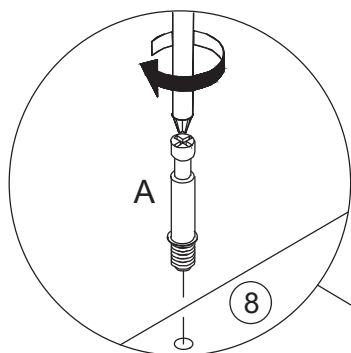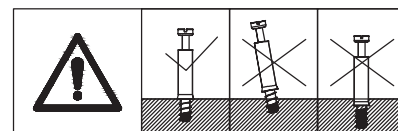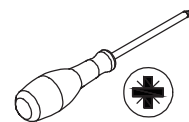




9

Bx1

   
 Ø15x10mm

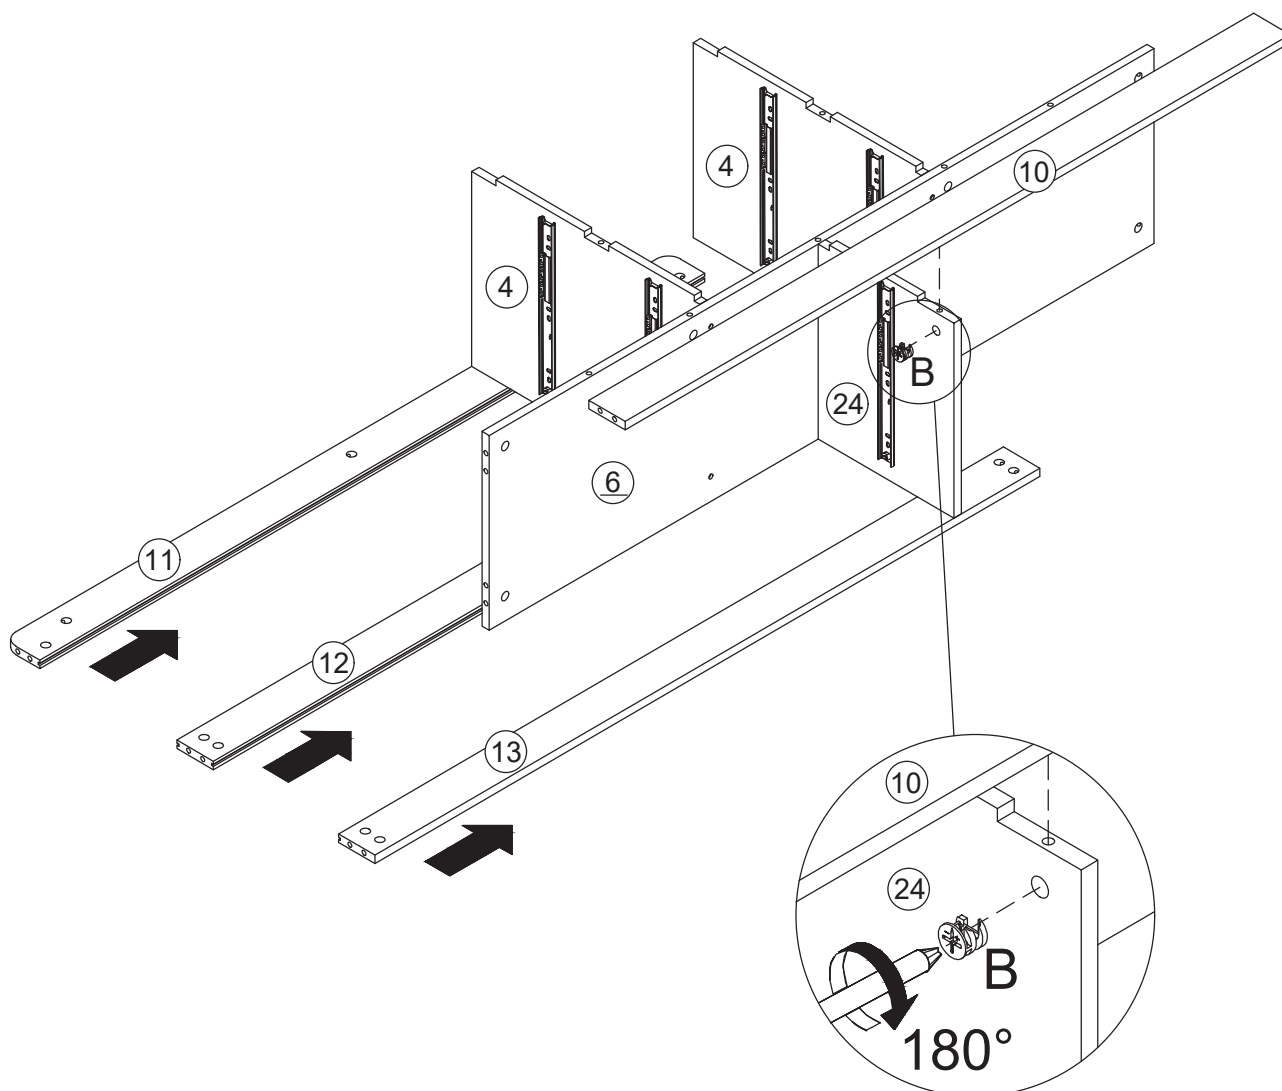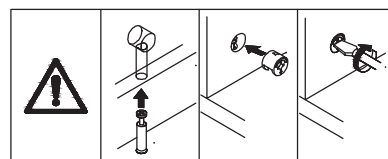
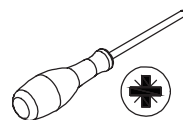


10

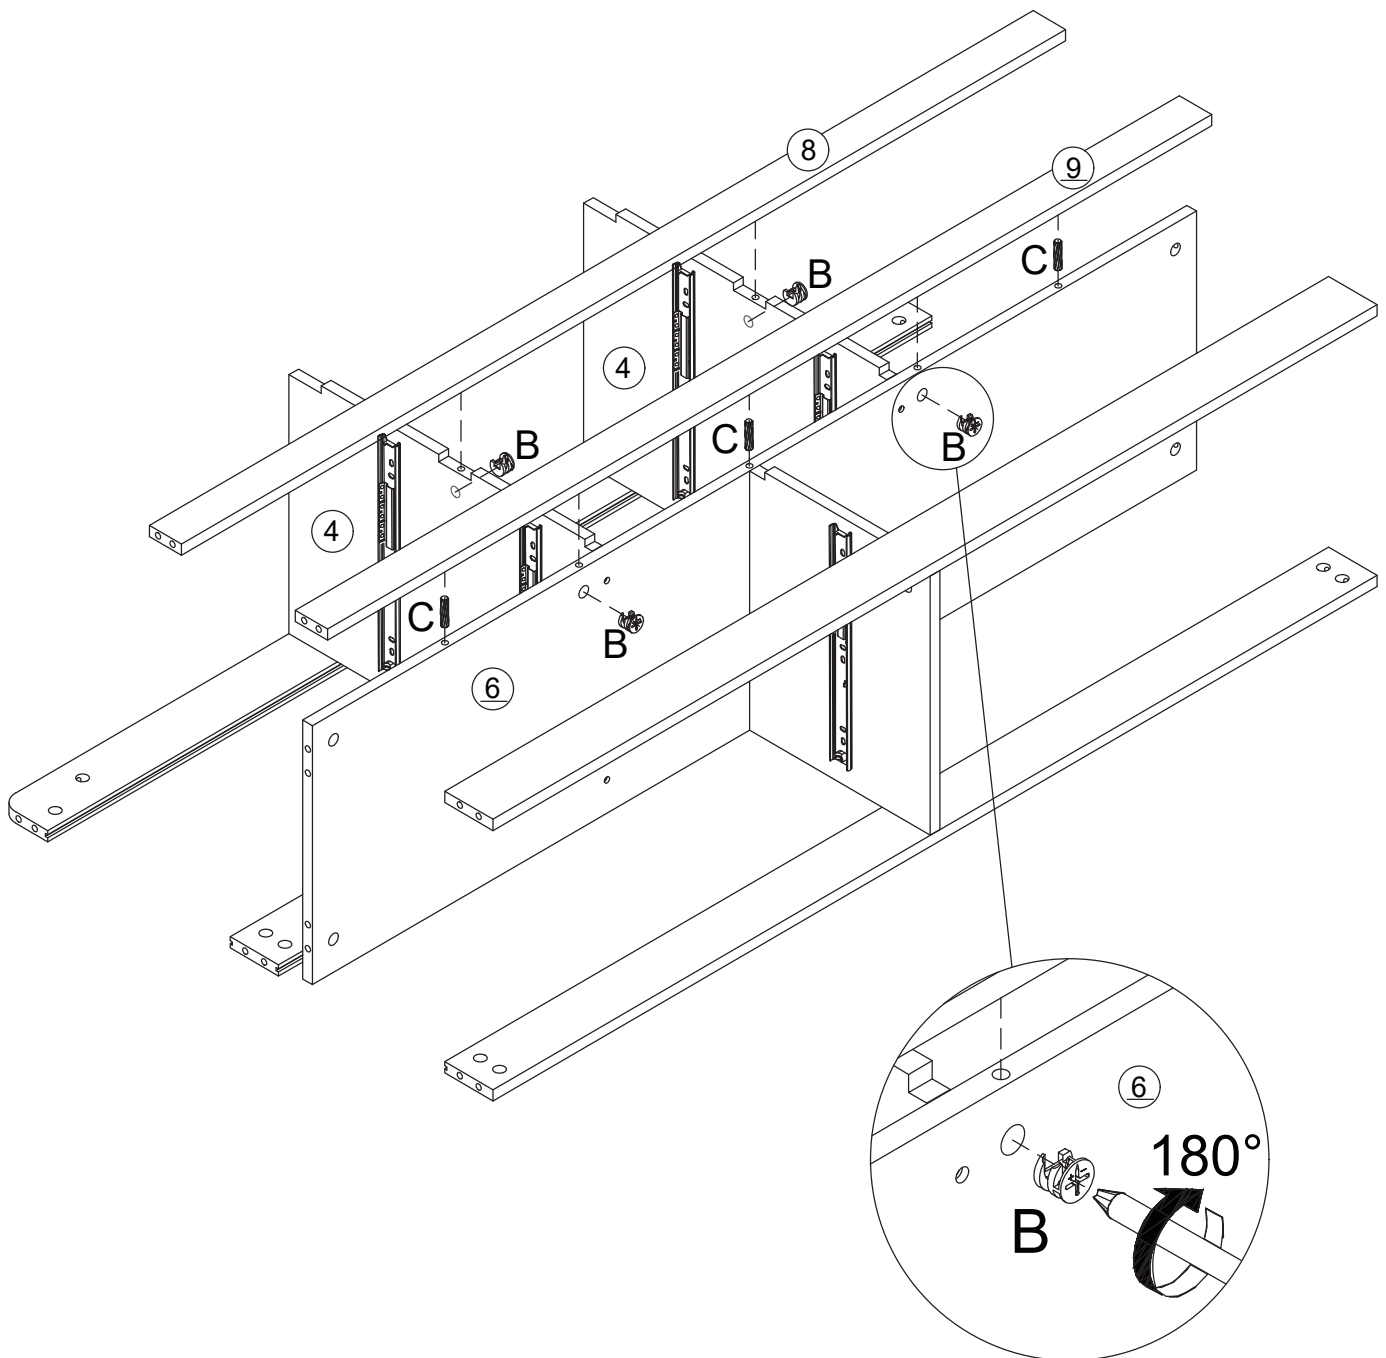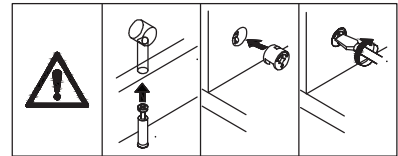   


11

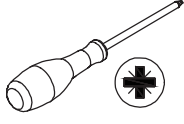 Bx12  Ø15x10mm	Cx5  Ø6x30mm	
---	---	--

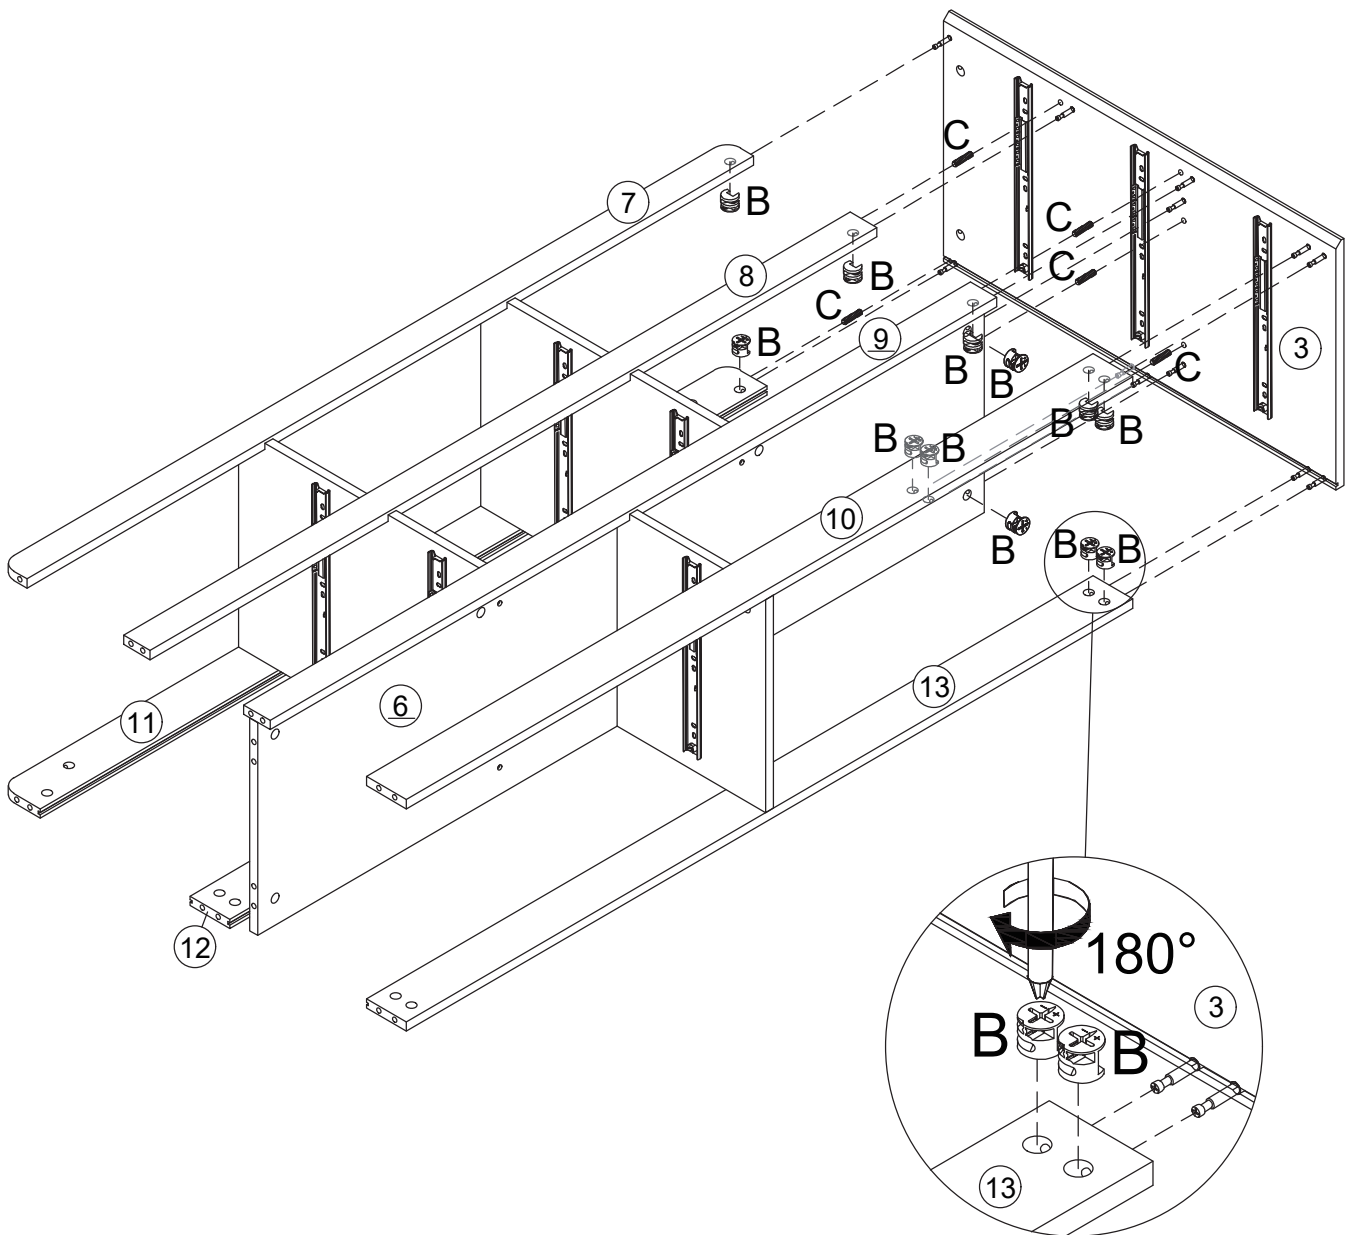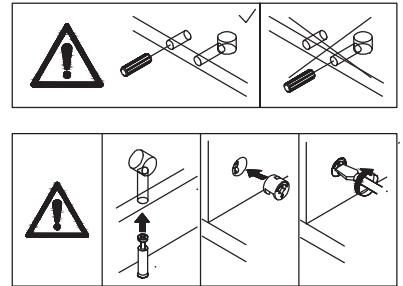  

12

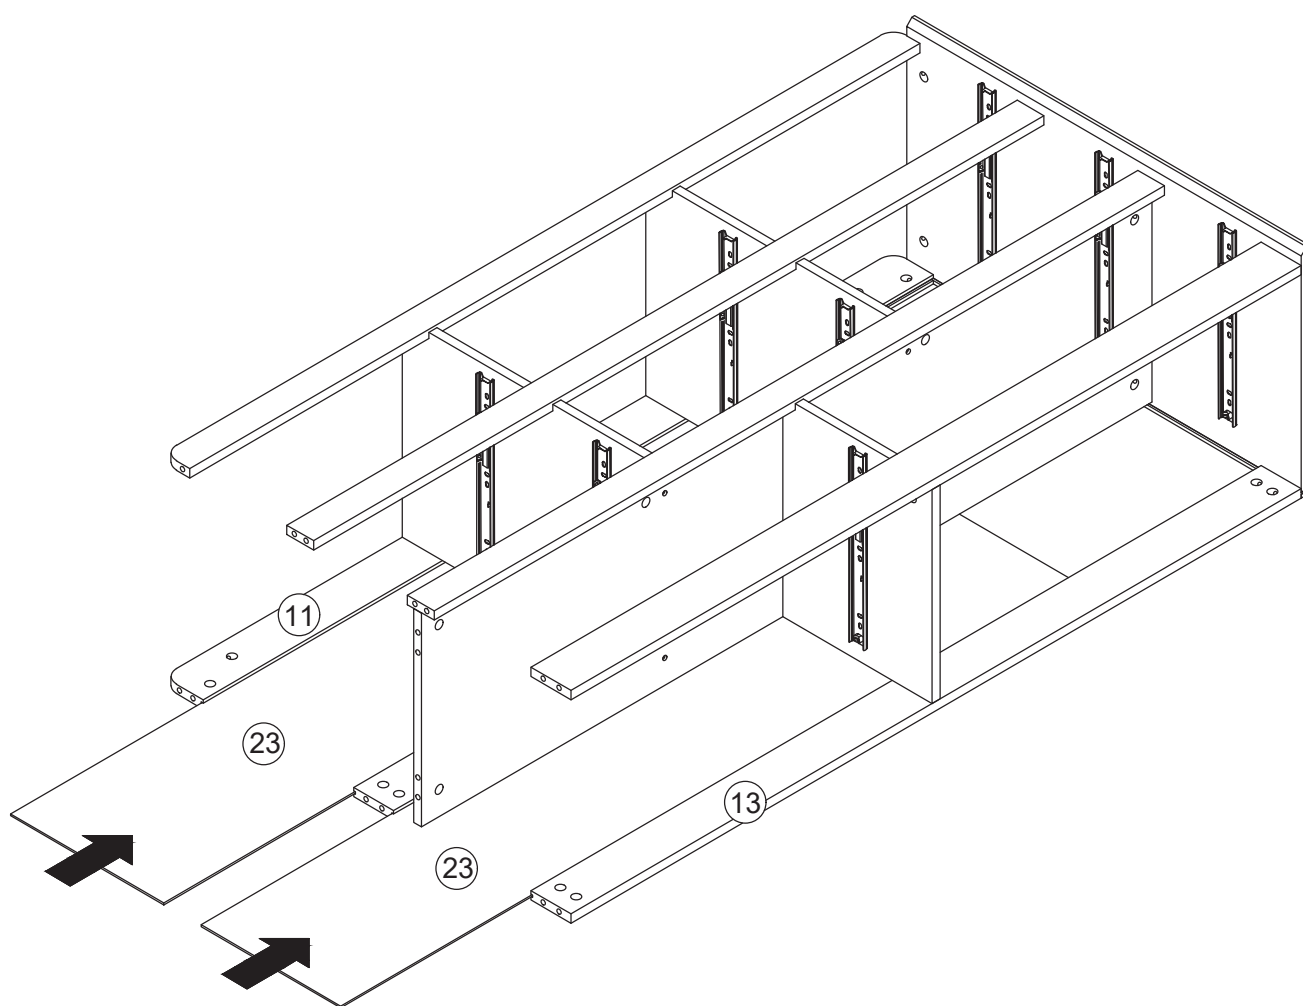 

13

Bx12










Ø15x10mm




Cx5



       Ø6x30mm

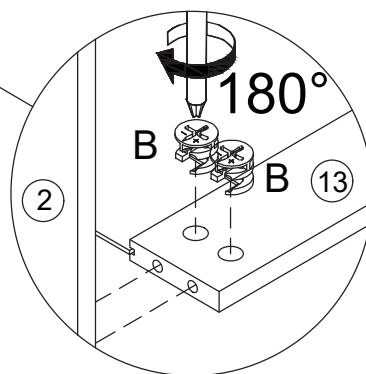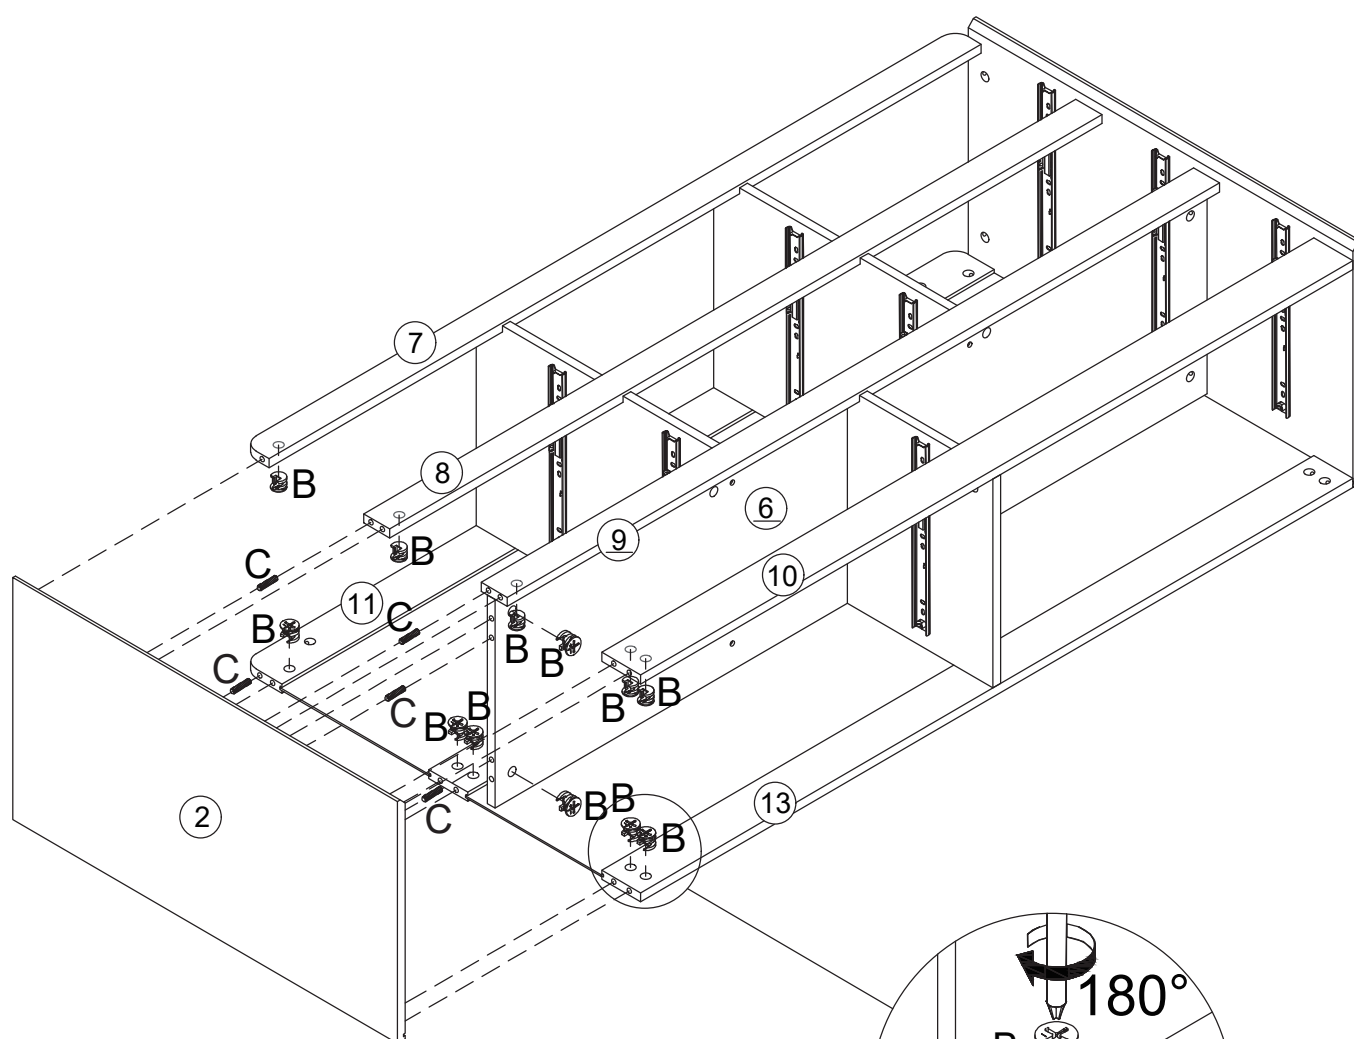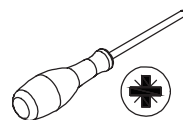

14

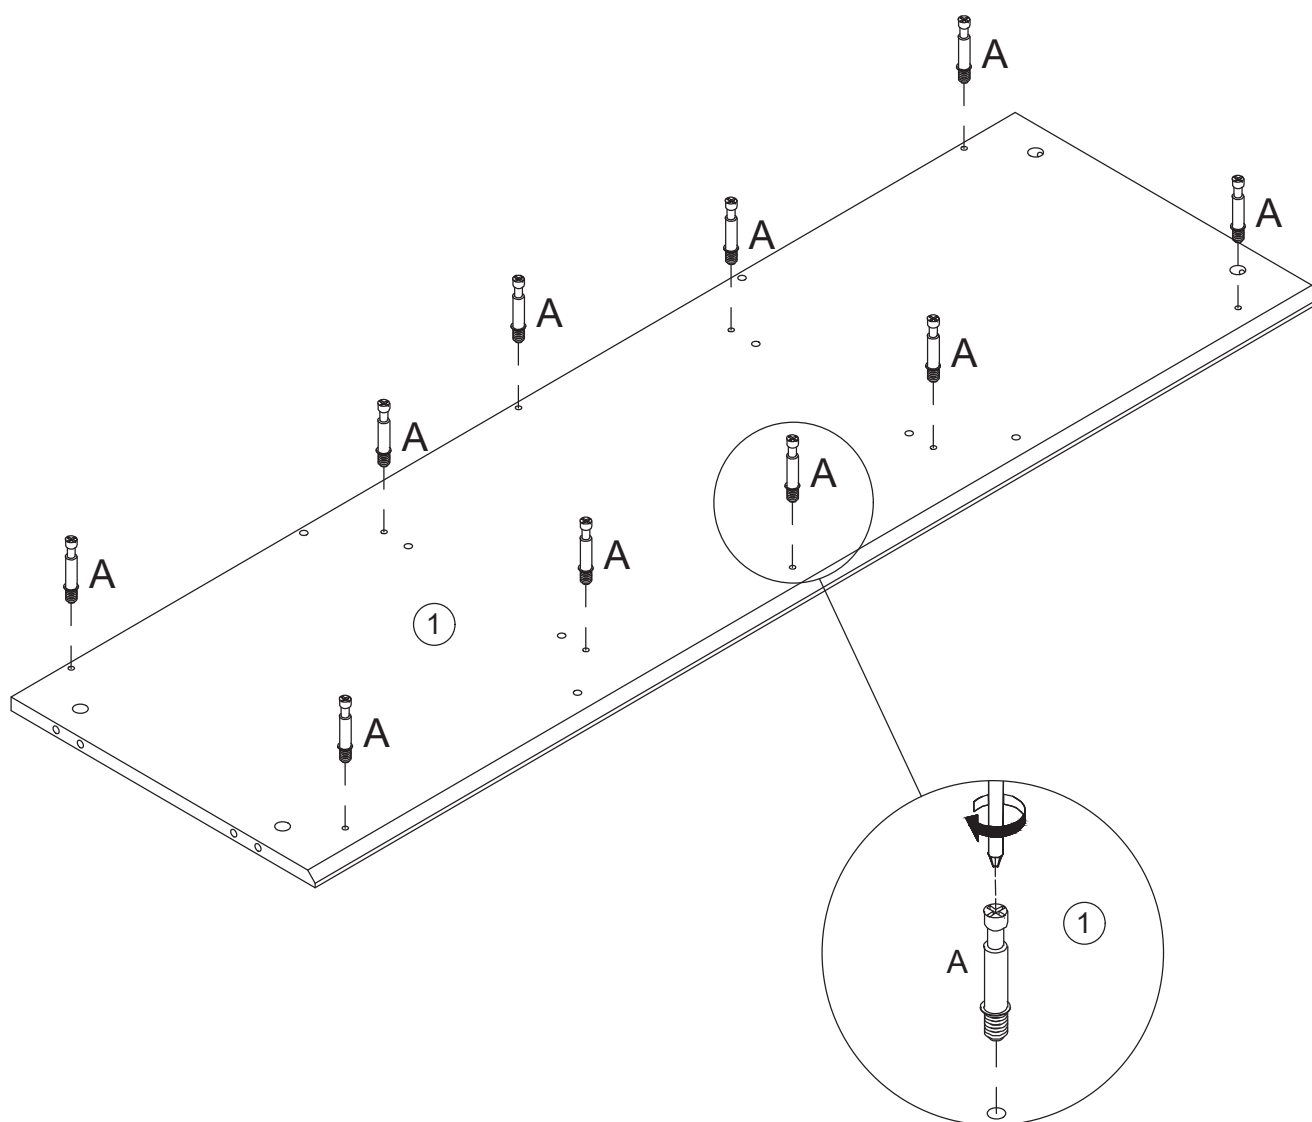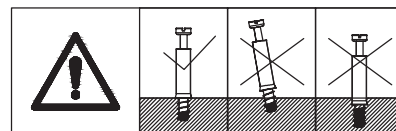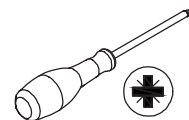   

15

Bx4









Ø15x10mm

Cx4



      Ø6x30mm

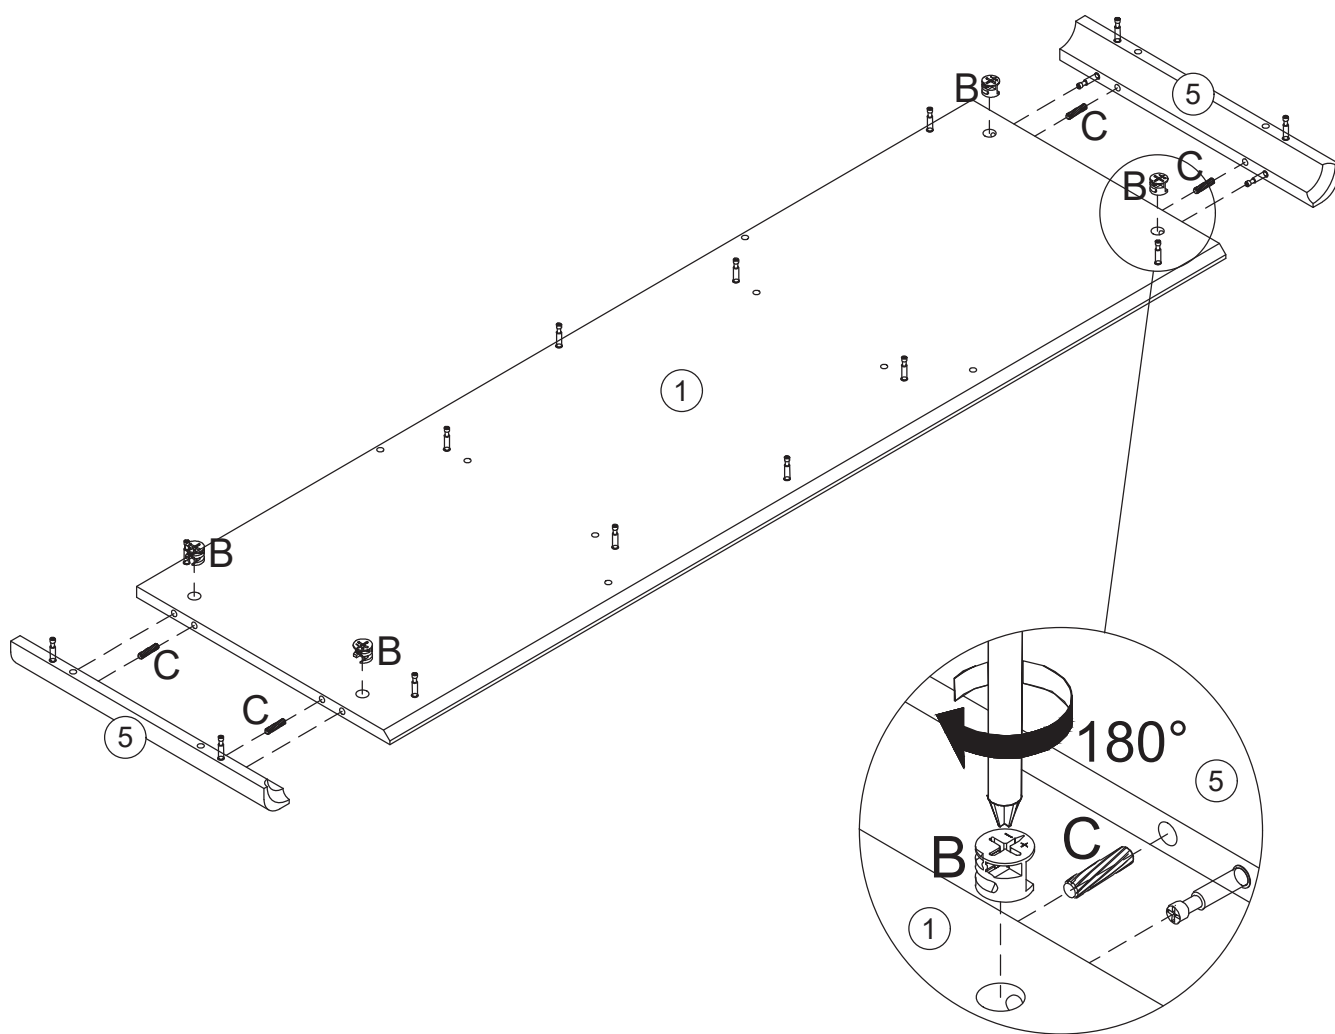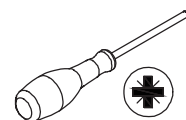

16

Bx14











Ø15x10mm

Cx12



        Ø6x30mm

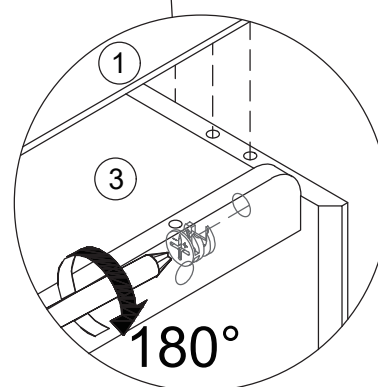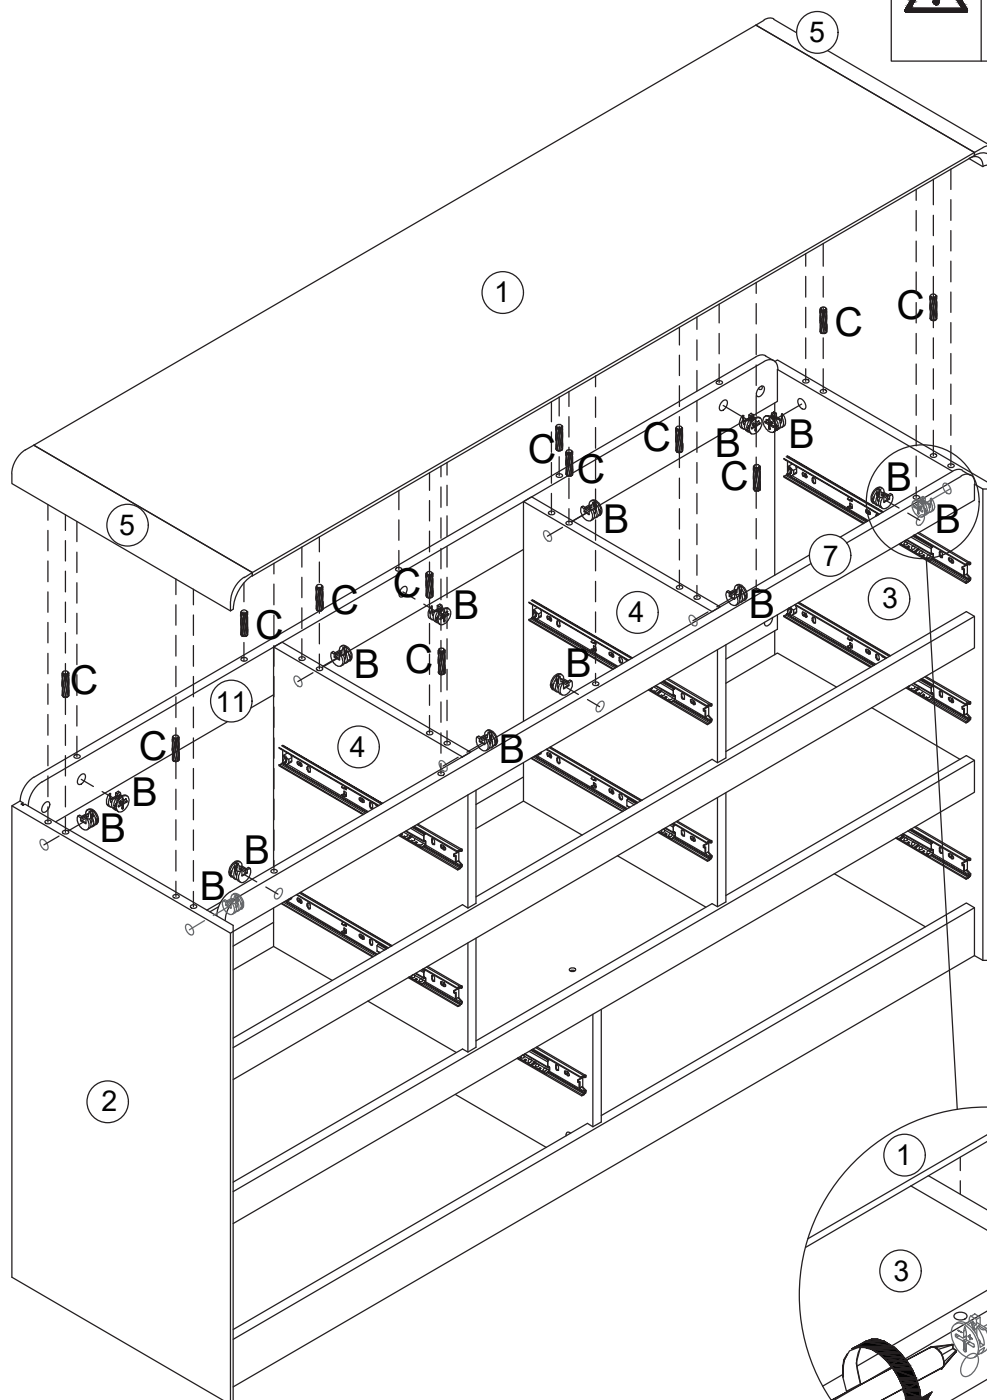
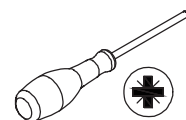


17

Dx30






  Ø4x35mm

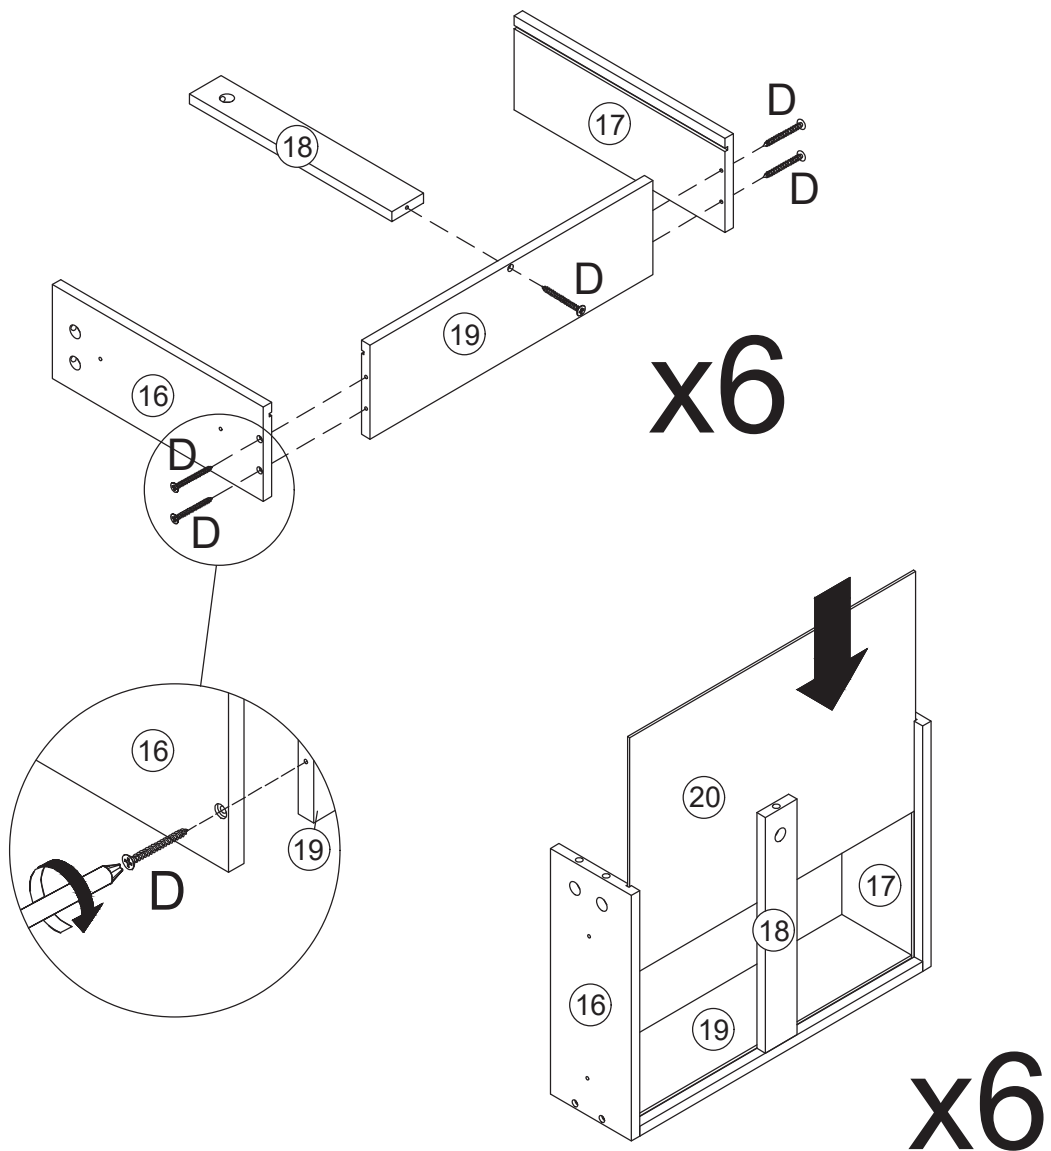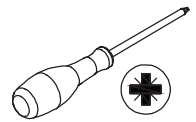

18

   Ax30
Ø6x35mm

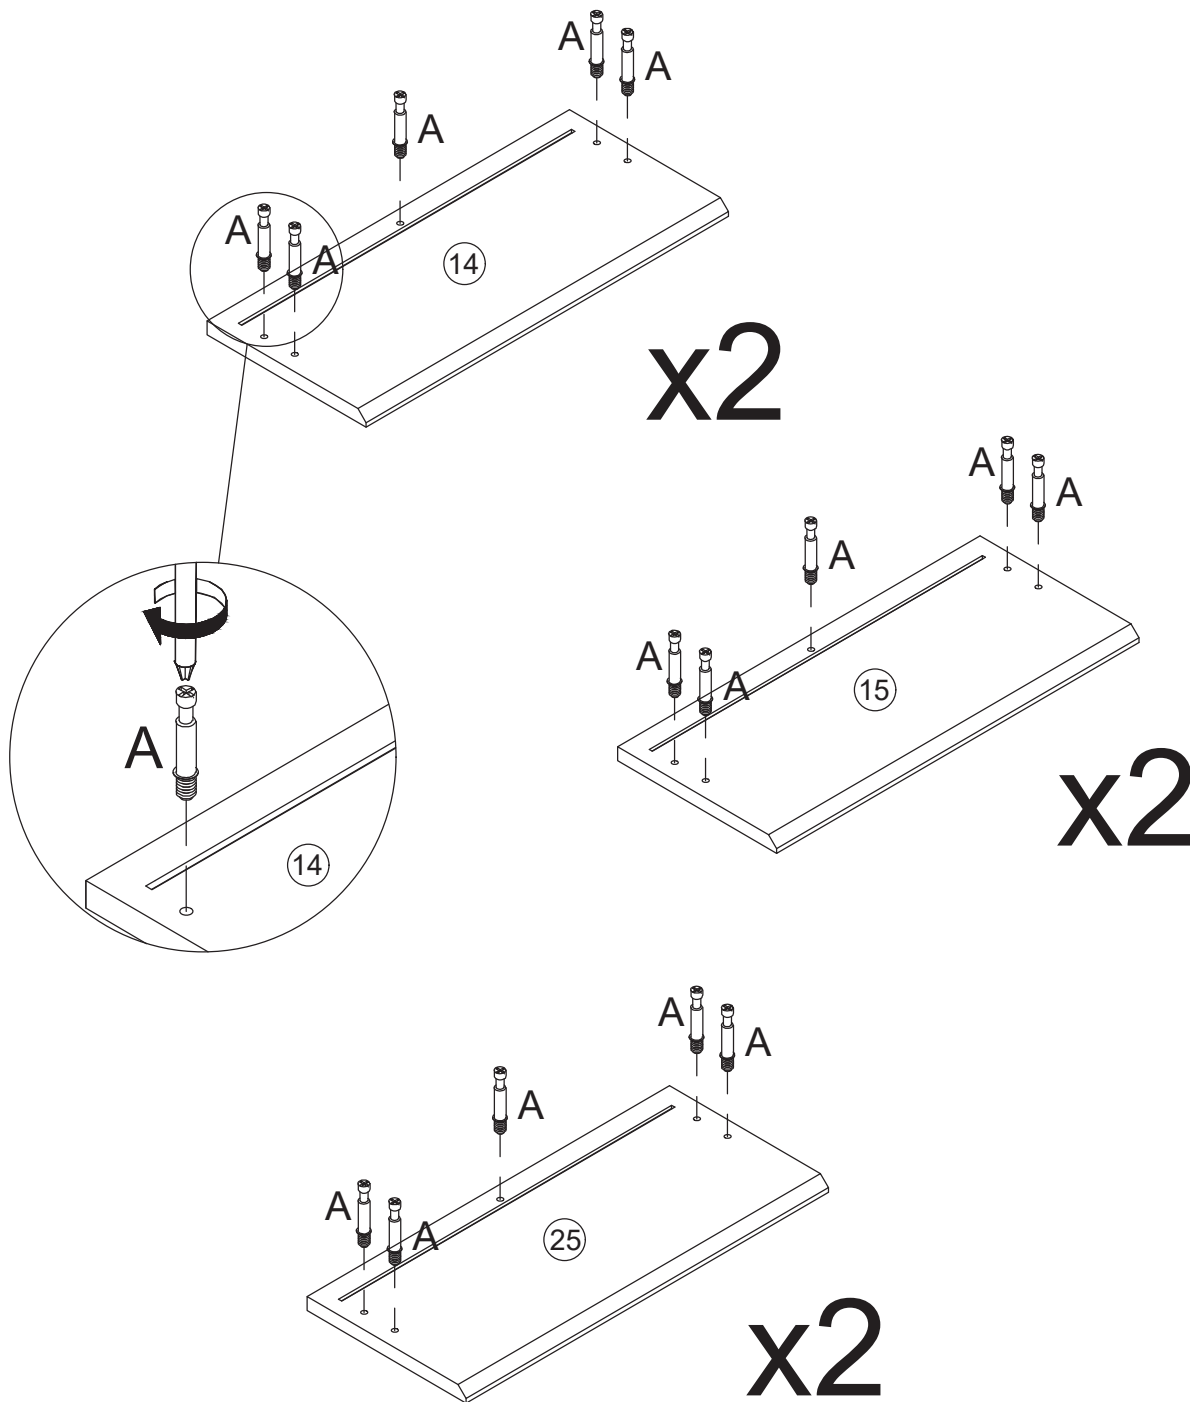
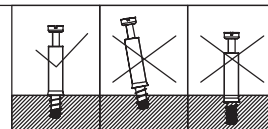
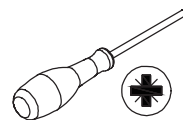


19


Bx30



   
Ø15x10mm

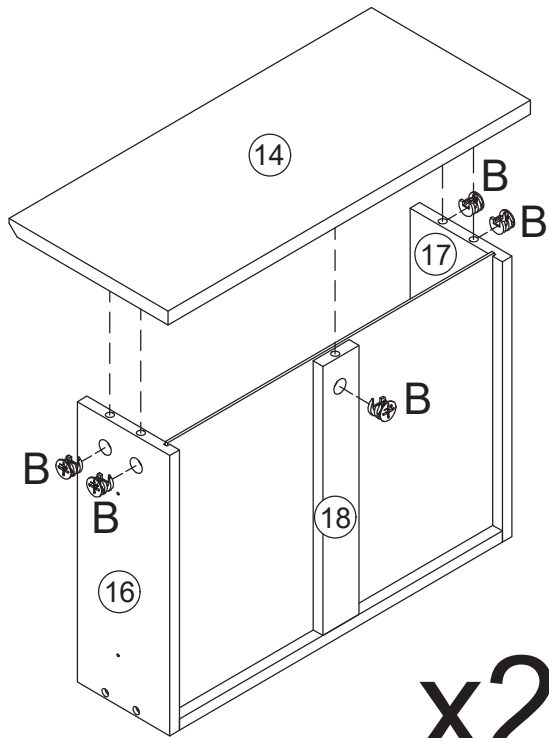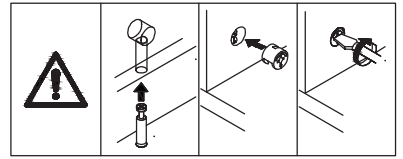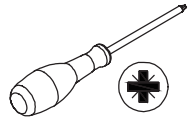


x2

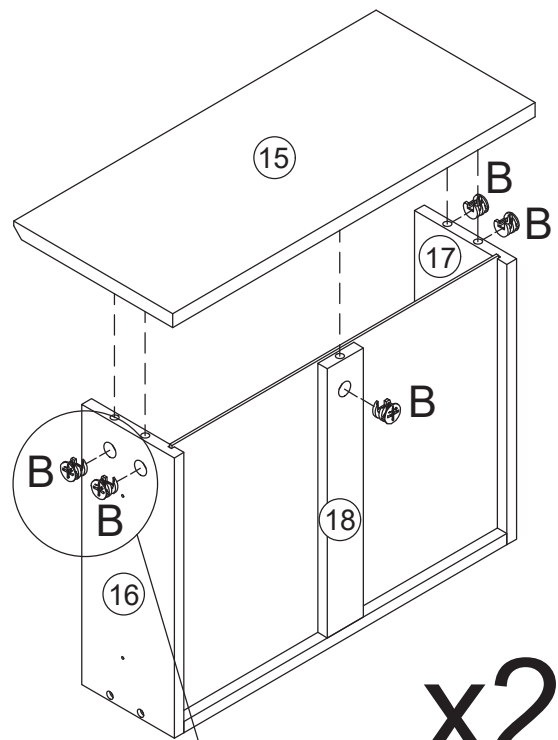 

x2

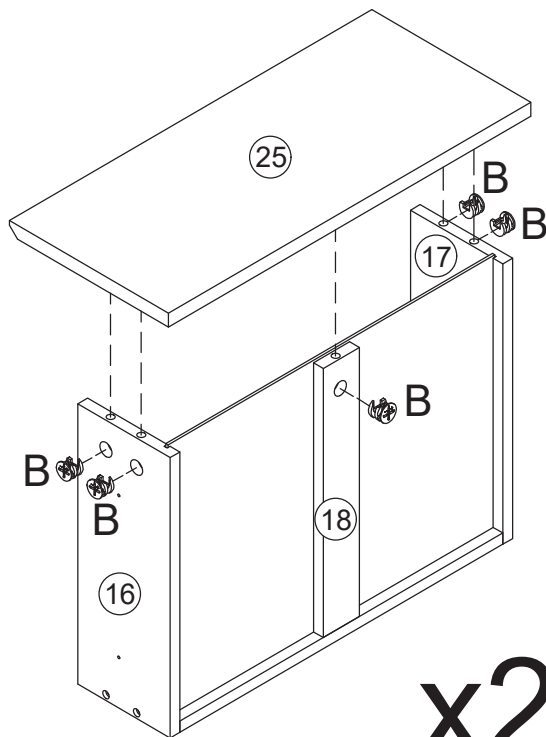 

x2


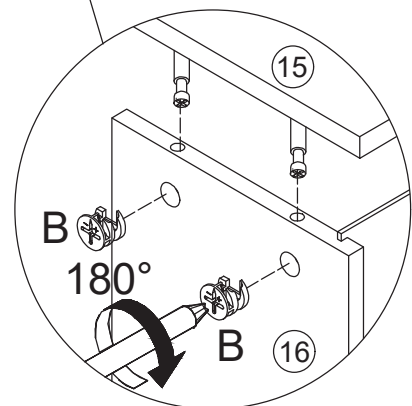 


20







Dx10







 
 
Ø4x35mm

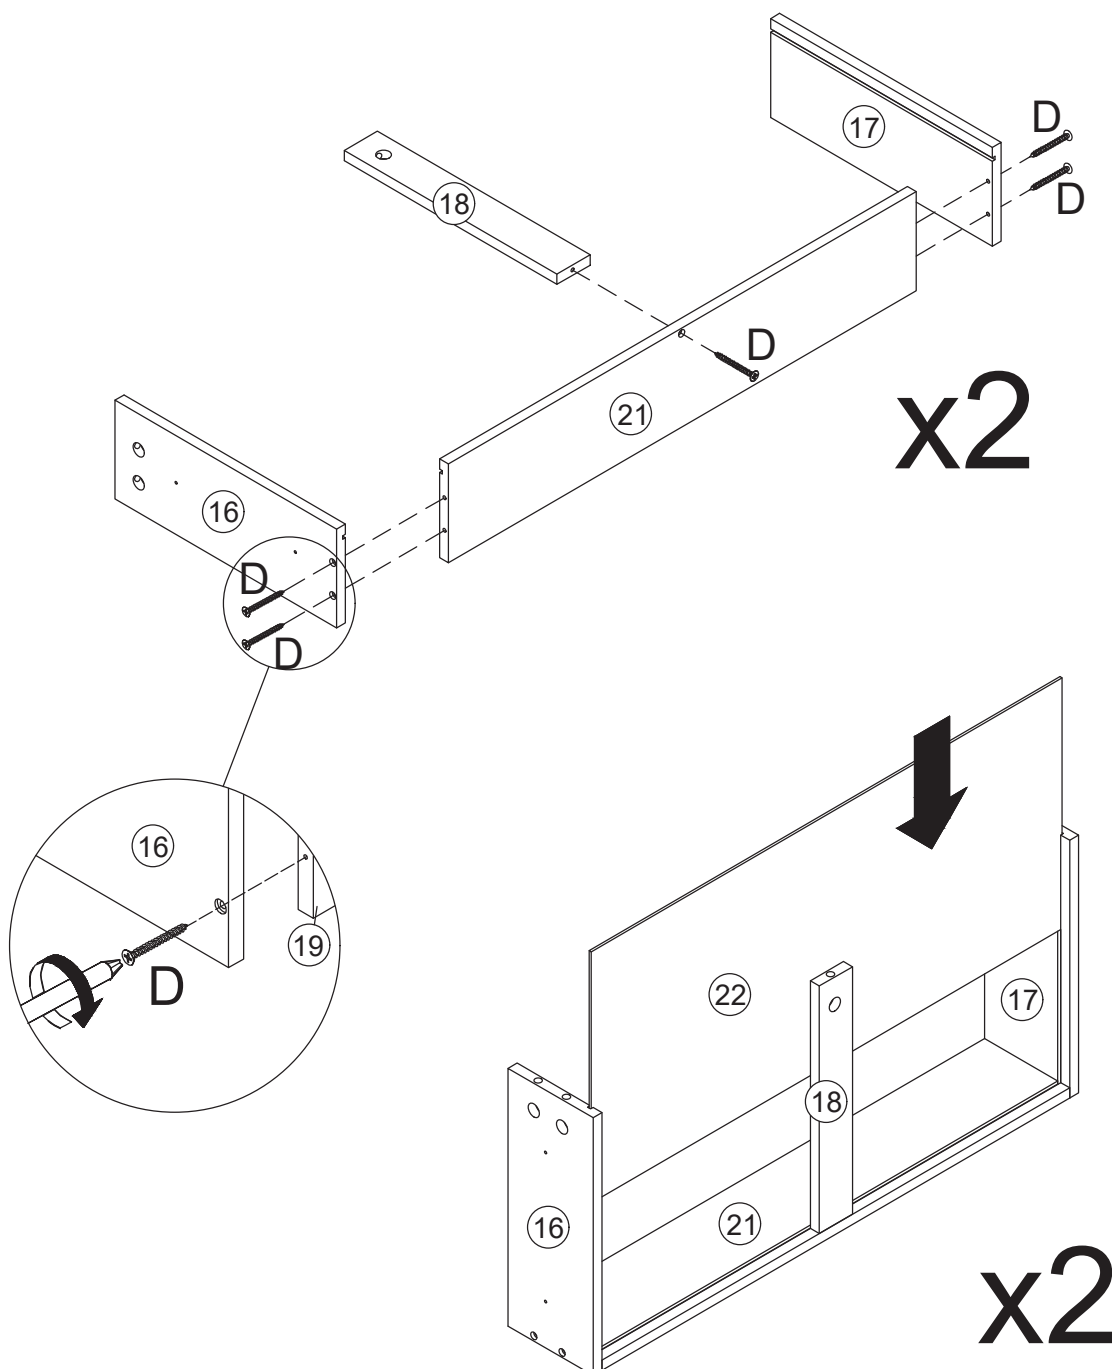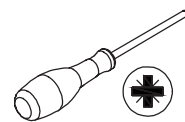

21

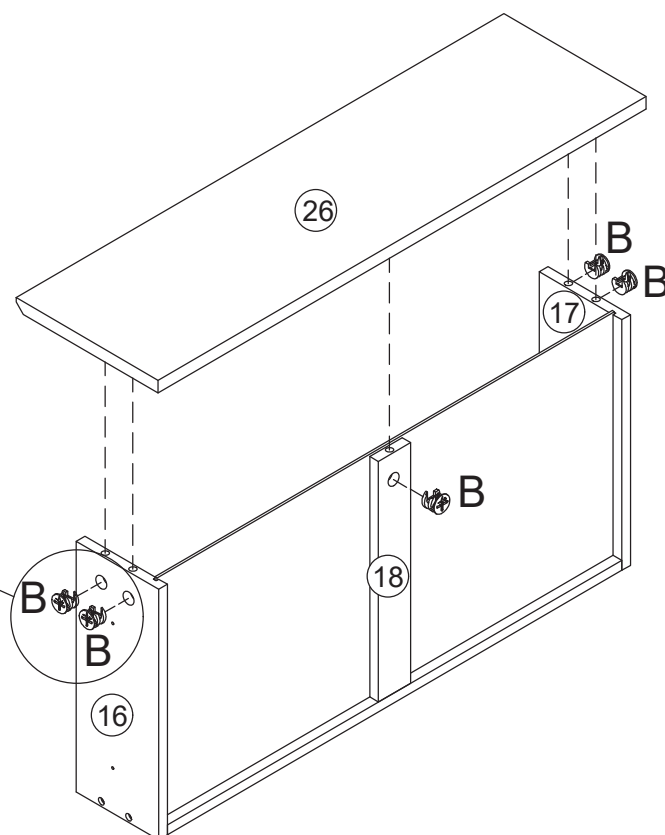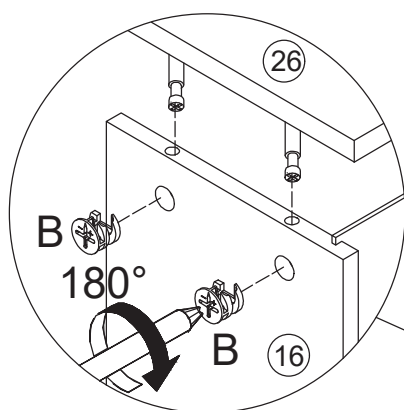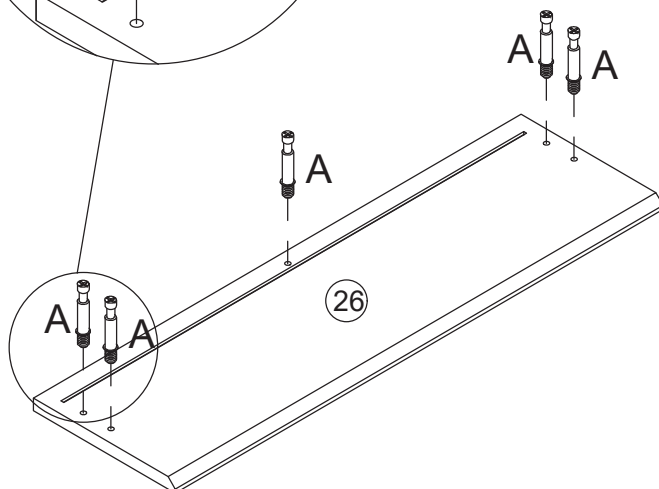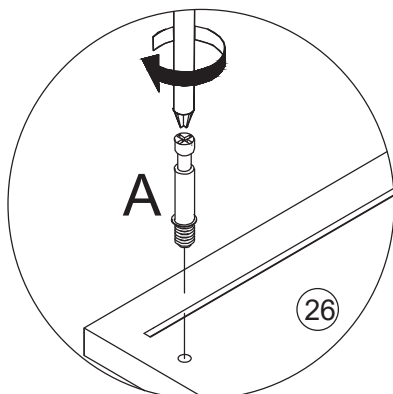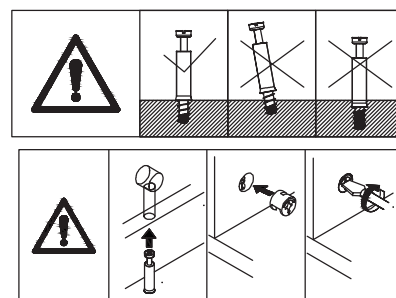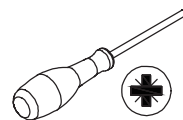      

22

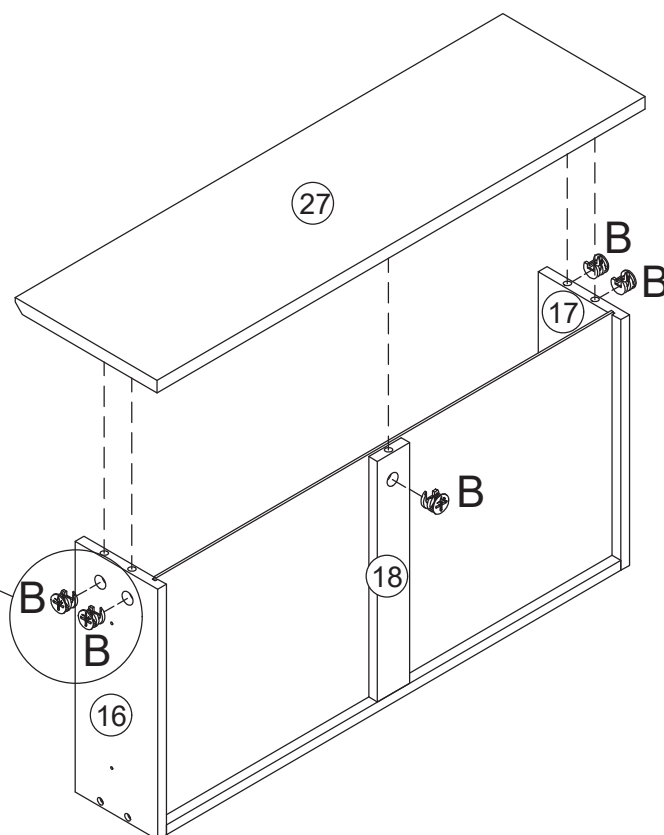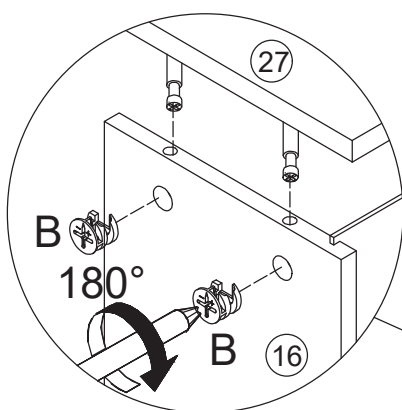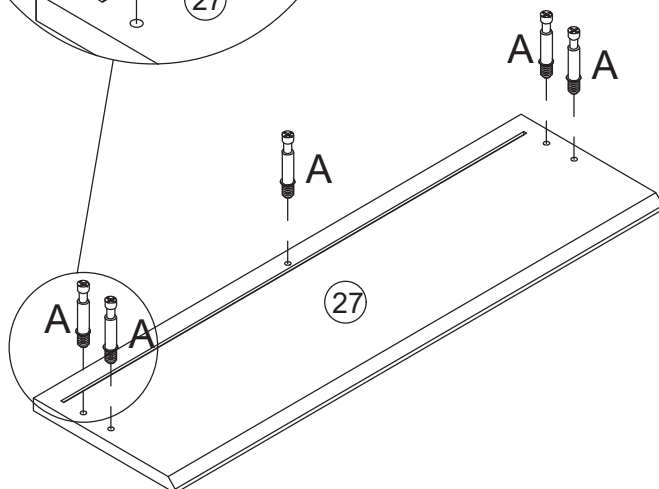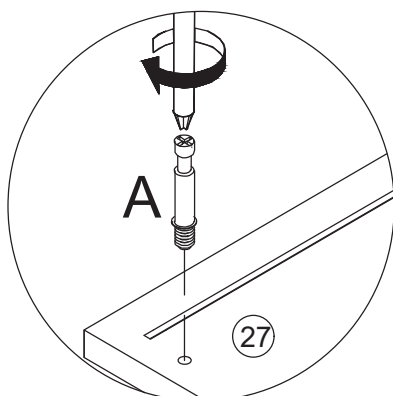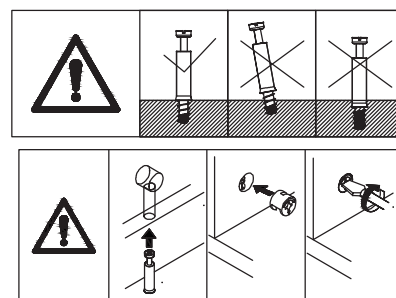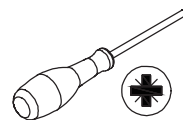      


23

Ex24








Ø3.5x12mm

 Fx12

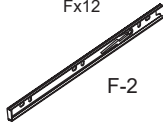

F-2

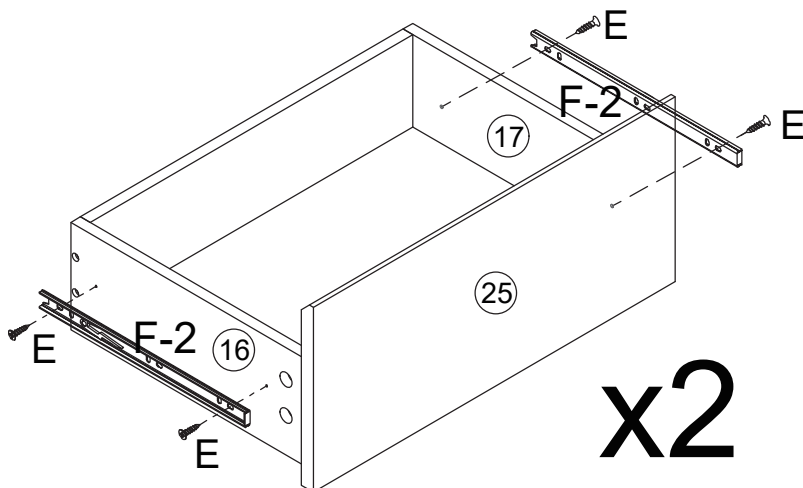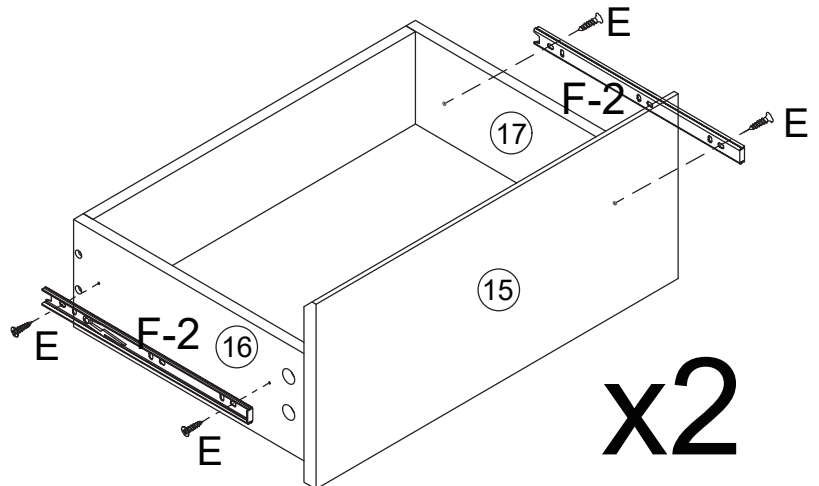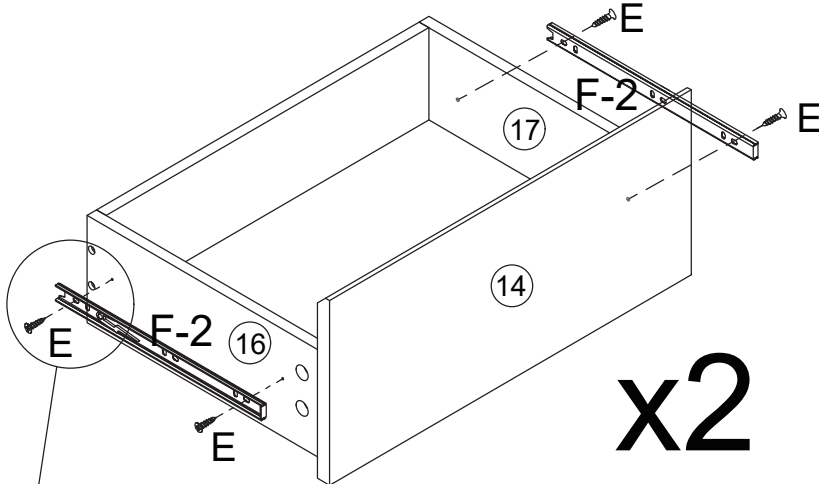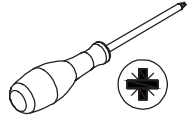     


24

Ex8








Ø3.5x12mm

 
Fx4

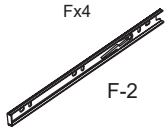


F-2

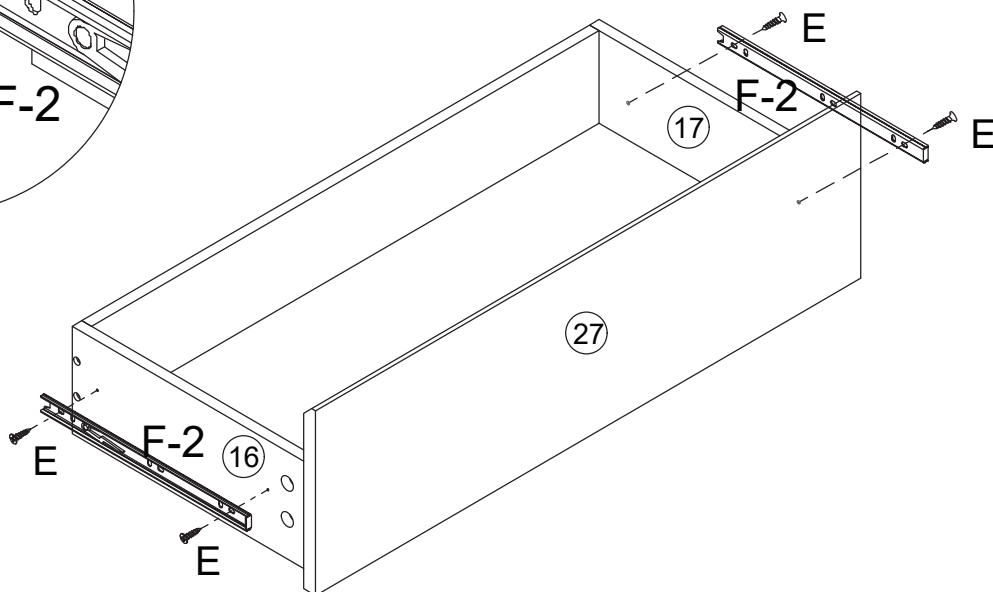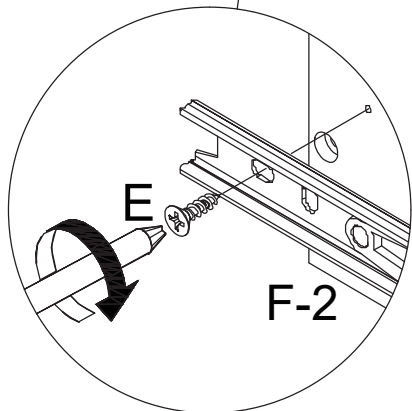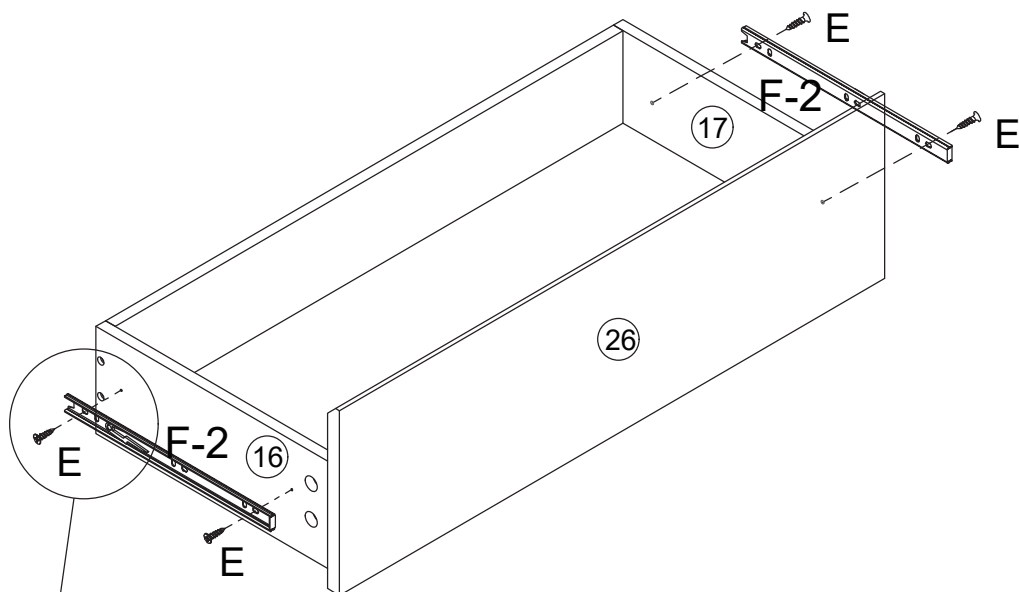     







25

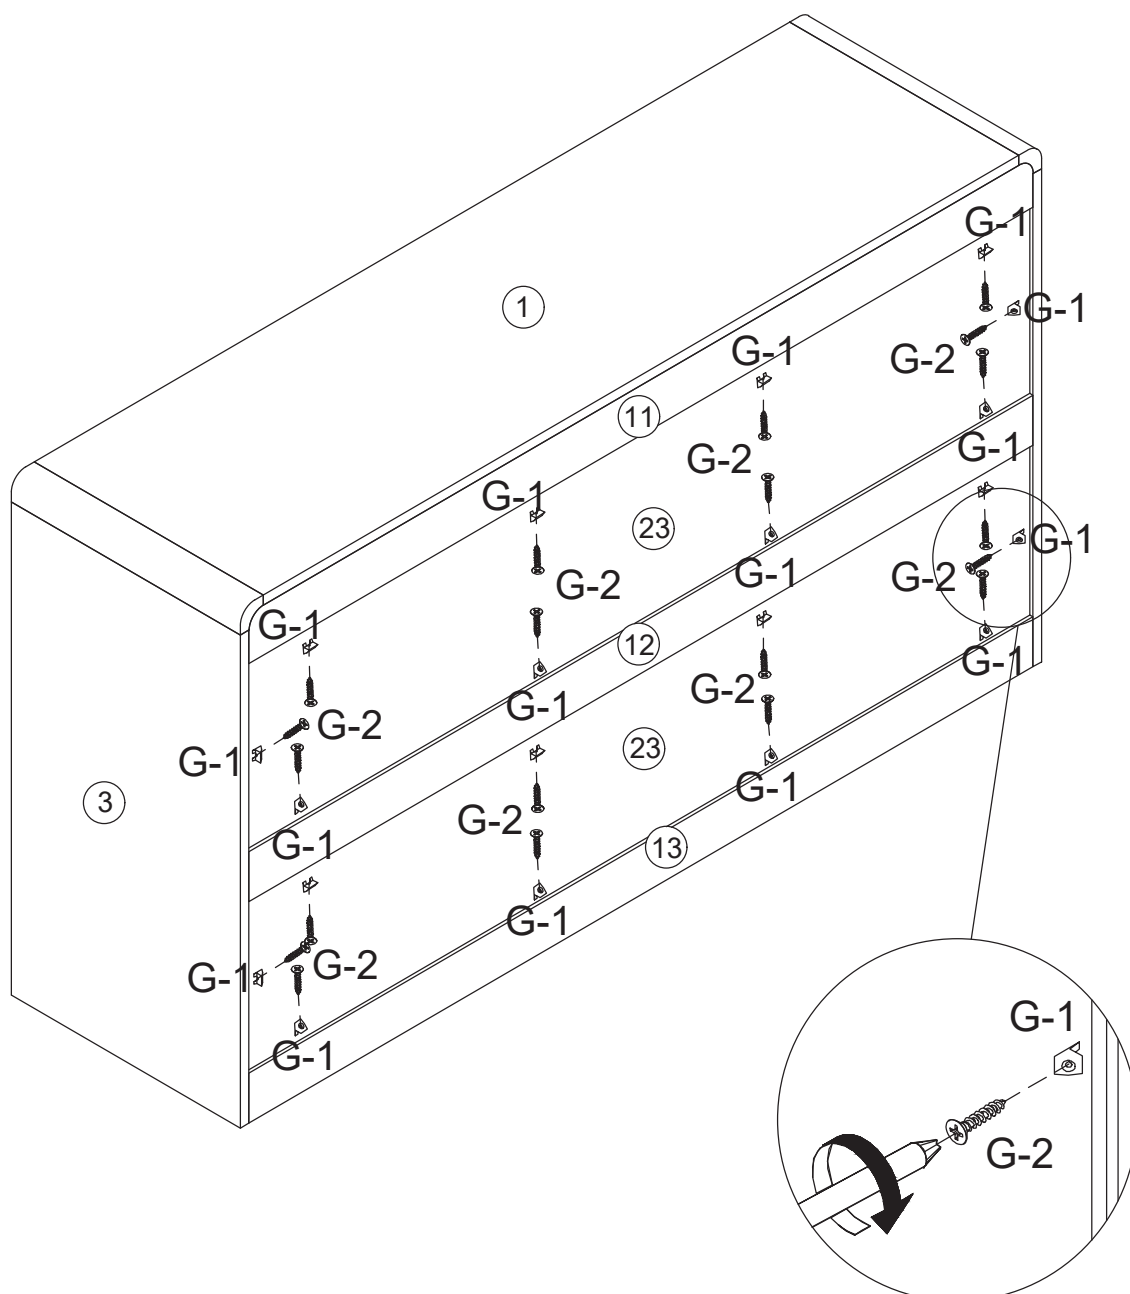 

26

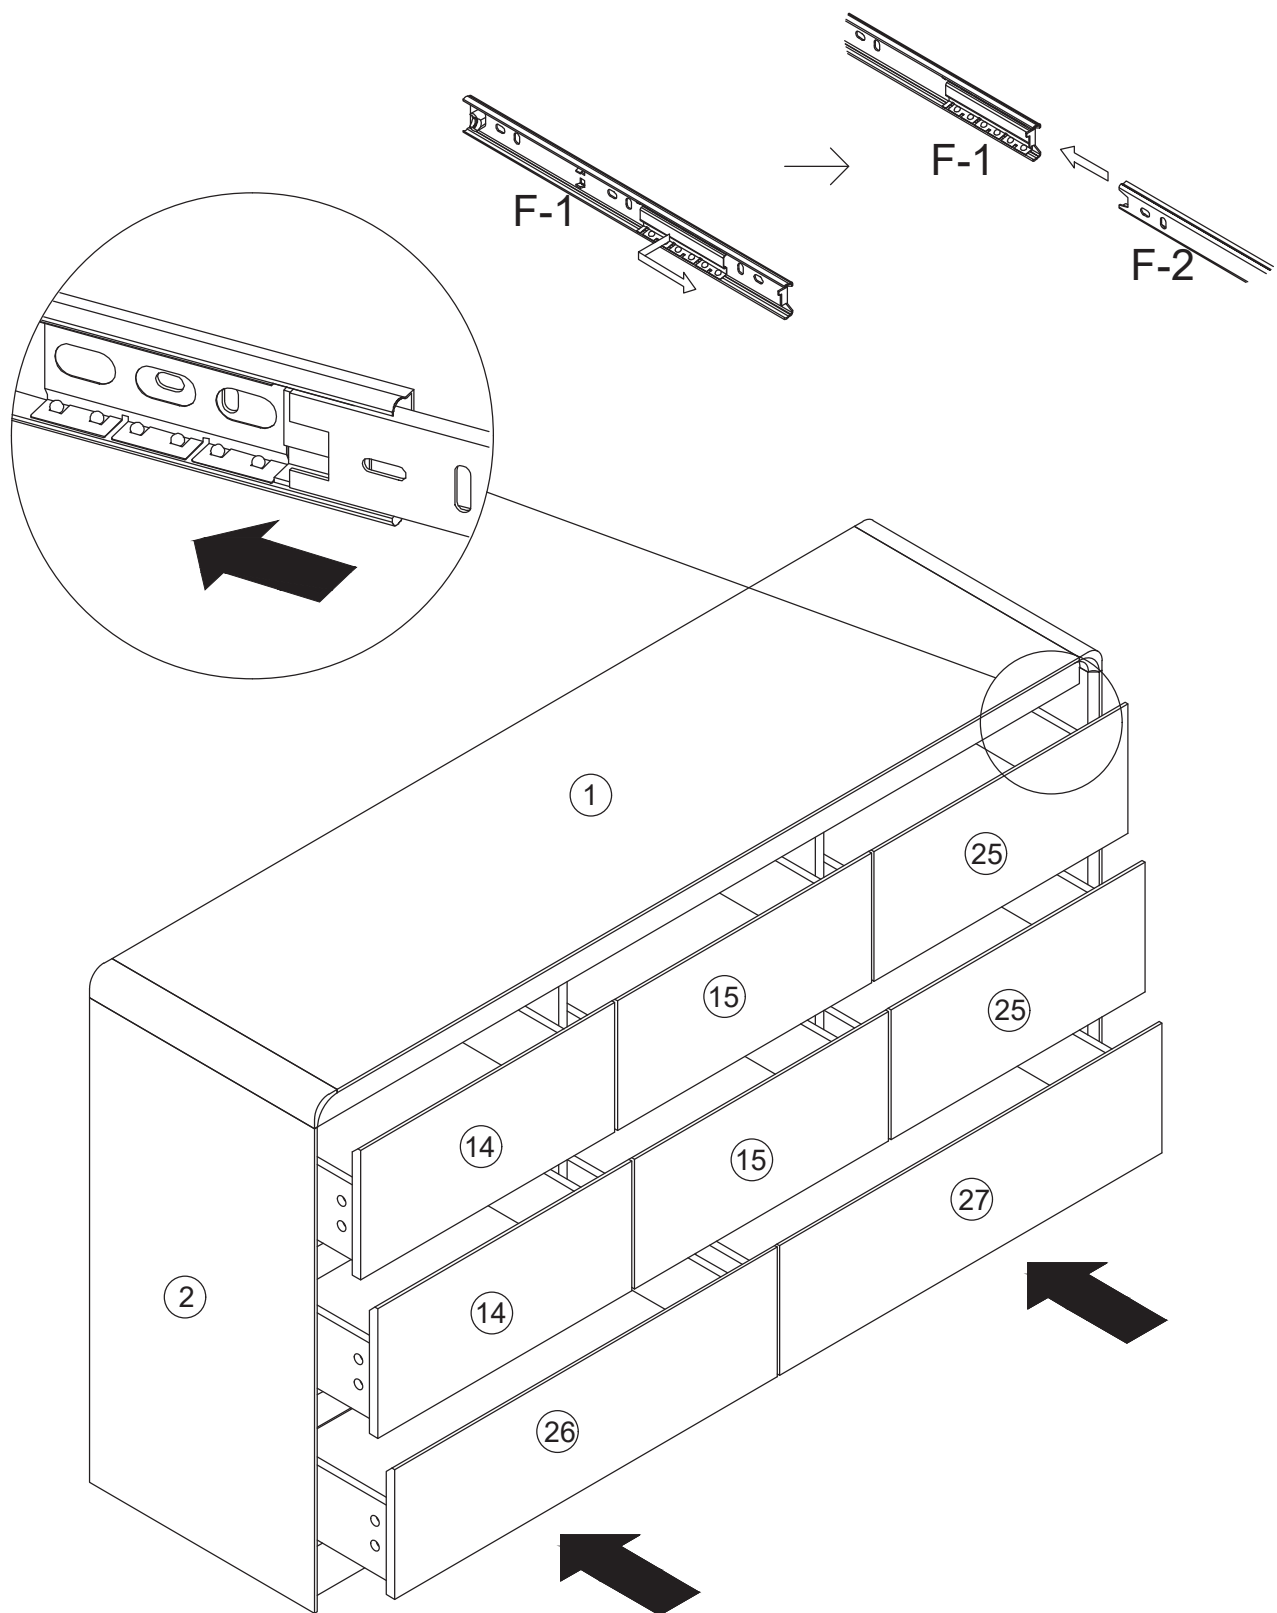 

27

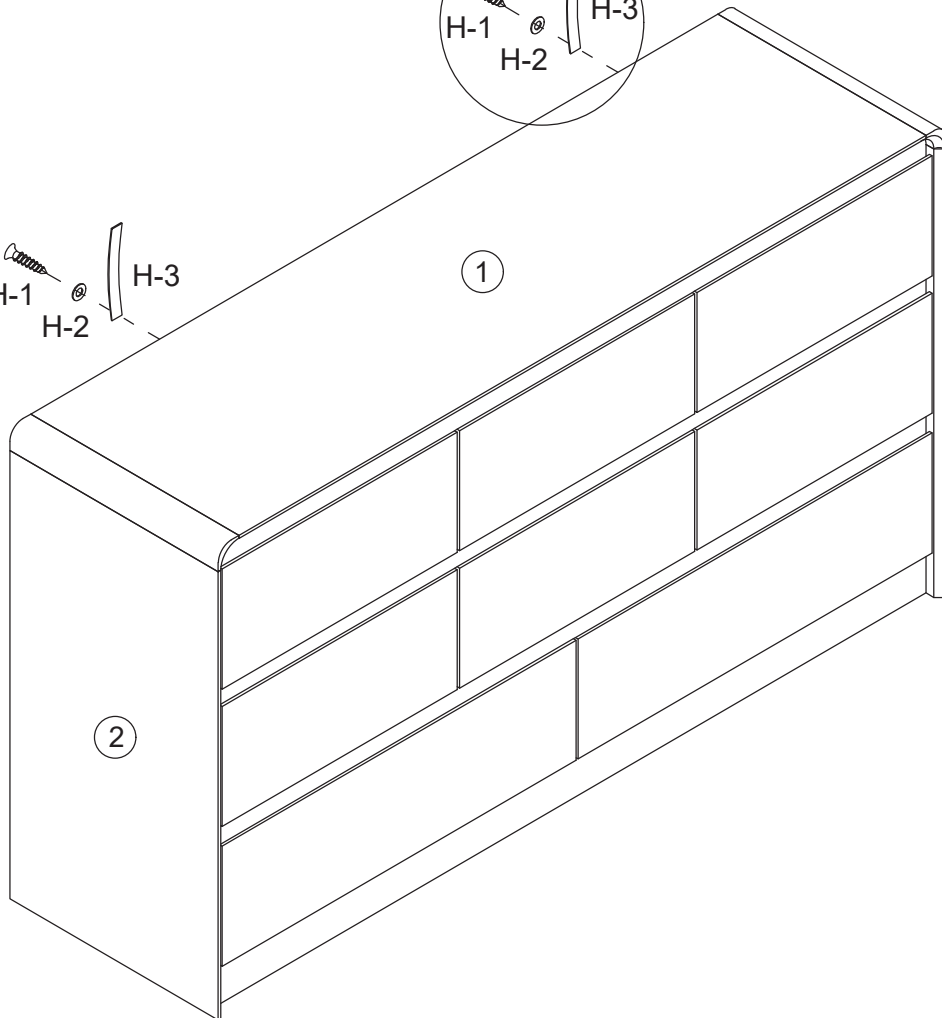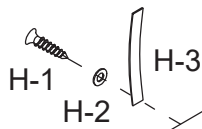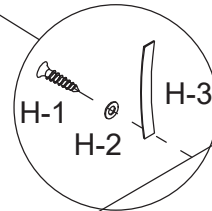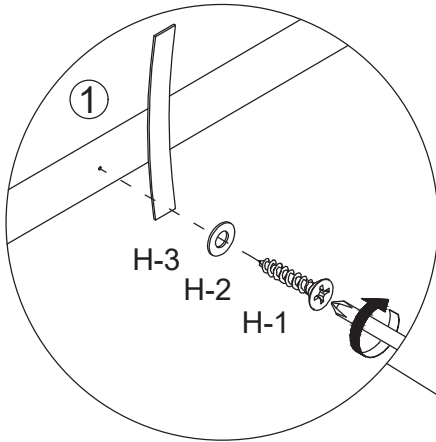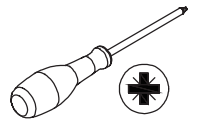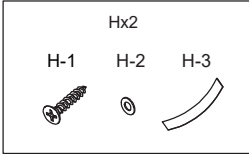      

28

Dx2











Ø4x35mm

Hx2



        Jx2

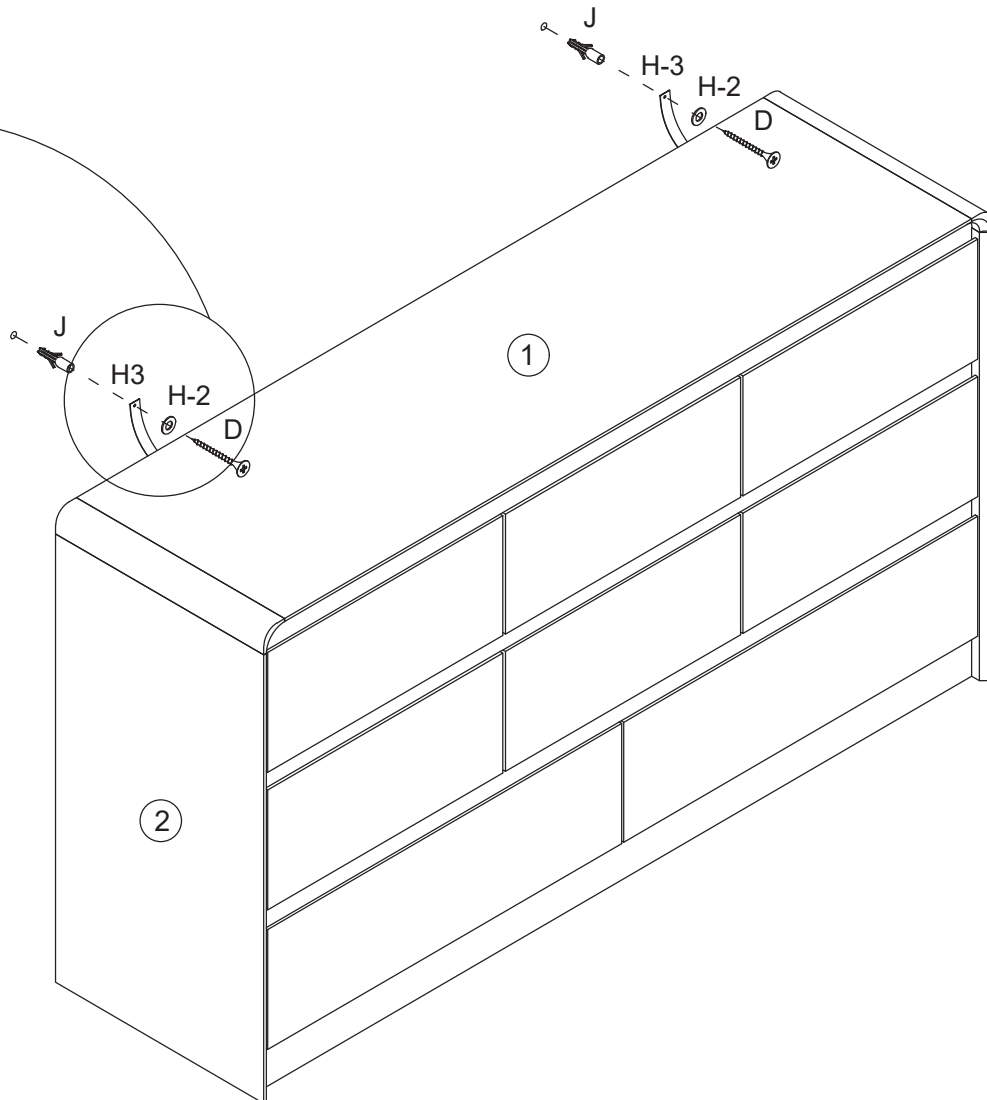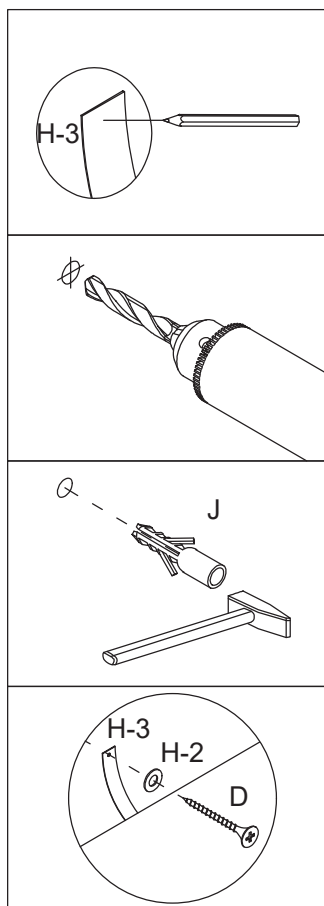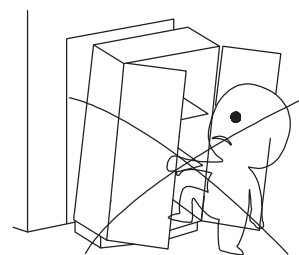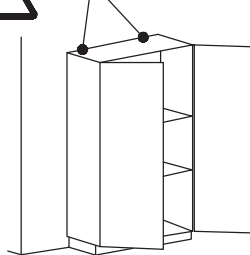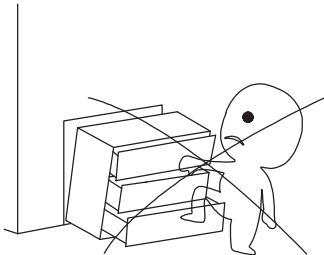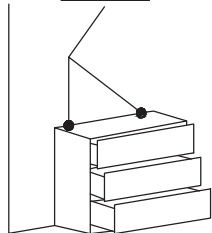

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply email us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.