WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip restraint help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product




Assembly Instructions

Caution: You must read this before you proceed

Please look in ****** for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

NIGHTSTAND

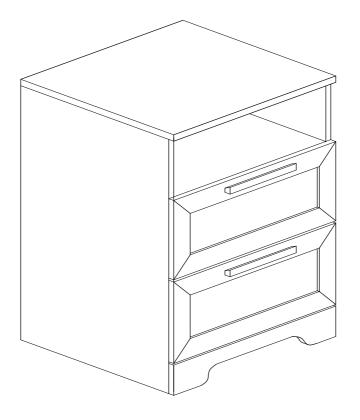

Parts List

Label	Picture	Description	QTY
Α		Right Side Panel	1
В		Left Side Panel	1
С		Top Panel	1
D		Bottom Panel	1
E	en e	Fixed Panel	1
F		Crossbar	1
G		Back Panel	1
Н		Drawer Front	2
I		Drawer Right Panel	2
J		Drawer Left Panel	2

Parts List


Label	Picture	Description	QTY
K		Drawer Back Panel	2
L		Drawer Base	2

Hardware

Label	Picture	Description	QTY
1		Large Camlock (15 X 12mm)	17
2		Small Camlock (15 X 9mm)	5
3		Cam Bolt	21
4		Wood Dowel (Ø6 X 30mm)	20
5	()	Flat Head Screw (M3.5 x 25mm)	9
6		Pan Head Bolt (M4 x 25mm)	5
7		Leveler	5
8		Backply Stopper	5
9	< (3)	Flat Head Screw (M3 x 20mm)	5
10	Ommer (1)	Anti Tip Strap + Screw	1
11)		Sticker Cover	5
12		Handle	2
13		Screw Driver (Not Provided)	1

Assembly Preparation

Before Beginning Assembly

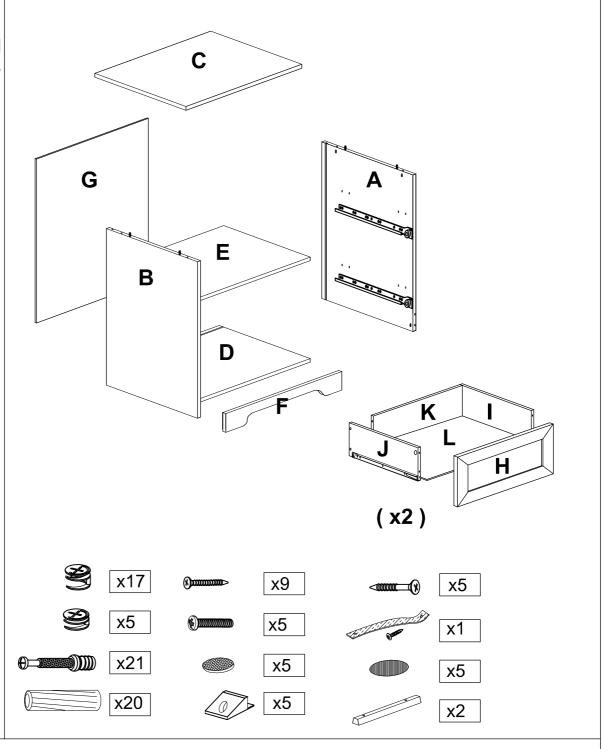



• Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

Overview

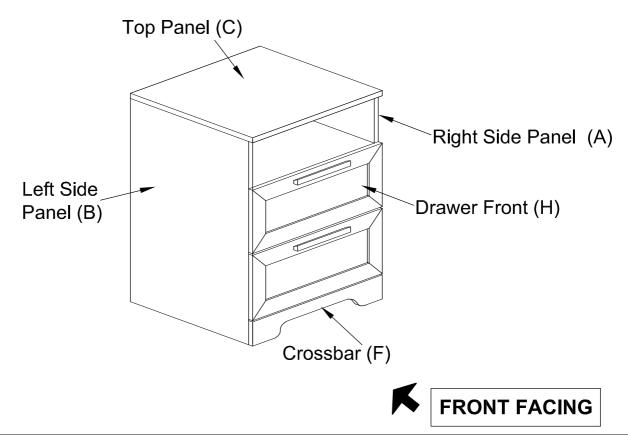


This Nightstand has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Nightstand, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarize yourself with the parts and steps before assembly.

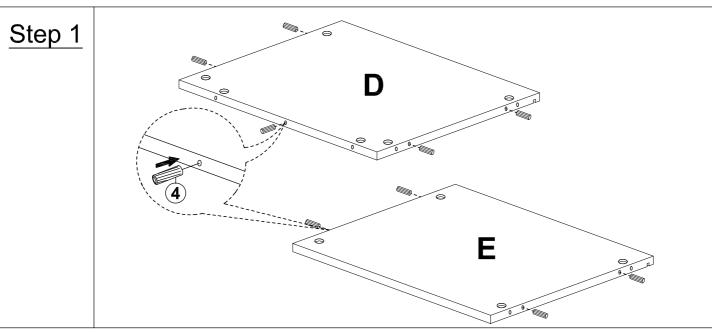


Unpack and place all parts on a clean, non-marring surface.

Insert Wood Dowels (4) into the mounting positions on the side edges of the Bottom Panel (D) and Fixed Panel (E).

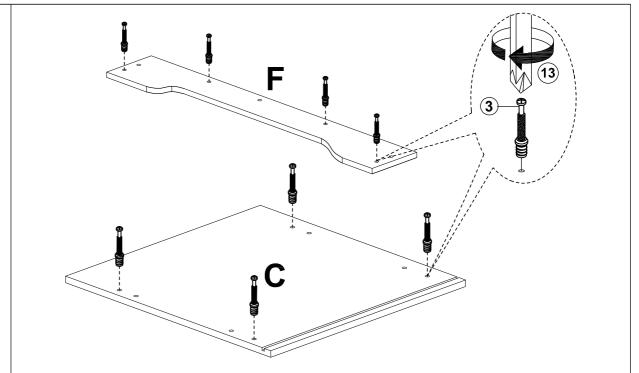


Attach Cam Bolts (3) into the mounting positions on Crossbar (F) and Top Panel (C) with a Screw Driver (13).


Step 3

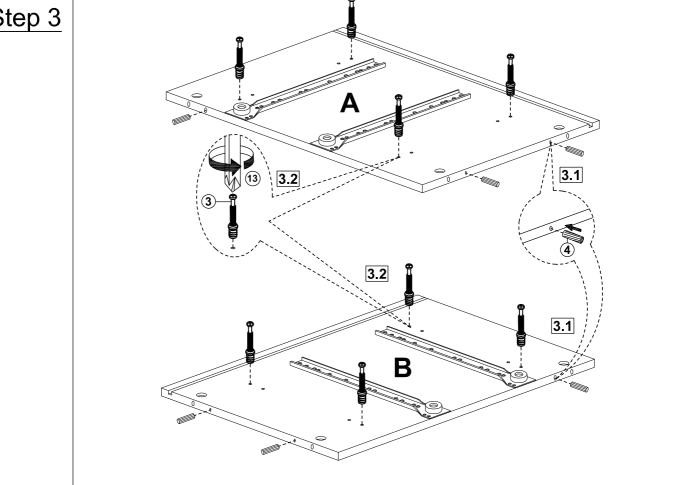

- 3.1) Insert Wood Dowels (4) into the mounting positions on the side edges of the Right Side Panel (A) and Left Side Panel (B).
- 3.2) Attach Cam Bolts (3) into the mounting positions on Right Side Panel (A) and Left Side Panel (B) with a Screw Driver (13).

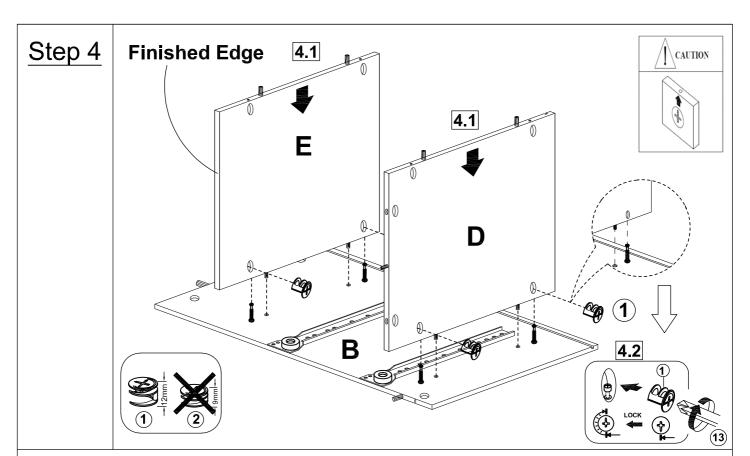


- 4.1) Attach Bottom Panel (D) and Fixed Panel (E) to Left Side Panel (B).
- **4.2)** Insert Large Cam-locks (1) into the mounting positions on Bottom Panel (D) and Fixed Panel (E) and turn clockwise to lock onto the cam-bolts using a Screw Driver (13). CAUTION: Insert the Cam-locks (1) per the correct orientation as indicated in the above picture.

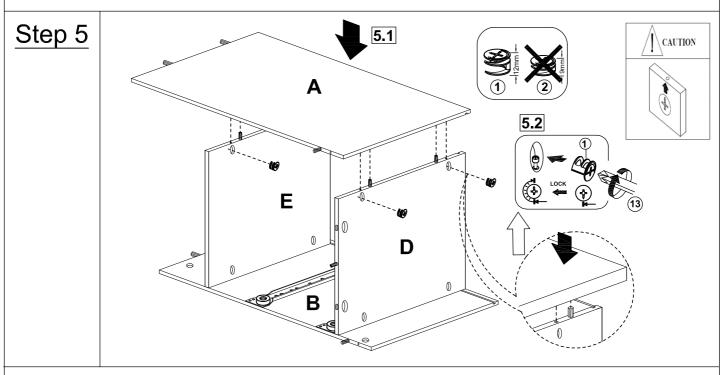


- 5.1) Attach Right Side Panel (A) to Fixed Panel (E) to Bottom Panel (D).
- **5.2)** Insert Large Cam-locks (1) into the mounting positions on Bottom Panel (D) and Fixed Panel (E) and turn clockwise to lock onto the cam-bolts using a Screw Driver (13).


CAUTION: Insert the Cam-locks (1) per the correct orientation as indicated in the above picture.

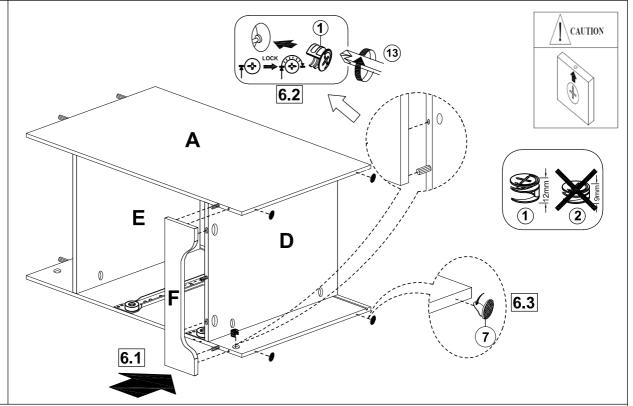

- **6.1)** Attach Crossbar (F) to Right Side Panel (A), Left Side Panel (B) and Bottom Panel (D). **6.2)** Insert Large Cam-locks (1) into the mounting positions on Right Side Panel (A), Left Side Panel (B) and Bottom Panel (D) and turn clockwise to lock onto the cam-bolts using a Screw Driver (13).
- **6.3)** Paste a leveler (7) on the bottom side of Right Side Panel (A) and Left Side Panel (B). CAUTION: Insert the Cam-locks (1) per the correct orientation as indicated in the above picture.

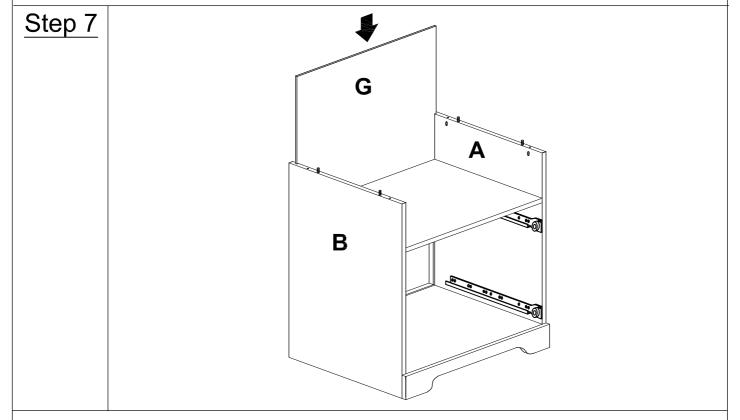


Fit Back Panel (G) to Right Side Panel (A) and Left Side Panel (B) by inserting into the grooves as shown.

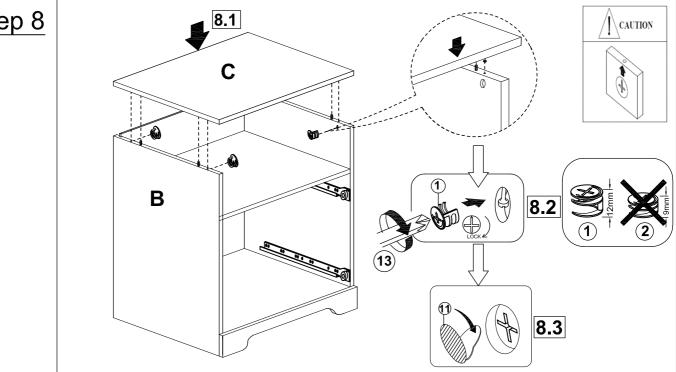

- **8.1)** Attach Top Panel (C) to Right Side Panel (A) and Left Side Panel (B).
- **8.2)** Insert Large Cam-locks (1) into the mounting positions on Right Side Panel (A) and Left Side Panel (B) and turn clockwise to lock onto the cam-bolts using a Screw Driver (13).
- **8.3)** Paste the Sticker Covers ((11)) on the Cam-locks.

CAUTION: Insert the Cam-locks (1) per the correct orientation as indicated in the above picture.

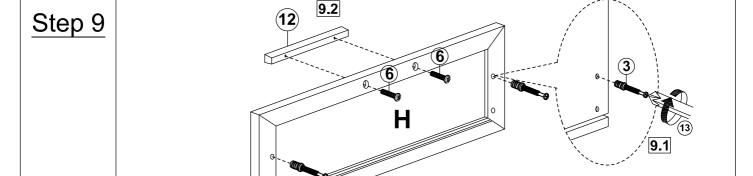

(x2)


9.1) Use a Screw Driver (13) to screw Cam Bolts (3) into the mounting positions on the inside face of Drawer Front (H) as shown.

Note: It is easier to screw in Cam Bolts with the Drawer Front laid flat down - take care not to scratch or damage the front face of the Door Front panel.

9.2) Position Drawer Front (H) vertically as shown. Align the mounting positions on Handles (12) to the bolt holes on Drawer Front (H).

Insert Pan Head Bolts (6) through the bolt holes on Drawer Front (H) to thread into the bolt holes on the Handles (12).

Use a Screw Driver (13) to drive in the Pan Head Bolts (6) - do not tighten the bolts fully until both bolts are in place.

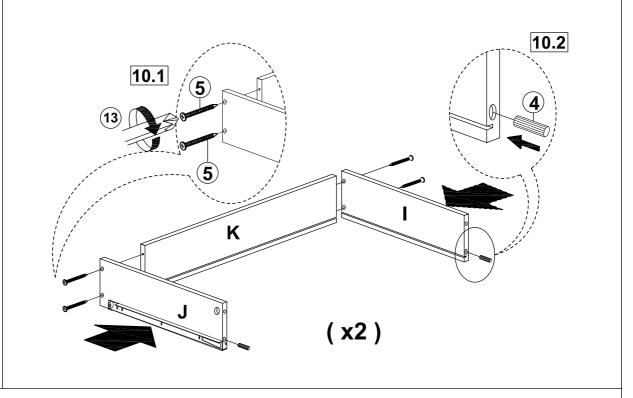


10.1) Attach Drawer Right Panel (I) and Drawer Left Panel (J) to Drawer Back Panel (K) as shown-note the grooves on each panel are at the bottom. Use Flat Head Screws (5) to fasten side panels to back panel.


Do not tighten screws completely until all 3 screws are in place in each panel.

10.2) Insert Wood Dowels (4) into the mounting positions on the front edges of Drawer Right Panel (I) and Drawer Left Panel (J).

Step 11

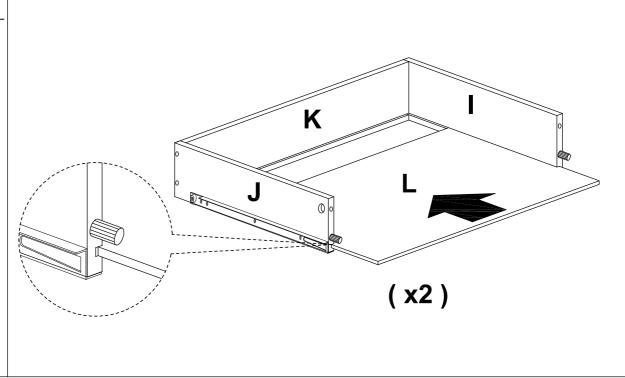


Slide the Drawer Base (L) into the grooves on Drawer Right Panel (I), Drawer Left Panel (J) and Drawer Back Panel (K).

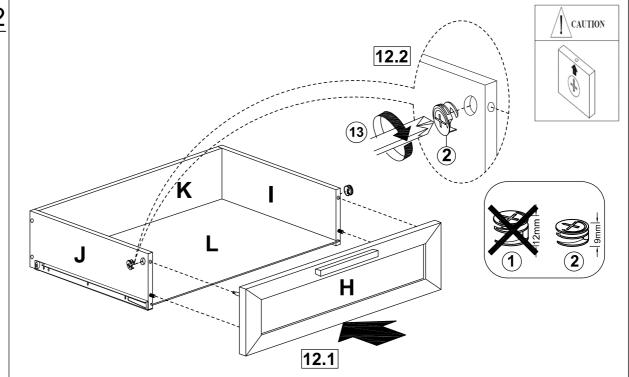


- **12.1)** Attach Drawer Front (H) to Drawer Right Panel (I) and Drawer Left Panel (J) via the cam-bolts and the wood dowels on the respective parts. Check that the front edge of Drawer Base (L) fits into the groove on Drawer Front (H).
- **12.2)** Insert Small Cam-locks (2) into the mounting positions on Drawer Right Panel (I) and Drawer Left Panel (J) and turn clockwise to lock onto the cam-bolts.

CAUTION: Insert the Cam-locks (2) per the correct orientation as indicated in the above picture.

Step 13

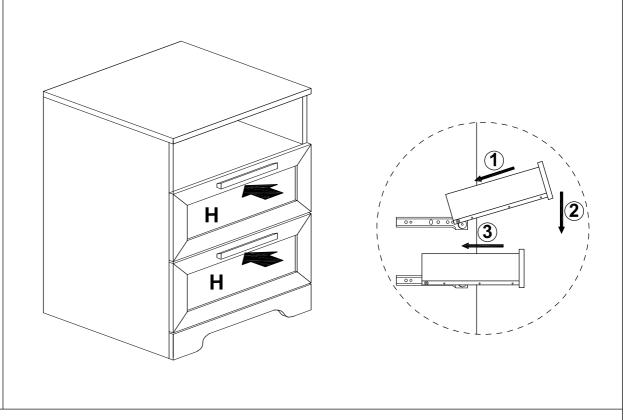


Place the Drawers into the Nightstand assembly by aligning the rails.

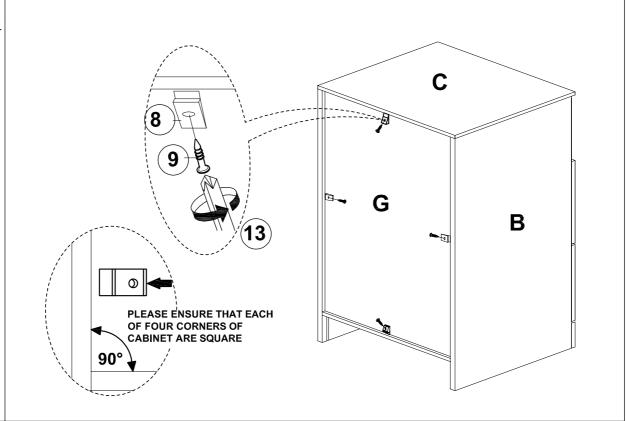


Use Screw Driver (13) to affix Backply Stoppers (8) and Flat Head Screws (9) in the location on Back Panel (G) as shown.

Step 15

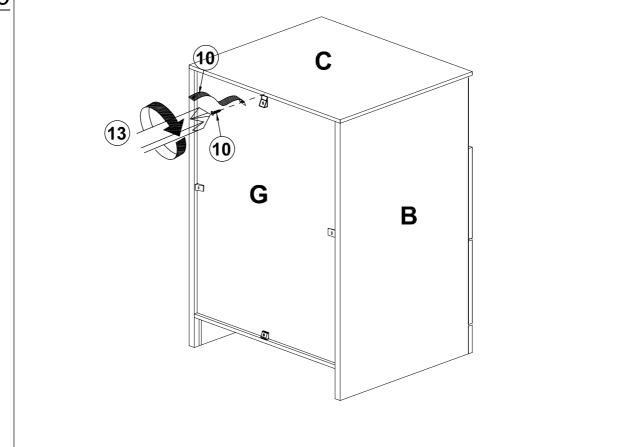

Insert screws through the Straps (10) at the marked sticker areas on the back side edges of Top Panel (C) and drive in the screws using a Screw Driver (13).

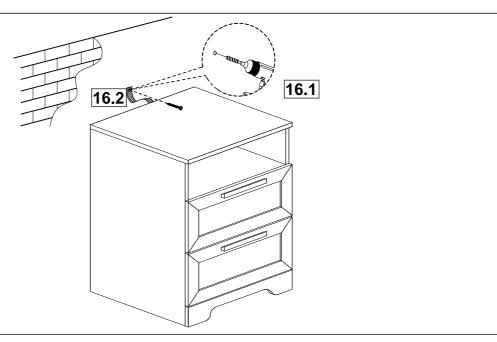

16.1) Drill a hole in the wall and insert wall anchors / Rawl plugs.

16.2) Insert screws through the straps and drive the screws into the wall anchors / Rawl Plugs.

NOTE: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater that the diameter of the mounting hole on the Anti-Tip Strap and that the fixing is safe and secure before use. The screw supplied is to affix the Anti-Tip Strap to the nightstand.




WARNING

Serious or fatal crushing injuries can occur from tipping furniture.

To help prevent tip-over: **ALWAYS** secure this furniture to the wall using Cabinet Restraint Device.

See product instructions for more ways to help prevent furniture tip-over.

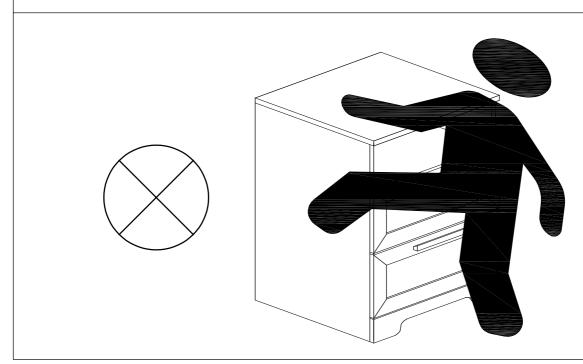





Your Nightstand is ready for use.

  Care & Maintenance



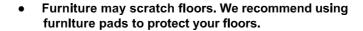



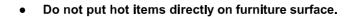



• Do not clean furniture with harsh cleansers or polish.



• Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.