




12" FLOOR FAN

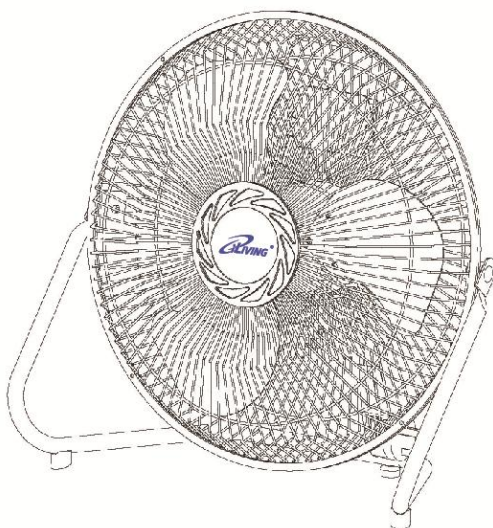

Model: ILG8F12

Owner's Manual

**PLEASE READ AND
SAVE THESE INSTRUCTIONS**

INTENDED USE

This product is intended only for indoor residential and office use, not for industrial or other commercial use. Use your fan only with adequate wiring that matches code. If you have any questions about the adequacy of your wiring, consult a qualified electrician. As with any electrical appliance, use only with a smoke detector that is in proper working order. In using your fan, you should read and follow the IMPORTANT INSTRUCTIONS below. The word “WARNING” in these instructions indicates a hazard that, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

When using or servicing electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, and injury to persons, including the following: Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. Do not place fan on an uneven surface or on a surface smaller than the fan as doing so may cause the fan to tip over or fall, causing damage to property and/or injury to person(s). Do not use in a window. Extreme caution is necessary when fan is used by or near children or people with physical or mental disabilities. Do not use the fan with the fan guards removed. Do not sit or stand on fan. Do not place objects on fan.

WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device, such as a dimmer switch. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock and/or a fire hazard. Do not use in areas where gasoline, paint, or flammable materials are used or stored. A fan has sparking parts inside. Do not leave fan where drapes or curtains will get pulled into the fan or against the fan guard.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt

to defeat this safety feature. Do not operate any fan with a damaged cord or plug, or after the fan malfunctions, has been dropped, or damaged in any manner. Do not route cord under carpeting or cover cord with throw rugs, runner, or the like. Arrange cord away from traffic area(s). Arrange the cord where it will not be tripped over. Use your fan only in dry environments. Do not place fan in bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools, or other sources of water.

WARNING: "THIS IS A FAN—NOT A TOY!" TO REDUCE THE RISK OF PERSONAL INJURY AND/OR ELECTRIC SHOCK, IT SHOULD NOT BE PLAYED WITH OR PLACED WHERE SMALL CHILDREN CAN REACH IT

HOW TO USE

Plug fan directly into 120 volt AC wall outlet. Be sure plug fits tightly in outlet. A loose fit will cause overheating and damage to the plug. Always operate fan on its base in the normal upright position.

Set the selector switch to the desired position.

To disconnect fan, turn switch off, then remove plug from outlet.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Risk of fire. Do not replace attachment plug. Contains a safety fuse that should not be removed. Discard product if the attachment plug is damaged.

REPLACING PLUG FUSE

When the fuse in the power cord blows, please replace the fuse by following these steps:

1. Disconnect the plug from the wall outlet. Do not unplug by pulling on cord. Then slide open the fuse access cover on top of attachment plug towards blades, as shown in Figure 1.
2. Remove the fuse carefully using a flat head screwdriver, as shown in Figure 2.
3. Replace the fuse only with 2.5 Amp, 125 Volt fuse, as shown in Figure 3. (You may purchase a replacement fuse from a local hardware store).
4. Slide the fuse access cover on top of attachment plug, as shown in Figure 4.



Figure 1



Figure 2



Figure 3



Figure 4

CARE AND CLEANING

BEFORE CLEANING THE FAN UNPLUG THE POWER CORD. Remove front grille by removing screws. Do not remove rear grille. Clean grilles and blade with damp cloth. Avoid harsh chemical cleaners. **DO NOT IMMERSE THE MOTOR IN WATER.** Re-attach front grille. Allow fan to dry completely before use. Excess dust accumulated on the vent slots of the motor can be easily removed with a vacuum cleaner. Your fan motor is permanently lubricated and requires no additional oil.

Product Specifications

Model#: ILG8F12

Voltage: 120V, 60Hz

Current: 0.27 amps;

Power: 31 Watts

Warranty Information

Register your product at our website:



Or visit [iLivingUSA.com/register-product](https://www.ilivingusa.com/register-product)

Feedback

Love it? Help us make the product more for you.



Let us know with a customer review.

Please visit: <https://www.amazon.com/review/review-your-purchases#>

At iLiving USA, we are committed to bringing top quality products to our customers.

iLIVING USA
9293 Beatty Dr,
Sacramento, CA 95826
Tel: 650-952-2257
Email: service@ilivingusa.com