
15 LITRE AIR FRYER OVEN



Model: FM1001

Please read the following operating instructions carefully and note the information provided. Please familiarize yourself with the product, the proper use and the safety instructions according to the manual.



MADE IN CHINA

CONTENT

Caution.....1-4

- IMPORTANT SAFEGUARDS
- SAVE THESE INSTRUCTIONS
- SPECIAL CORD SET INSTRUCTIONS
- NOTICE

Parts and Accessories.....5-6

Features and Benefits.....7-10

Care&Cleaning.....11

Product Information.....12

Cautions

IMPORTANT SAFEGUARDS

Warning:

To reduce the risk of burns, do not touch the oven exterior directly when the oven is on. Be cautious of hot surfaces! Prevent skin burns. (Label to be affixed to the top right corner of the oven exterior.)



Read all instructions carefully before first use and keep them for future reference:

- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning, handling, putting on or taking off parts.
- **Do not** touch hot surfaces. Use handles or knobs for operation.
- To avoid electric shock, **do not** place any part of the Air Fryer Oven in water or other liquids. See instructions for cleaning.
- This appliance should not be used by or near children and individuals with disabilities.
- **Do not** use the appliance if the cord or plug is damaged, or if the appliance has been malfunctioning, dropped, or fails to operate properly. Return the Air Fryer Oven to the place of purchase for inspection and repair.
- The use of incompatibility accessory may cause injury.

- **Do not** use the appliance outdoors.
- Keep the cord away from the edges of table and countertops to prevent accidental pulling by children or pets.
- Keep the cord away from contacting hot surfaces to prevent a damage of the cord.
- **Do not** place Air Fryer Oven on or near a hot gas or electric burner or inside a heated oven.
- Use the Air Fryer Oven for its intended purpose only.
- Be cautious of using non-metal/glass containers in the Air Fryer Oven.
- To avoid burns, be cautious of removing Air Fryer Oven accessories or disposing of hot grease.
- Unplug the Air Fryer Oven when not in use. And please store manufacturer recommended oven-safe accessories inside only.
- **Do not** place paper, cardboard, plastic or similar materials in the Air Fryer Oven.
- To avoid over heating of the oven, **do not** cover crumb tray or any part of the oven with metal foil.
- To avoid the risk of fire or electric shock, do not insert oversize foods, metal foil packages or metal utensils.
- To avoid fire hazard, **do not** cover or touch flammable materials (curtains, draperies, walls, etc.) of the Oven during operation. **Do not** store items on top of the appliance or operate it under wall cabinets.

- To avoid electric shock, **do not** clean with metal scouring pads (as fragments may break off and touch electrical components).
- **Do not** attempt to dislodge food when the Air Fryer Oven is plugged in or the machine is working.
- Warning: To avoid possibility of fire, **NEVER** leave Air Fryer Oven unattended during use.
- Use recommended temperature settings for all cooking, baking, roasting and air frying.
- **Do not** place cooking utensils or baking dishes on glass door.
- To shut off the machine, please turn the oven timer and the toaster timer dials to the OFF position.
- **Do not** operate the appliance in enclosed cabinets or under wall cabinets. Always unplug the machine when storing in an enclosed cabinet. Failure to do so may cause a fire, especially if the appliance touches the cabinet walls or the door contacts the unit when closing.
- Be cautious of moving an appliance containing hot oil or other hot liquids.
- To disconnect the appliance, turn all control knobs to "OFF", then remove plug from wall outlet.

SAVE THESE INSTRUCTIONS

Please read and keep these instructions handy. These will guide you to maximize the air fryer's performance, ensuring consistent, professional results..

SPECIAL CORD SET INSTRUCTIONS

A short power cord is provided to reduce the risks entanglement or tripping in or tripping. If an extension cord is required, use it with caution. The extension cord's electrical rating must match or exceed that of the appliance, and should be positioned to prevent it from draping over countertops or tabletops, where it may cause tripping hazards or be pulled by children.



NOTICE

This appliance features a polarized plug (one blade wider than the other). As a safety measure, it fits into polarized outlets only one way. If it doesn't insert fully, reverse the plug. If it still won't fit, consult a qualified electrician. **Do not** bypass this safety feature.

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.
NOT FOR COMMERCIAL PURPOSE.**

Parts and Accessories

MAIN COMPONENTS

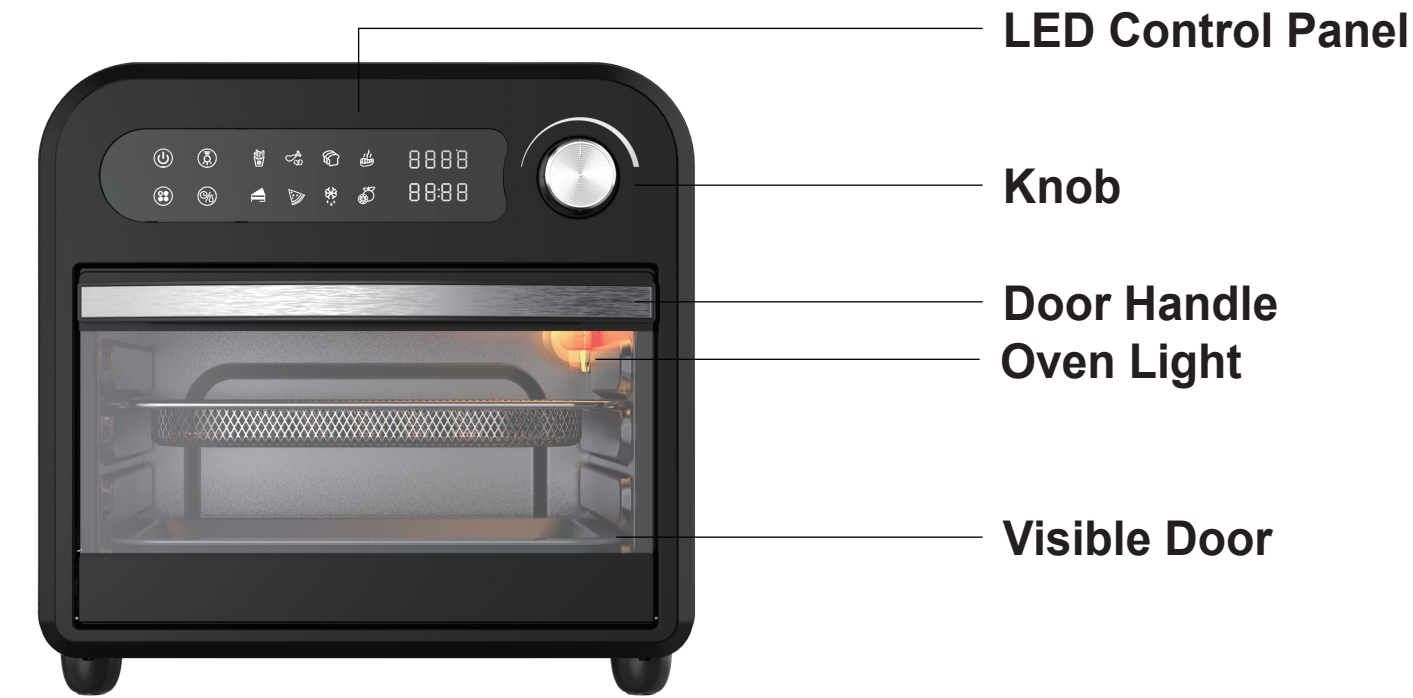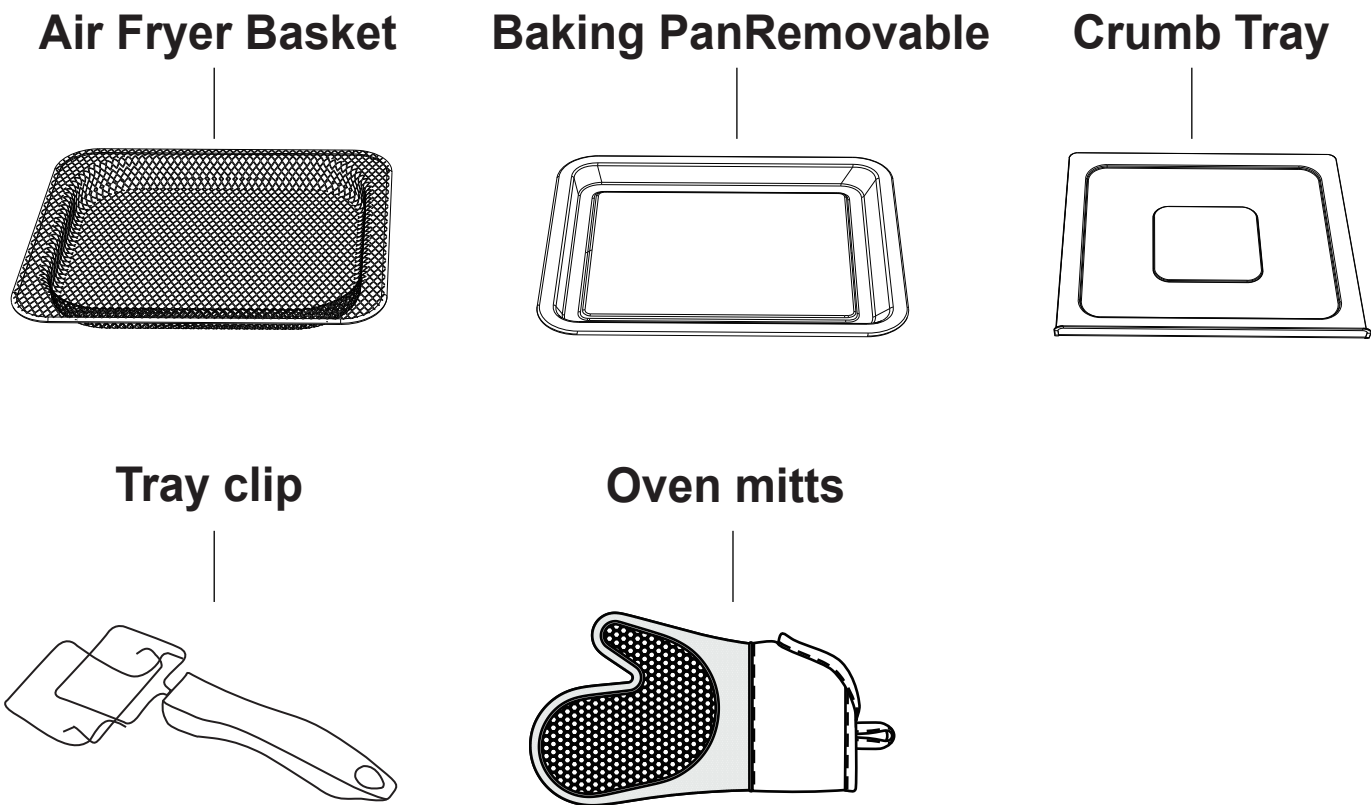

- **Baking pan**

The Baking Pan can be placed ON any of the three rack levels.

- **Air fryer basket**

The air fryer basket features a grated design for even air circulation. Place it on the middle rack, unless specified otherwise in a recipe.

- **Removable crumb tray**

The removable crumb tray slides out from the front bottom of the air fryer for easy cleaning. Always ensure it is properly positioned underneath before use.


- **tray clip**

When operating the tray clip, keep away from high-temperature areas to prevent scalds; ensure the clip is tightly clamped before moving to avoid the tray slipping.

- **oven mitts**

When wearing the glove, ensure it fits snugly and covers the wrist for protection. When picking up or placing hot items from the oven, grip them by fully wrapping the glove around and hold firmly with force.

Features and Use

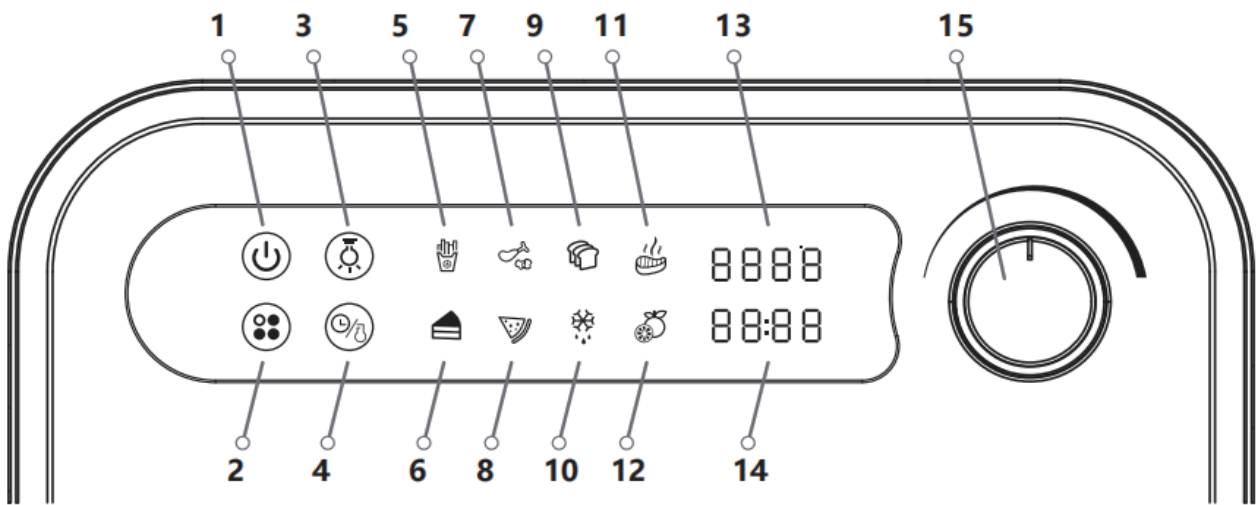

1. On/Off Icon

Use to Start or Stop the oven after all setting are completed.

2. Function selection Icon

Use to select different functions.

3. Oven light

Press this icon to turn the oven light On or Off.

4. Time / Temperature adjust mode Icon

To set or adjust the Time or Temperature.

NO.	function name	Icon	Temperature (°F)	Time (mins)
5.	french fry		450	15
6.	cake		275	45
7.	chicken		450	20
8.	pizza		400	8
9.	toast		450	6
10.	warm		140	30
11.	steak		450	7
12.	dehydrate		140	60

13.Temperature display

Digital display showing the current working of temperature.

14.Time display


Digital display showing the current working time.

15.Time / Temperature adjusting knob

Use to set the desired time/temperature.

Oven Rack

This contains 3 rack levels, top, middle and bottom position.

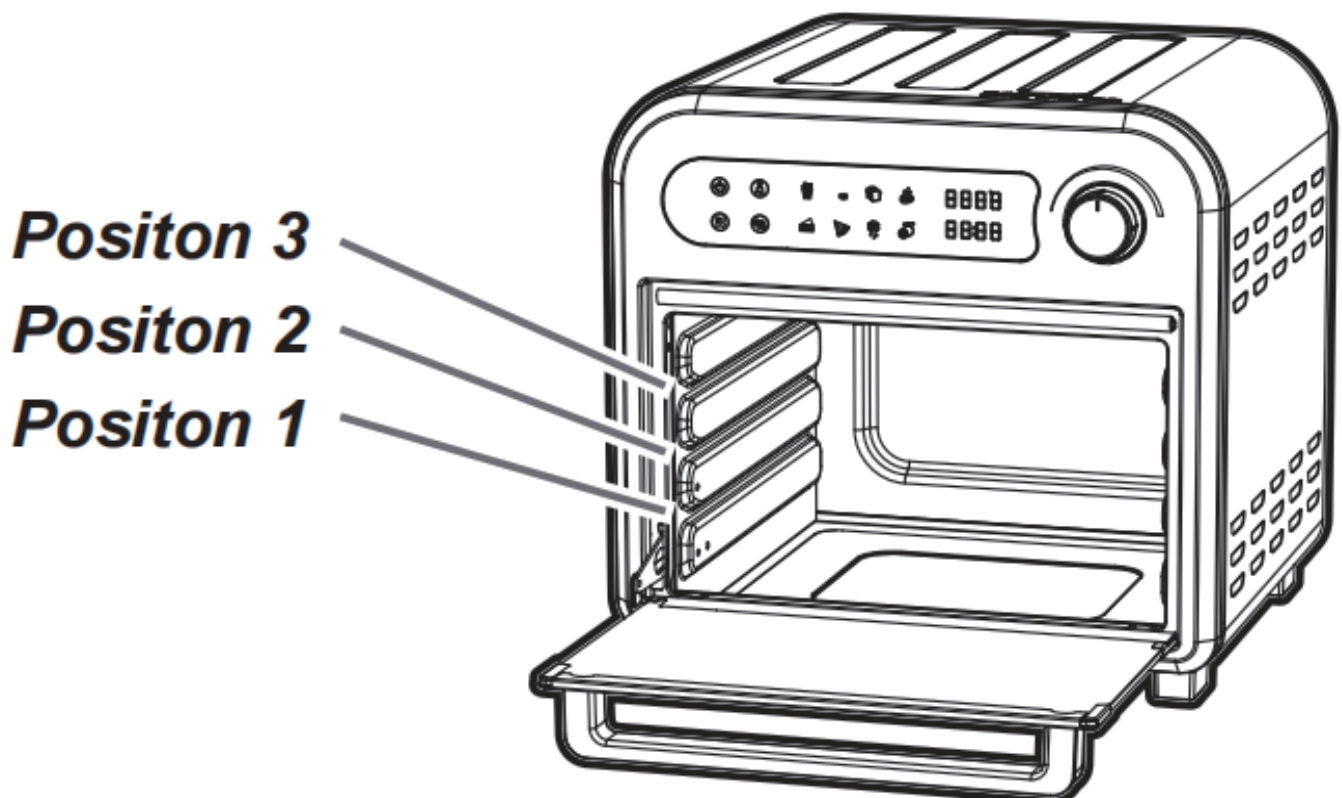

Before Your First Use

- Unpack the Air Fryer Oven and remove all packaging materials. Clean the Air Fryer Oven according to the Care&Cleaning section of this manual.
- Place the Air Fryer Oven on a flat, stable, level surface. Ensure that the oven is 2-4 inches away from the wall or any other objects.
- We recommend running a trial operation of your Air Fryer Oven to eliminate any protective substance from the heating elements. Conduct the trial run in a well ventilated area. It is normal for a small amount of smoke and odor may be present.

Operating your Oven

Note: The time and temperature can be adjusted under each function mode. To set different time and temperature, turn the Time/Temperature Adjusting Knob located at the top - right of the display window to the desired settings.

Care&Clening

- Unplug your Air Fryer Oven and allow it to completely cool before cleaning. **Do not** use abrasive cleaners, as they will damage the surface finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply the cleaning agent to a cloth, not directly onto the Air Fryer Oven. When cleaning the control panel, use gentle pressure to prevent the text from wearing off over time
- To clean the interior walls and bottom of the oven (remove the Removable Crumb Tray first) use a damp soapycloth or sponge. **Never** use harsh abrasives, corrosive products, or oven cleaner sprays, as they can damage the oven surface. Do not use steel wool pads on the air fryer oven or its accessories.
- Wash the Baking Pan, Air Fryer Basket, and Removable Crumb Tray by hand in hot, soapy water. You can also use a nylon scouring pad or nylon brush. These parts are not dishwasher - safe.
- Always clean the Removable Crumb Tray after each use. Excess food particles could cause smoking and will be hard to remove from tray. To remove baked-on grease or burnt food particles you can soak the Removable Crumb Tray in hot, sudsy water or use nonabrasive cleaners. Never operate the oven without the Removable Crumb Tray in place.
- To prevent smoking during subsequent uses, clean the top interior of the air fryer oven after cooking greasy foods or using the rotisserie function to remove accumulated grease.

Product Information

Product Name	Air Fryer Oven
Model	FM1001
Capacity	15L
Input	120V 60Hz
Rated Power	1500W
Temperature Range	100~450°F
N.W	5.4 KG
G.W	6.7 KG
Dimension	334*332*323MM
Accessories	Air Fryer Oven *1 Baking Pan *1 Air Fryer Basket *1 Removable Crumb Tray *1 Instruction Manual *1 Tray clip *1 Oven mitts *1