

# Assembly Instruction

## Accent Chair




Hardware and Legs are stored on the seat cushion, please take out the legs and hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


### Component list

| No | Drawing | Qty | Description                |
|----|---------|-----|----------------------------|
| A  |         | 1   | <b>CHAIR</b>               |
| B  |         | 4   | <b>WOODEN LEG Ø2"x12"H</b> |
| C  |         | 12  | <b>BOLT Ø1/4"X70MM</b>     |
| D  |         | 12  | <b>FLAT WASHER Ø1/4"</b>   |
| E  |         | 12  | <b>LOCK WASHER Ø1/4"</b>   |
| F  |         | 1   | <b>ALLEN KEY 4MM</b>       |

Step #

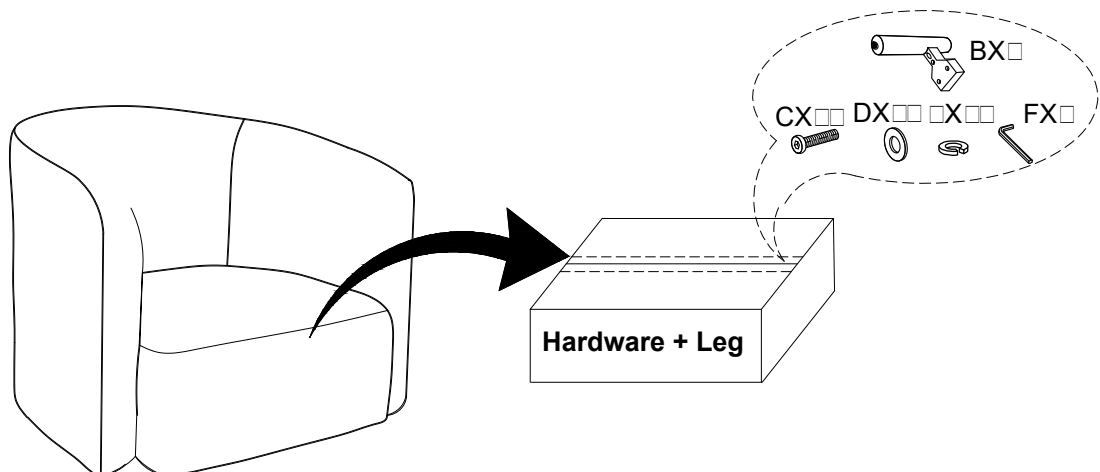

Step #□

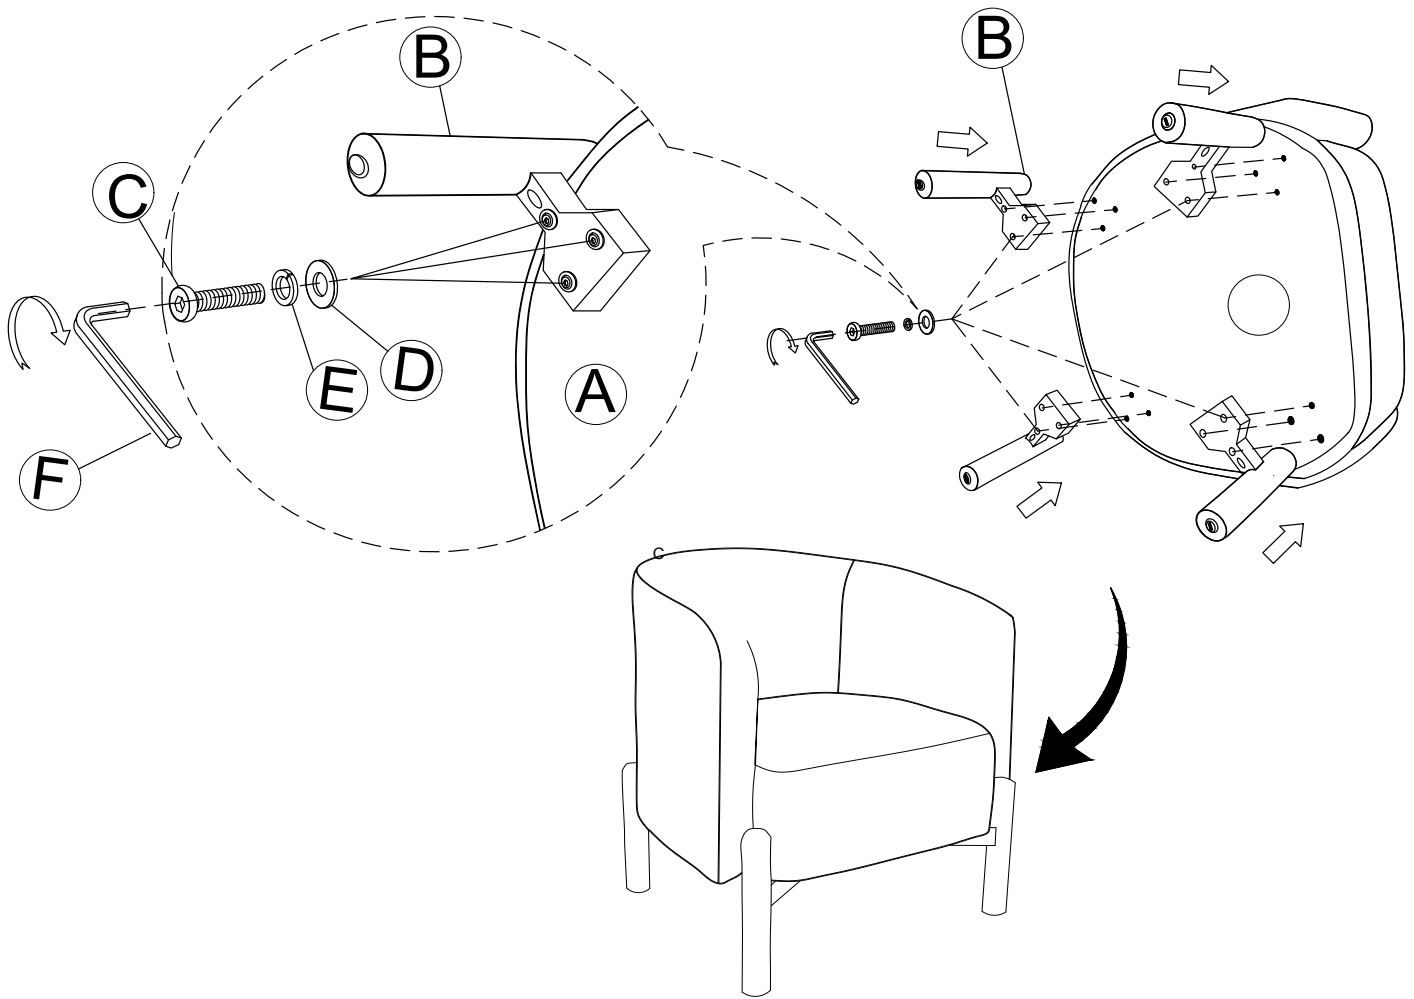

## Care Instruction for Textured Furniture:

In order to maintain the original appearance of your textured Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage textured.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.