

 
 
INSTALLATION

Product Manual




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

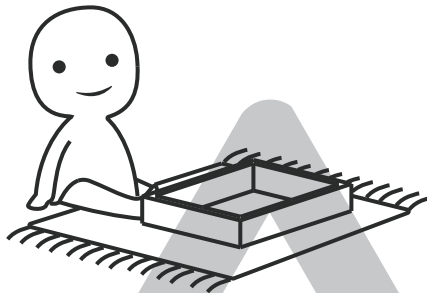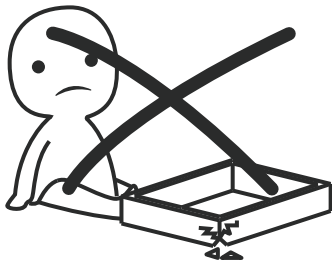



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

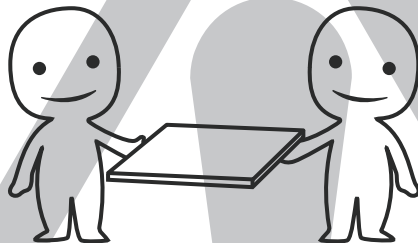

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

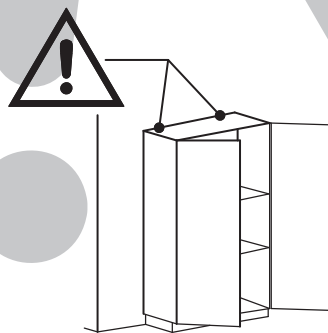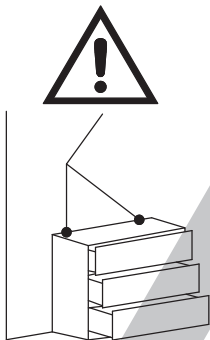

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 
 
 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.



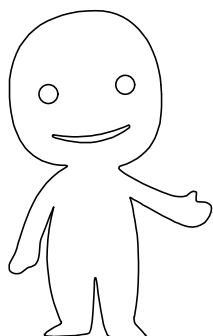

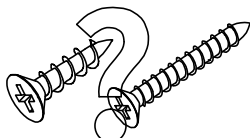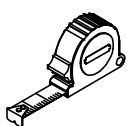


 
 




Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.





Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 26</p>  <p>Ø6X35mm</p>	<p>B x 26</p>  <p>Ø15X10mm</p>	<p>C x 22</p>  <p>Ø5X40mm</p>	<p>D x 20</p>  <p>Ø6X30mm</p>	<p>E x 4</p>  <p>Ø6X50mm</p>
<p>F x 4</p> 	<p>G x 6</p>  <p>Ø4X18mm</p>	<p>H x 6</p> 	<p>J x 72</p>  <p>Ø3X14mm</p>	<p>K x 20</p>  <p>Ø4X14mm</p>
<p>L x 2</p> 	<p>M x 2</p> 	<p>N x 3</p> 	<p>P x 4</p> 	<p>Q x 1</p> 
<p>R x 1</p> 	<p>S x 1</p> 	<p>T x 6</p>  <p>Ø6X55mm</p>	<p>U x 4</p>  <p>Ø6X20mm</p>	<p>V x 1</p> 
<p>W x 2</p> 	<p>X x 1</p> 	<p>Y x 12</p> 		

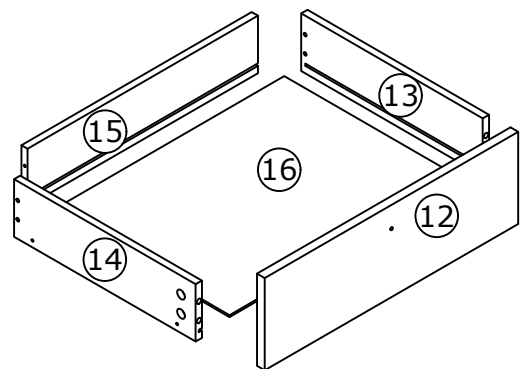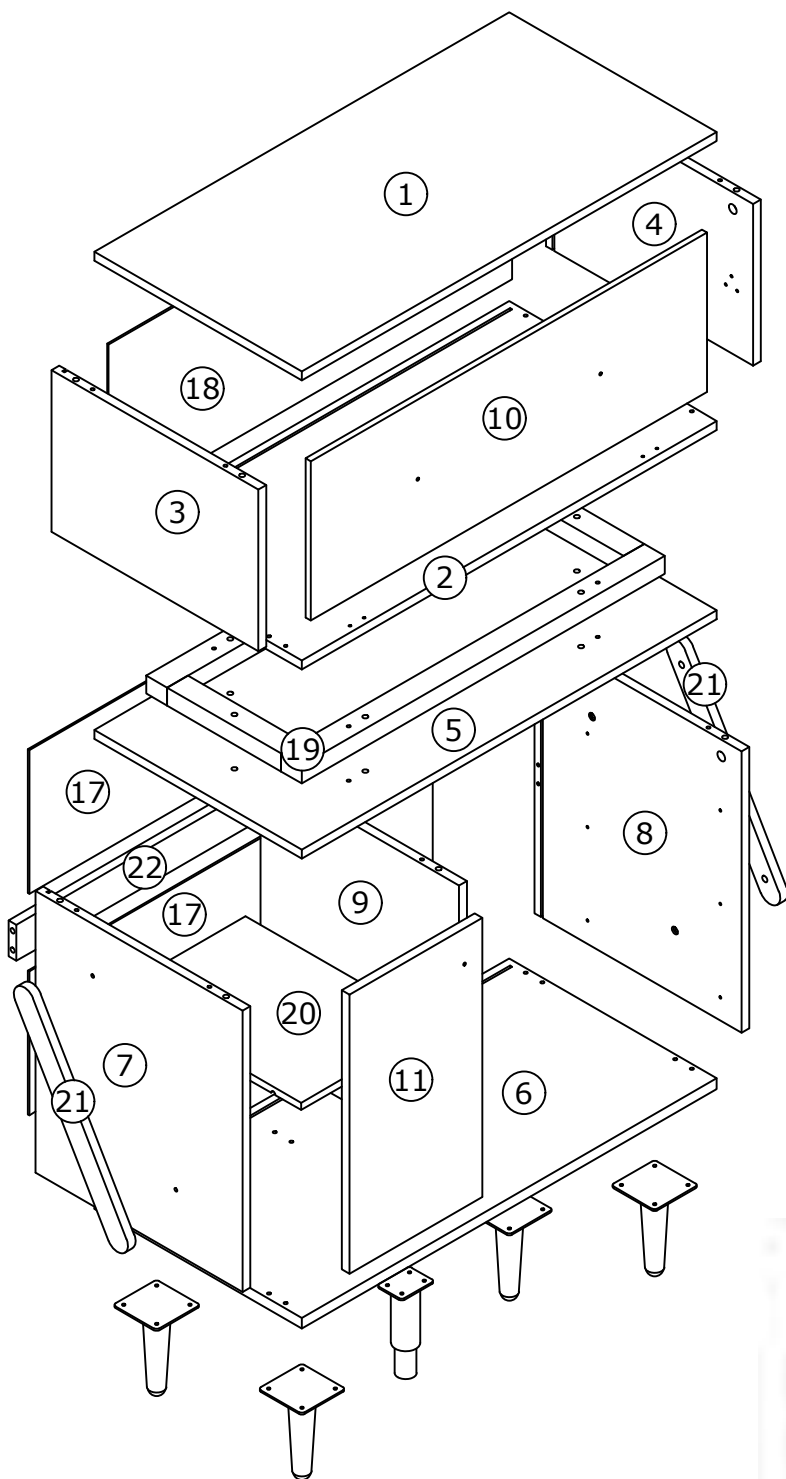  


X3

▲ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> -ALWAYS install Anti-tip device provided. -NEVER put a TV on this product. -NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. -NEVER open more than one drawer at a time. -Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>

1

 
A x 4






J x 2



 R x 1

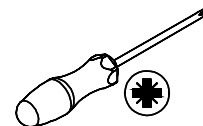

   Screw eccentric rod (A) into panel 1 at first.
Fix part(R) to plate 1 using screw(J) as shown.

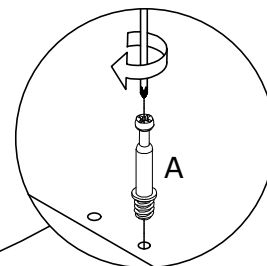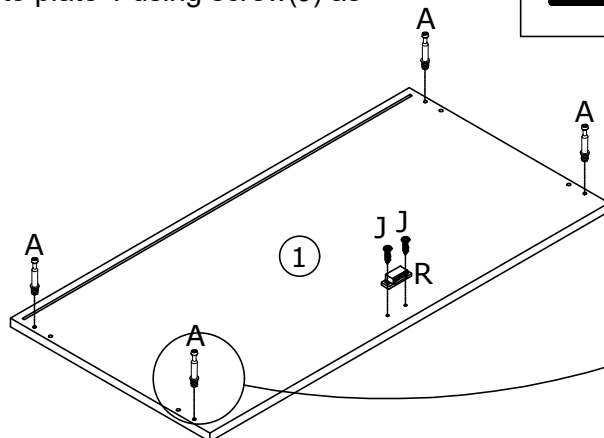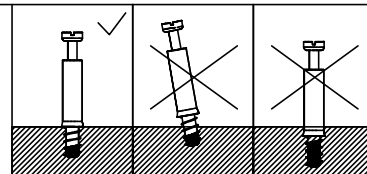


2




B x 4



 D x 4

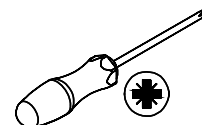


   Connect panel 4 and 3 to panel 1, add cam lock(B) into panel 4 and 3 then turn clockwise to tighten as shown.

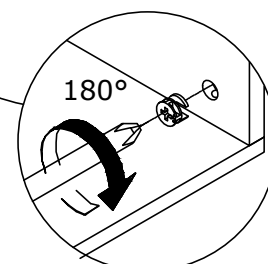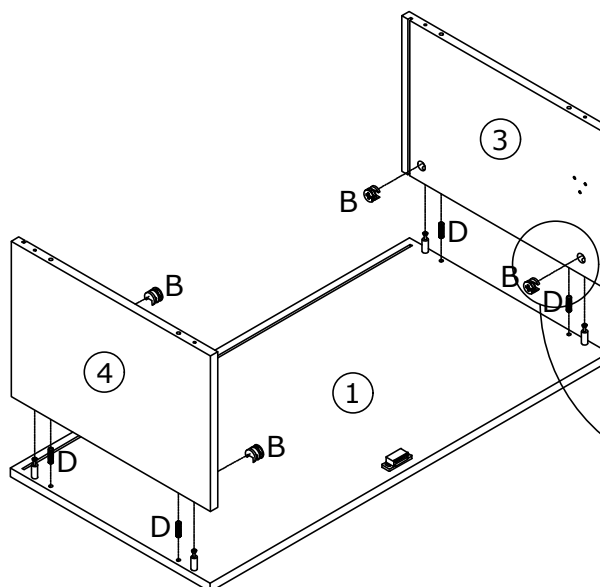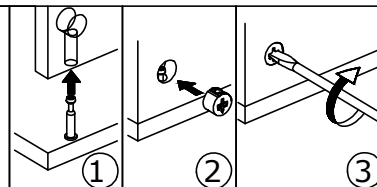


3

 
Insert back panel 18 into grooves of panel 1,3,4 as shown.

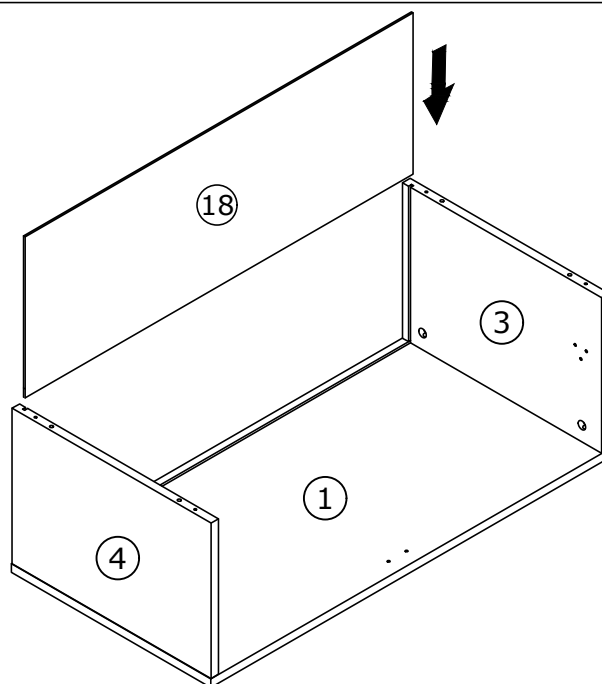


4

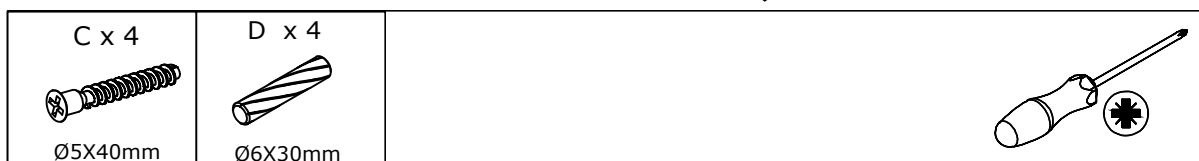 

 
Attach panel 2 to panel 3 and 4 using wooden dowel(D), and fix with screw(C) as shown.

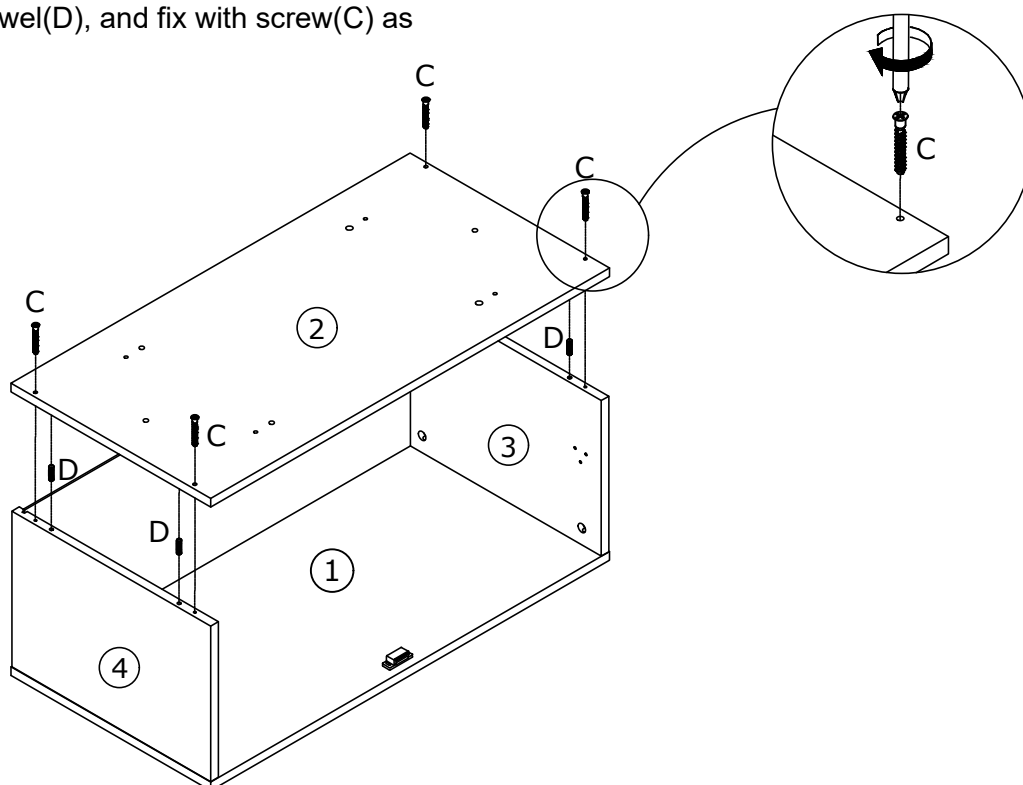



5

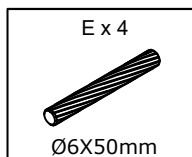 


 
Attach panel 19 to panel 2 using wooden dowel(E).

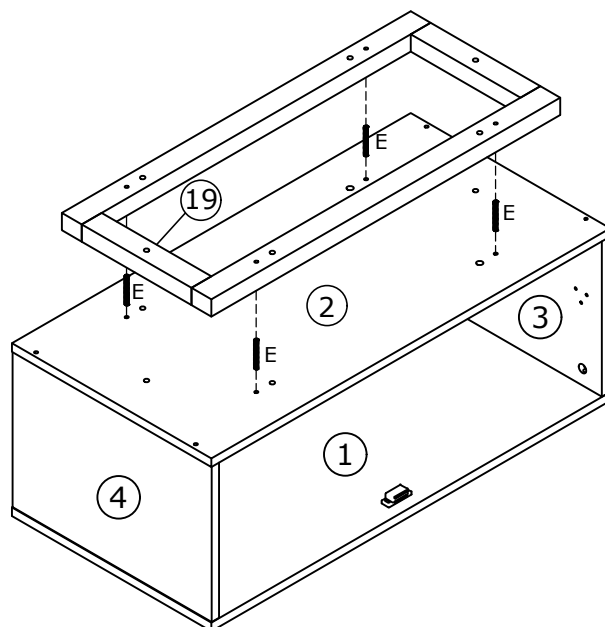

6

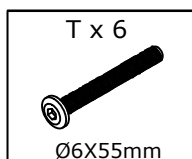  


 
 
Attach panel 5, 19 and 2 using screw(T).

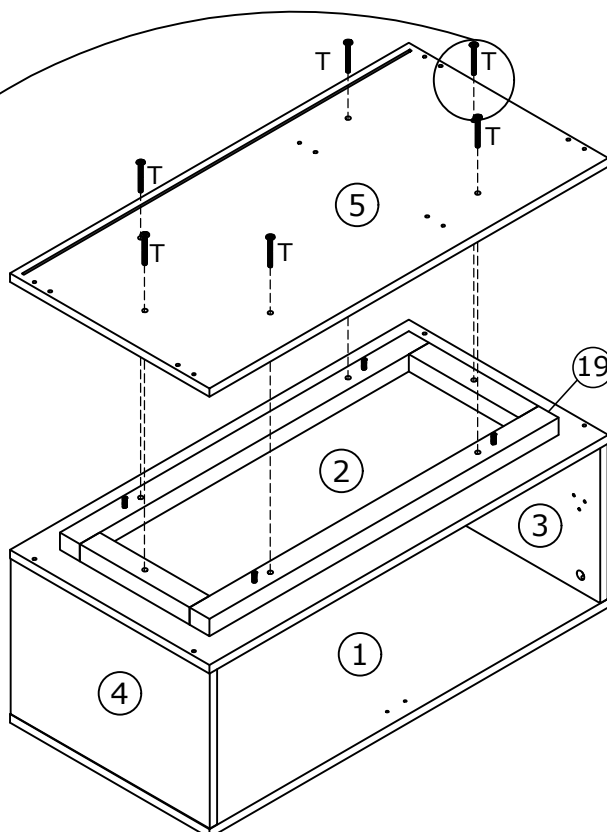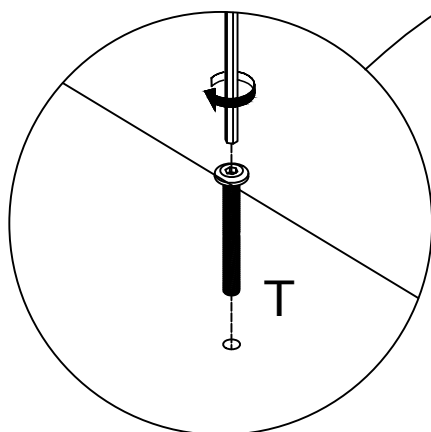

7



 
 
 
Screw eccentric rod (A) into panel 7 and 8 .

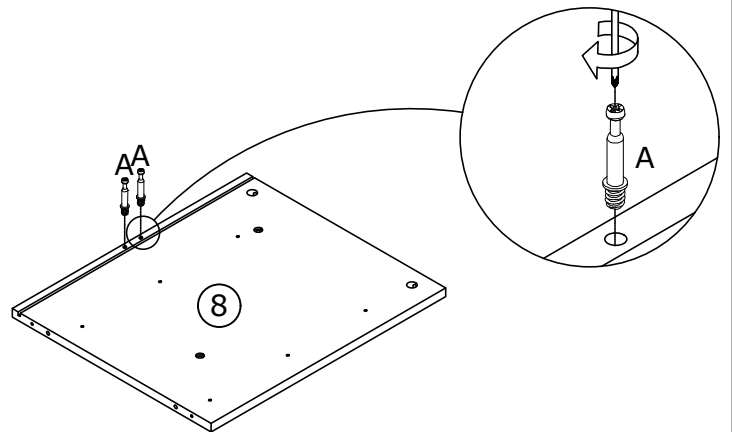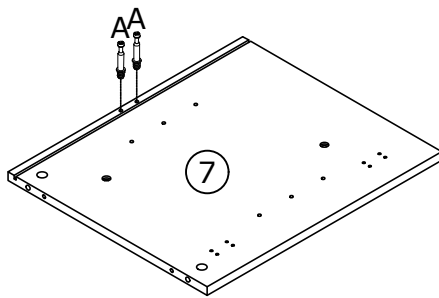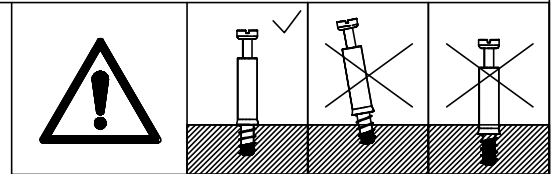

8



 
 
 
Fix rail N(CR) with screw(J) to panel 8 as shown.

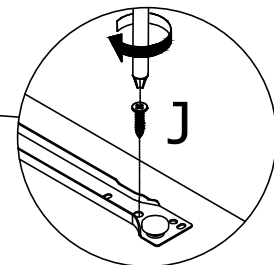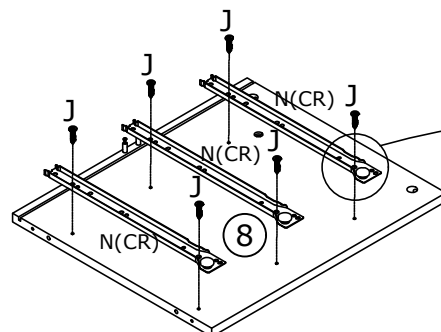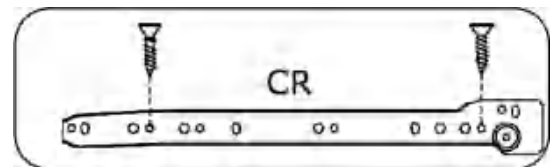

9



 
 
 
Fix panel 21 with screw(U) to panel 8 and 7 as shown.

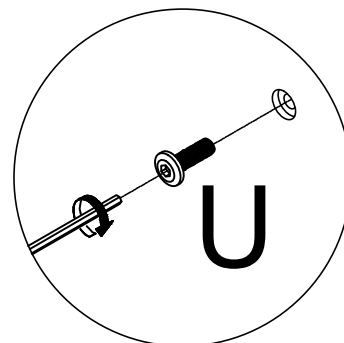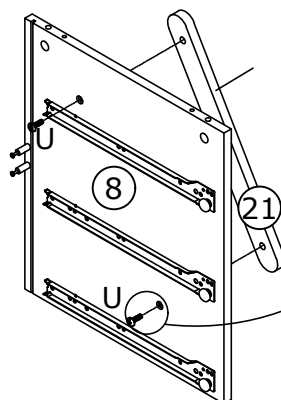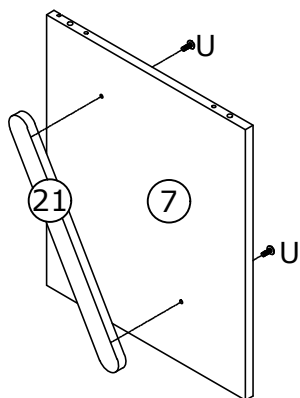





10



   Fix rail N(CL) with screw(J) to panel 9 as shown.

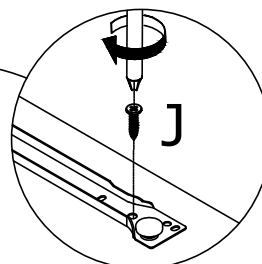
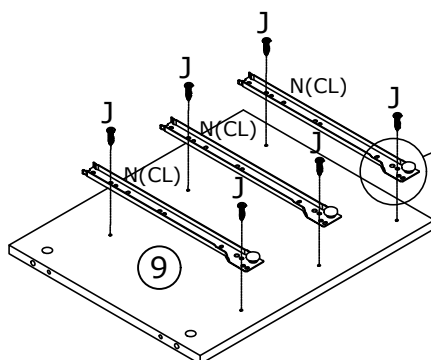
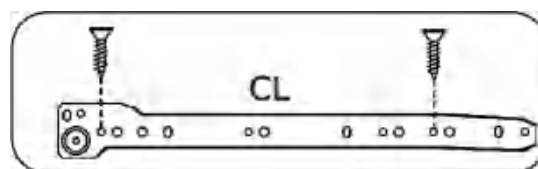


11

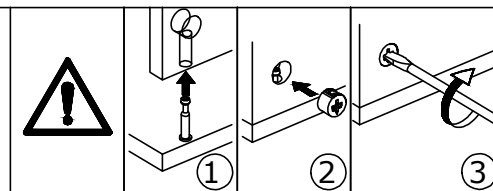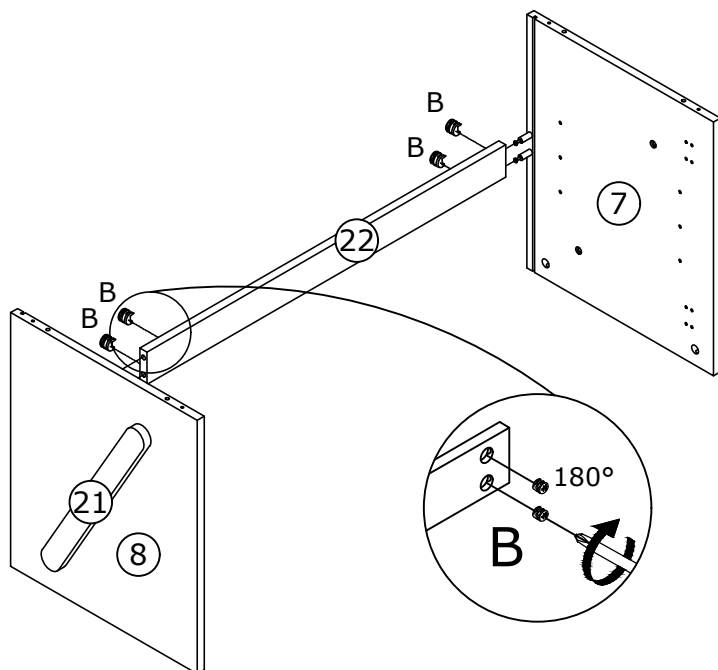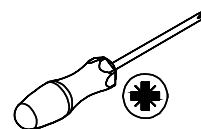   
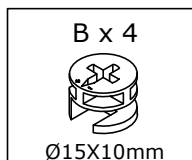 


Connect panel 7 and 8 to panel 22, add cam lock(B) into panel 22 then turn clockwise to tighten as shown.

   12

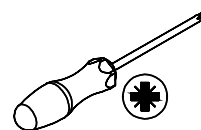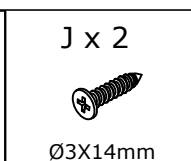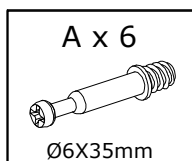


 
 
Screw eccentric rod (A) into panel 5 at first.
Fix part(V) to plate 5 using screw(J) as shown.

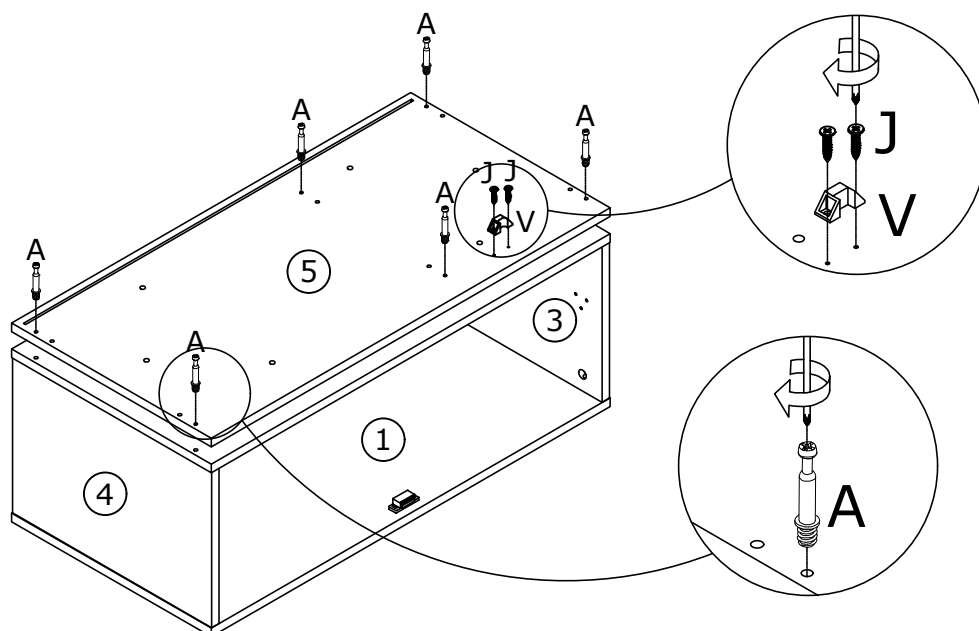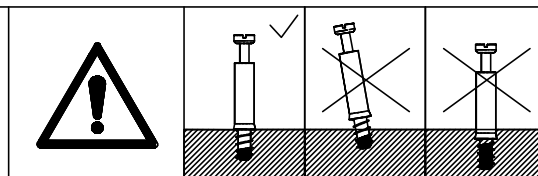

13



 
 
 
Attach panel 8,7 and 22 to panel 5 using wooden dowel (D),add cam lock(B) into panel 8 and 7 then turn clockwise to tighten as shown.

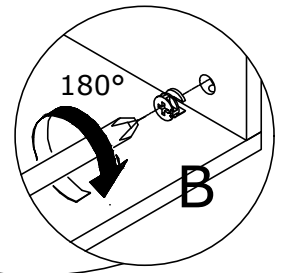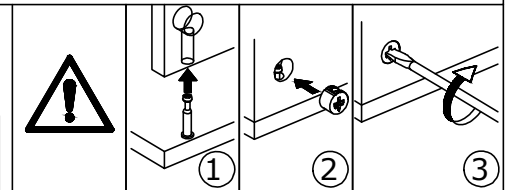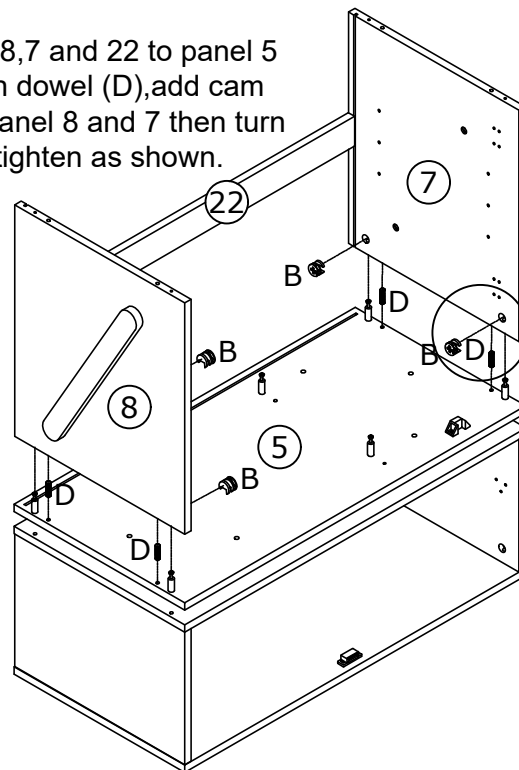

14




   Attach panel 9 to panel 5 using wooden dowel (D),add cam lock(B) into panel 9 then turn clockwise to tighten as shown.

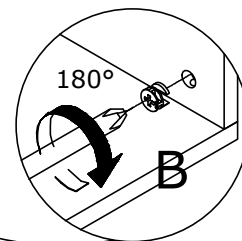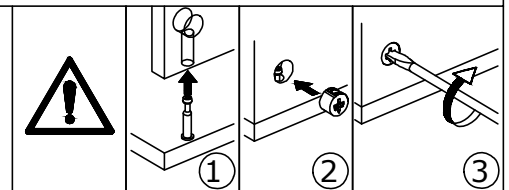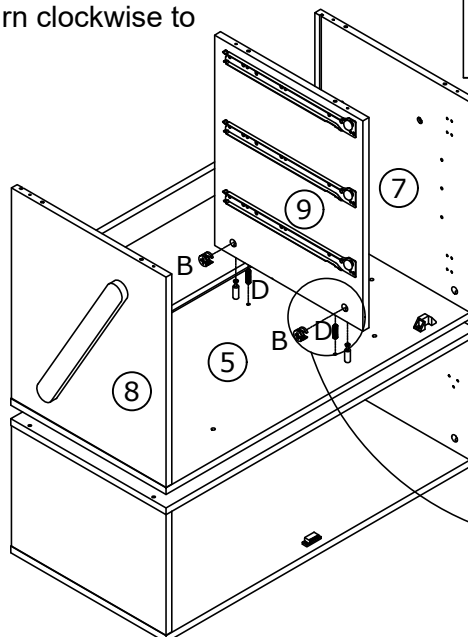


15

 
Insert back panel 17 into grooves of panel 5,7,8 as shown.

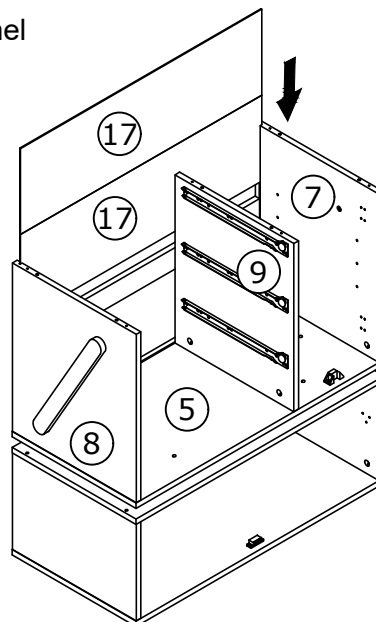


16

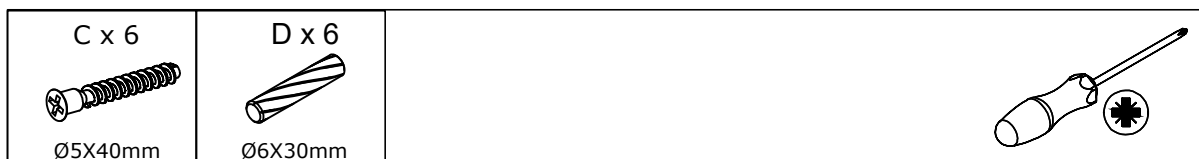 


 
Attach panel 6 to panel 7,8 and 9 using wooden dowel(D), and fix with screw(C) as shown.

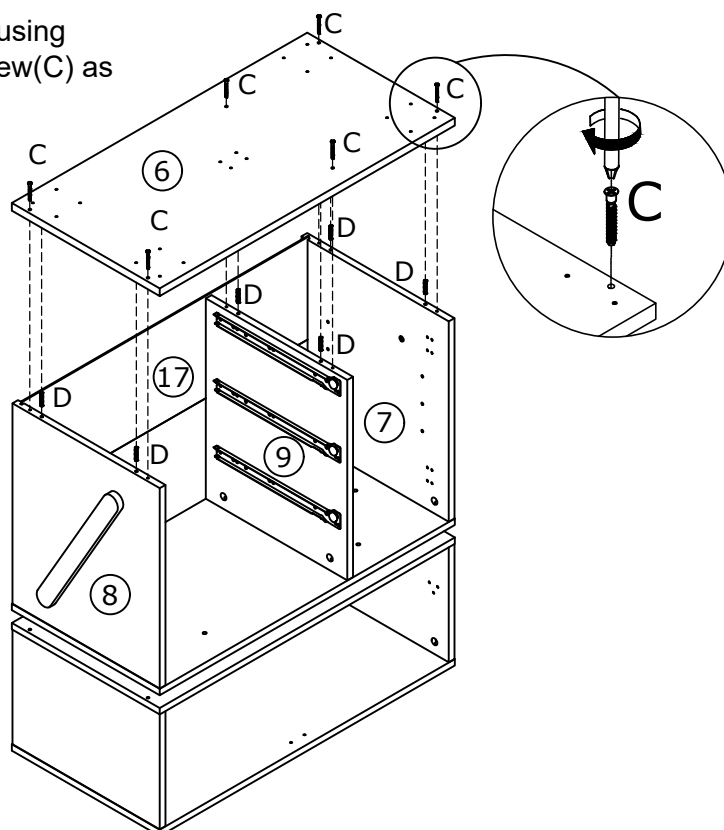


17

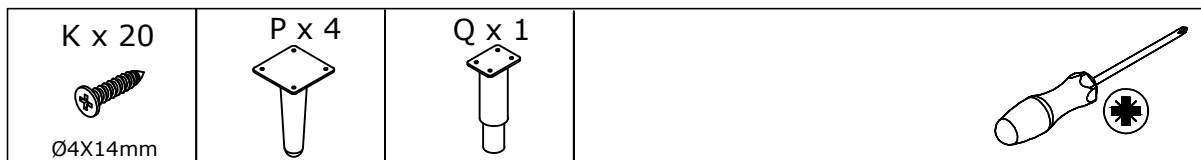 

  Fix leg support (P) and leg support (Q) to panel 6 using screws (K), as shown.


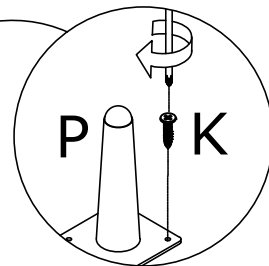
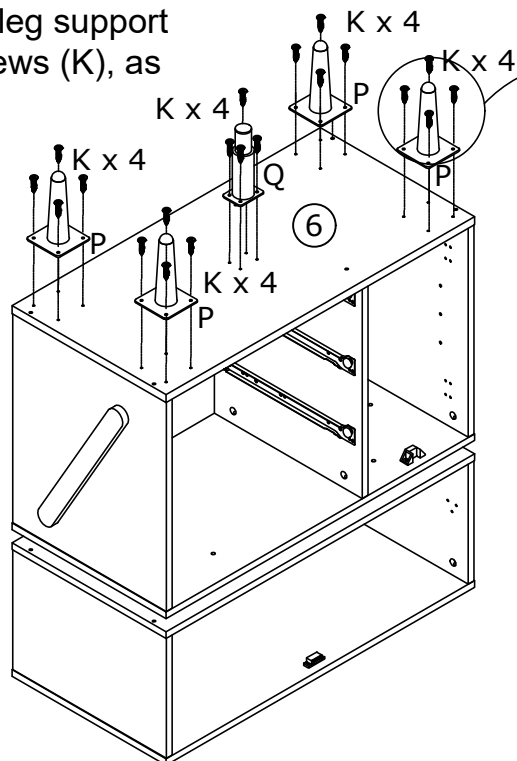


18

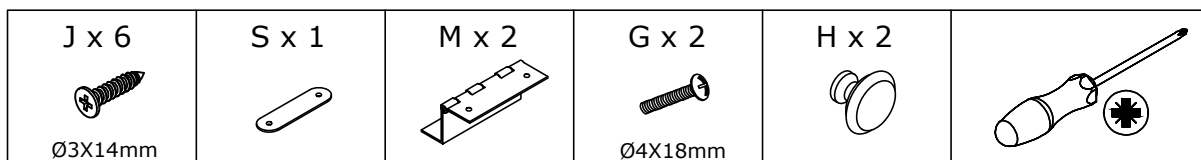 

Fix part (R) and part (M) to plate 10 using screw(J) as shown.

   
Fix handle(H) to plate 10 using screw(G).

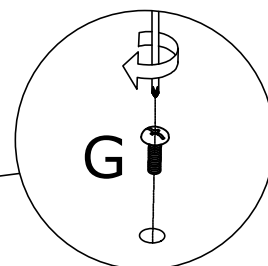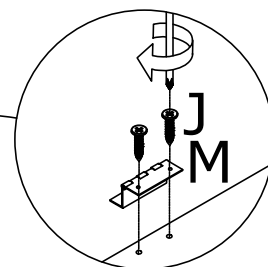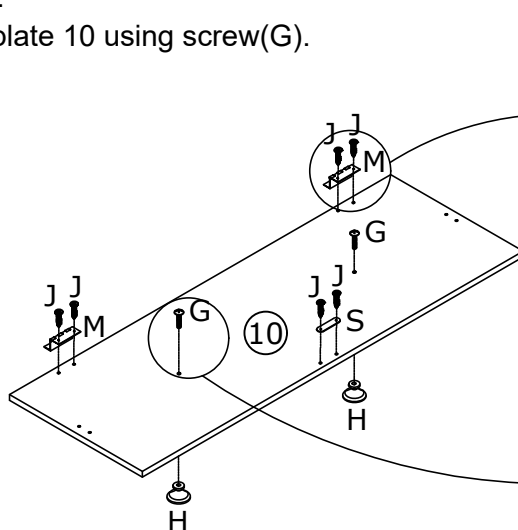

19



 
Fix part(W) to the panel 3,4 and 10 with screw(J) as shown.

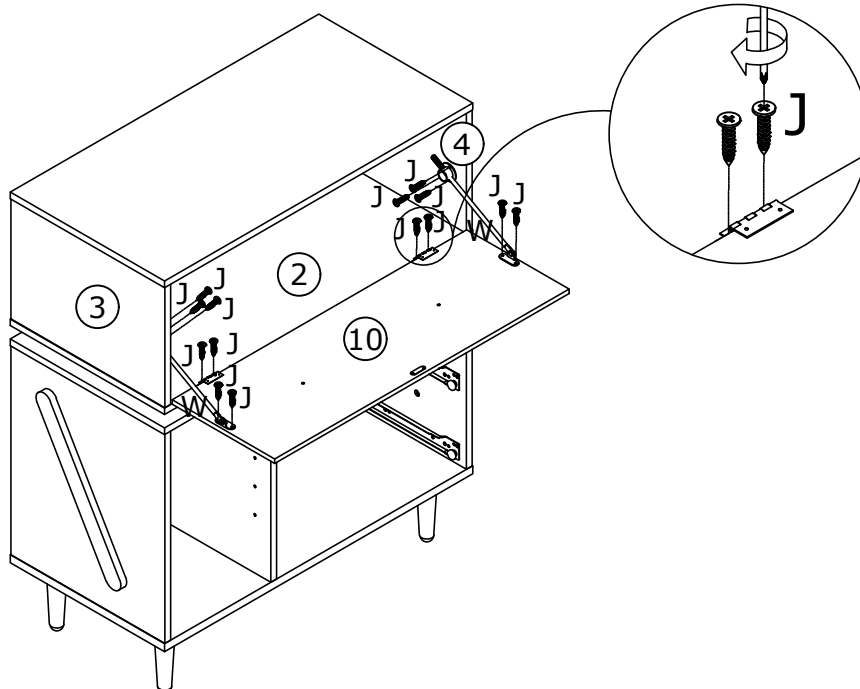






20

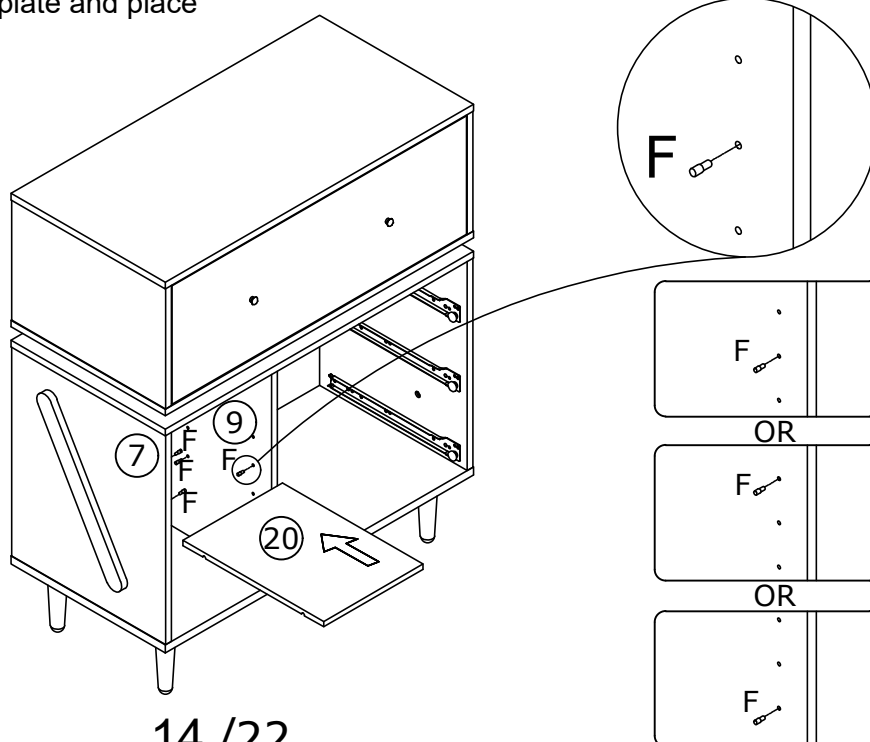 

  
Insert part(F) into side plate and place panel 20.




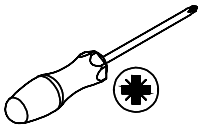 
21

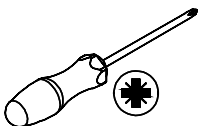J x 4  Ø3X14mm	G x 1  Ø4X18mm	H x 1 	L x 2 	
--	--	---	---	---


Fix hinge(L) to panel 11 with screw(J), fix handle(H) with screw(G) as shown.

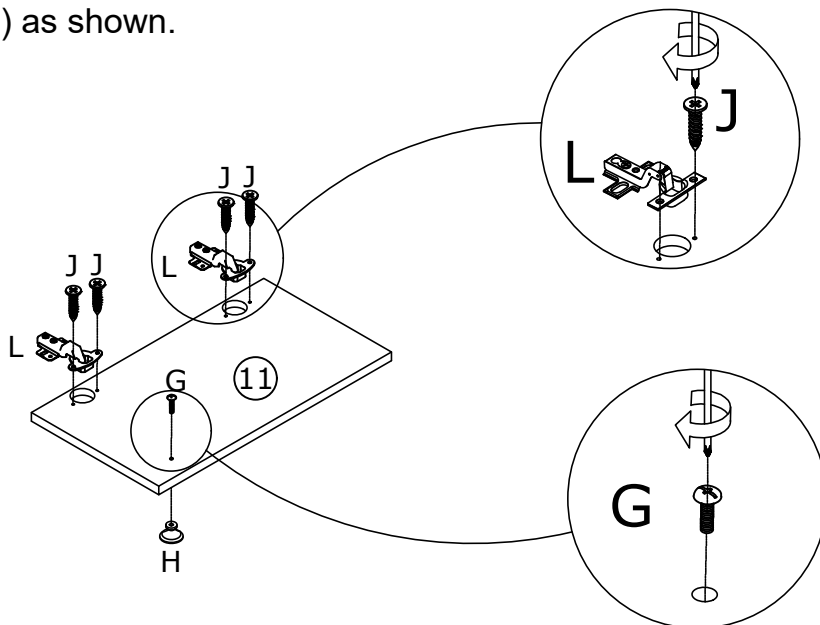


22

J x 8  Ø3X14mm	
--	---



 
Attach panel 11 to the panel 7 by fixing hinge with screw(J) as shown.

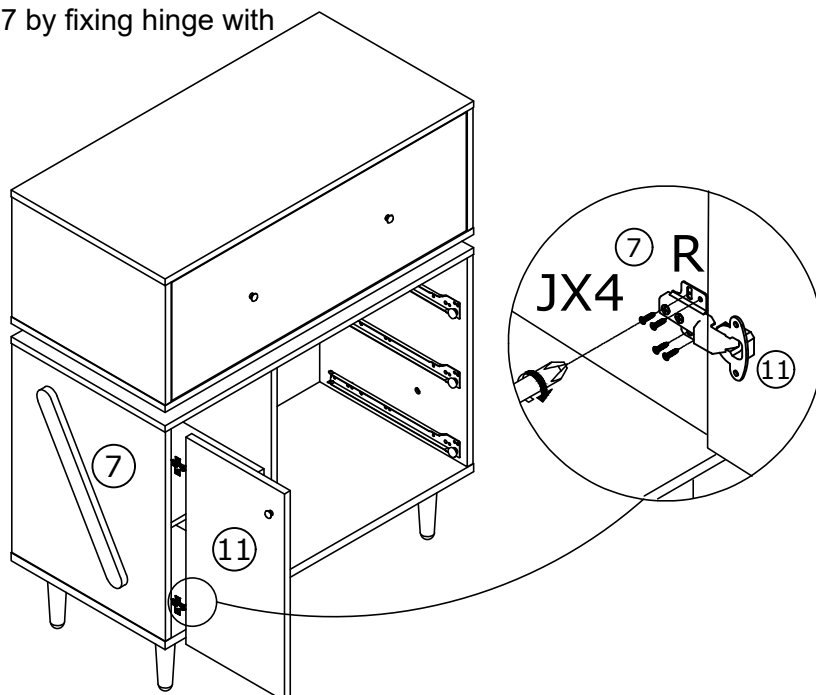

23

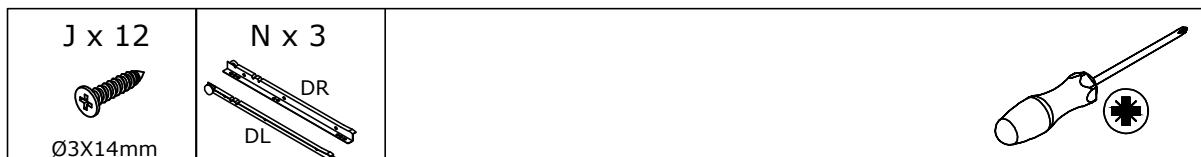 

   Fix guide rail N(DL) and N(DR) to drawers with screw(J) as shown. Pay attention to the installation direction of the rails(DL) is on the drawer's left, DR is on the drawer's right, as is shown).

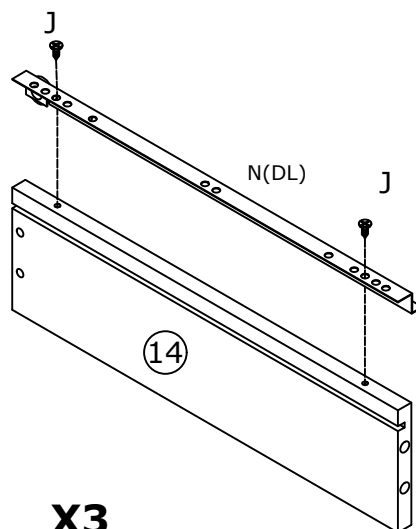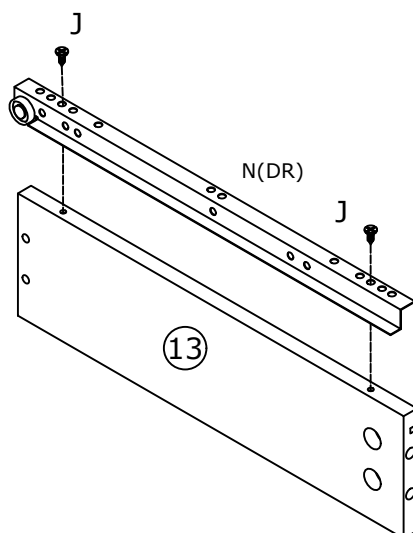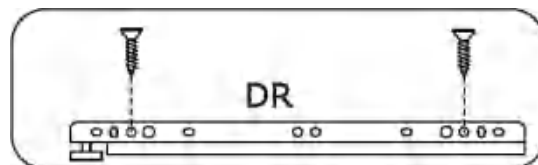


X3


24



 
Attach panel 13 and 14 to panel 15 using screw(C) as shown. Insert bottom panel 16 into grooves of the panel 13 and 14.

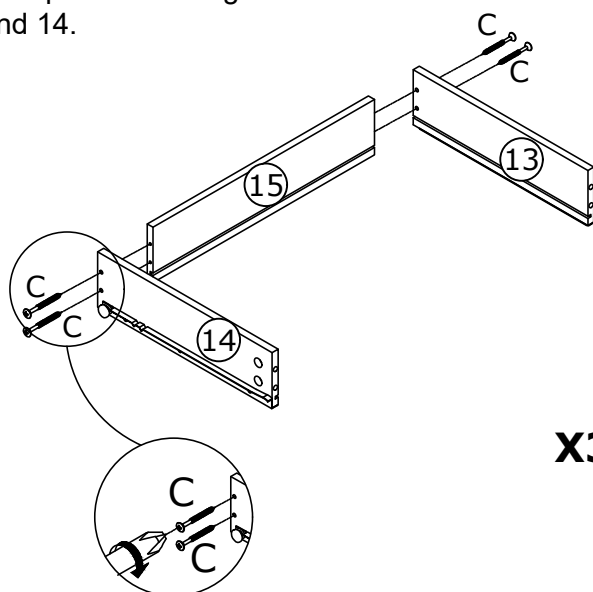


X3

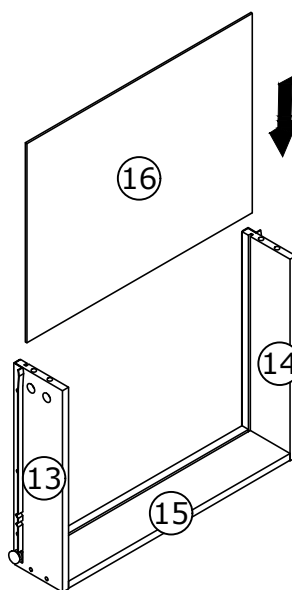 

25


A x 12  Ø6X35mm	G x 3  Ø4X18mm	H x 3 	
---	--	---	---

 Screw eccentric rod(A) into panel 12.
Fix handle(H) with screw(G) as shown.


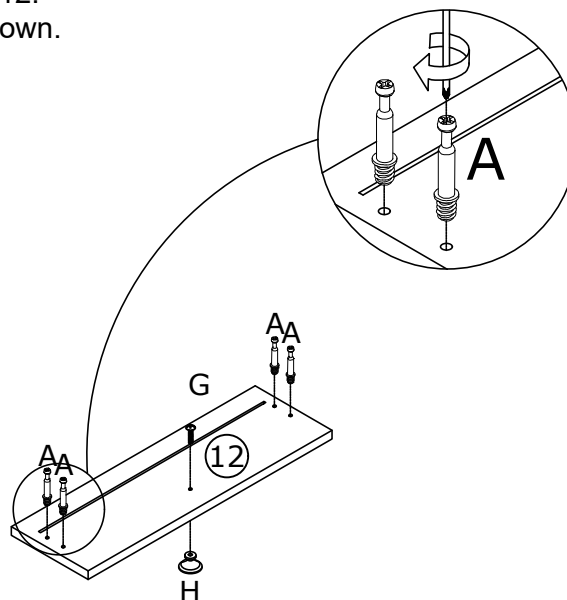


X3

 26

B x 12  Ø15X10mm	
--	---

  
Assemble drawers using cam lock (B) and turn clockwise to tighten as shown.

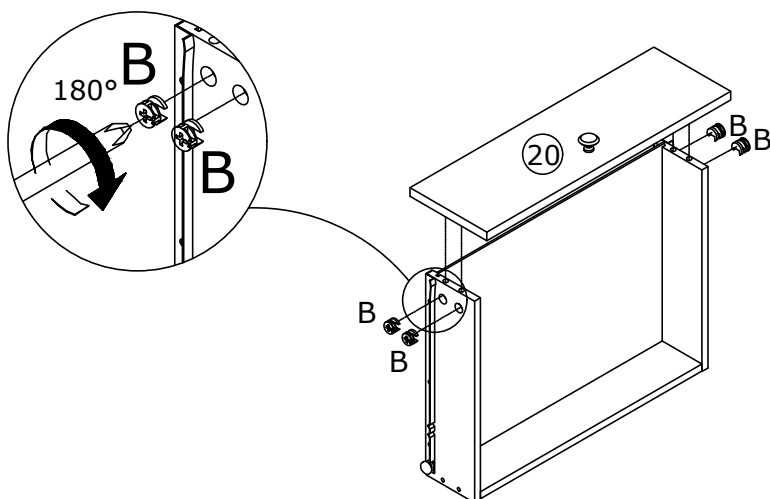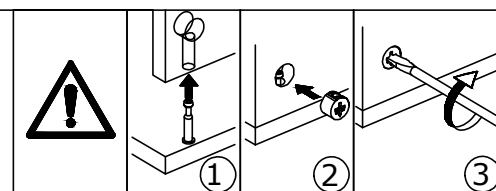

X3


27

 The drawer slides must be aligned with the internal rails, otherwise the drawer will tilt.

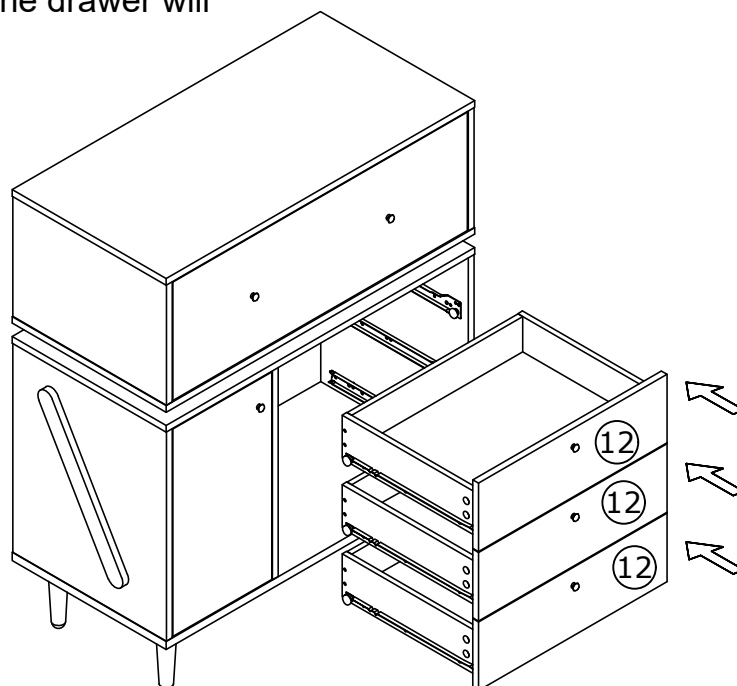

28

 Y x 12





J x 12



Ø3X14mm

  Tuck part(Y) into the gap of the back panel using screw(J) as shown.

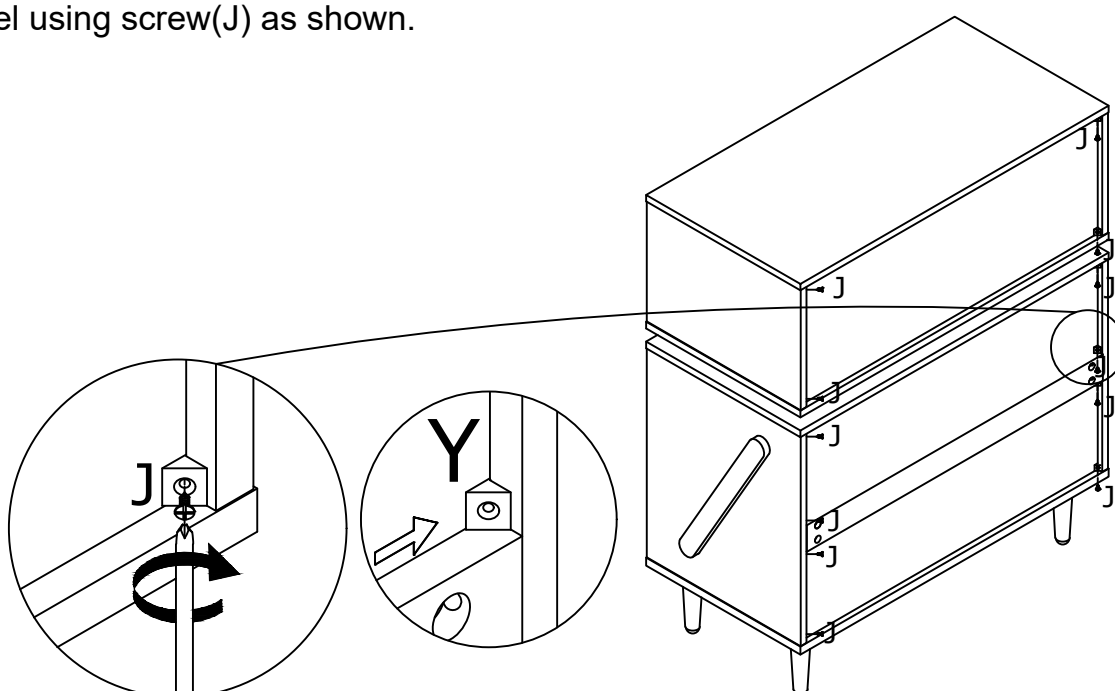

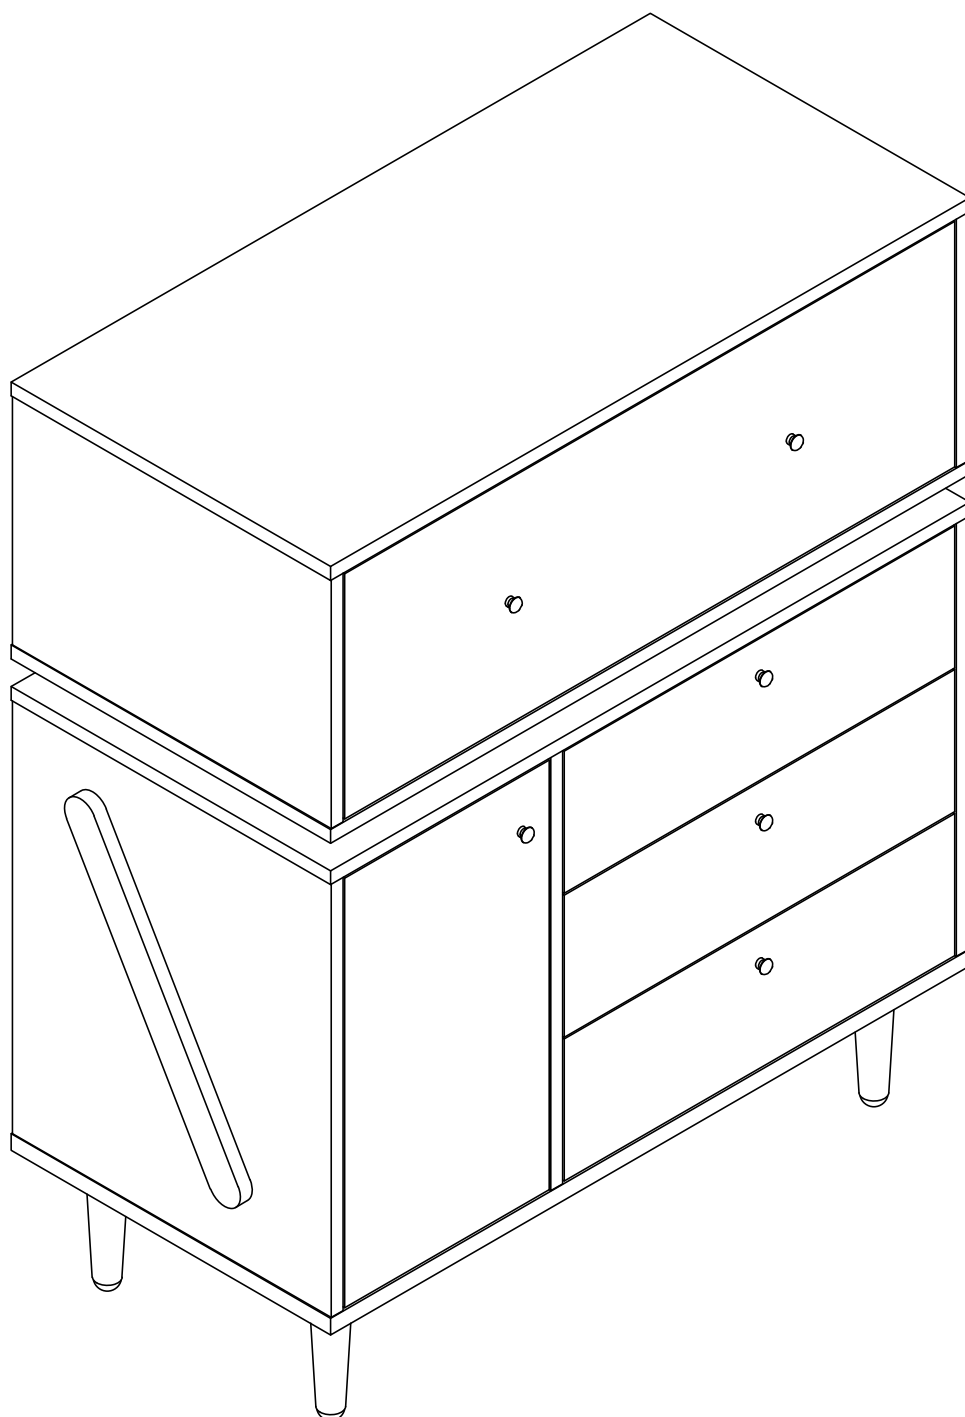

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.