


## Tools Required

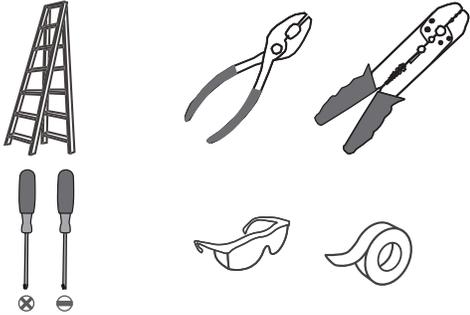

## Light Source

32W  
**LED**

## Fixture Height Adjustable 13.5" to 49.5"



### ⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

## Package Contents


**Preparation:** Identify and inspect all parts before beginning the installation.  
Missing or damaged parts? Contact your original place of purchase.

### PARTS BAG

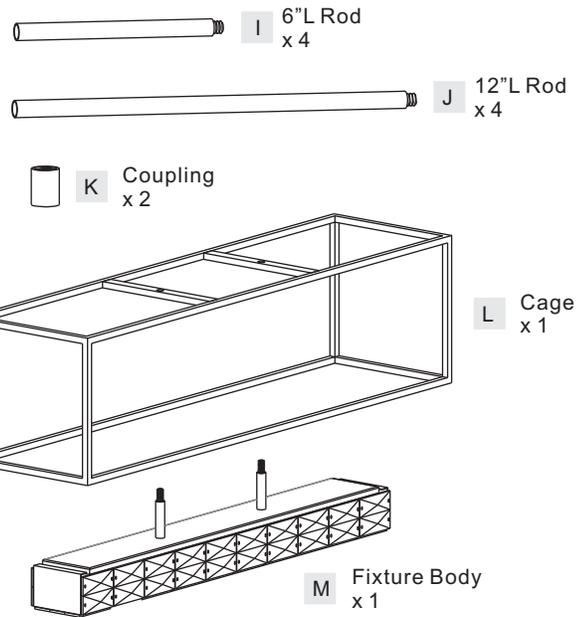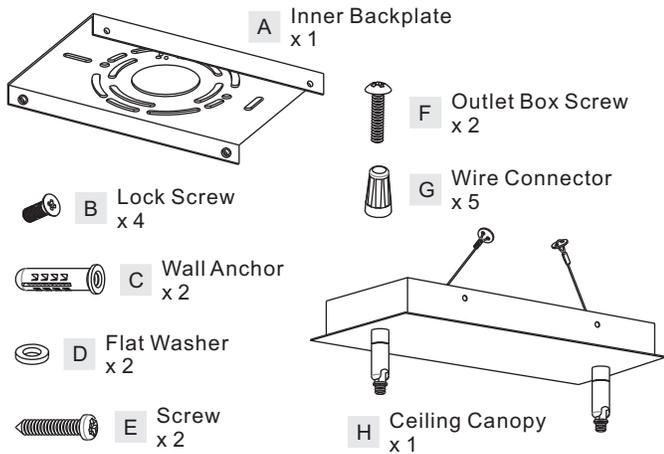


## Table of Contents

### Cage & Fixture Body

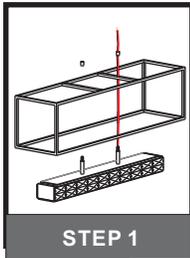


STEP 1

### Downrods

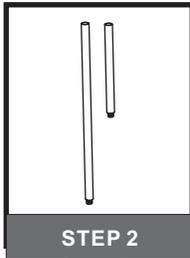


STEP 2

### Ceiling Canopy to Rod

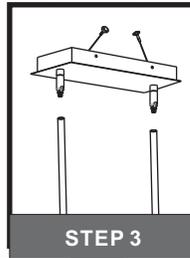


STEP 3

### Wiring to Driver

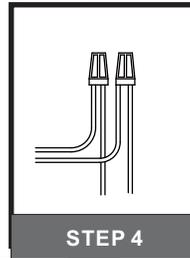


STEP 4

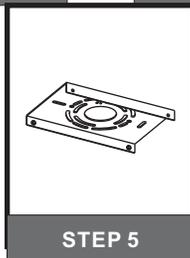


STEP 5

Inner Backplate

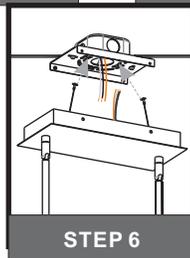


STEP 6

Lanyard

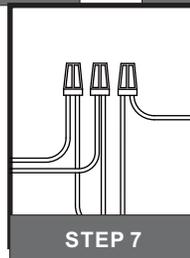

STEP 7


Wiring to Outlet Box

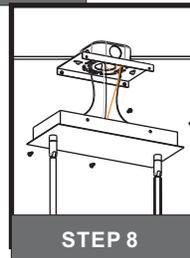

STEP 8

Ceiling Canopy



### STEP 1

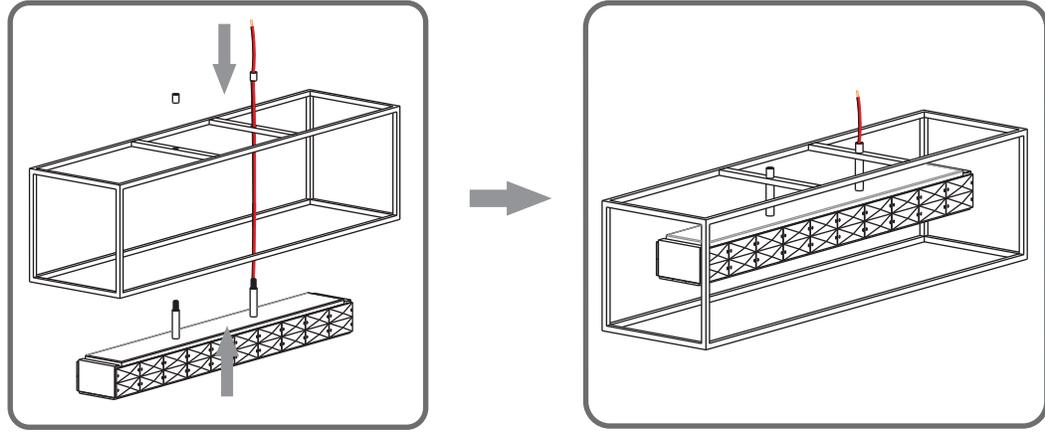

### STEP 2

#### Optional Rods

 
- 8' ceiling:  
(4) 12"L rods
- 9' ceiling:  
(4) 6"L + (4) 12"L rods

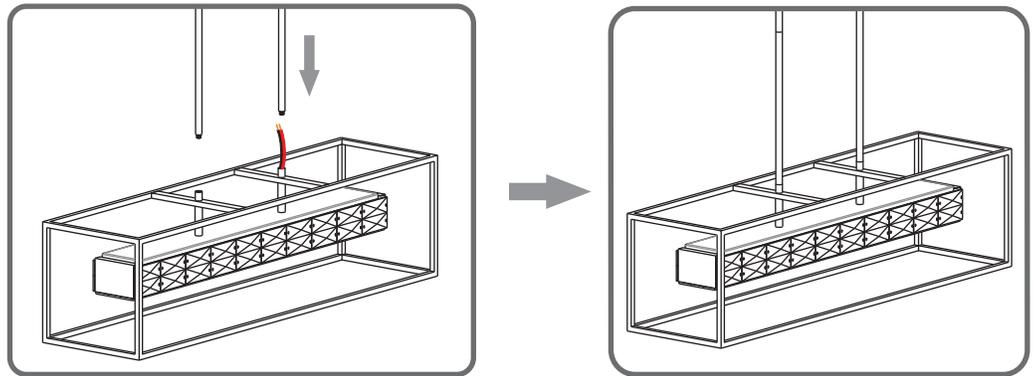

### STEP 3

1


Separate Swivels from ceiling canopy

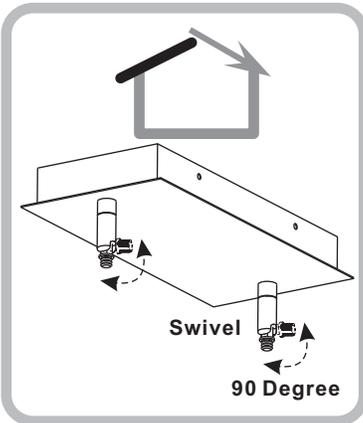

For angled ceilings,  
Swivel opening towards wall.


2

Install Swivels to upper rods

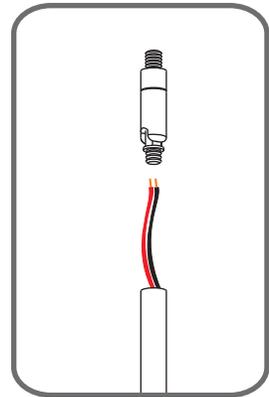


3

Reinstall swivels to ceiling canopy

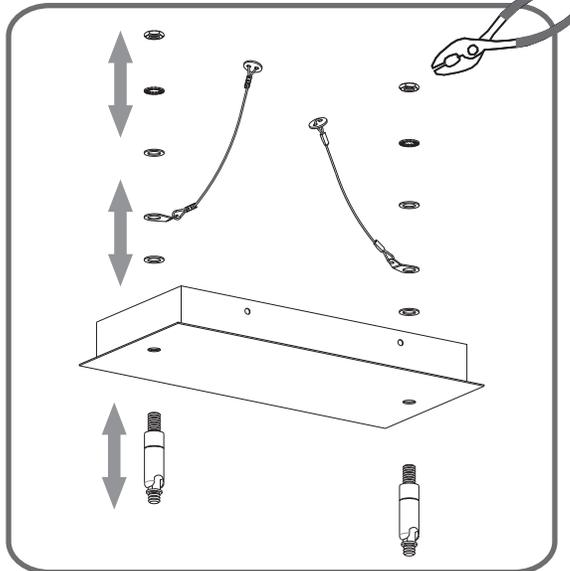


## STEP 4

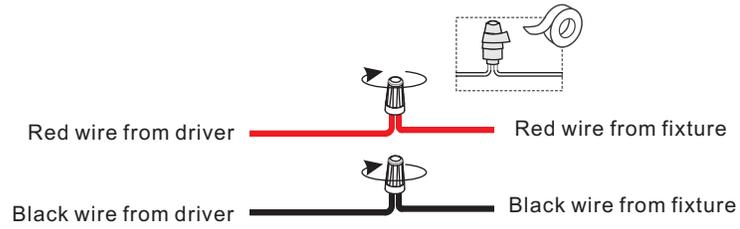

## STEP 5


1

Fit inner backplate to outlet box

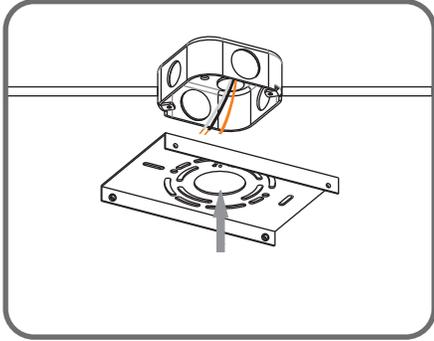




2

Mark anchor holes location on the ceiling

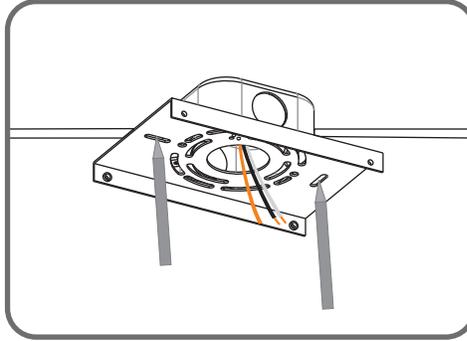


3

Drill holes for anchors from marks

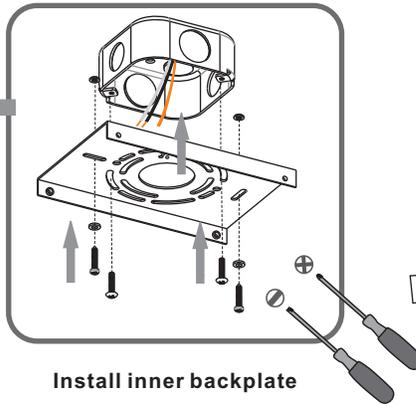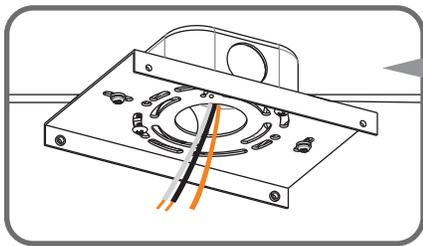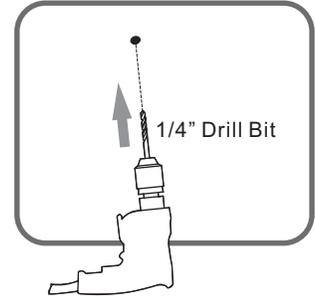

Install inner backplate


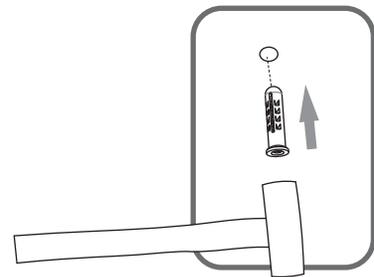


Install wall anchors


5

4

## STEP 6

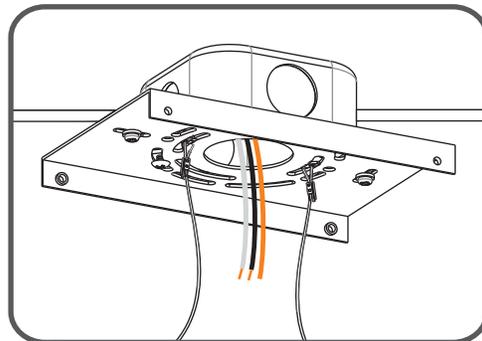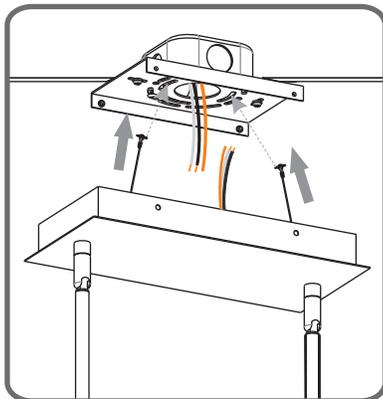

## STEP 7

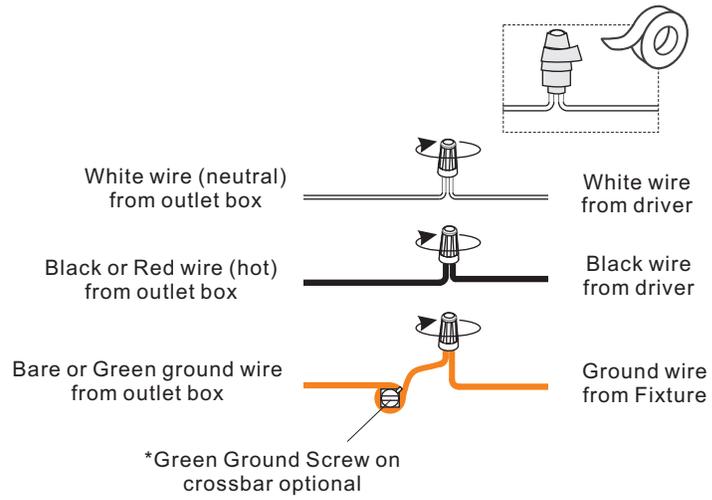

## STEP 8

