


User's Manual

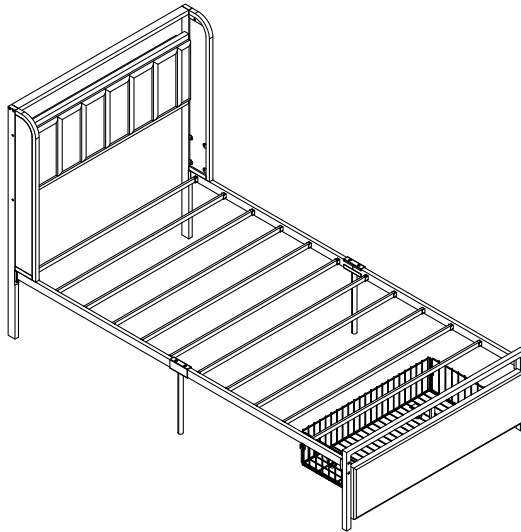

Give us the chance to do better for you !

Hardware List

 M8 A 8PCS	 M6x15 B 6PCS	 M6x50 E 8PCS	 M5x30 F 8PCS	 M6x60 G 2PCS
 M8x55 H 8PCS	 ø6 J 10PCS	 ø8 K 8PCS	 S5 L 1PC	 S10, 13 M 1PC
 M8x45 N 4PCS	 S4 P 1PC	 Q 3PCS	 R 2PCS	

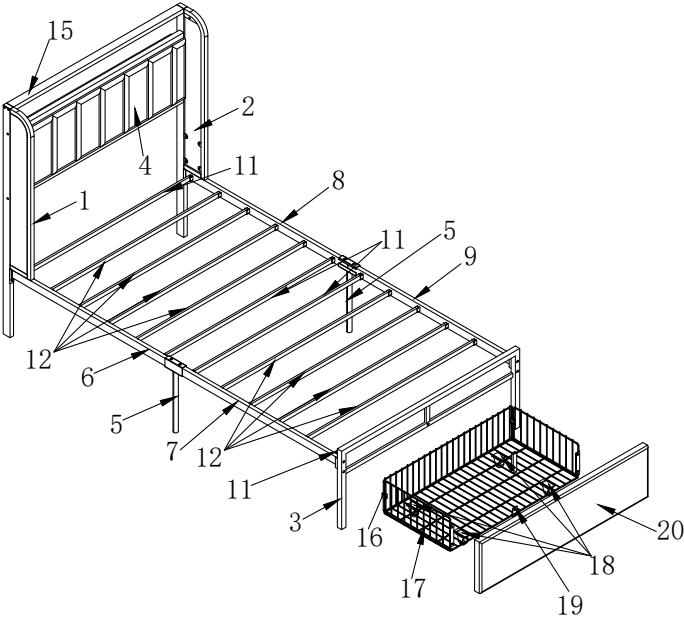


 M6x50	
E	8PCS

 ø6	
J	8PCS

 S5	
L	1PCS

 R	
R	2PCS

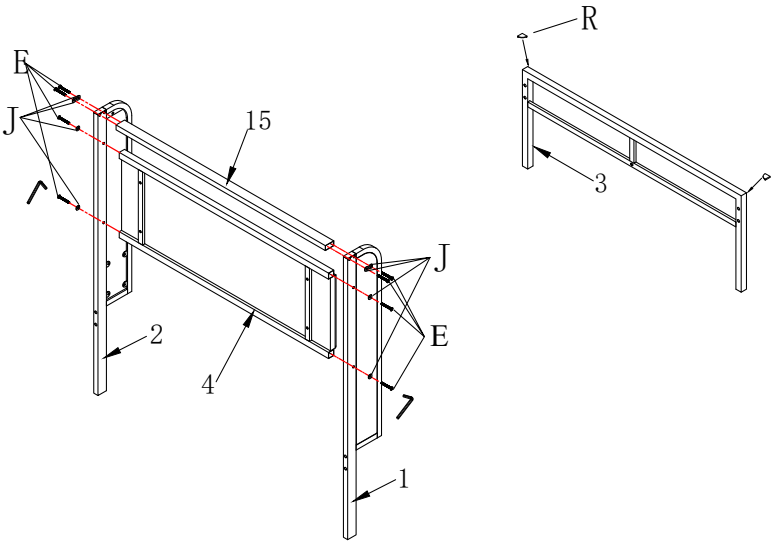


	
M8	
A	4PCS

	
M8x55	
H	4PCS

	
S5	
L	1PC

	
S10, 13	
M	1PC

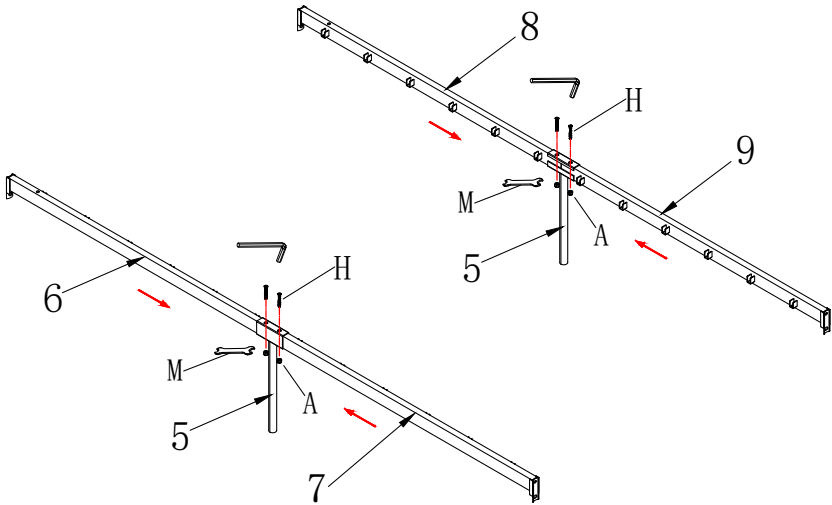

	
M8	
A	4PCS


	
M8x55	
H	4PCS


 
 
 
	
M8x45	
N	4PCS

	
ø8	
K	8PCS

	
S5	
L	1PC


	
S10, 13	
M	1PC

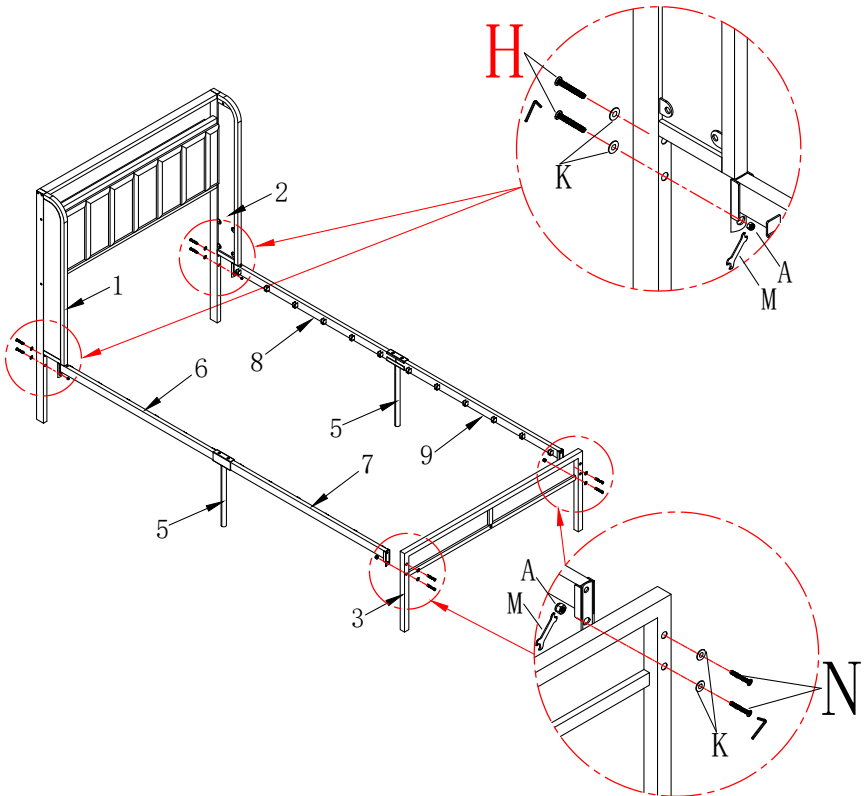


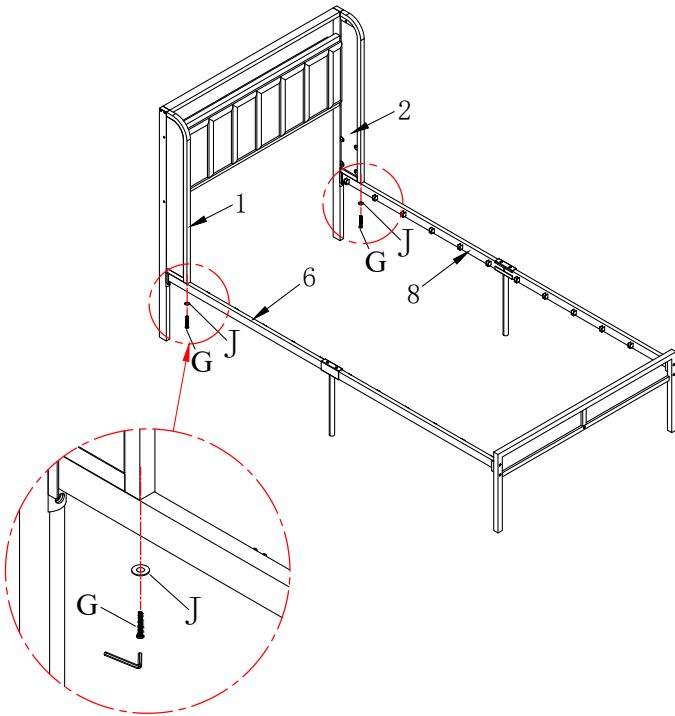



	
M5x30	
F	8PCS

	
S4	
P	1PC

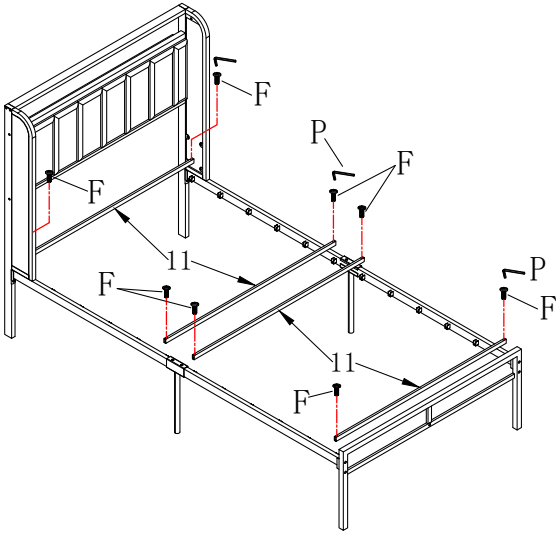

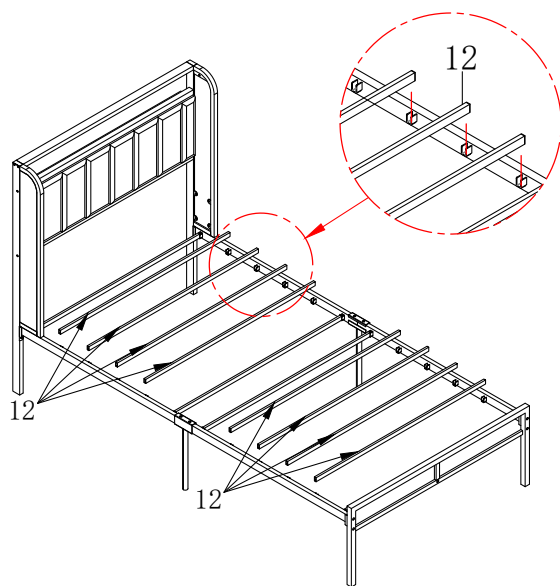


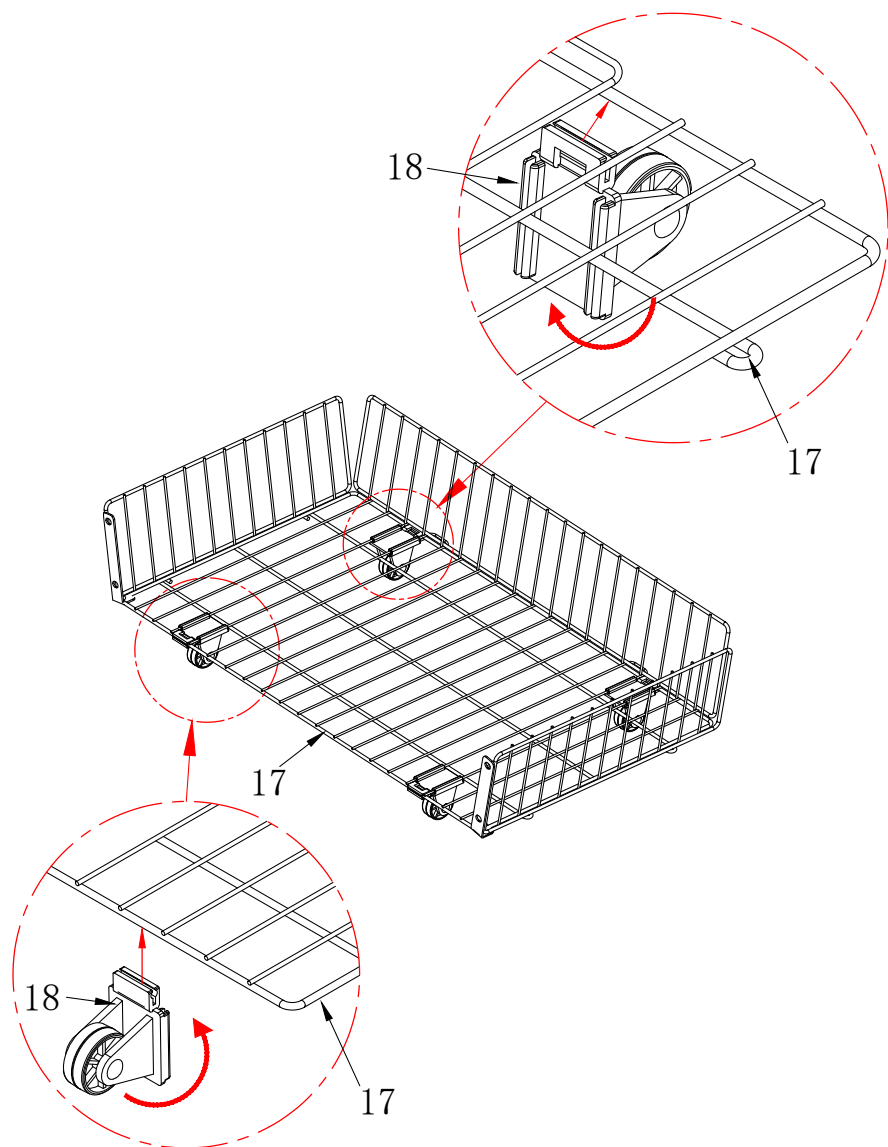

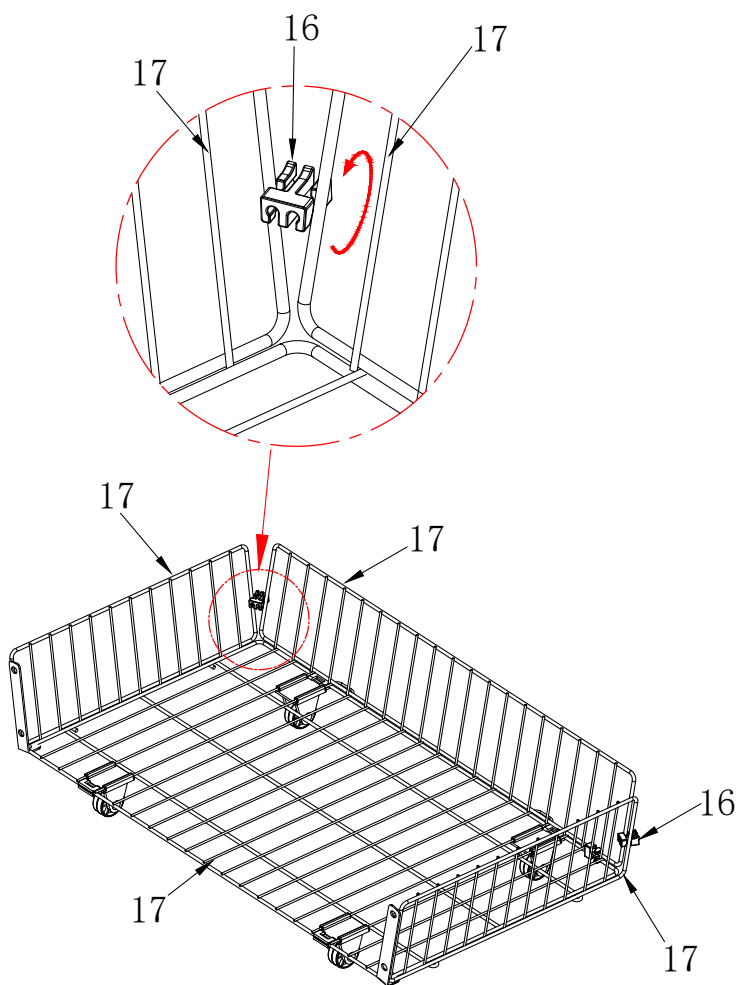


	
M6x15	
B	6PCS

	
S5	
L	1PC

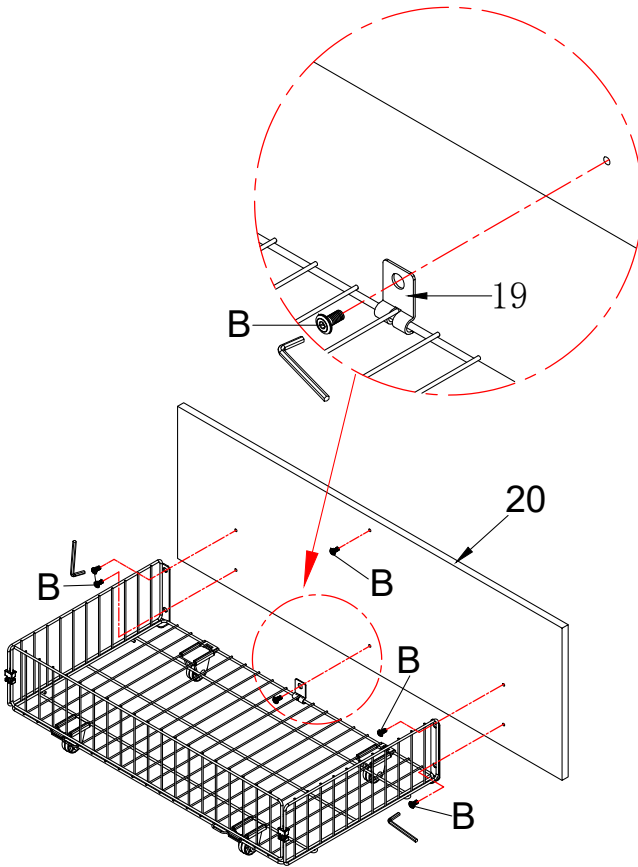

	
Q	3PCS

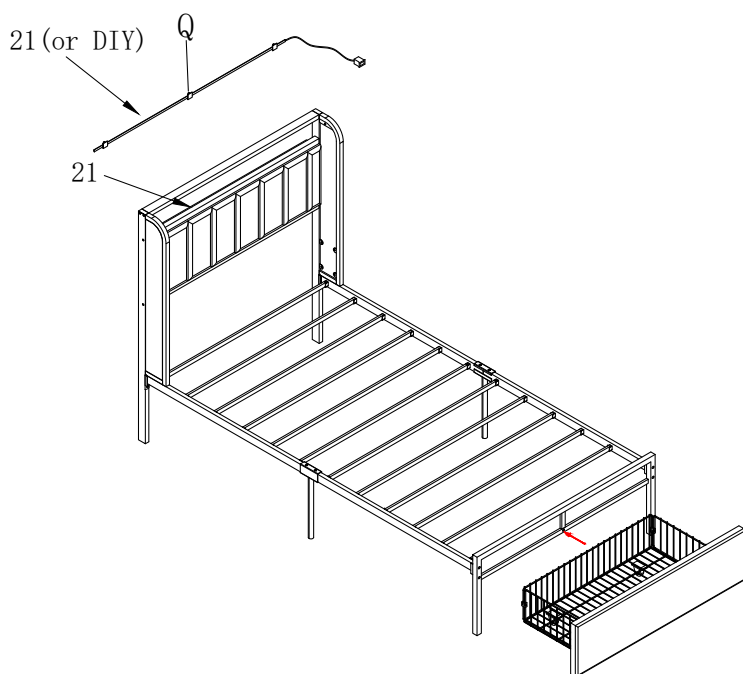

Part 21-Recommended installation position of the lamp belt (can be freely installed in other positions)

