



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product, please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3535

gameroom@escaladesports.com

Or write to:
Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

 
Your Model Number: M01484W

Date Code: 2-M01484W- -GR

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

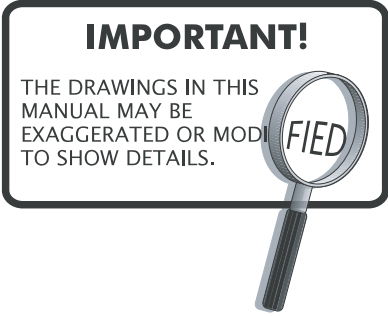

TWO (2) ADULTS ARE REQUIRED TO ASSEMBLE THIS REDLINE ALLEY OOP SINGLE SHOOTOUT

Tools Needed:

- Allen Wrench (provided)
- Phillips Screwdriver
- Pliers

IMPORTANT !

Make sure you understand the following tips before you begin to assemble your basketball shootout.

- 1.This game (with Mechanical Scoring Arm) can be played outdoors in dry weather - but must be stored indoors.
- 2.Tighten hardware as instructed.
- 3.Do not over tighten hardware,as you could crush the tubing.
- 4.Some drawings or images in this manual may not look exactly like your product.
- 5.**To prevent damage to the electronics or to your wall, do not place this unit any closer than six inches from the wall.**



WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.

 


WARNING:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS BASKETBALL
SHOOTOUT TOGETHER.**

HARDWARE IDENTIFIER


(To Scale)



H1 - M6 x 35mm
Allen Head Bolt
(1 pc)

 

H2 - M6 x 60mm
Allen Head Bolt
(2 pcs)

 

H3 - M6 x 25mm
Allen Head Bolt
(8 pcs)



H4 - M6
Flat Washer
(7 pcs)



 
H5 - M6
Wing Nut
(11 pcs)



H6 - Plastic Bushing
(2 pcs)




H7 - M6
Lock Washer
(8 pcs)




T1 - Allen Wrench
(1 pc)

 
PARTS IDENTIFIER (Not to Scale)

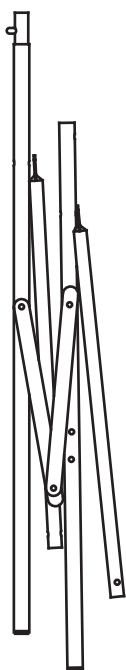


P1 - Left Lower
Tube Assembly
(1 pc)

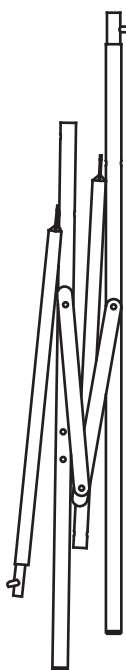 


P2 - Right Lower
Tube Assembly
(1 pc)

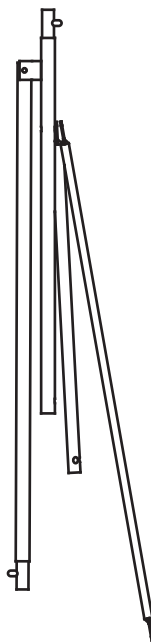 


P3 - Left Middle
Tube Assembly
(1 pc)

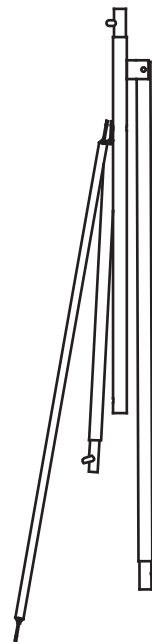 


P4 - Right Middle
Tube Assembly
(1 pc)

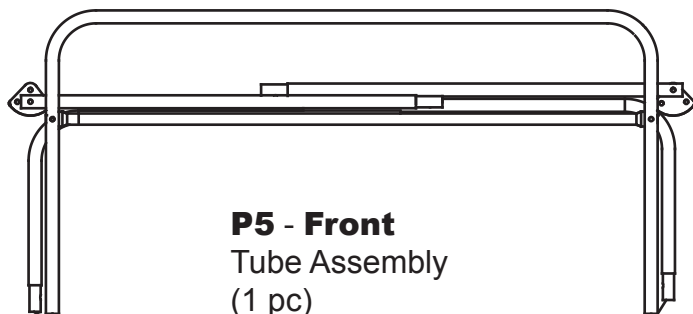 


P5 - Front
Tube Assembly
(1 pc)

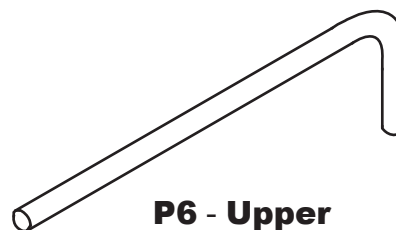 

P6 - Upper
Tube (2 pcs)

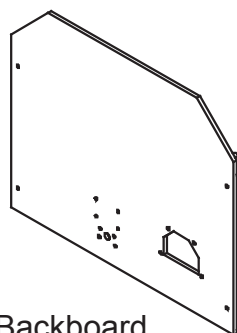 


 P7 - Backboard
with Tubes Assembly
(1 pc)

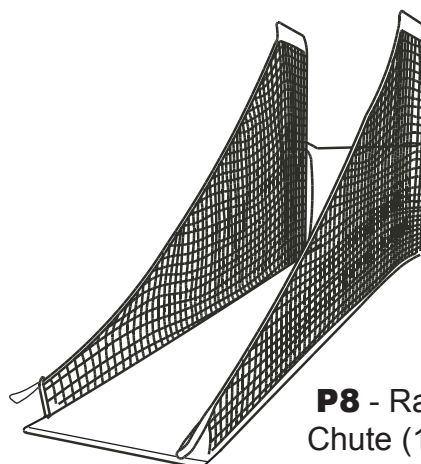


P8 - Ramp
Chute (1 pc)

 PARTS IDENTIFIER (Not to Scale)

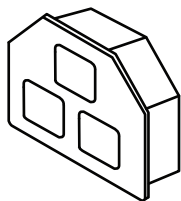


P9 - Electronic Scorer (1 pc)

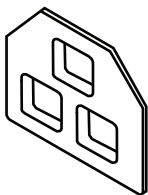 


P10 - Electronic Scorer Face Plate (1 pc)



 
P11 - Mechanical Scoring Arm (1 pc)

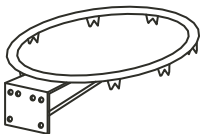

 
P12 - Rim (1 pc)
Note: This is a special rim designed to avoid entanglement with the mechanical scoring arm.



 P13 - Rim Net (1 pc)
Note: This is a special rim net designed to avoid entanglement with the mechanical scoring arm.




P14 - Rim Support Plate (1 pc)

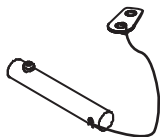 


P15 - Locking Pin (2 pcs)

 ACCESORY IDENTIFIER (Not to Scale)



A1 - Air Pump with Needle (1 pc)

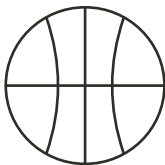 

A2 - Basketball (2 pcs)



WARNING:
CHOKING HAZARD
Small parts.
Not for children under 3 yrs.

Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts List.
NOTE: STEP 1, 2 AND 3 requires a second adult to help “hold” the assemblies as being assembled
NOTE: When unfolding assemblies, be careful not to bend any parts.

PARTS REQUIRED:

- 1 pc - **P1 Left Lower Tubes Assembly**
- 1 pc - **P2 Right Lower Tubes Assembly**


STEP 1

Connect **P2 - Right** Lower Tubes Assembly to **P1 - Left** Lower Tubes Assembly using Spring Lock as shown in **FIGURE 1**.

NOTE: STEP 1, 2 and 3 requires a second adult to help “hold” the assemblies as being assembled.

FIGURE 1

 WARNING / PINCH HAZARD!
Keep hands and fingers away from hinge until STEP 3 is complete and the hinge is in a controlled position.

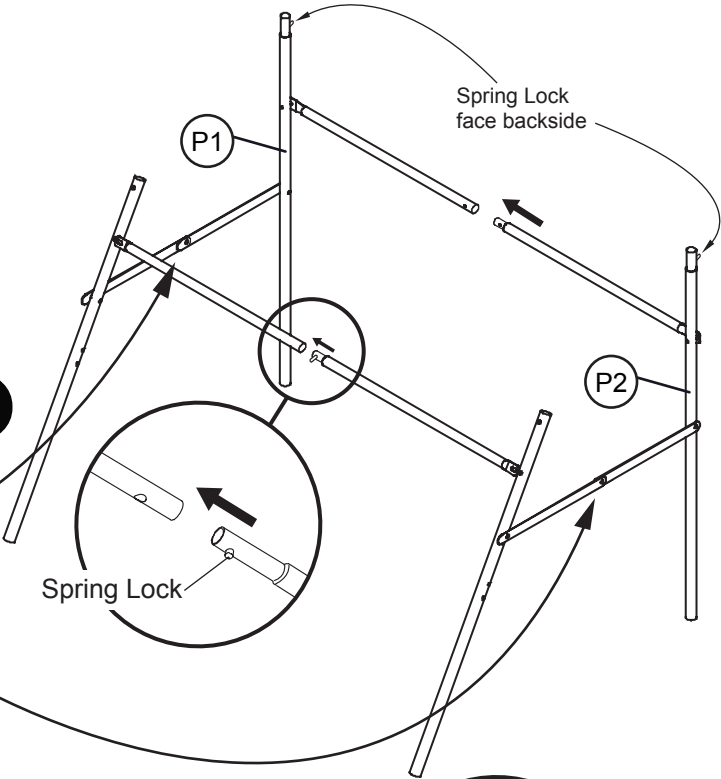

PARTS REQUIRED:


- 1 pc - **P3 Left Middle Tubes Assembly**
- 1 pc - **P4 Right Middle Tubes Assembly**

STEP 2

Connect **P4 - Right** Middle Tubes Assembly to **P3 - Left** Middle Tubes Assembly using Spring Lock as shown in **FIGURE 2**.

NOTE: The only assembly in this step is connecting this spring lock.

 FIGURE 2

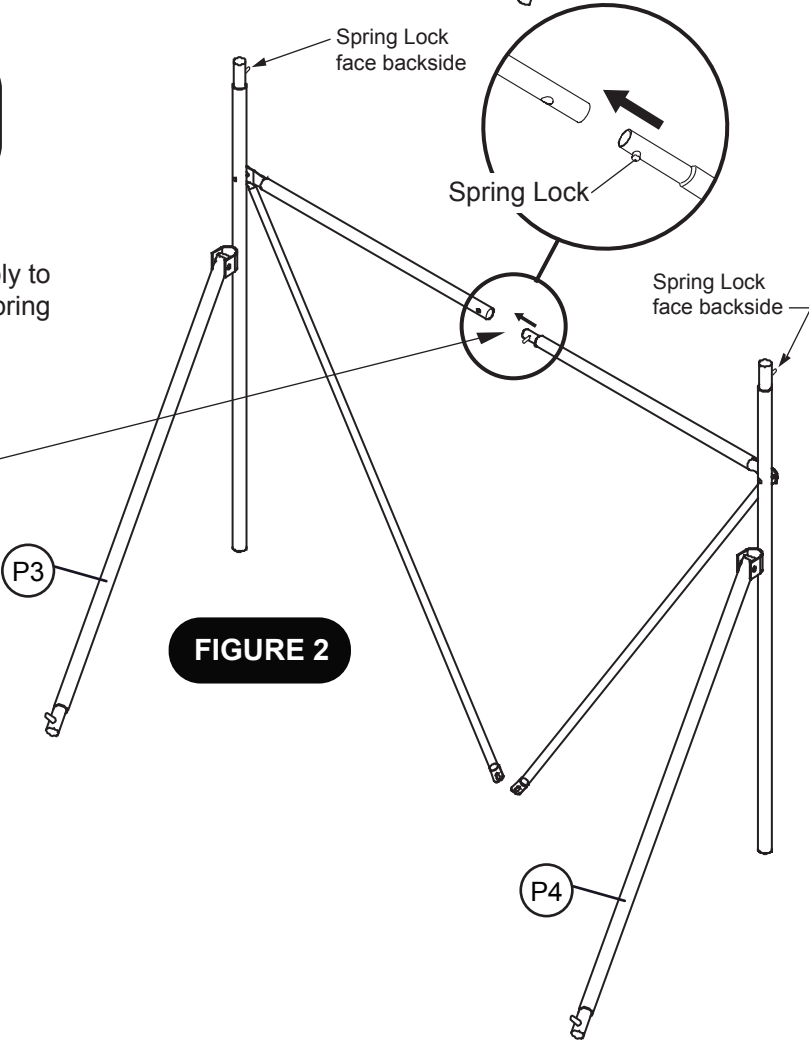

PARTS REQUIRED:

 
1 pc - **H1** M6 x 35 mm Allen Head Bolt
1 pc - **H4** Flat Washer
1 pc - **H5** Wing Nut



NOTE: Lastly, these six points can now be tightened using a phillips screwdriver or allen wrench (T1) provided and pliers.

STEP 3

Connect Middle Tubes Assembly from **STEP 2** to Lower Tubes Assembly from **STEP 1** using Spring Locks. Next, using **H1** Bolt, **H4** Washer and **H5** Wing Nut connect frame braces as shown in **FIGURE 3** and **DETAIL A**.

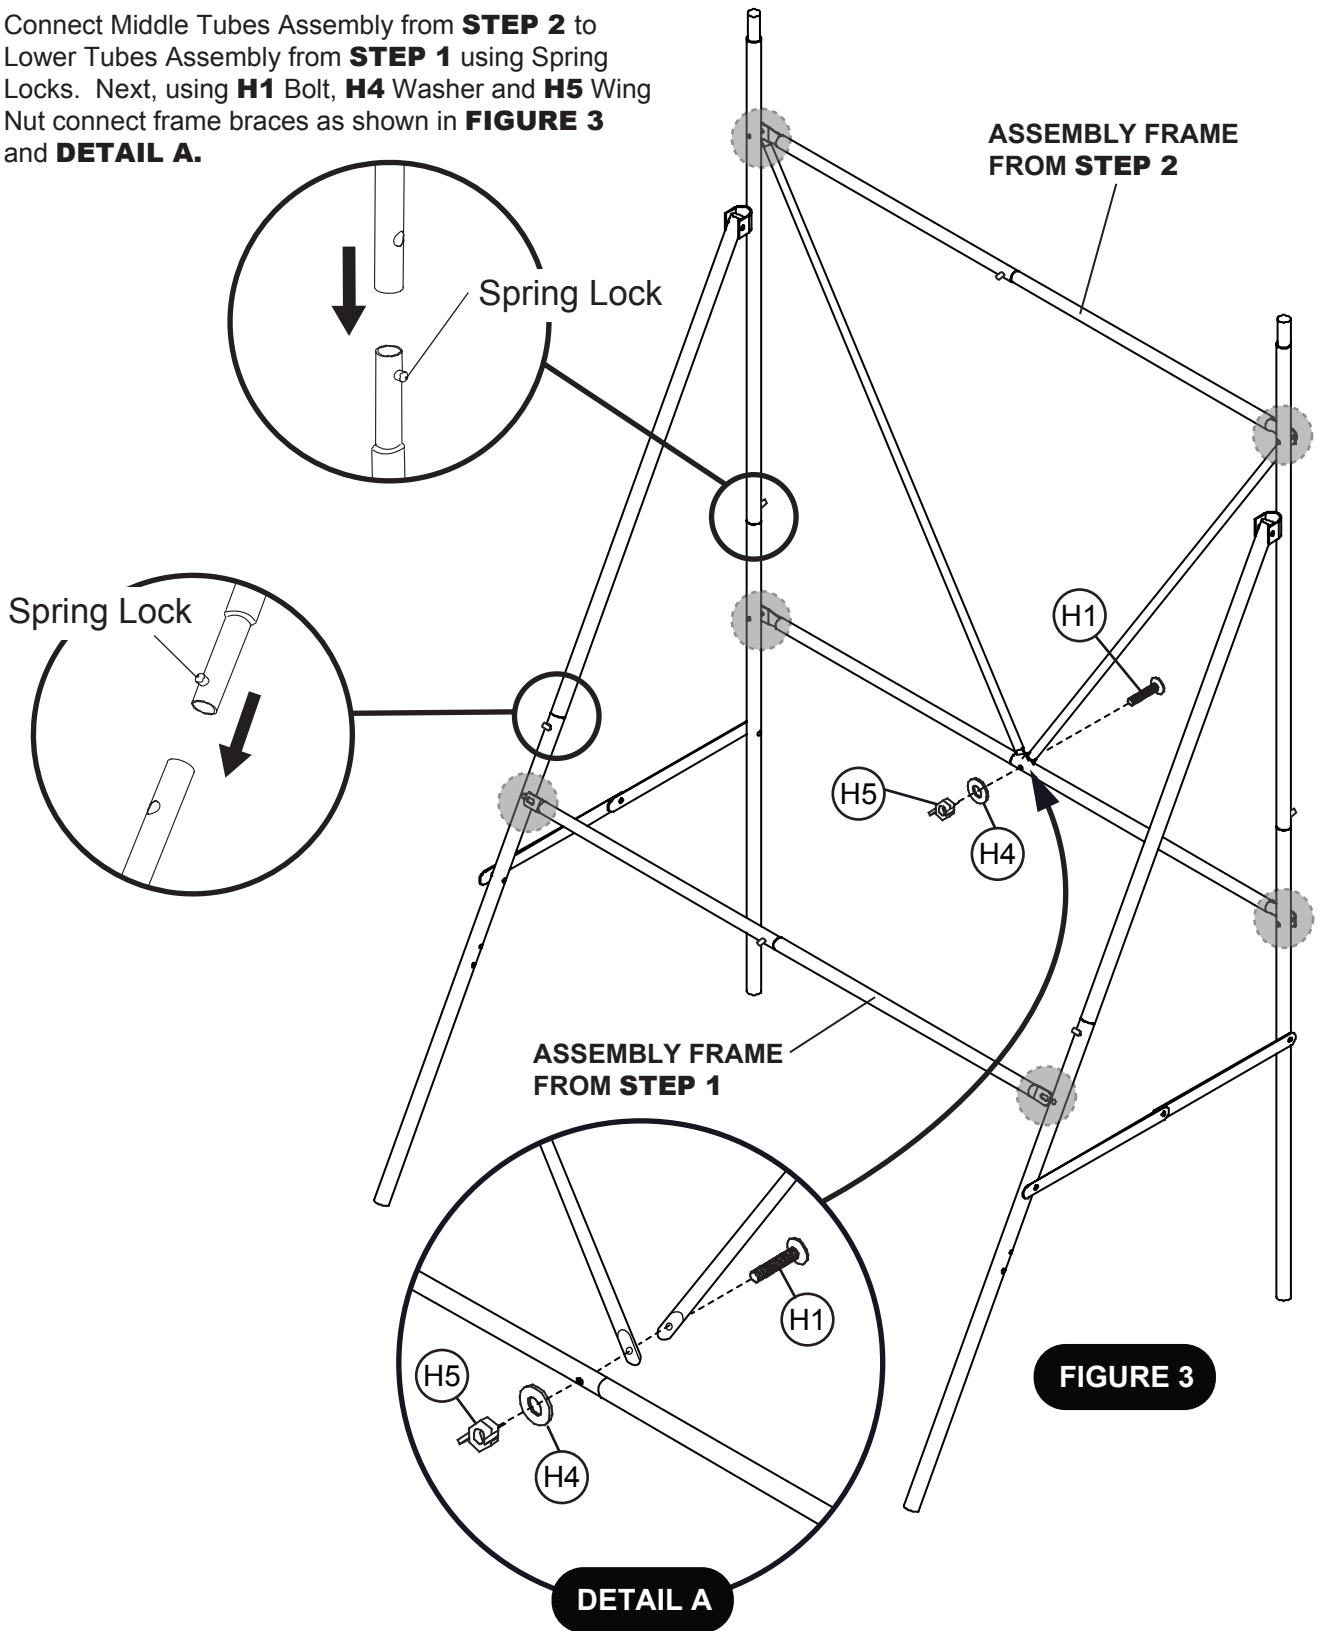

PARTS REQUIRED:

 
2 pcs - **H2** M6 x 60 mm Allen Head Bolt
2 pcs - **H4** Flat Washer
2 pcs - **H5** Wing Nut

2 pcs - **H6** Plastic Bushing
1 pc - **P5** Front Tube Assembly
2 pcs - **P15** Locking Pin

STEP 4


Connect **P5** Front Tube Assembly using Spring Lock as shown in **FIGURE 4**.

NOTE: Bungee Cord is an assembly aide and stays in place.

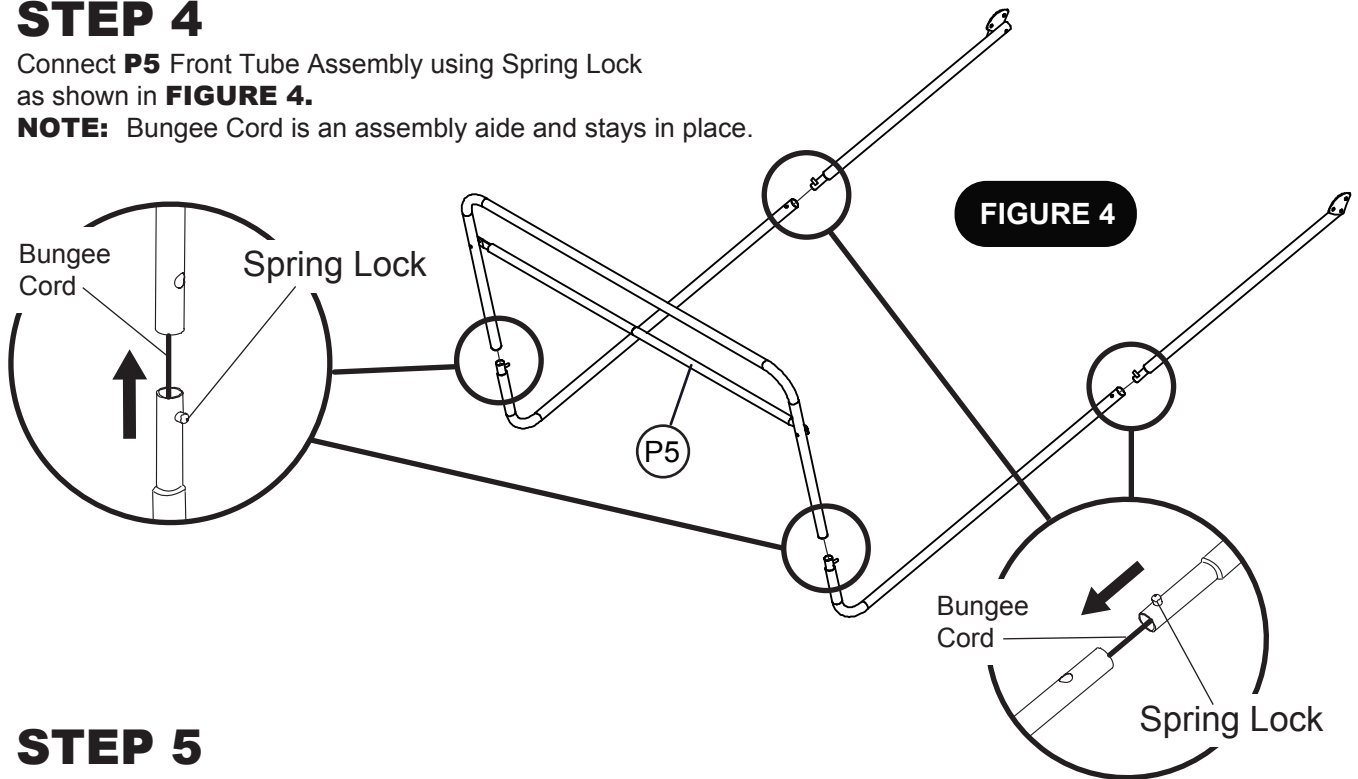

STEP 5

 Connect **P5** Front Tube Assembly to **P1** - **Left** Lower Tube Assembly and **P2** - **Right** Lower Tube Assembly using **H2** Bolts, **H4** Washers, **H6** Bushing and **H5** Wing Nuts as shown in **FIGURE 5** and **DETAIL B**.
Note: This is a pivot point. "Snug" tighten H5 Wing Nuts only. Make sure this assembly pivots freely.

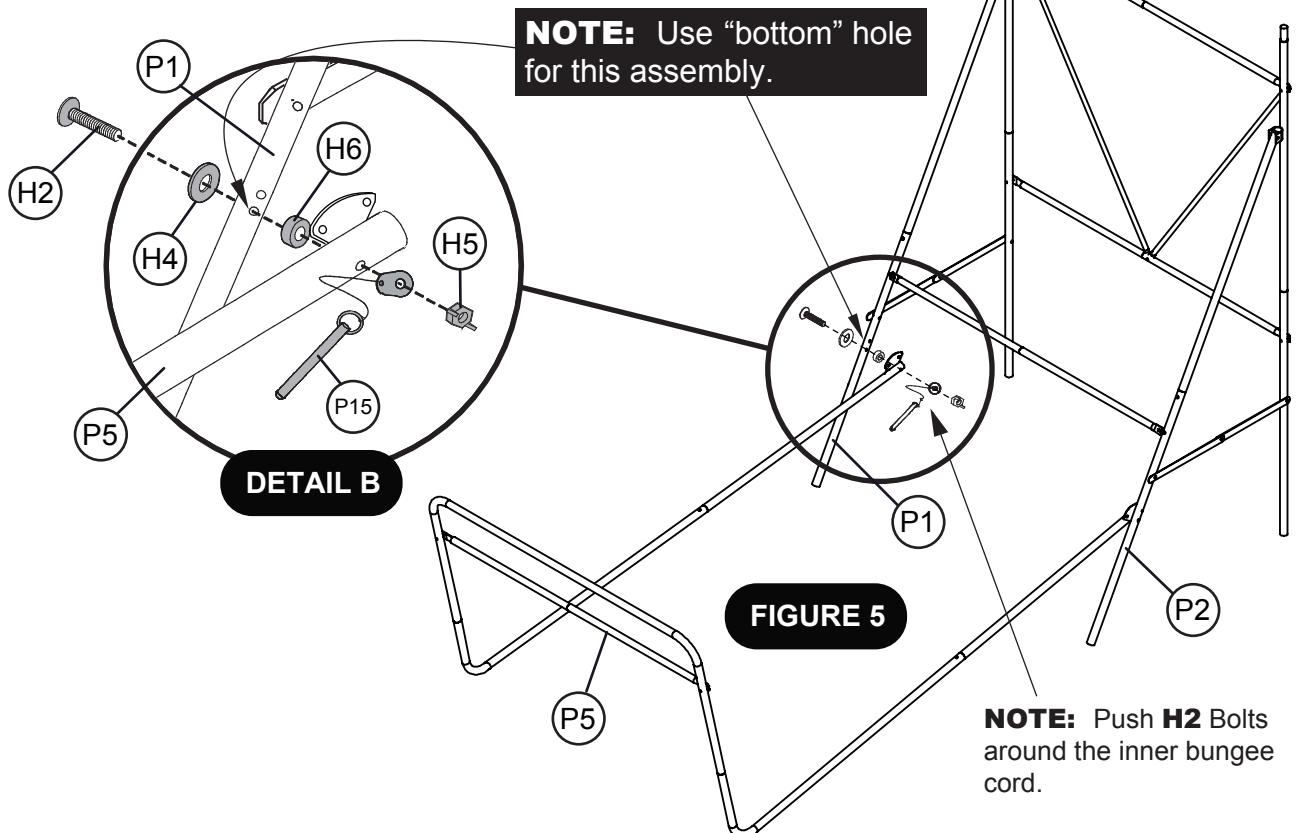

PARTS REQUIRED:

- | | |
|--|--|
| 8 pcs - H3 M6 x 25 mm Allen Head Bolt | 1 pc - P7 Backboard |
| 4 pcs - H4 Flat Washer | 1 pc - P11 Mechanical Scoring Arm |
| 8 pcs - H5 Wing Nut | 1 pc - P12 Rim |
| 8 pcs - H7 Lock Washer | 1 pc - P14 Rim Support Plate |
| 1 pc - T1 Allen Wrench | |

STEP 6

Attach **P12** Rim and **P14** Rim Support Plate to the **P7** Backboard using **H3** Bolts, **H7** Lock Washers and **H5** Wing Nuts as shown in **FIGURE 6**.

Attach **P11** Mechanical Scoring Arm to **P7** Backboard using **H3** Bolts, **H4** Washers, **H7** Lock Washers and **H5** Wing Nuts as shown in **FIGURE 6**.

Use T1 Allen Wrench and Pliers (not provided) to tighten all Bolts.

NOTE:

P11 Mechanical Scoring Arm sensor plug must pass through **P7** Backboard before attaching the scoring arm.

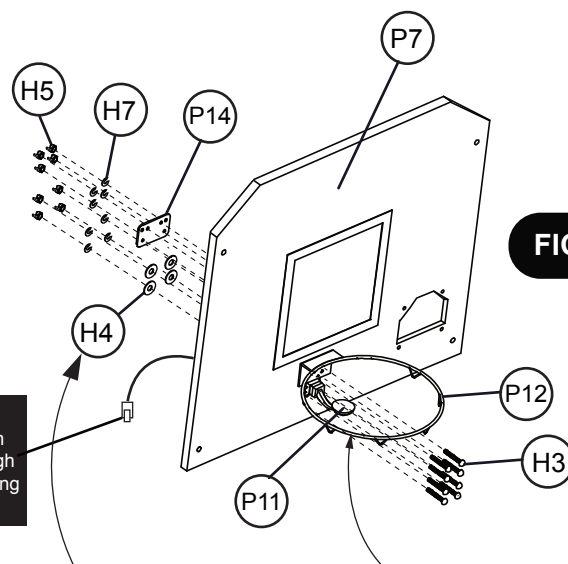 


FIGURE 6

NOTE: Use **H4** Flat Washers for scoring arm only.

Note: This is a special rim designed to avoid entanglement with the mechanical scoring arm.

PARTS REQUIRED:

- 1 pc - **P9** Electronic Scorer
- 1 pc - **P10** Electronic Scorer Face Plate
- 1 pc - **P13** Rim Net

STEP 7

Attach **P9** Electronic Scorer and **P10** Electronic Scorer Face Plate to **P7** Backboard as shown in **FIGURE 7**.

NOTE: Place **P10** Electronic Scorer Face Plate into **P7** Backboard first, then carefully “press” **P9** Electronic Scorer onto the four tabs on **P10**. **You should hear the four tabs “snap” into place.**

Loop the **P13** Rim Net through the ram horns on the **P12** Rims as shown in **FIGURE 7**.


 
 
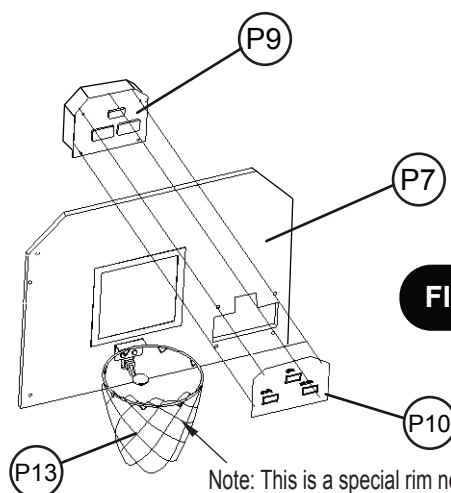 


FIGURE 7

 Note: This is a special rim net designed to avoid entanglement with the mechanical scoring arm.

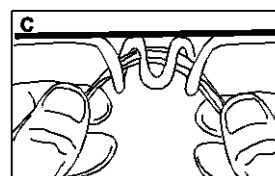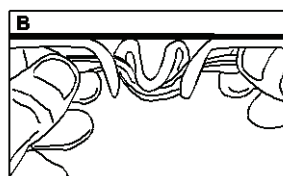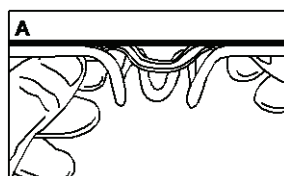

PARTS REQUIRED:
2 pcs - **P6** Upper Tube

STEP 8

Attach Backboard assembly from **STEP 7** to Frame assembly from **STEP 5** using Spring Lock as shown in **FIGURE 8**.

Attach **P6** Upper Tubes to **P7** Backboard assembly using Spring Lock as shown in **FIGURE 8**.

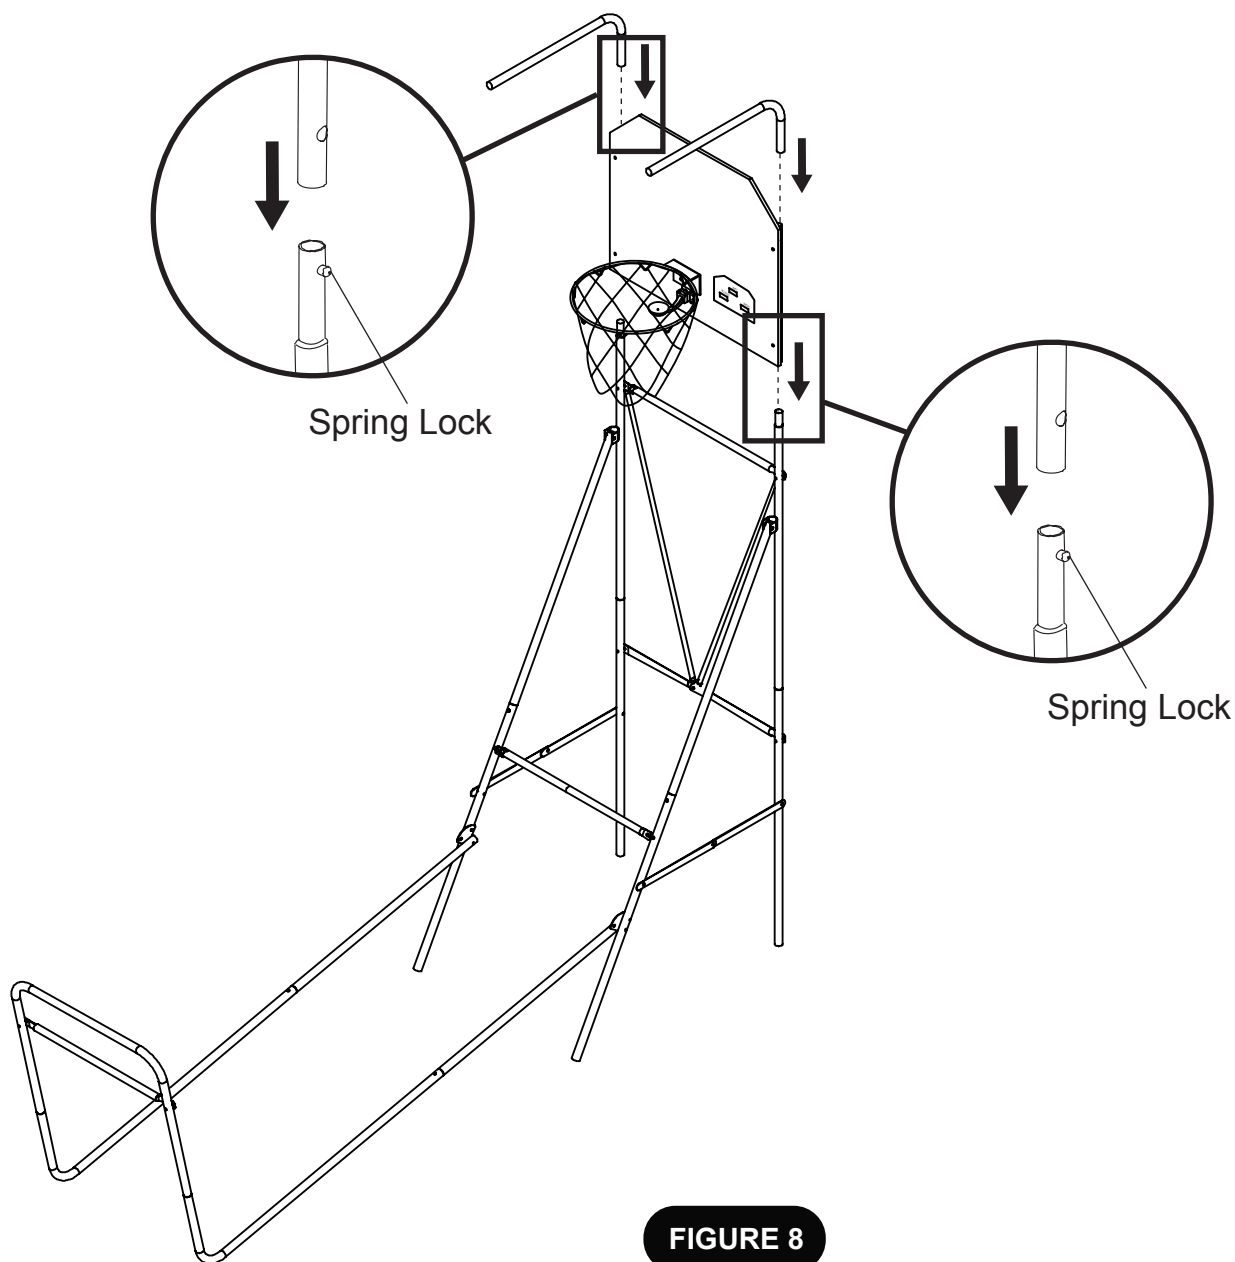 


FIGURE 8

 
PARTS REQUIRED:
1 pc - **P8** Ramp Chute

STEP 9

Slide elastic loops and the sleeve of **P8** Ramp Chute onto **P6** Upper Tubes as shown in **FIGURE 9** and **DETAIL C**.

At the front of **P8** Ramp Chute, bring the ramp down and secure using velcro strips as shown in **FIGURE 9**.


Secure all velcro straps on the shootout as shown in **FIGURE 9**.

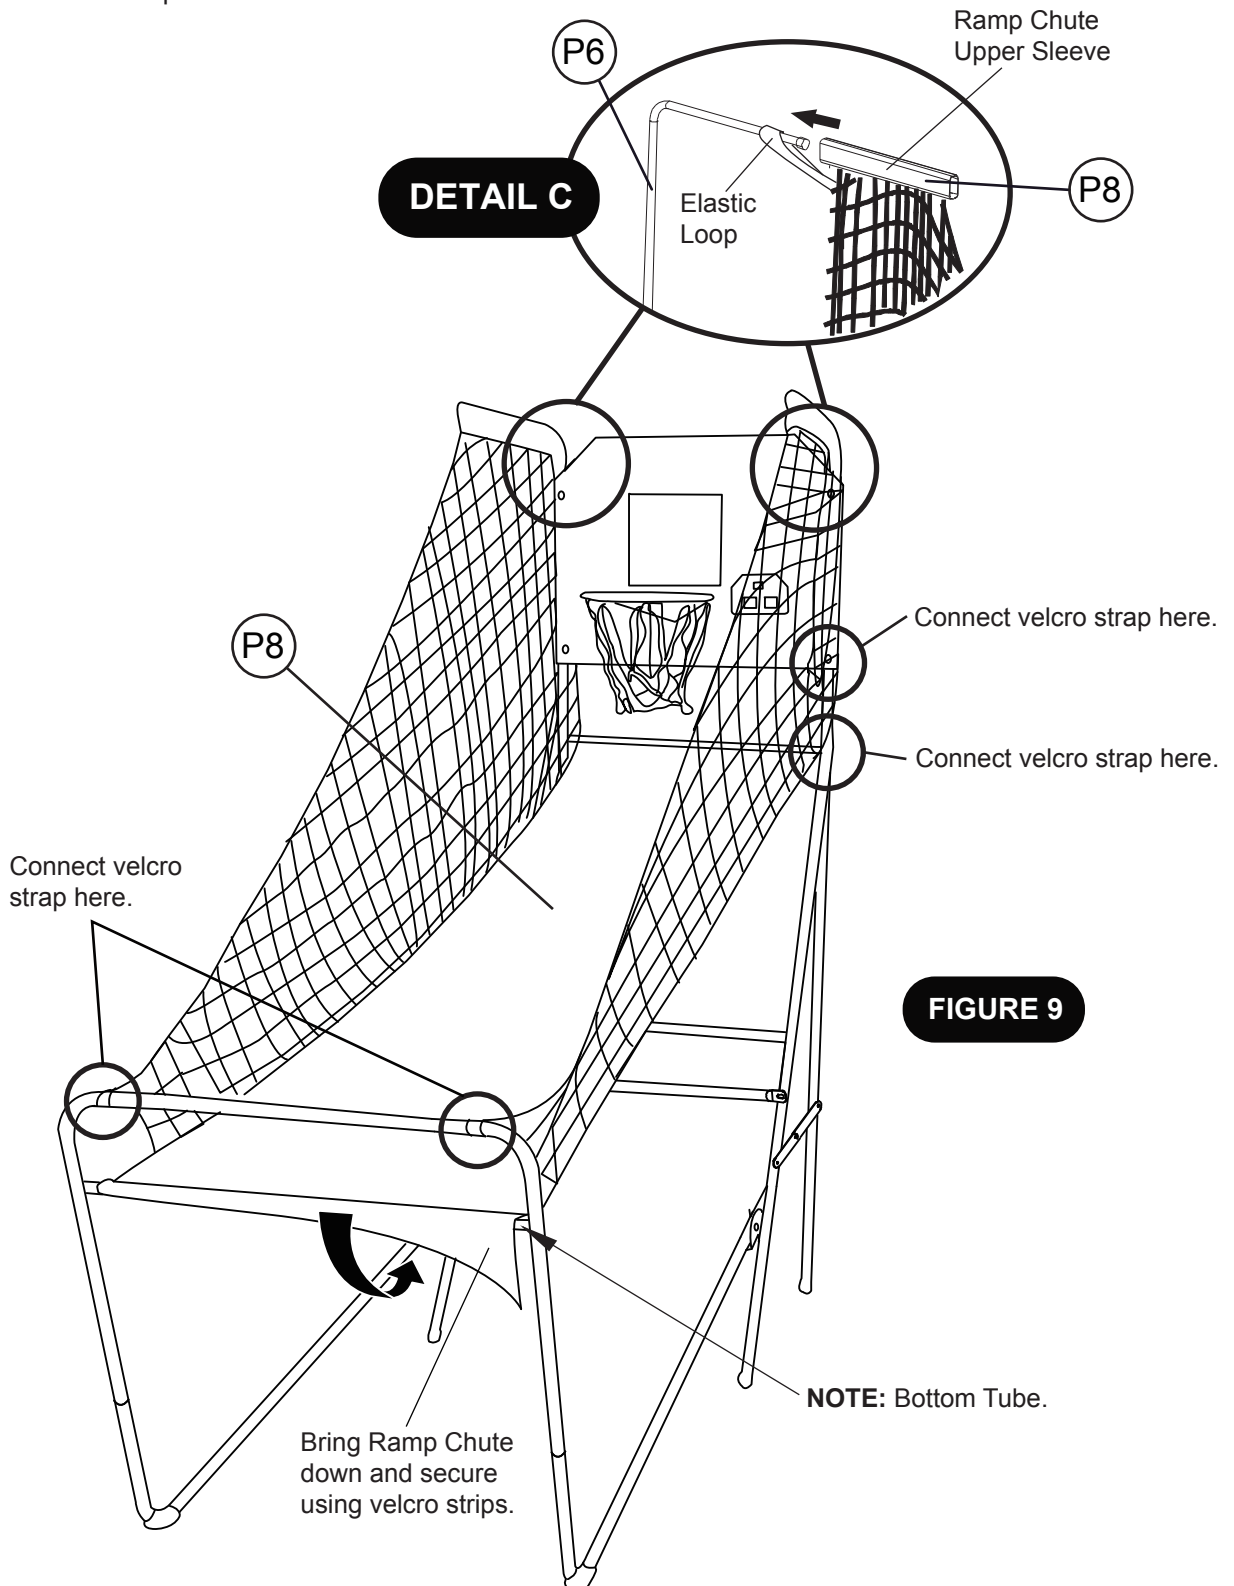

STEP 10


Connect **P11** Mechanical Scoring Arm sensor wire to **P9** Electronic Scorer as shown in **FIGURE 10**. Secure Elastic Loops from **P8** Ramp Chute to the back of **P7** Backboard attached Wing Nuts as shown in **FIGURE 10**.
Hook Elastic Loop's over Wing Nuts in five locations as shown in FIGURE 10.

 Insert 3(three) pieces “AA” batteries at the backside of electronic scoreboard.
Plug the mechanical scoring arm plug into backside of the electronic scoreboard.
Press on/off button at the bottom backside of the electronic scoreboard to play and stop the game.

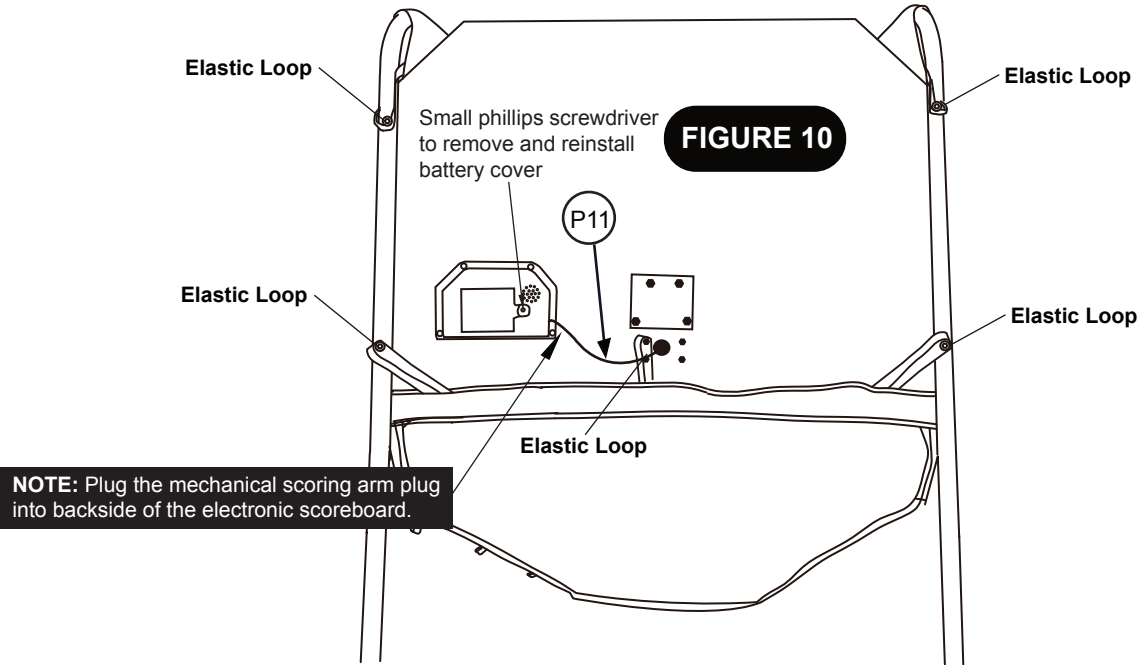

STORAGE POSITION

 To fold the basketball game into the storage position, remove **P15** Locking Pins from the playing position. Lift the front ramp chute until the game is in the storage position as shown in **FIGURE 11**. Then, insert the **P15** Locking Pins back into the lower tube to lock the basketball game into storage position.

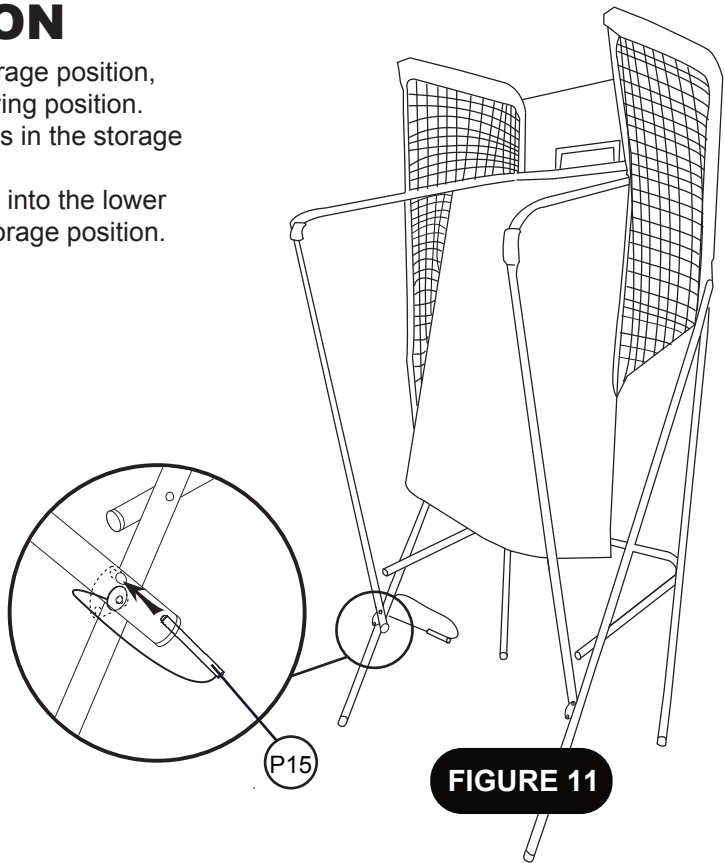

Congratulations! You have now assembled your Single Shootout.
Please note the Care and Use instructions below.

CARE AND USE OF YOUR SHOOTOUT

1. Product can be used **OUTDOORS** - but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the unit.
3. **DO NOT** drag the unit when moving it, This will damage the legs.
4. **DO NOT** place backside of this product against wall as during play, the backside of product could become damaged or your wall could become damaged.

USE OF YOUR SHOOTOUT

Insert 3(three) pieces “AA” batteries at the backside of electronic scoreboard.

Plug the mechanical scoring arm plug into backside of the electronic scoreboard.

Press on/off button at the bottom backside of the electronic scoreboard to play and stop the game.

Each player has 60 seconds to make as many baskets as they can. During the first 45 seconds each shot counts as 2 points. During the last 15 seconds each shot counts as 3 points.

PRODUCT PARTS LIST

M01484

KEY	PARTS	DESCRIPTIONS	QTY
H1	M01484GRH1	M6 x 35 mm Allen Head Bolt	1
H2	M01484GRH2	M6 x 60 mm Allen Head Bolt	2
H3	M01484GRH3	M6 x 25 mm Allen Head Bolt	8
H4	M01484GRH4	M6 Flat Washer	7
H5	M01484GRH5	M6 Wing Nut	11
H6	M01484GRH6	Plastic Bushing	2
H7	M01484GRH7	Lock Washer	8
T1	M01484GRT1	Allen Wrench	1
P1	M01484GRP1	Left Lower Tube Assembly	1
P2	M01484GRP2	Right Lower Tube Assembly	1
P3	M01484GRP3	Left Middle Tube Assembly	1
P4	M01484GRP4	Right Middle Tube Assembly	1
P5	M01484GRP5	Front Tube Assembly	1
P6	M01484GRP6	Upper Tube	2
P7D	M01484GRP7	Backboard with Tubes Assembly	1
P8	M01484GRP8	Ramp Chute	1
P9	M01484GRP9	Electronic Scorer	1
P10	M01484GRP10	Electronic Scorer Face Plate	1
P11	M01484GRP11	Mechanical Scoring Arm	1
P12	M01484GRP12	Rim	1
P13	M01484GRP13	Rim Net	1
P14	M01484GRP14	Rim Support Plate	1
P15	M01484GRP15	Locking Pin	2
A1	M01484GRA1	Air Pump with Needle	1
A2	M01484GRA2	Basketball	2
K1	M01484GRK1	Hardware Kit	1
M1	M01484GRM1	Owner's Manual	1

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.