

Woodstock Celebration Stand™ - Large

Assembly Instructions

WGSL


Your Woodstock Celebration Stand comes partially assembled with four Thumb Screws (A), four Leveling Screws (B) and two Plastic Caps (C). The stand is comprised of three sections – Base (D), Bottom Upright (E) and Top Upright (F).

1. The Base (D) and the Top Upright (F) both have two Thumb Screws (A) located on the back and side panels of the Stand. As you assemble the stand as shown, you may have to back out the Thumb Screws a little in order to completely seat the stand sections. Secure all sections by turning the Thumb Screws on the back panel first and then the Thumb Screws on the side panels in a clockwise rotation.


2. Place the assembled frame in the location of your choice. On most flooring or on a carpeted surface, your Woodstock Celebration Stand will probably perform best used just as it is. You may, however, choose to insert the four Leveling Screws (B) that have been included with your stand. Insert into the four holes found in the underside of the Base (D) by turning in a clockwise or counterclockwise direction to the desired height.

3. There are two holes in the top of the base. If you wish to use the stand as it is, leave the two Plastic Caps (C) in the holes. If you wish to anchor your display to a structure or in the ground, you can use large 2-gauge nails or any appropriate hardware that fits through the holes, which are a little larger than one quarter inch in diameter.

(F) Top Upright

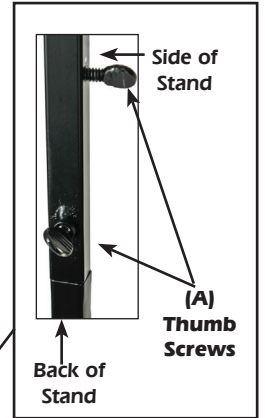

(E) Bottom Upright

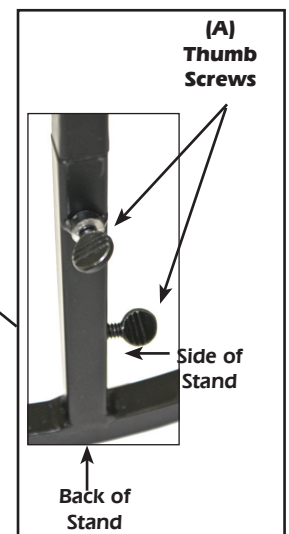


(A) Thumb Screws



(B) Leveling Screws



(C) Plastic Caps

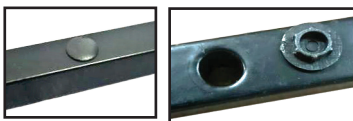

(C) Plastic Caps

