



Installation & Assembly

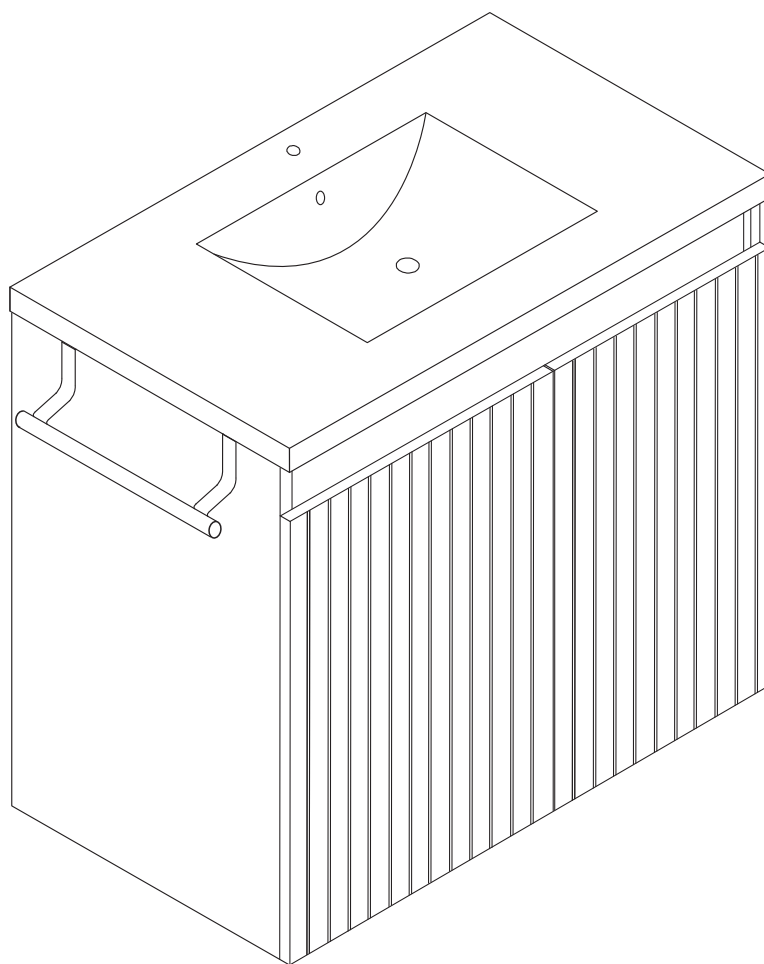

Package List

[illegible]

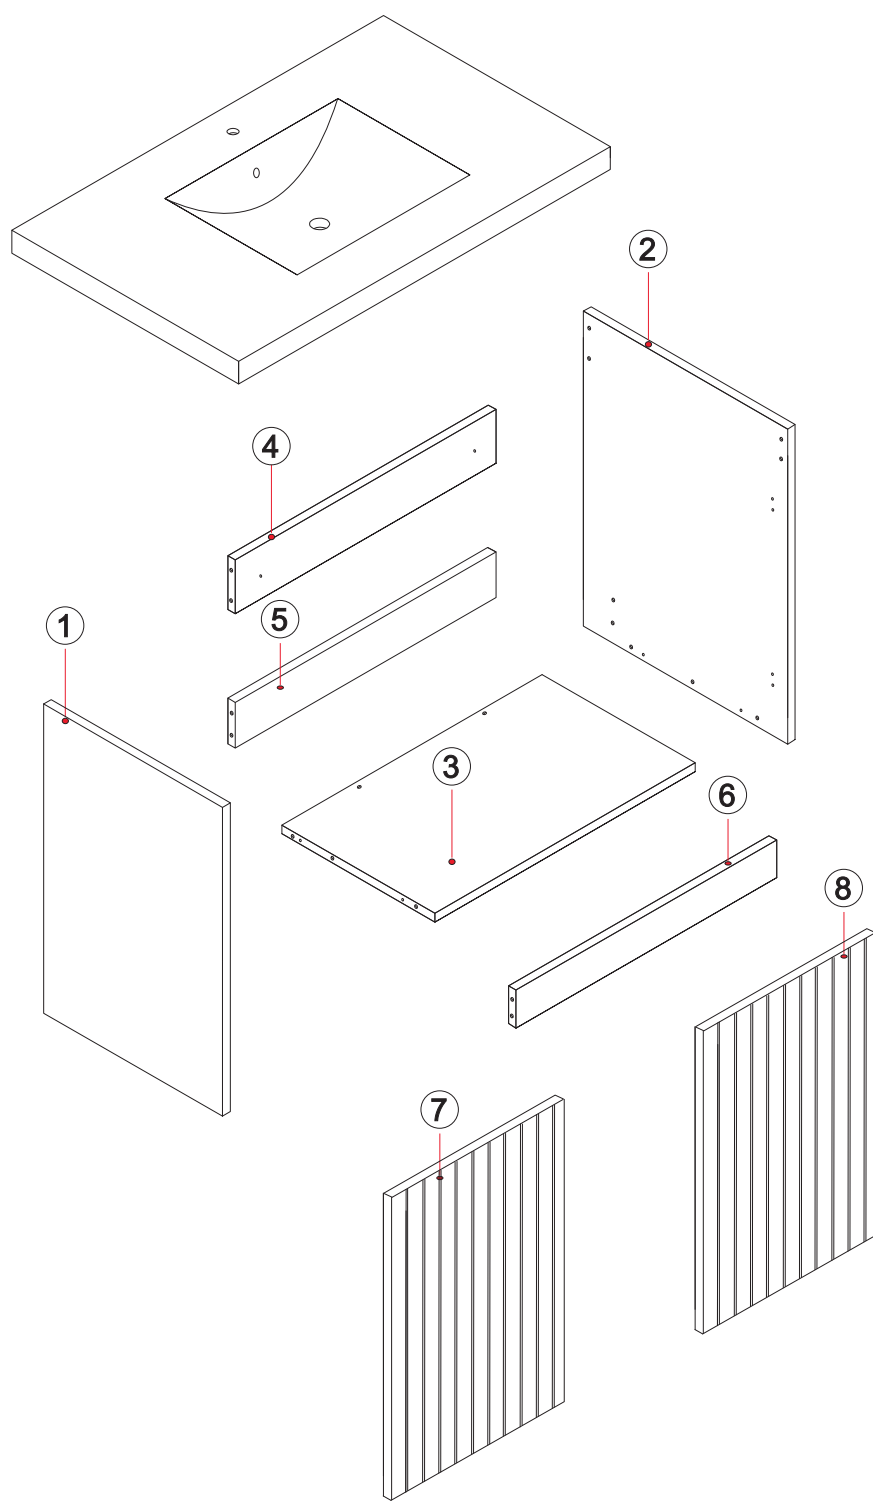


Installation Manuel

Step 1

HARDWARE LIST


(B)		20	 
-----	---	----	--

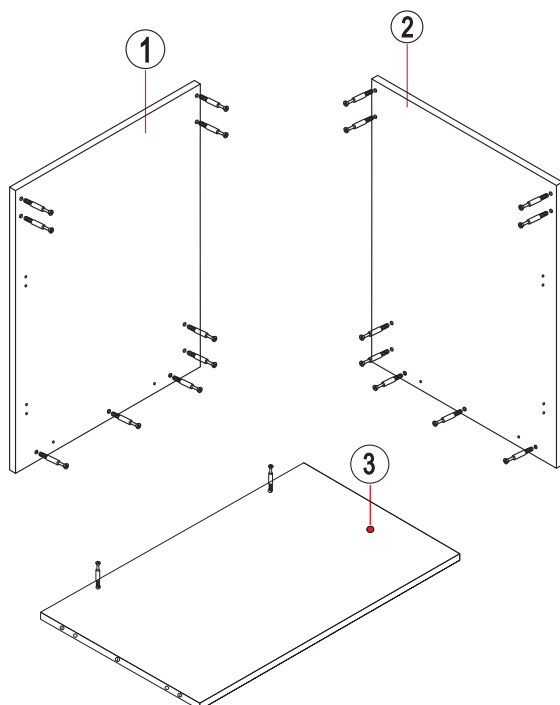

Step 2

HARDWARE LIST


(C)		4	
-----	---	---	---

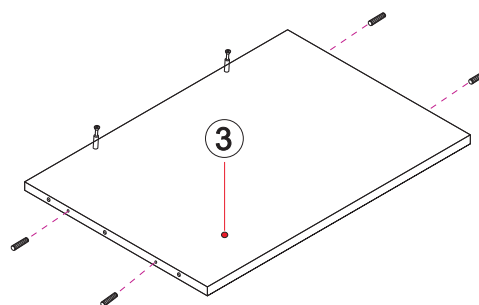

Step 3


HARDWARE LIST


(A)		2	
-----	---	---	---

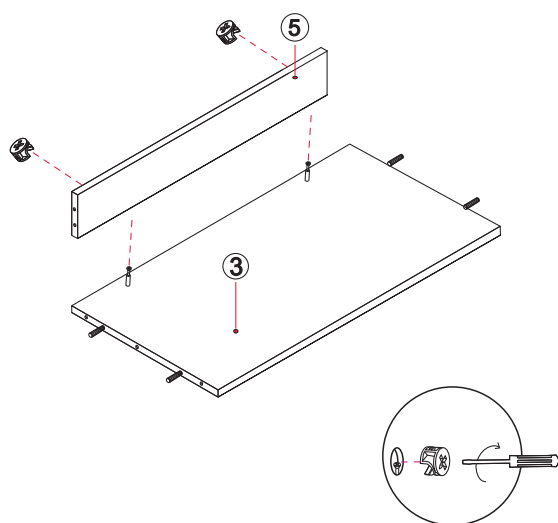

Step 4

 HARDWARE LIST

(A)		9	
-----	---	---	---

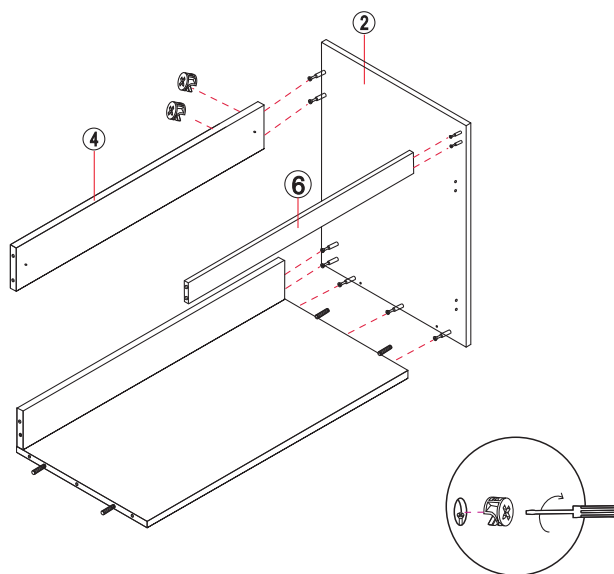


Installation Manuel

Step 5

HARDWARE LIST


(A)		9	

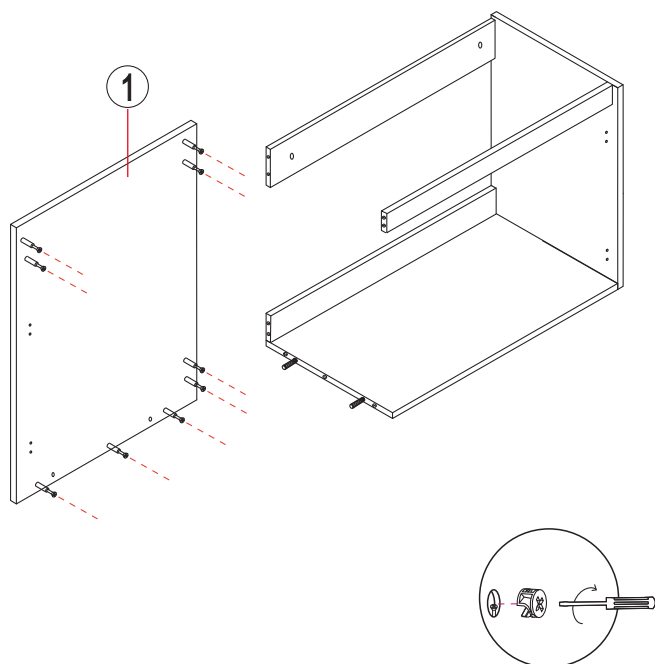

Step 6

HARDWARE LIST


(D)		4	
(E)		24	

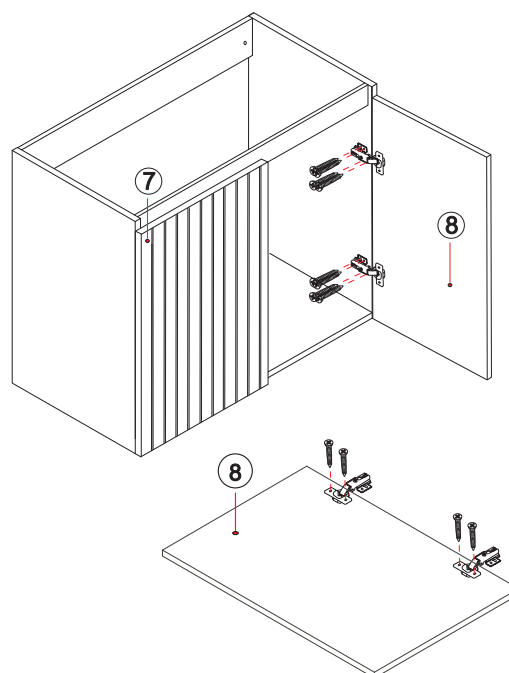

Step 7


HARDWARE LIST


(H)		2	
(E)		16	

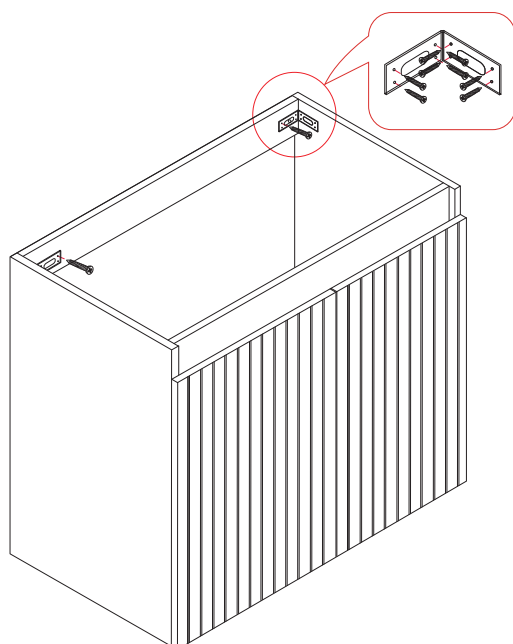


Step 8

HARDWARE LIST

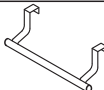(I)		1
-----	---	---

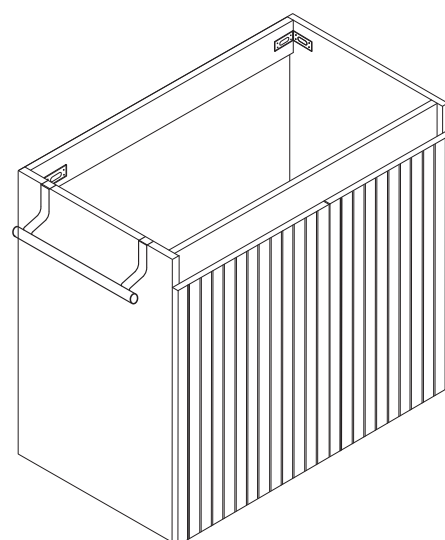

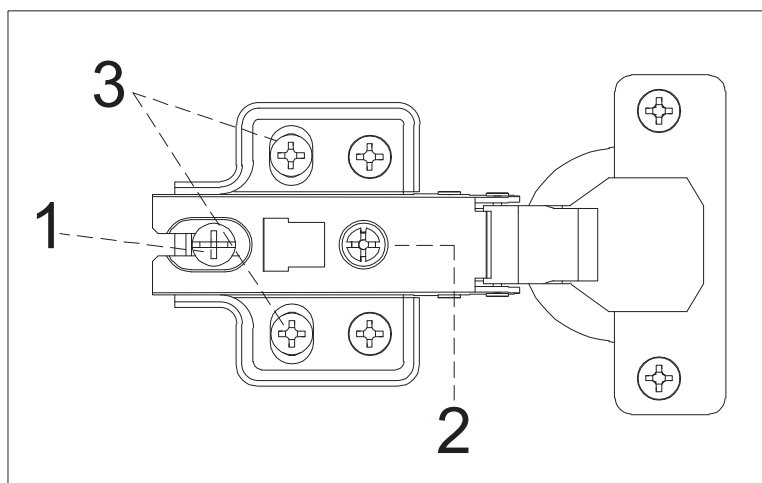


Hinge Adjustment Guide

Three-way adjustable hinge for perfectly aligned doors


Sideways/Gap Adjustment

Turning the screw "2" on the hinges of each door allows you to adjust the door to the left or right by a few millimeters.

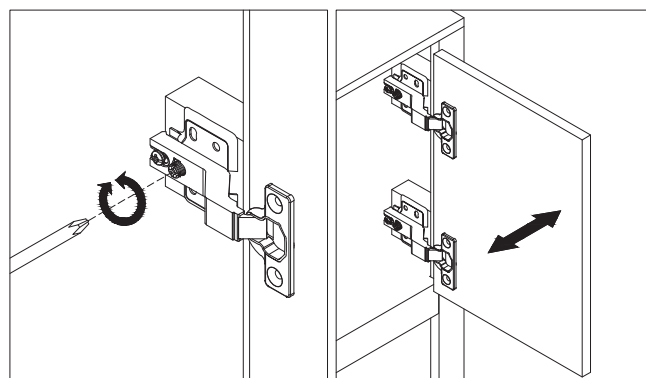


Forward/Backward Alignment

Loosen screw "1" to adjust the door forward or backward. After adjustment, Tighten screw "1".

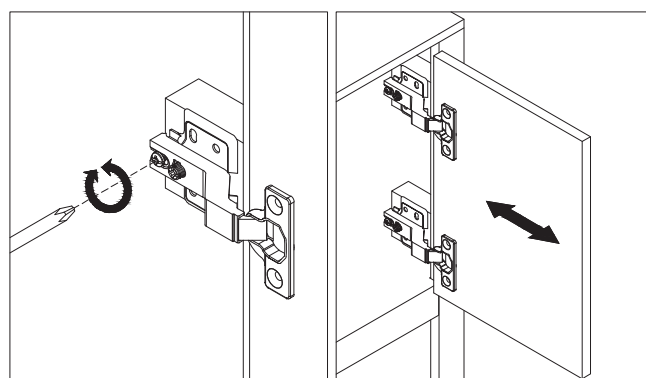

Vertical Height Adjustment


Loosen screw "3" to adjust the door up or down. After adjustment, hold the door panel and tighten screw "3".

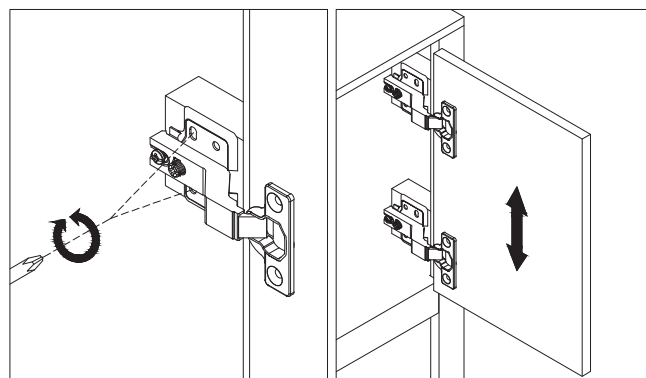


Installation Manuel

Step 9

HARDWARE LIST			
(F)		2	
(G)		2	

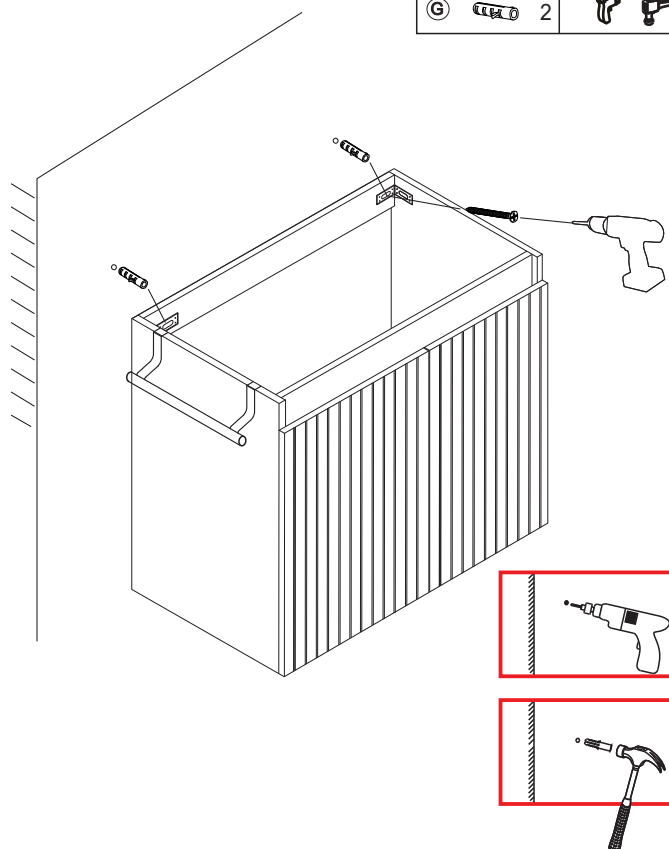

Step 10

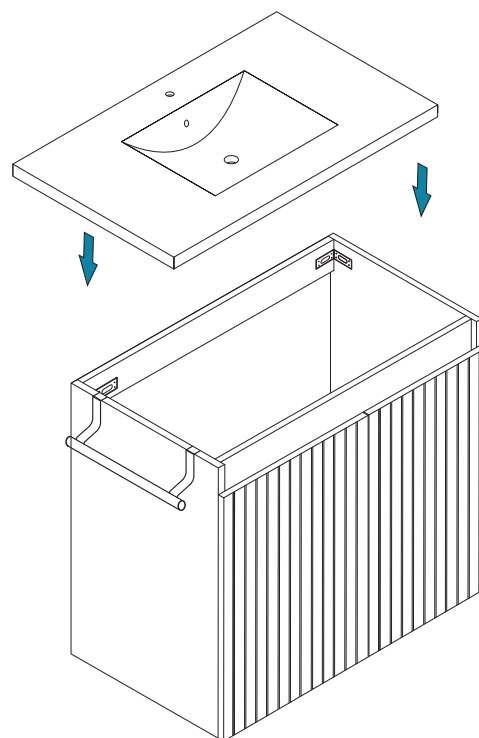

Step 11

