

# WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please contact us.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains , to help prevent tip-over

 
1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product

| <b>⚠ WARNING</b>  |  |
|---|--|
|  | <p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"><li>• ALWAYS install tipover restraint provided.</li><li>• NEVER put a TV on this product.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heaviest items in the lowest drawers.</li><li>• Do not defeat or remove the drawer interlock system.</li></ul> |
|  | <p><i>This is a permanent label.<br/>Do not remove!</i></p>  |

 
 
# Assembly Instructions

 
 

 
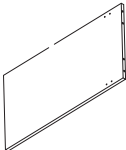 




Caution : You must read this before you proceed








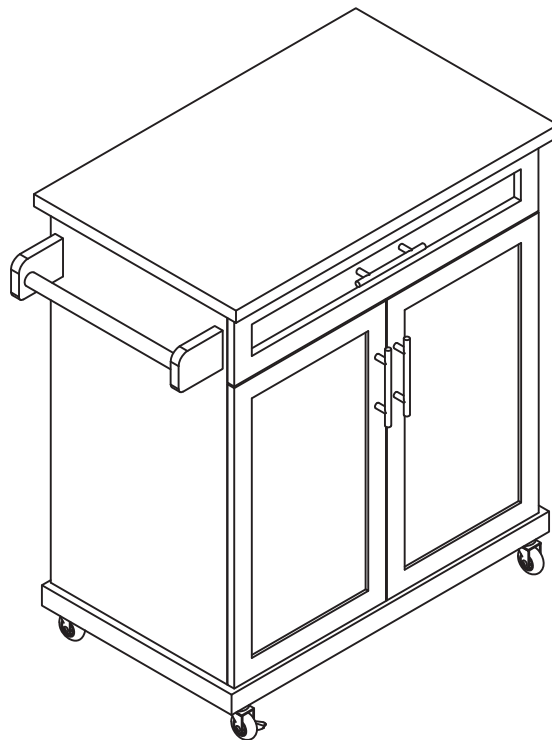
## kitchen cart



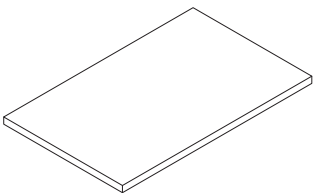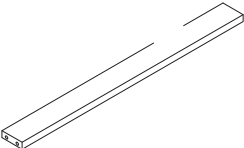

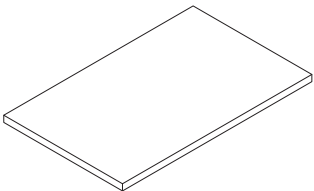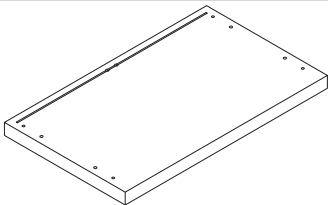

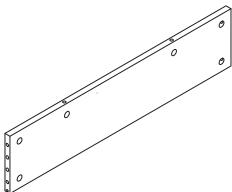 


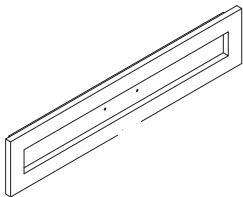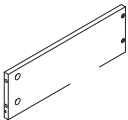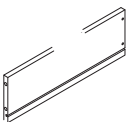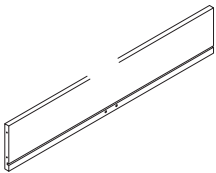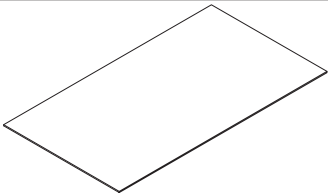        
## Parts List






   
 

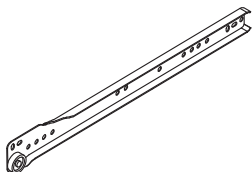 
| Label | Picture   | Description  | QTY |
|-------|---|--------------|-----|
| A     |  | Top Board    | 1   |
| B     |  | Supprt Board | 1   |

 
 
 

 
|   |   |                      |   |
|---|---|----------------------|---|
| C |    | Shelf Board          | 1 |
| D |    | Bottom Board         | 1 |
| E |    | Round stick          | 1 |
| F |    | Wood Block           | 2 |
| G |  | Left Side Panel      | 1 |
| H |  | Down Back Board      | 1 |
| I |  | Back plane connector | 1 |
| J |  | Up Back Board        | 1 |
| K |  | Right Side Panel     | 1 |

|   |   |                       |   |
|---|---|-----------------------|---|
| L |    | Left Door Board       | 1 |
| M |    | Right Door Board      | 1 |
| N |    | Drawer Front Board    | 1 |
| O |    | Left Panel of drawer  | 1 |
| P |  | Right Panel of drawer | 1 |
| Q |  | Back Board of drawer  | 1 |
| R |  | Drawer Bottom Board   | 1 |
| S |  | Supprt Board          | 1 |
|   |   |                       |   |

# Hardware

 
| Label | Picture   | Description       | QTY |
|-------|---|-------------------|-----|
| ①     |    | Cam Bolt(M6X35mm) | 18  |
| ②     |    | Cam Nut(M15X9mm)  | 18  |
| ③     |    | Screw (M5x55mm)   | 5   |
| ④     |  | Dowel (M6X30mm)   | 19  |
| ⑤     |  | Screw (M4x25mm)   | 6   |
| ⑥     |  | Nuts              | 4   |
| ⑦     |  | Screw (M3.5x12mm) | 5   |
| ⑧     |  | Back plate buckle | 8   |
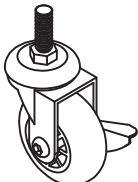
|   |   |                   |    |
|---|---|-------------------|----|
| ⑨ |    | Hinges            | 4  |
| ⑩ |    | Screw (M3.5X12mm) | 38 |
| ⑪ |    | Knob(M6)          | 3  |
| ⑫ |    | Screw (M4x25mm)   | 5  |
| ⑬ |  | Screw (M4x25mm)   | 3  |
| ⑭ |  | wheel             | 2  |
| ⑮ |  | wheel             | 2  |
| ⑯ |  | wrench            | 1  |
| ⑰ |  | Left Guide Rail   | 1  |
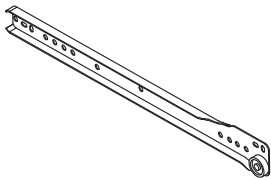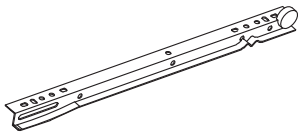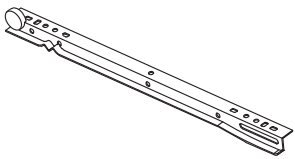
|   |   |                  |   |
|---|---|------------------|---|
| ⑱ |    | Right Guide Rail | 1 |
| ⑲ |    | Left slide       | 1 |
| ⑳ |    | Right slide      | 1 |
| ㉑ |    | Door Pin         | 4 |
| ㉒ |  | Drawer Stopper   | 1 |

# Assembly Preparation

Before  
Beginning  
Assembly:

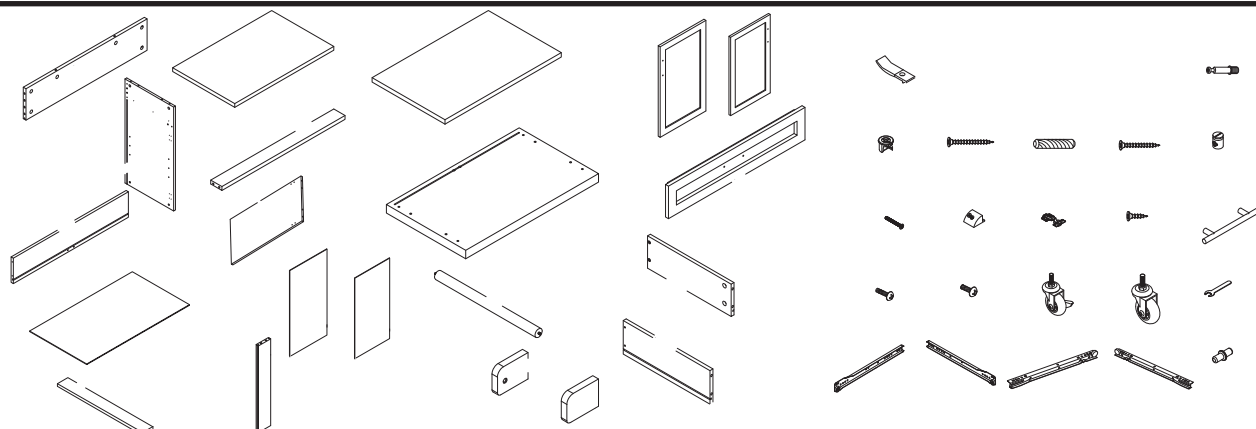

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

## Assembly Steps
 
### Overview

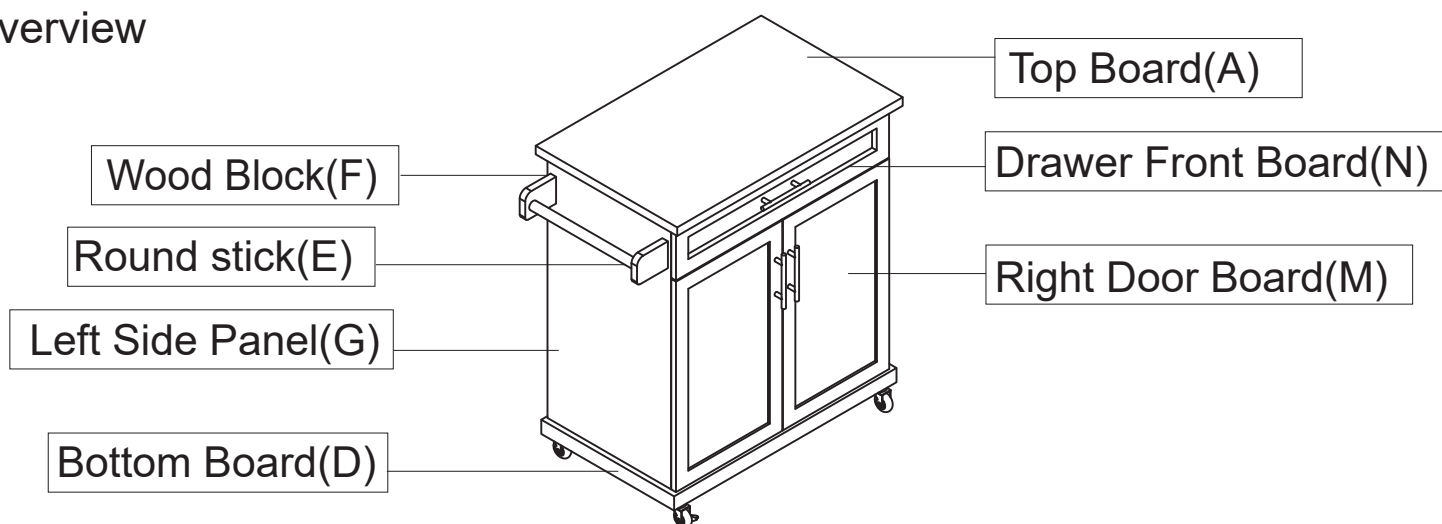


This Kitchen cart has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Kitchen cart parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.




## Step 1

 1.1

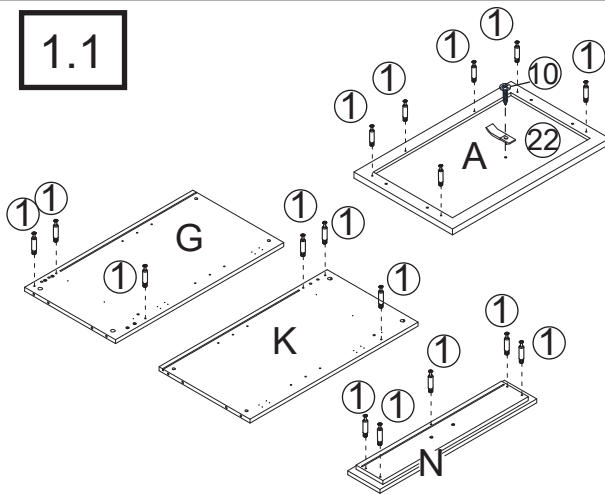

 1.2

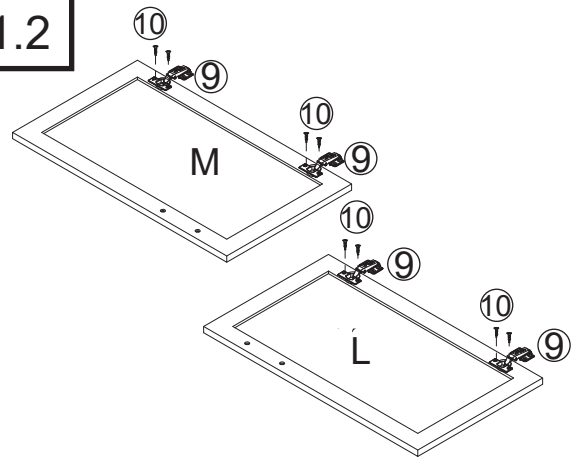


1.1) Insert Cam Bolt① into the mounting positions on Top Panel(A),Drawer Front Board(N). Right Side Panel(K)and Left Side Panel (G) Attach Drawer Stopper ②② to Top Panel(A) with Screw⑩.


1.2) Attach Hinges⑨ to Left Door Board(L) with Screw⑩.  
Attach Hinges⑨ to Right Door Board(M) with Screw⑩.

## Step 2

 2.1

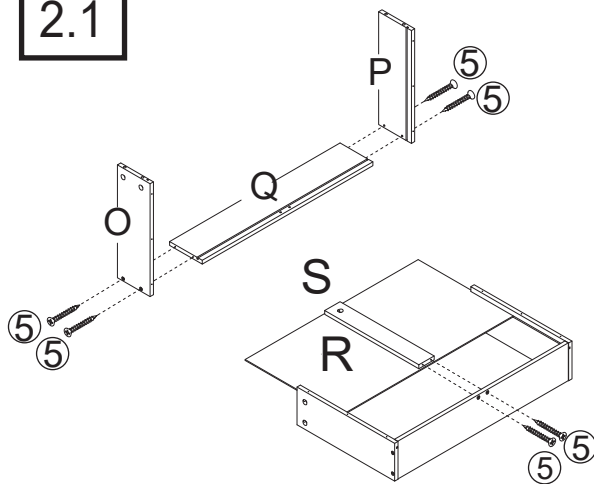

 2.2

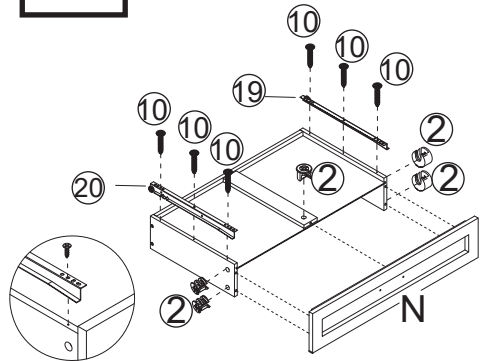

2.1) Attach Drawer Left Panel (O) and Drawer Right Panel (P) to the Right Side Panel (Q) with Screw⑤

Attach Supprt Board(S) Drawer Bottom Board(R) to Right Side Panel(Q) with Screw⑤


2.2) Attach Supprt Board(S) Drawer Left Panel (O) and Drawer Right Panel (P) to the Drawer Front Board (N) with Cam Nut②

Attach Right slide ②② to the Drawer Left Panel (O) with Screw⑩


Attach Left slide ①⑨ to the Drawer Right Panel (P) with Screw⑩

## Step 3

 3.1

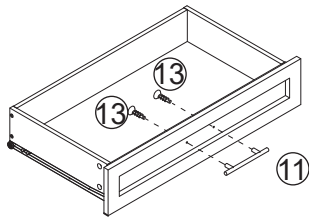

 3.2

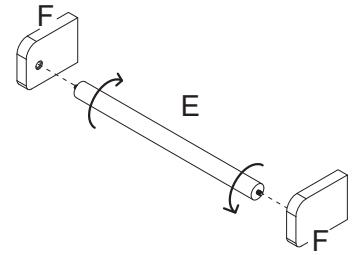


3.1) Attach Knob (11) to the Drawer Front Board (N) with Screw (13)


3.2) Place Round stick (E) onto Wood Block (F).

## Step 4

 4.1

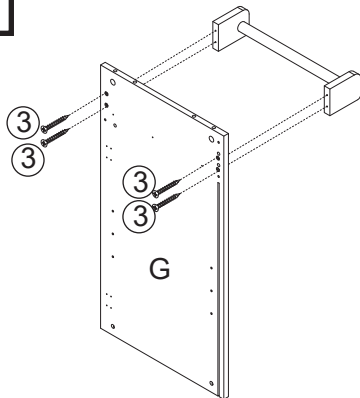

 4.2

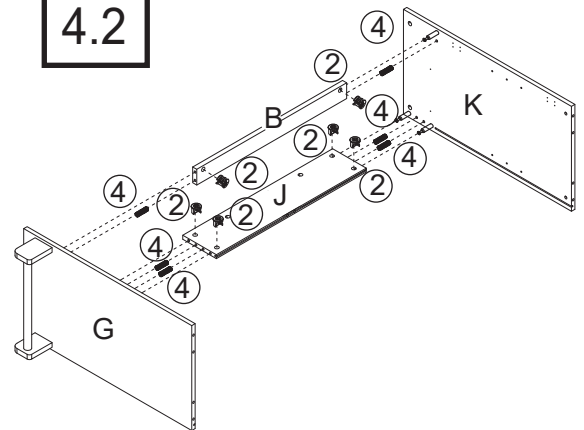


4.1) Attach Round stick (E) to Left Side Panel (G) with Screw (3).

4.2) Attach Support Board (B) to UP Left Side Panel (G) with Screw (3).


Attach UP Back Board (J) to UP Right Side Panel (K) with Screw (3).

## Step 5

 5.1

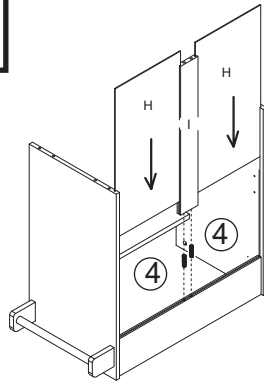

 5.2

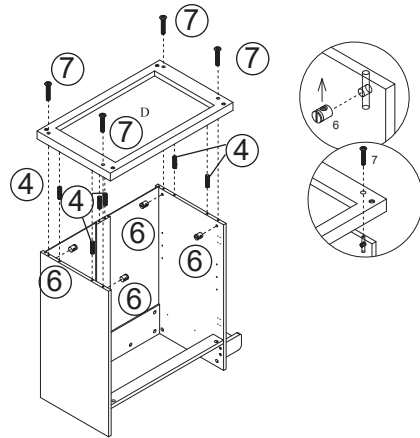


5.1) Insert Down Back Board(H) and into the mounting positions on UP Back Board(J )

Insert Backplane connector(I)to the Up Back Board(J )with Dowel④


5.2) Attach Bottom Board(D) to Back Panel connector(I)  
Left Side Panel( G )and Right Side Panel (K)with  
Screw⑦.Dowel④ and Nuts⑥.

## Step 6

 6.1

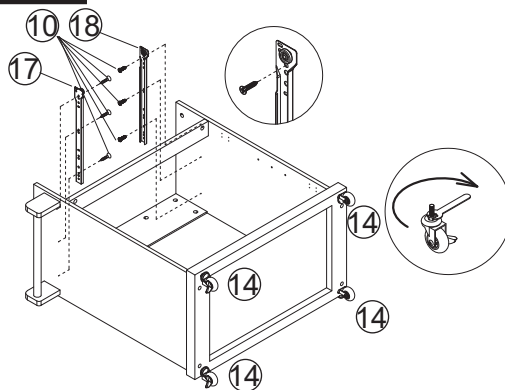

 6.2

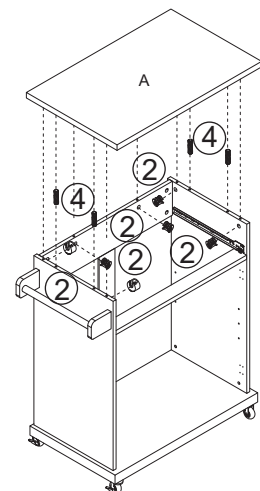


6.1) Attach Left Guide Rail⑰ to the Left Side Panel(G)with Screw⑩

Attach Right Guide Rail ⑱ to the Drawer Left Panel (K)with Screw⑩


6.2) Attach Top Panel (A) to Left Side Panel (H) and  
Left Side Panel(G)with Cam Nut②Dowel④.

## Step 7

 7.1

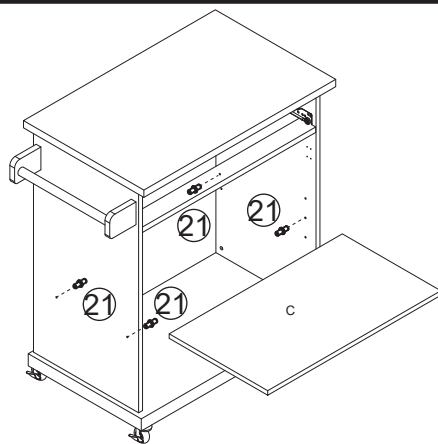

 7.2

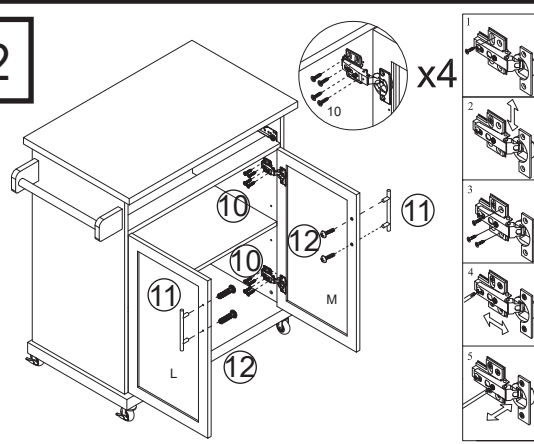

7.1) Insert Door Pin (21) into the mounting positions on Left Side Panel (G) and Drawer Left Panel (K). Place Shelf Board (C) onto Door Pin (21).

7.2) Attach Knob (11) to the Left Door Board (L) with Screw (12).

Attach Knob (11) to the Right Door Board (M) with Screw (12).


Attach Hinges (9) to Left Side Panel (G) with Screw (10).

Attach Hinges (9) to Right Side Panel (K) with Screw (10).


You could change the position of door through changing hinge position like picture.

## Step 8

 8.1

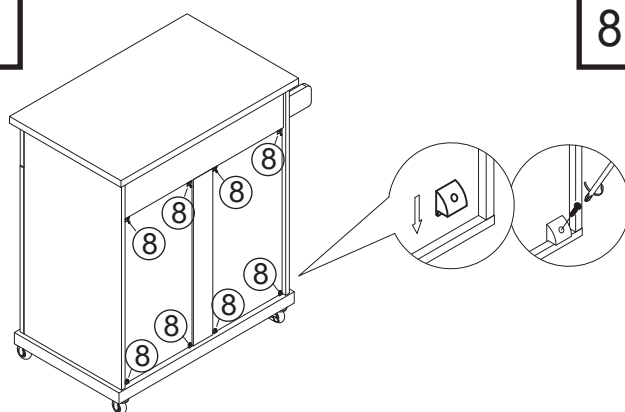

 8.2

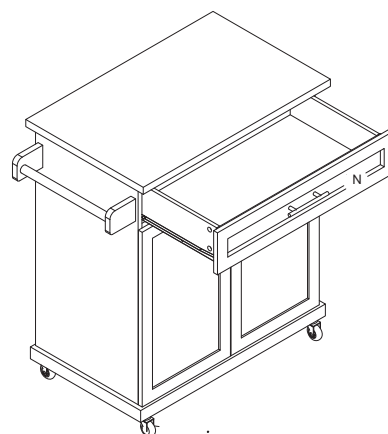

8.1) Insert Back buckle (8) into the mounting positions on Down Back Board (H)

8.2) Place the Shelf Panel (H) onto kitchen cart

Your Kitchen cart is ready for use.

**This Kitchen cart can only be used on a flat, level surface.**

## Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.