 


014-HG-41801
Veropeso TV Stand

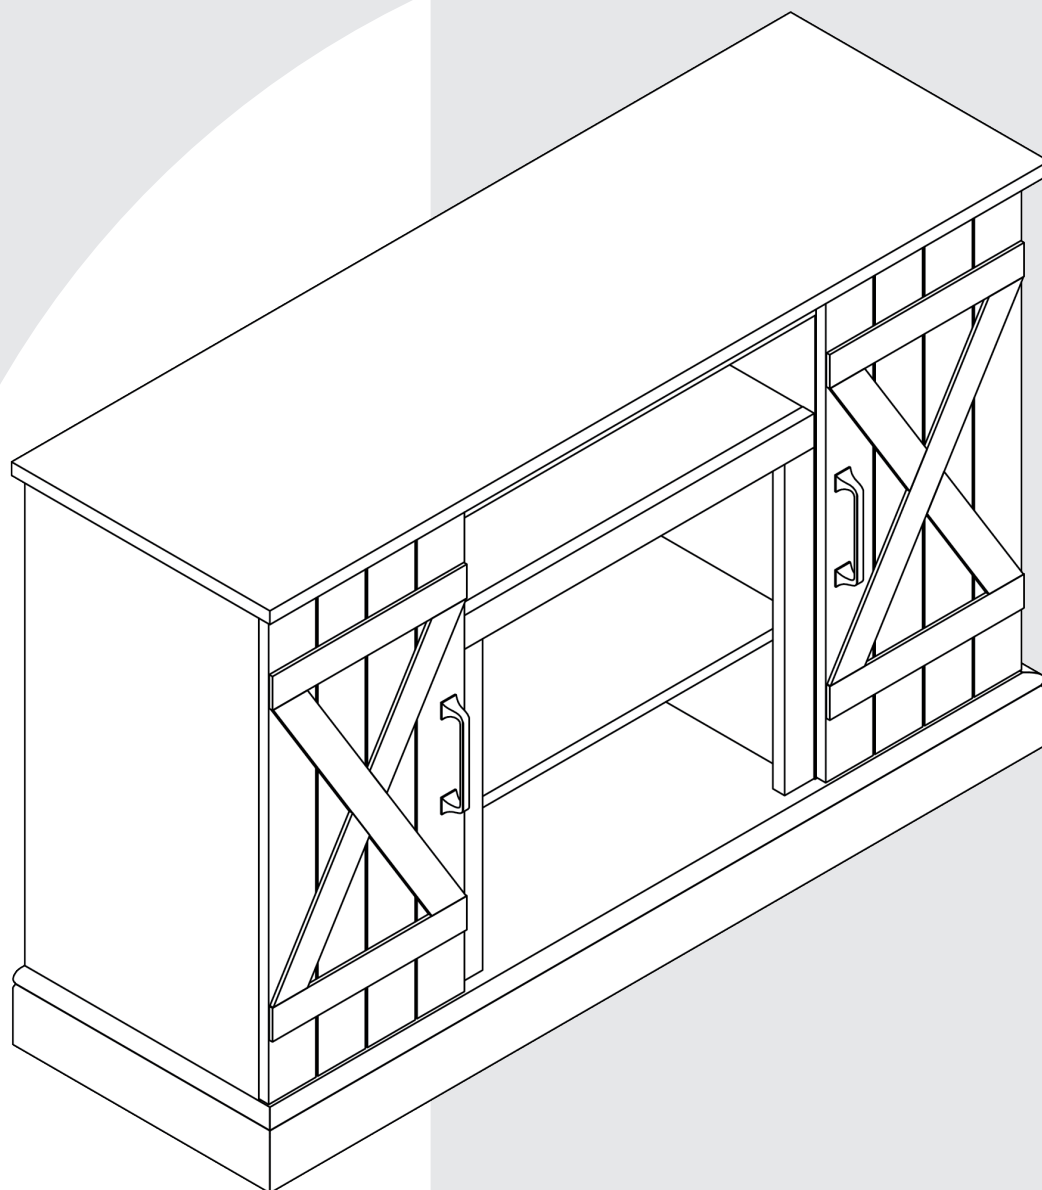

Belleze®

Instruction
Manual



 
Scan to view
online tutorial
or visit
www.belleze.com

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.





WARNING!

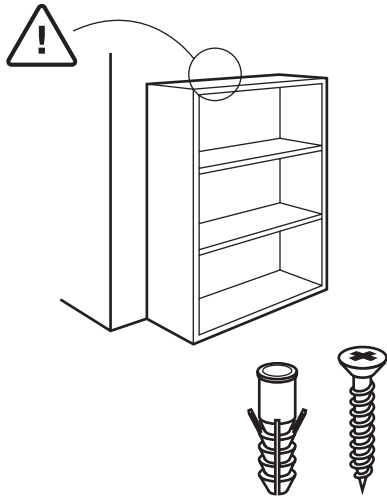

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



  CAUTION!

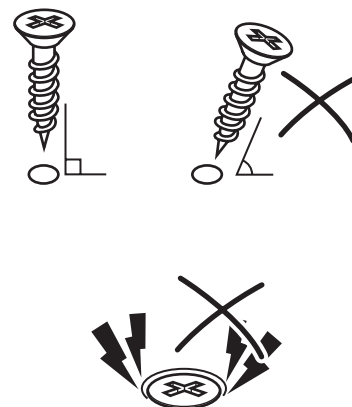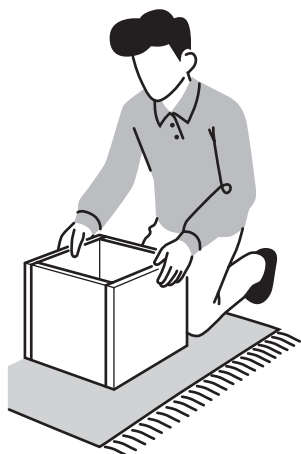

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly

120 mins




Weight Capacity Limitations are as Follows:

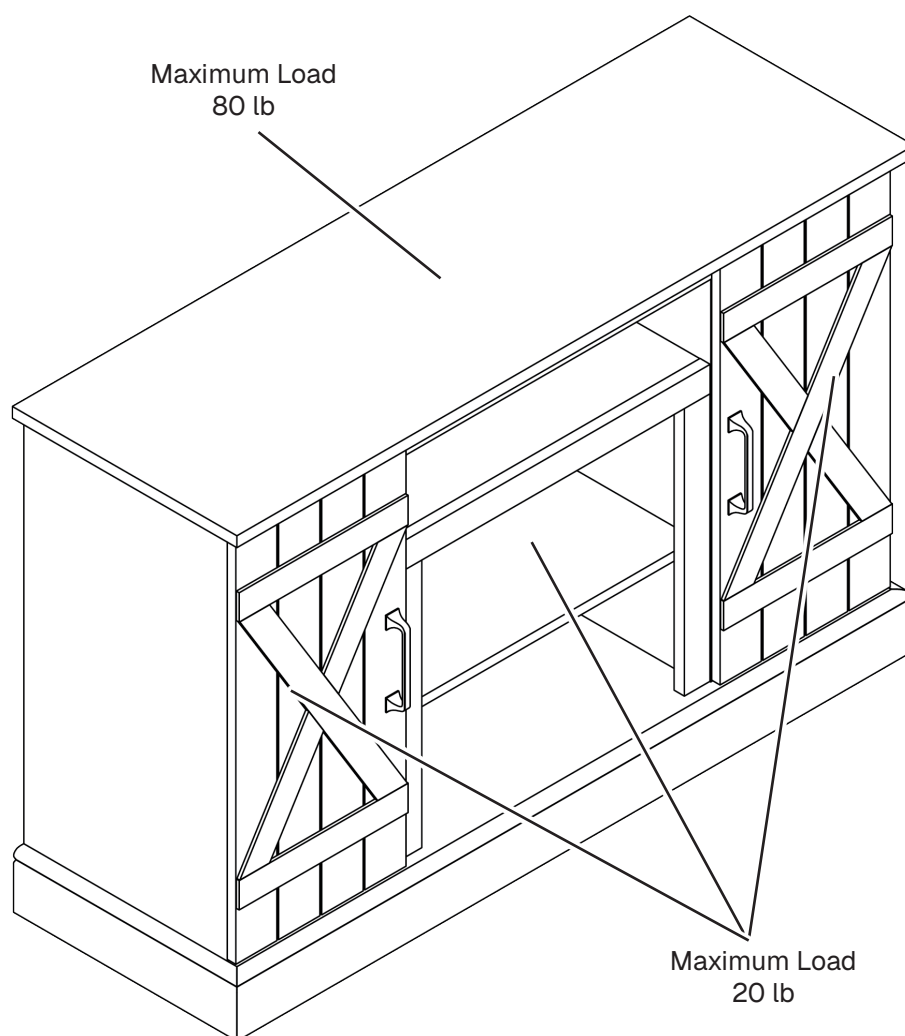


Tools Needed



 • Philips Screwdriver

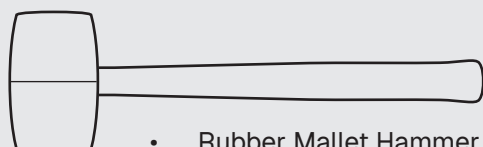


• Rubber Mallet Hammer

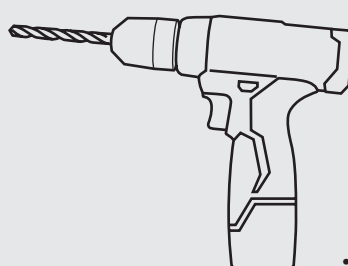 

• Electric Drill

 Package Contents

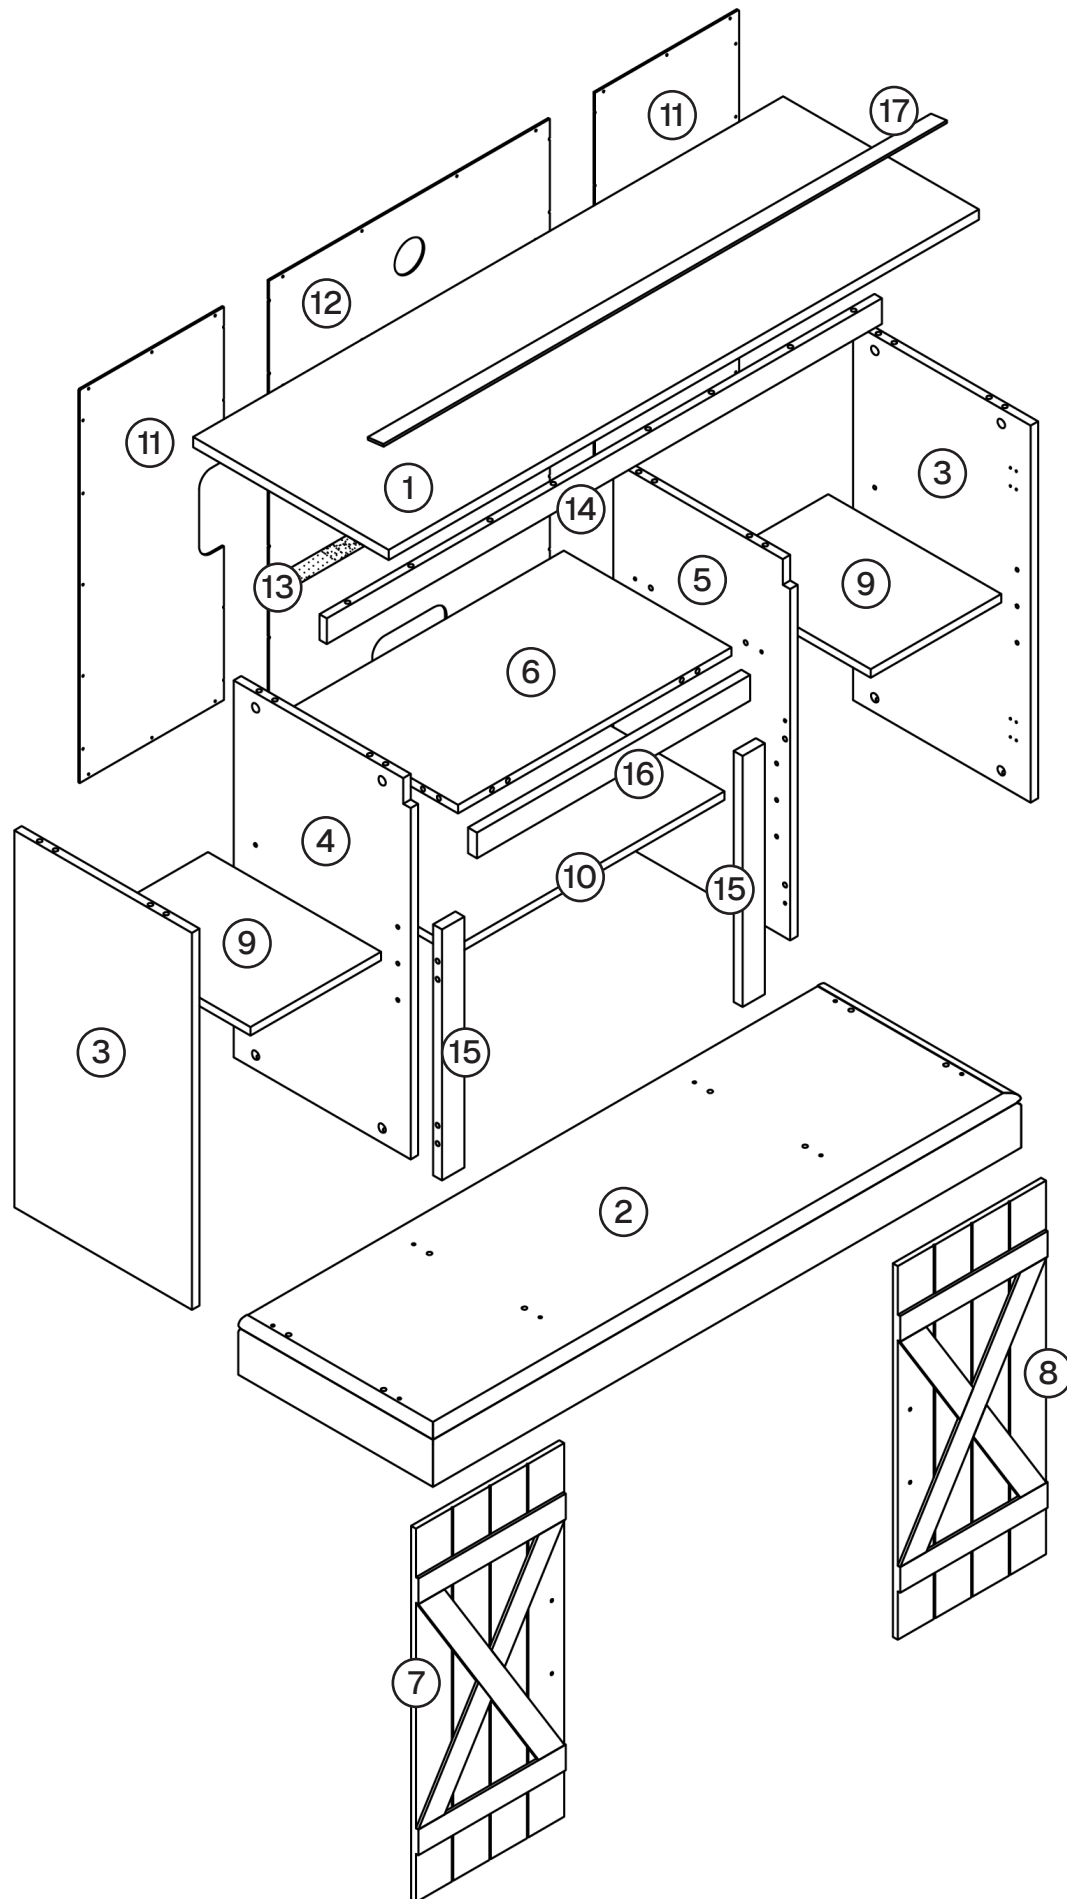

Package Contents

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Base	1
3	Lateral Panel	2
4	Left Medial Panel	1
5	Right Medial Panel	1
6	Center Panel	1
7	Left Cabinet Door	1
8	Right Cabinet Door	1
9	Side Storage Shelf Panel	2
10	Center Storage Shelf Panel	1
11	Side Back Panel	2
12	Top Back Panel	1
13	Bottom Back Panel	1
14	Top Crossbar	1
15	Vertical Surround Panel	2
16	Horizontal Surround Panel	1
17	Wood Strip	1

Package Contents

(A)



30x + 3x

(B)



 
30x + 3x

(C)




30x + 3x

(D)



30x + 3x

 (E)

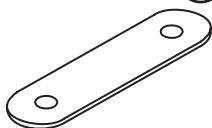


2x

(F)



4x

 (G)

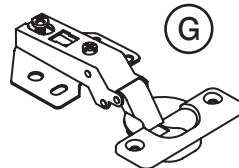


4x

(H)



24x + 2x

 (I)

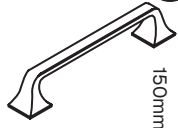

2x

(J)



4x

(K)



12x + 1x

(L)



46x + 4x

(M)



 
2x

(N)



2x

(O)



2x

 
 
(P)



2x


01

Base, medial panels, and horizontal surround panel

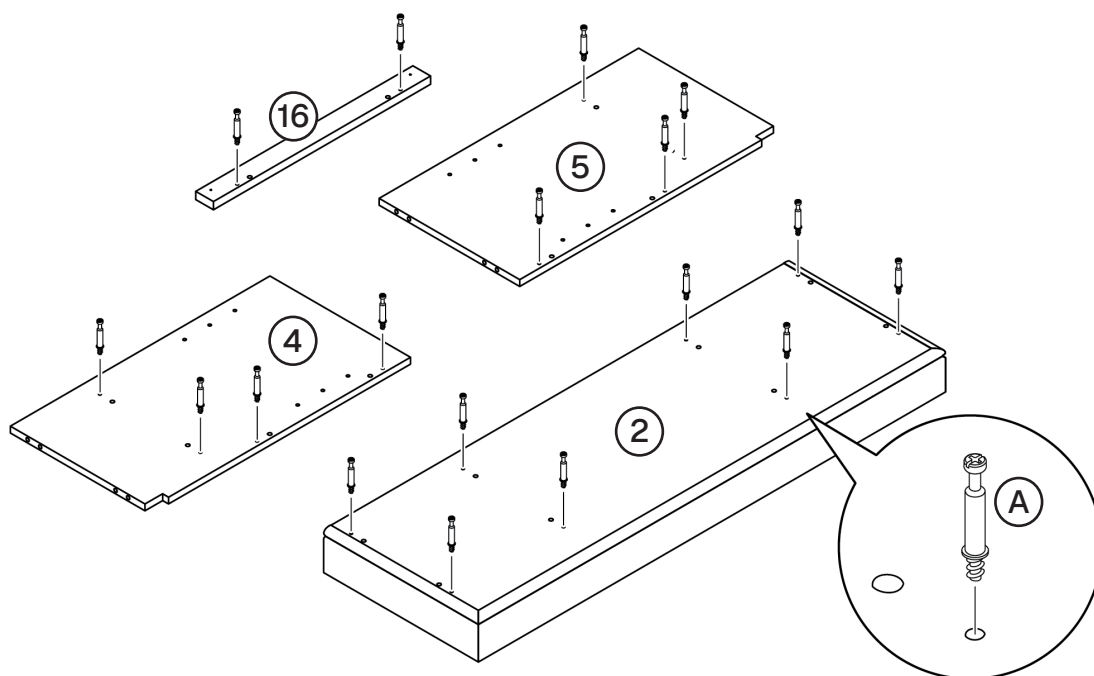



02


 
Medial panels, center panel, vertical surround panels

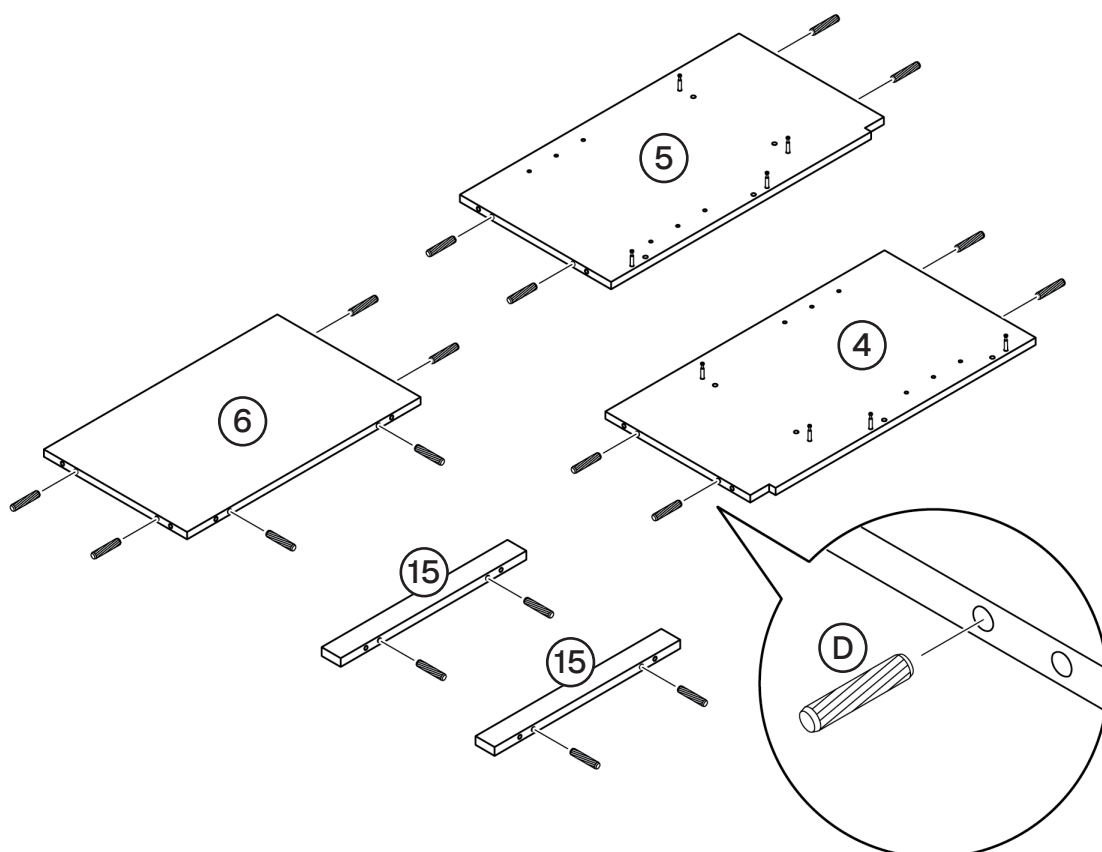


03 Attaching surround panels

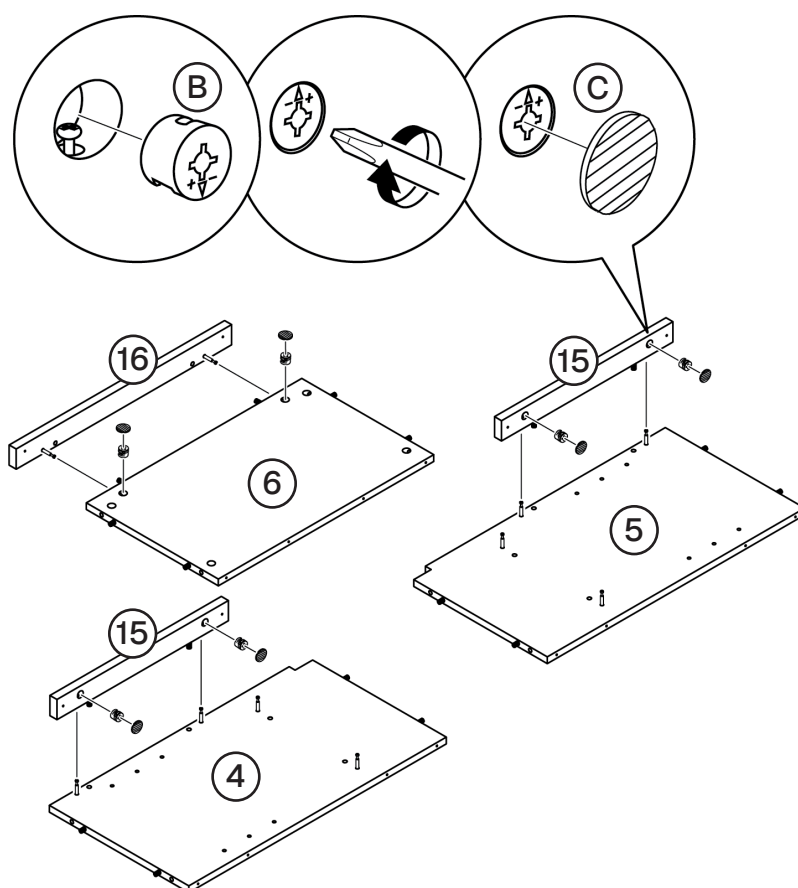  

  04 Assembling the center panel between the medial panels

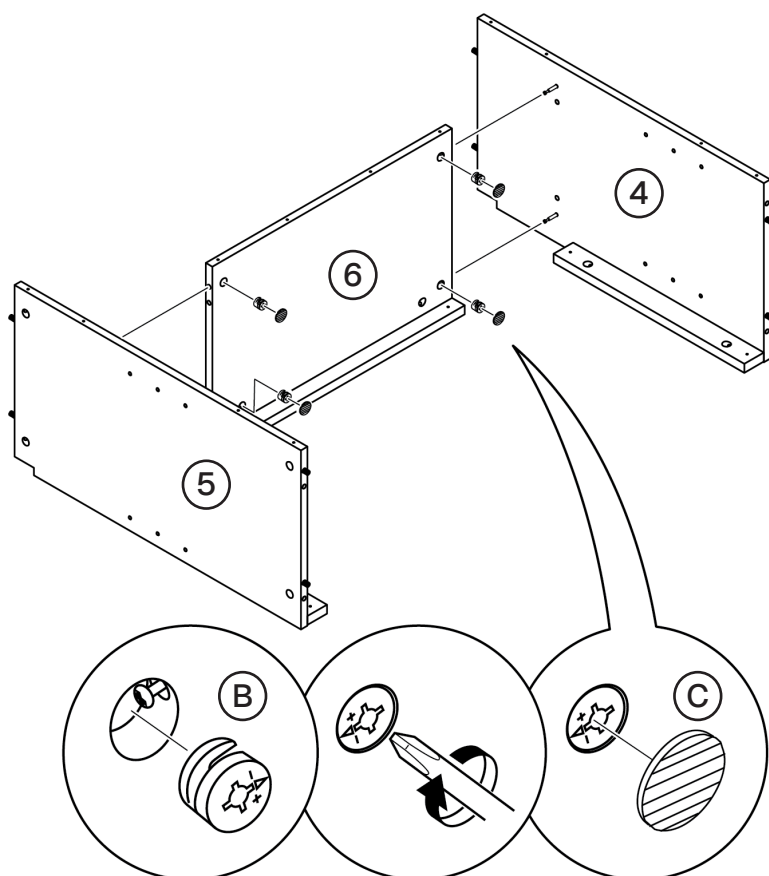


05 Connecting the surround panels

 

E 2x



 F 4x

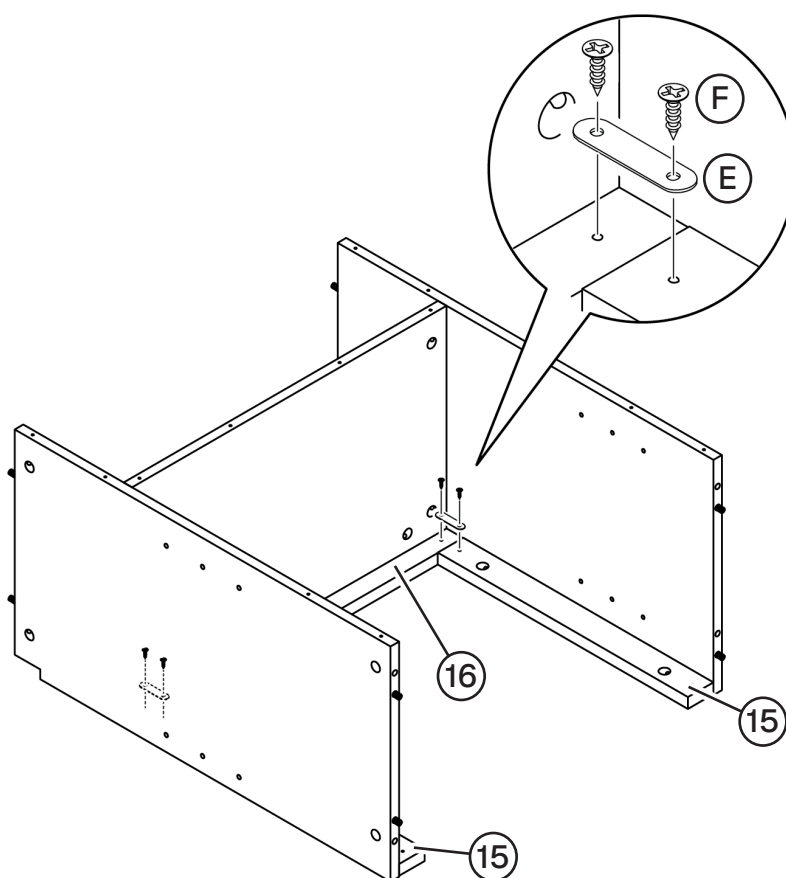


06 Attaching medial panels on the base



B 4x



 
C 4x

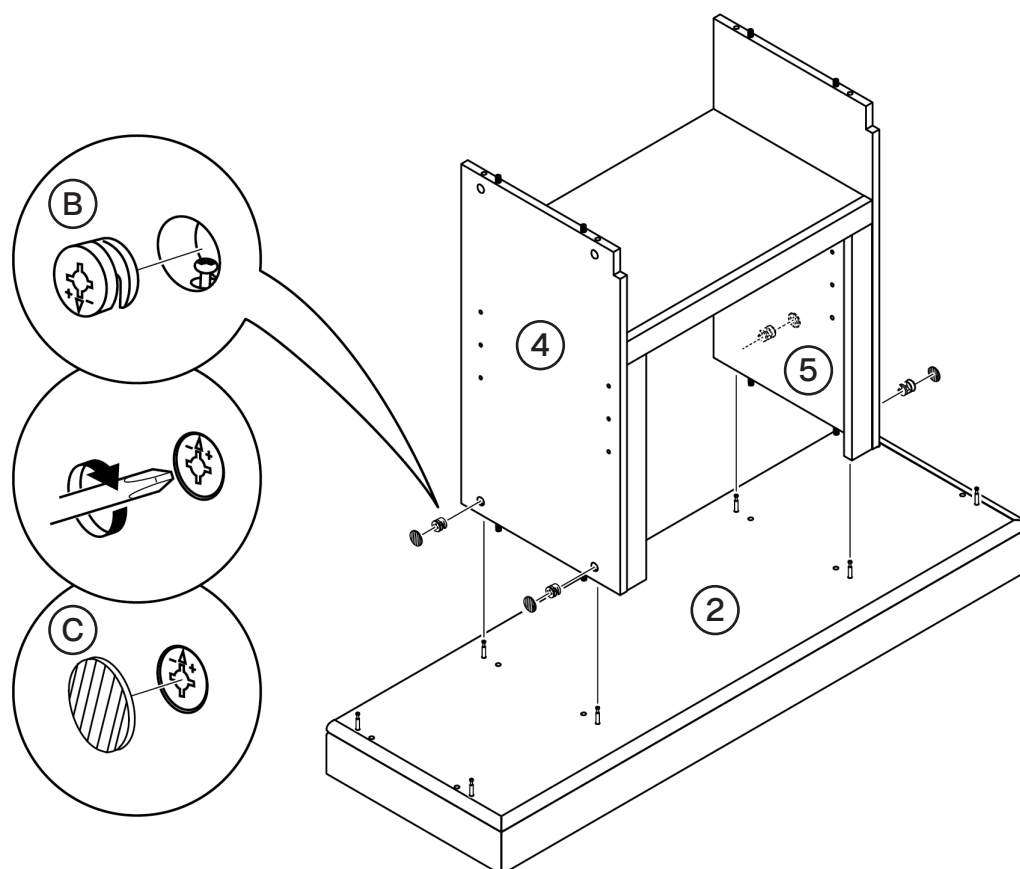

07 Lateral panels



 D 8x

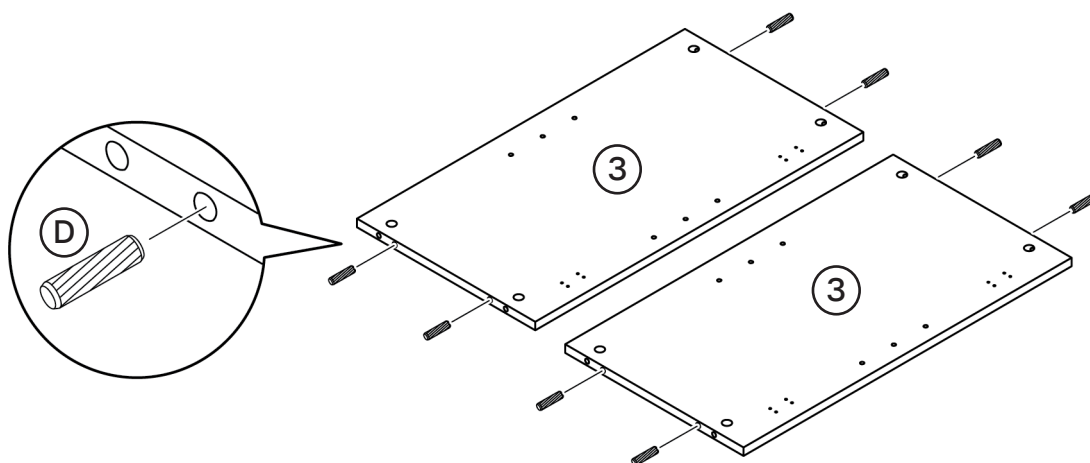


08 Attaching lateral panels



B 4x



 
C 4x

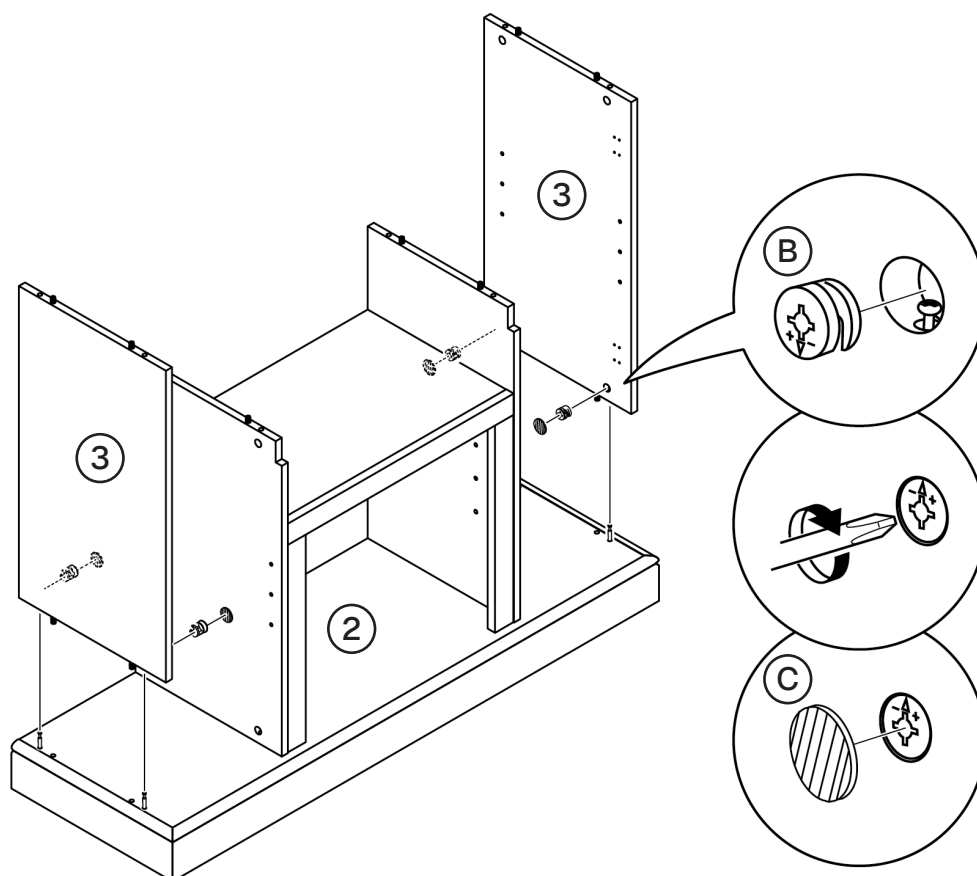

09 Top panel



 
A 12x

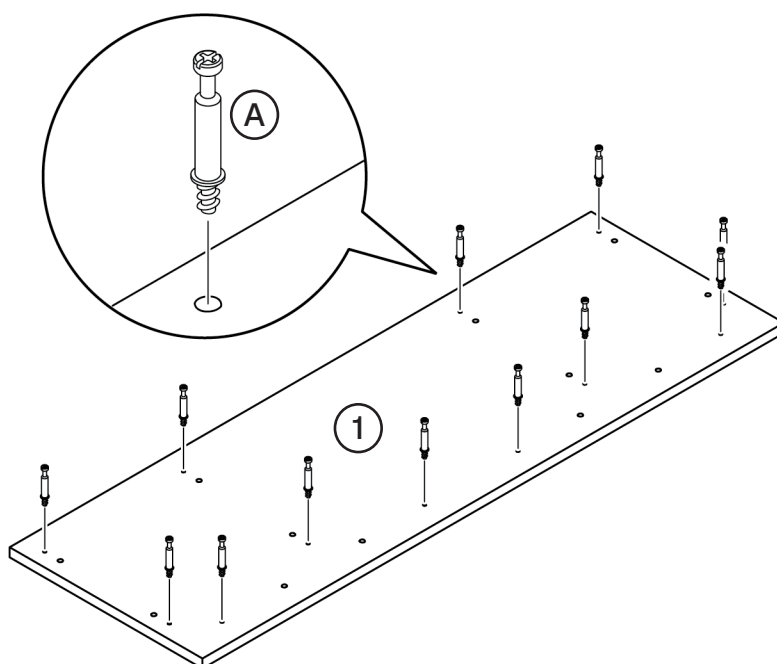

10 Top panel





 D 4x

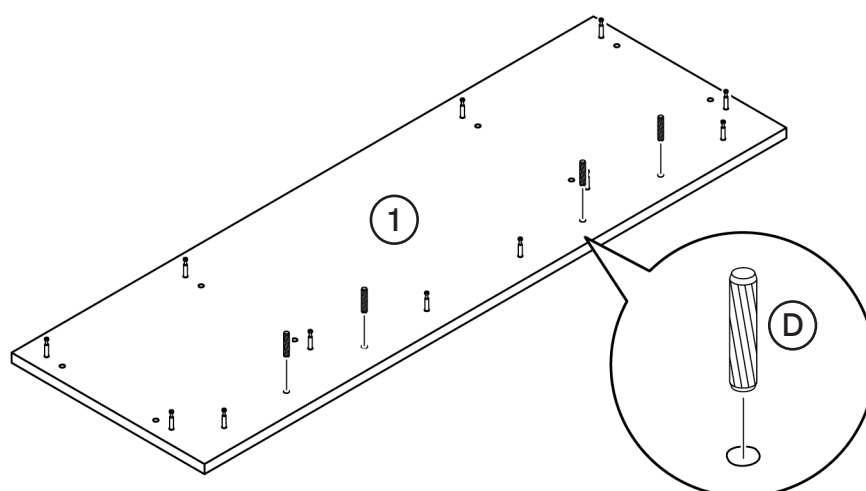




11

  Attaching top crossbar

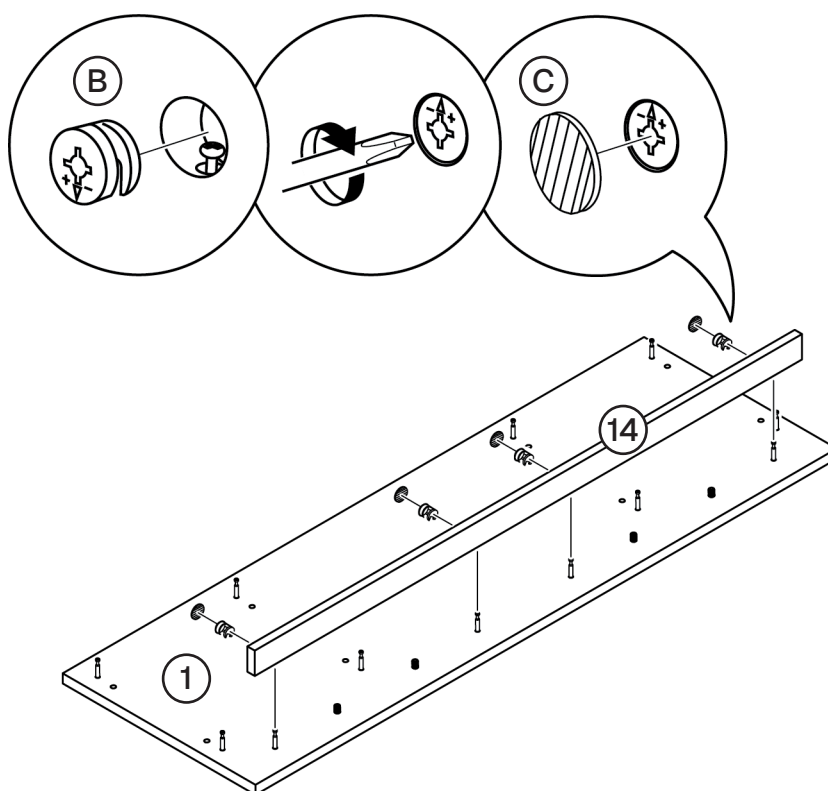



12

  
 
Attaching top panel

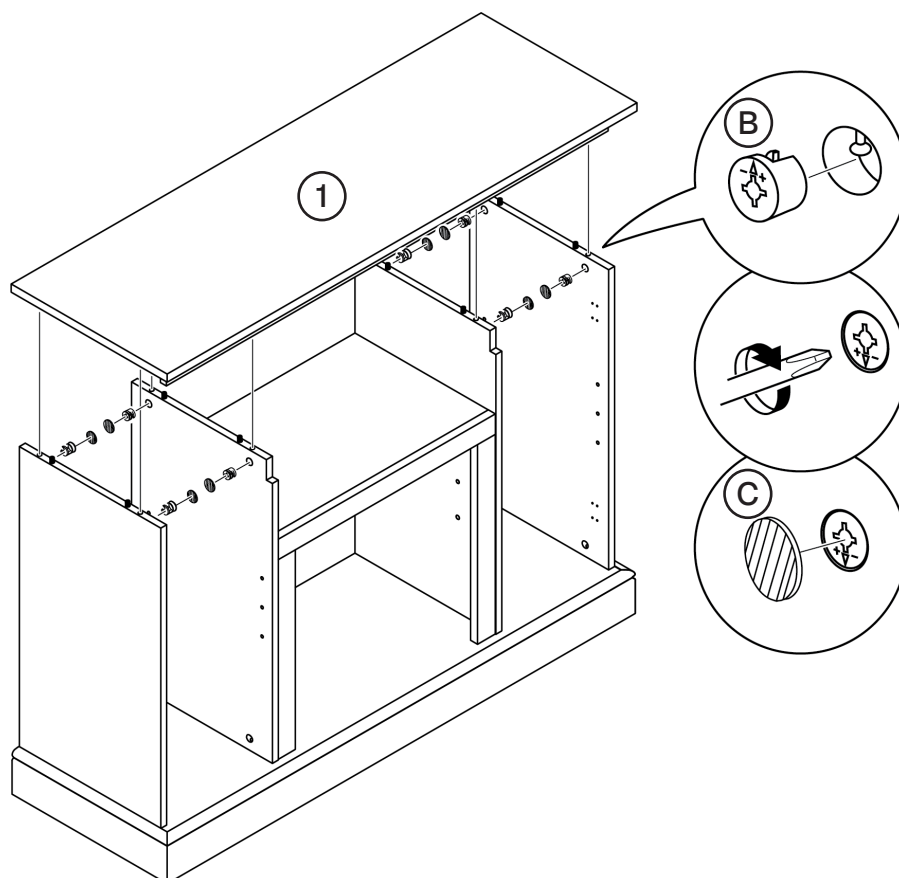

A TV Stand

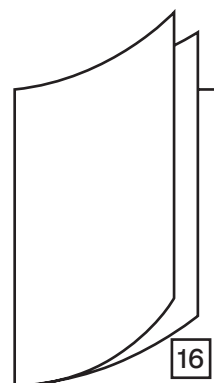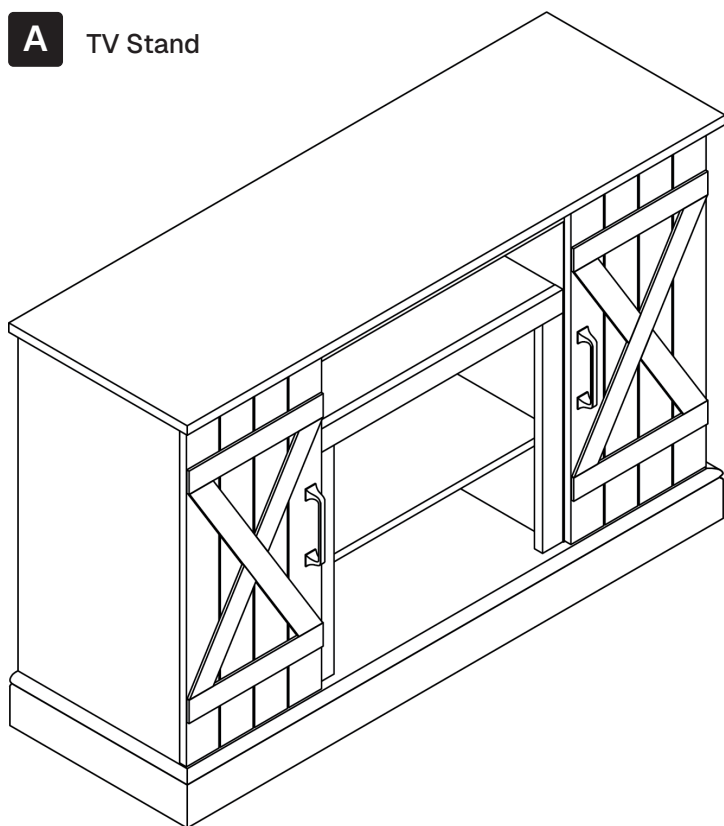  


B Fireplace TV Stand

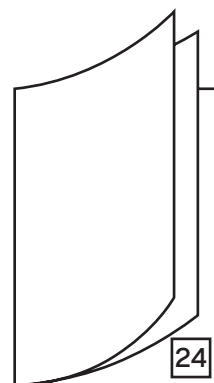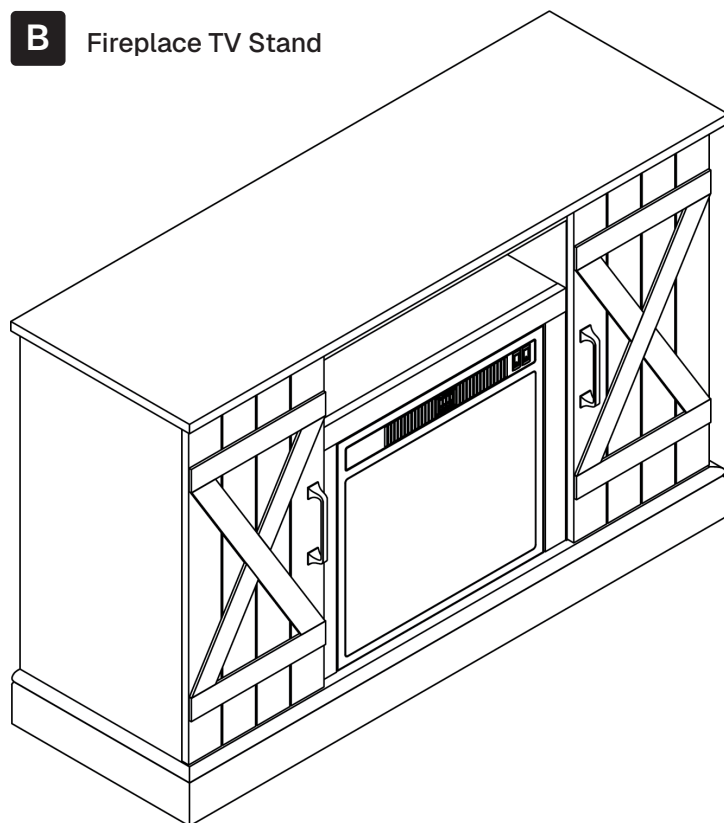  



13

 Attaching back panels

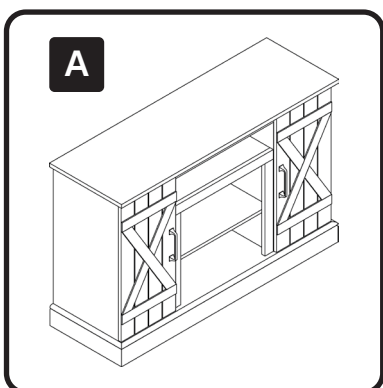

L 44x

  ★ Warning label on the back panel should be facing outward.

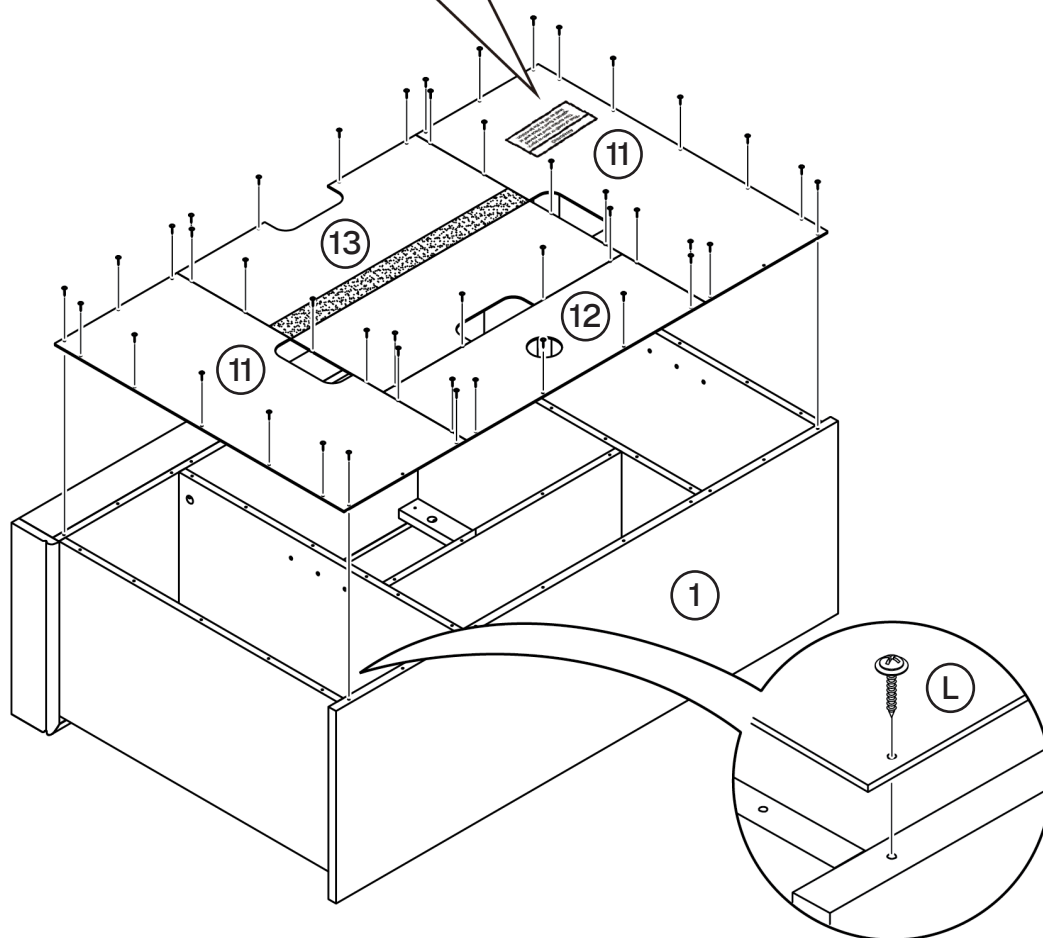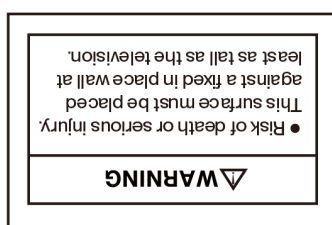


14

Inserting shelf pegs and putting on storage shelf panels




 K 12x

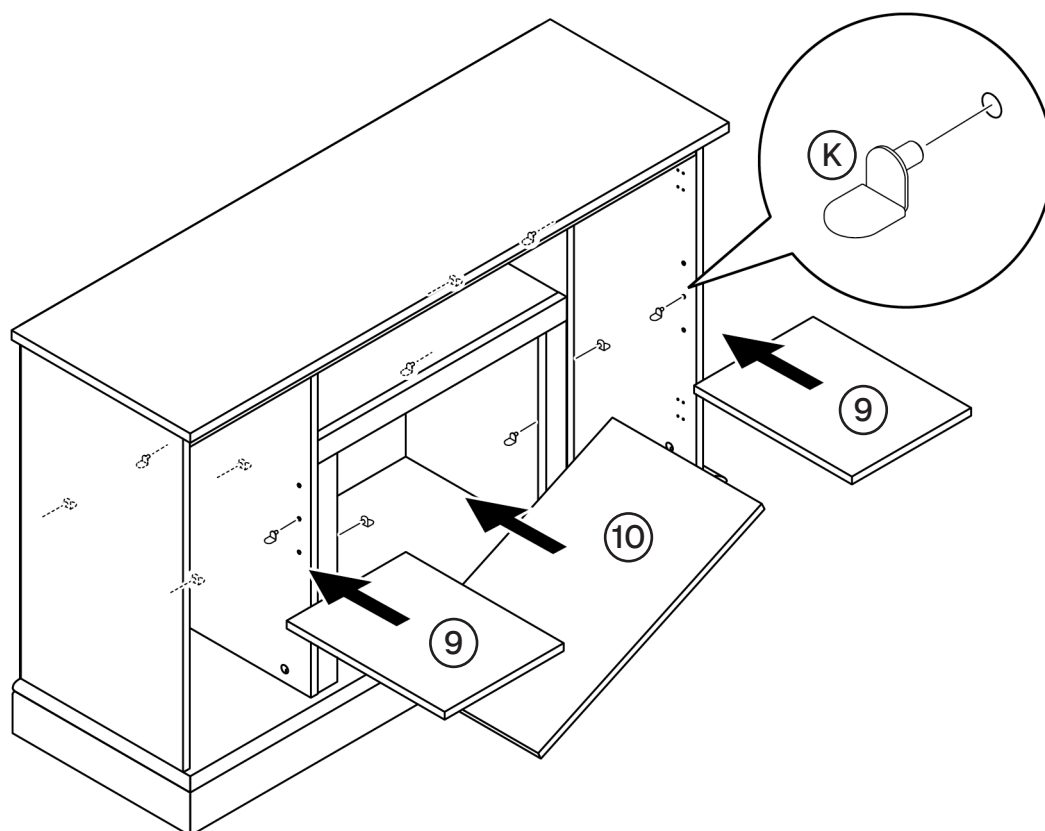

15

 
Attaching door hinges

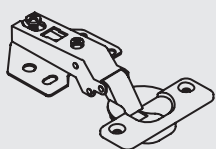

G 4x




 H 8x

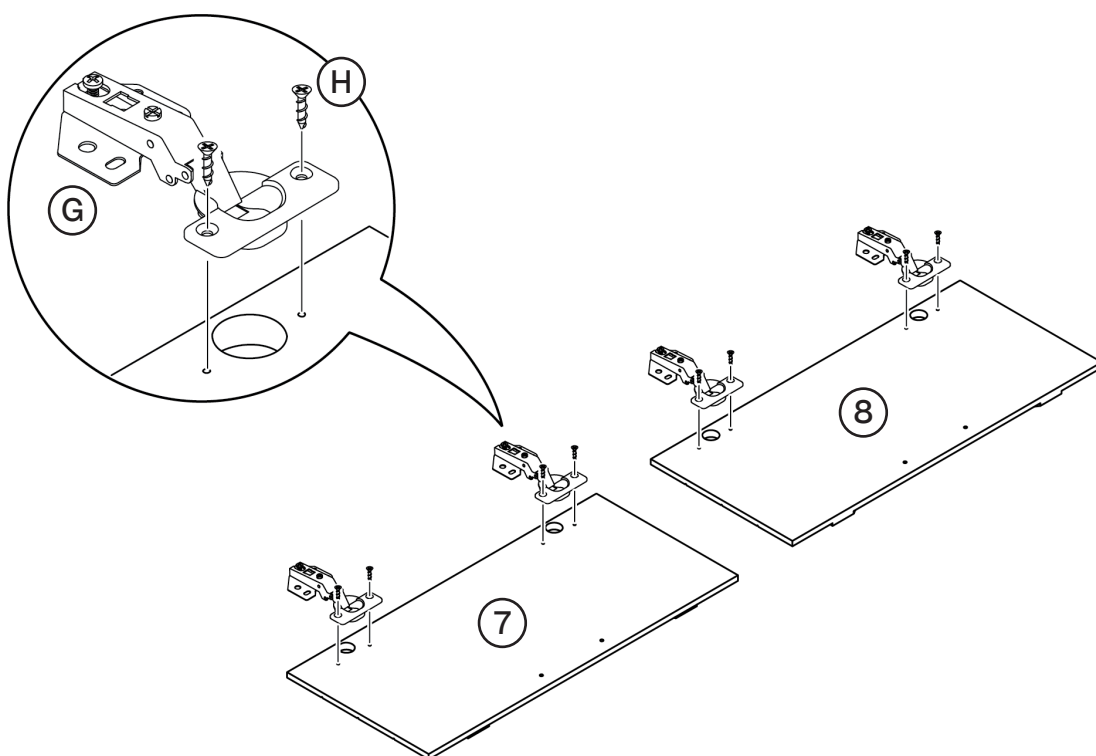

16

 
Attaching door handles

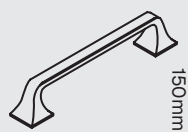

I 2x



 J 4x

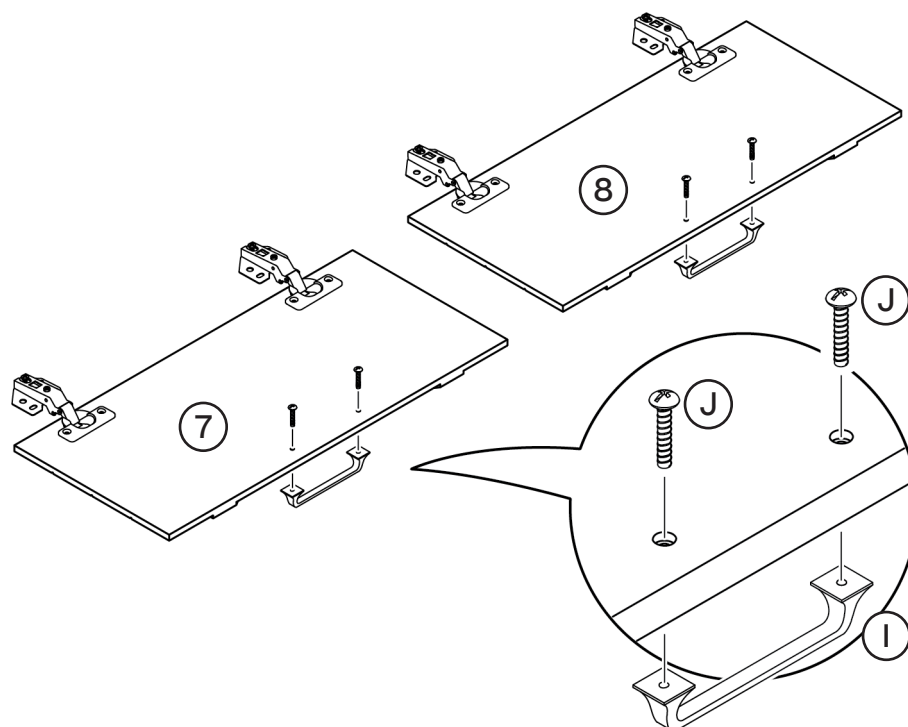


17


Attaching cabinet doors



 H 16x




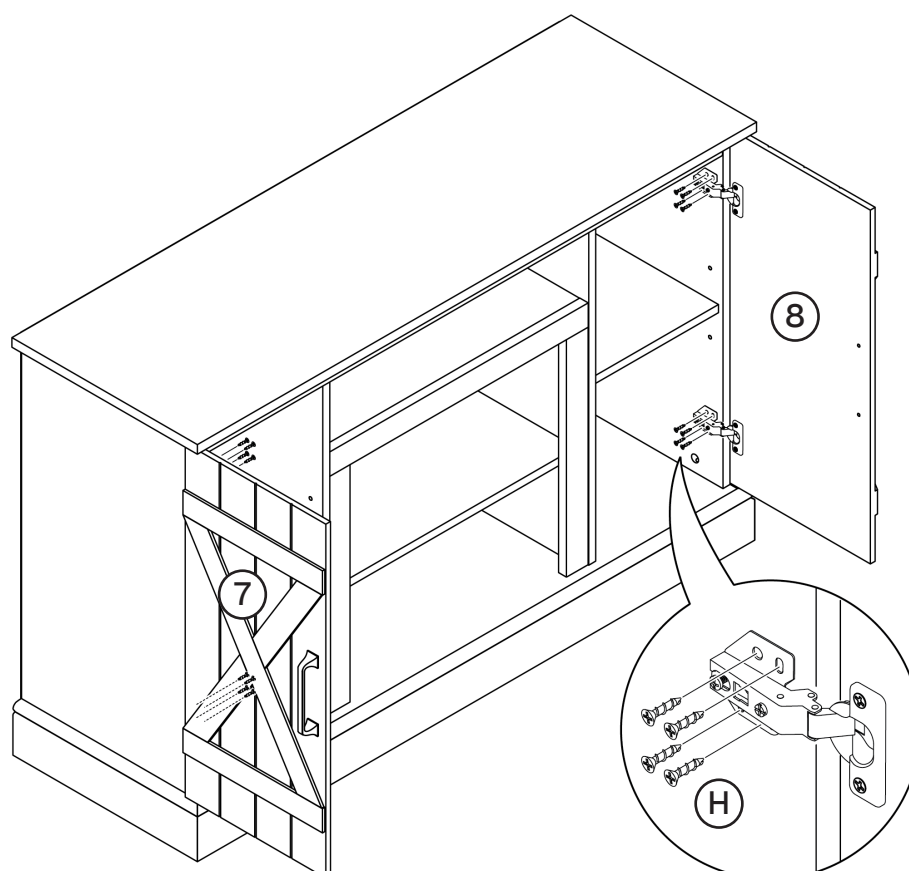


i




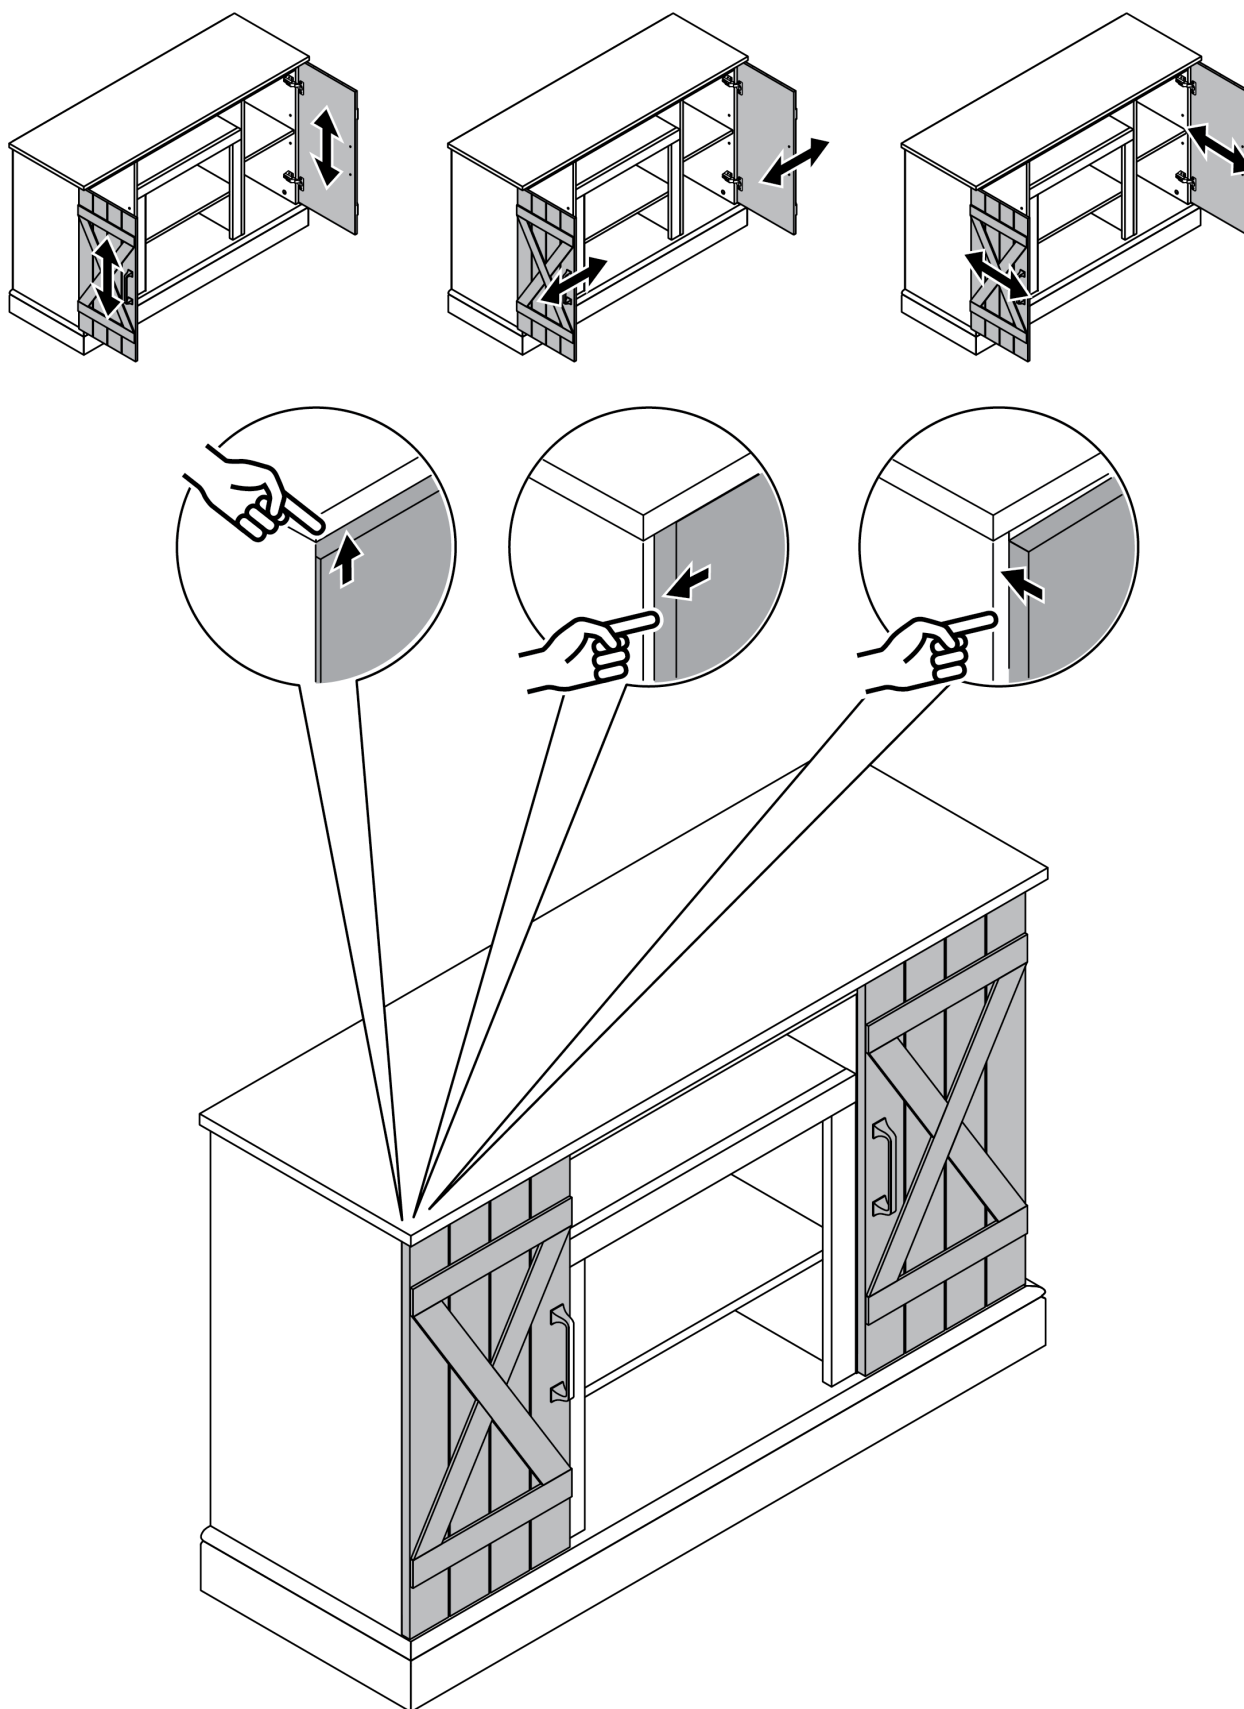 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

   
 
i

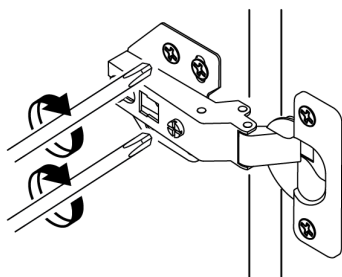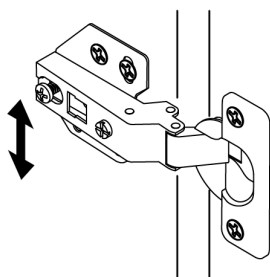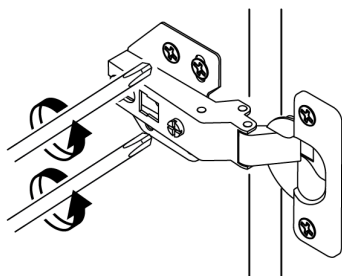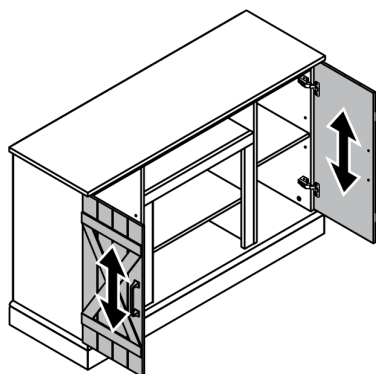

    Loosen the screws on the mounting plate to adjust the door **up and down**.

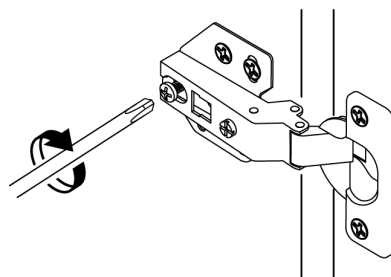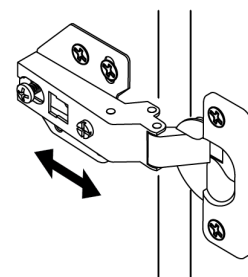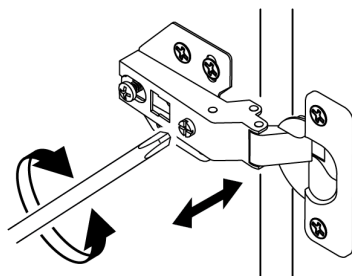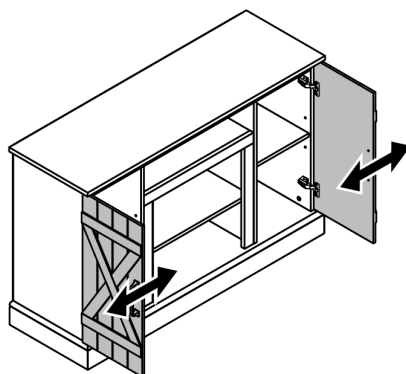

  Adjust the screw on the hinge to micro-adjust the door from **side to side**.

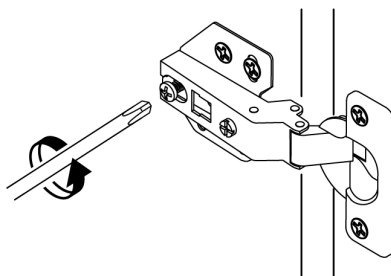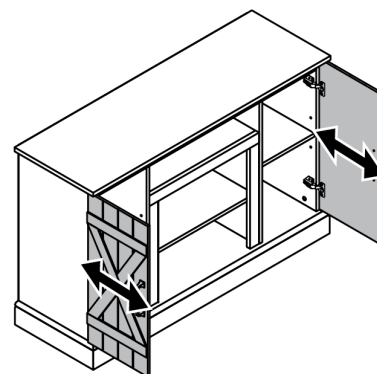

Loosen the screws on the hinge arm to adjust the door **in and out**.

18

 
Attaching anti-tipping straps



N 2x



P 2x

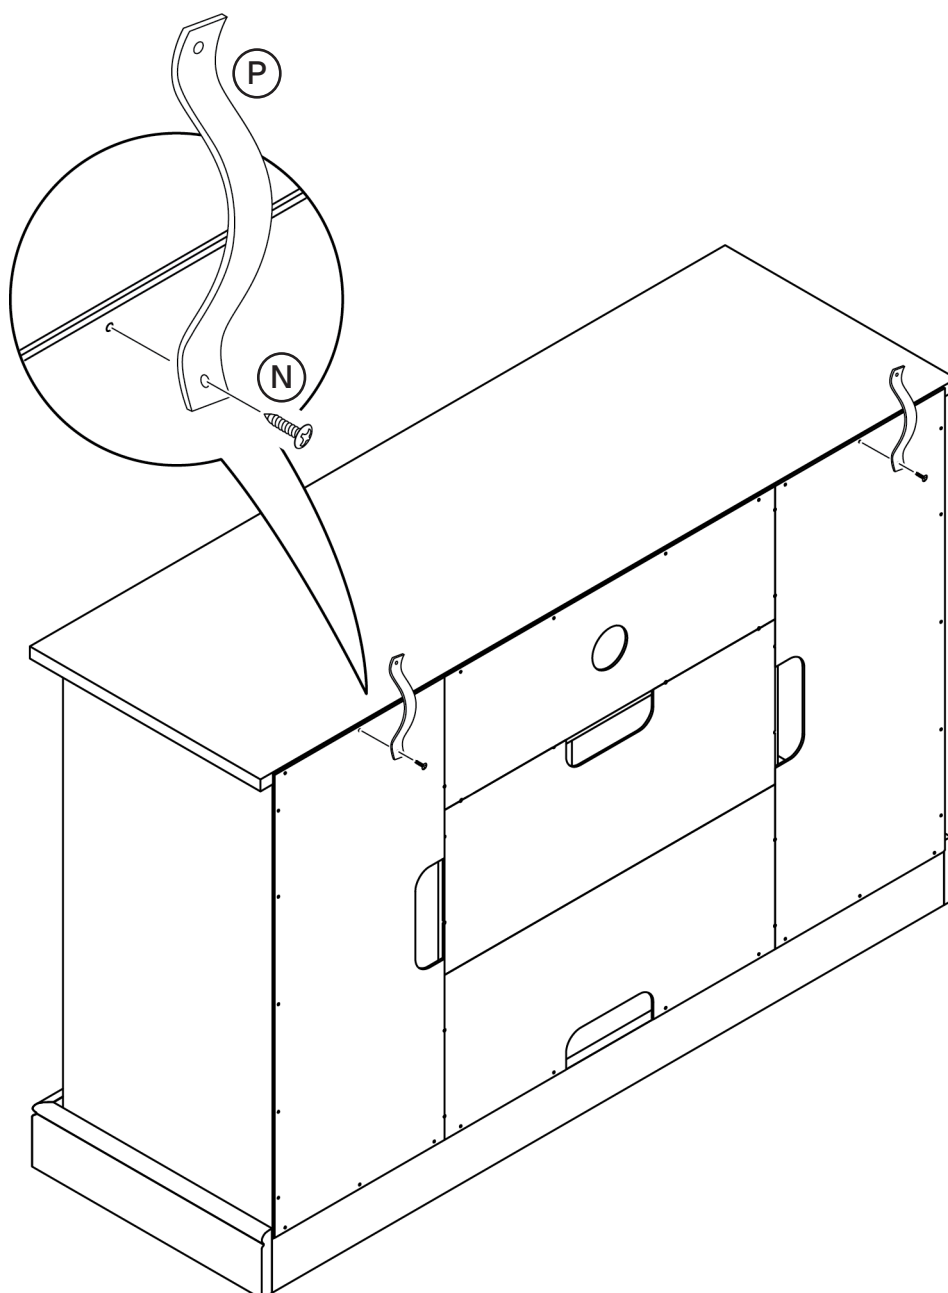


19



Affixing the TV stand to a wall



 M 2x



O 2x

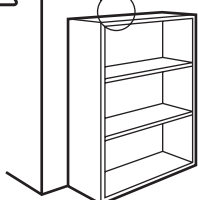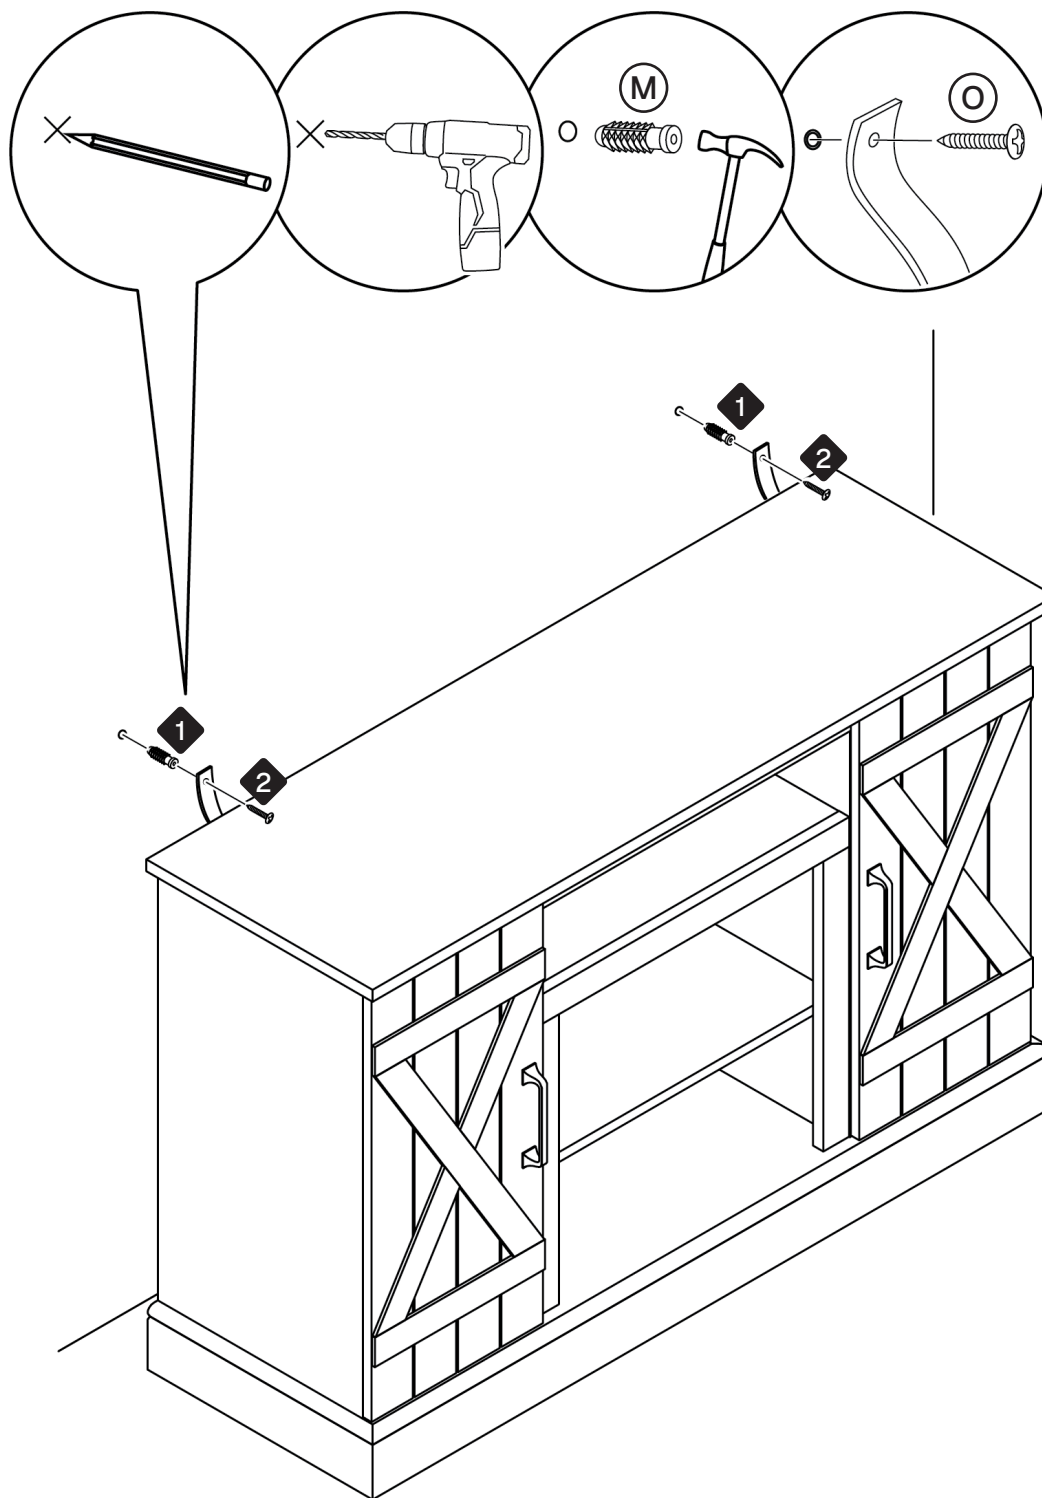  


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.


20 Attaching wood strip

 ★ TV or other objects should be placed behind the wood trim to prevent them from falling off.

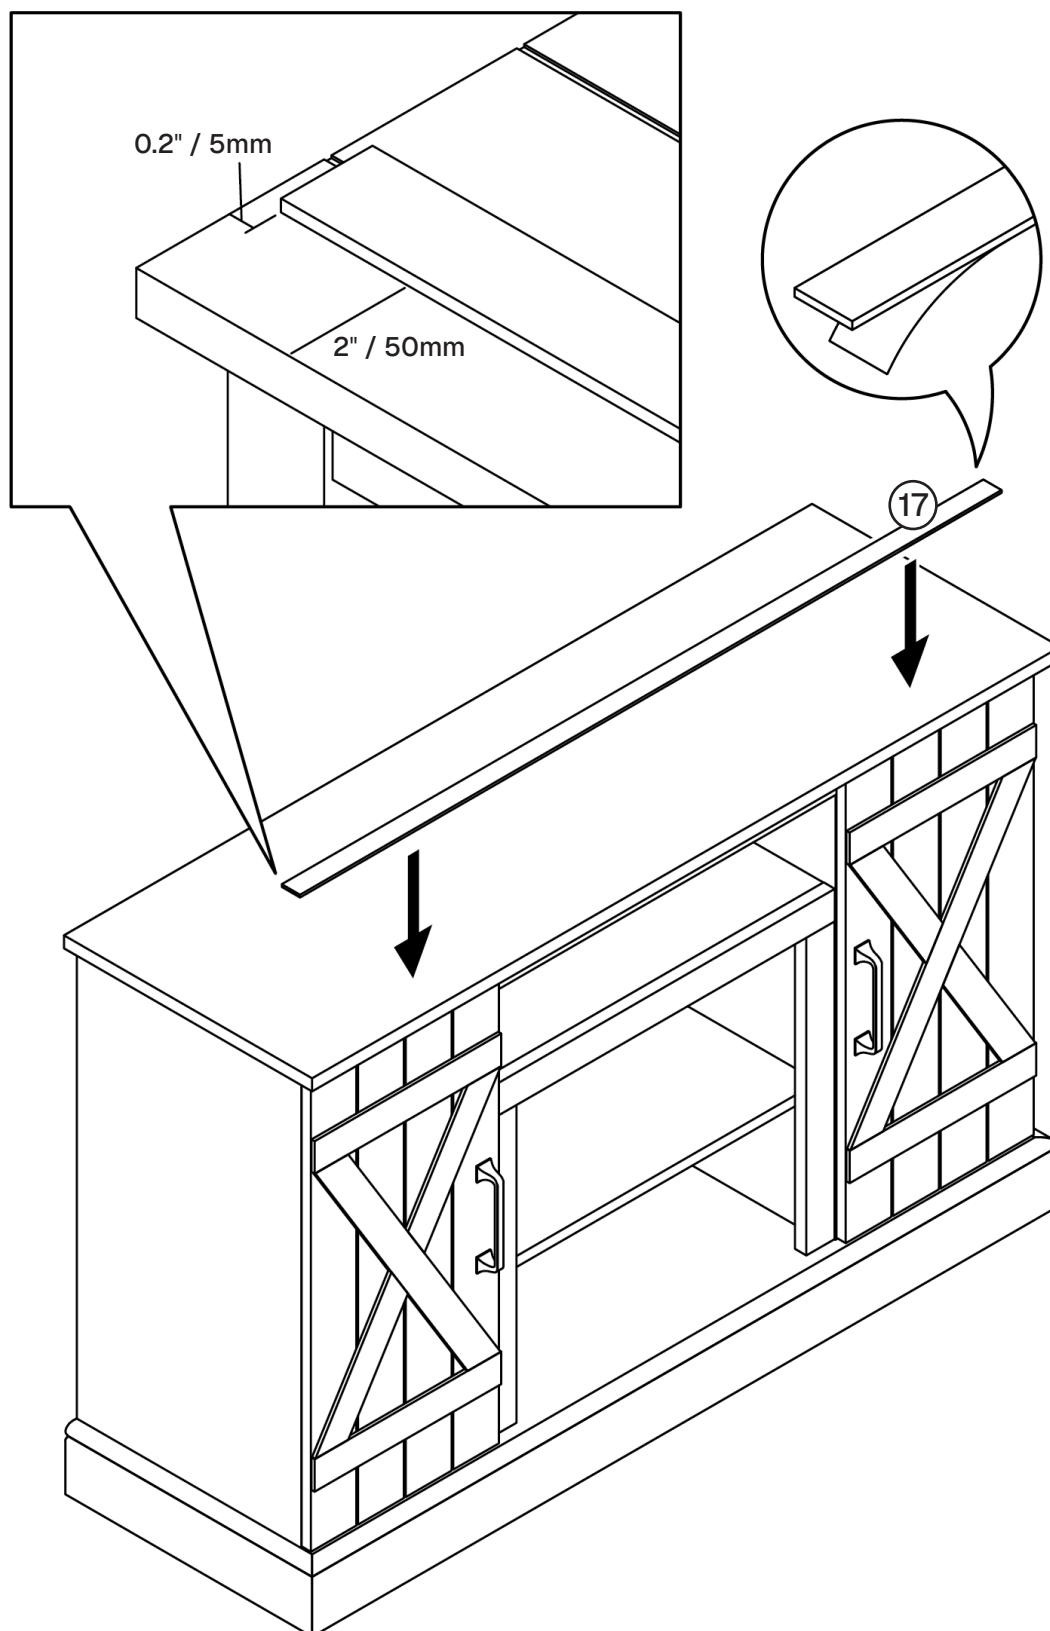


13

 Attaching back panels

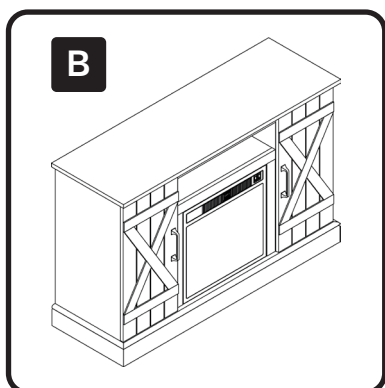

L 35x

 
★ Warning label on the back panel should be facing outward.

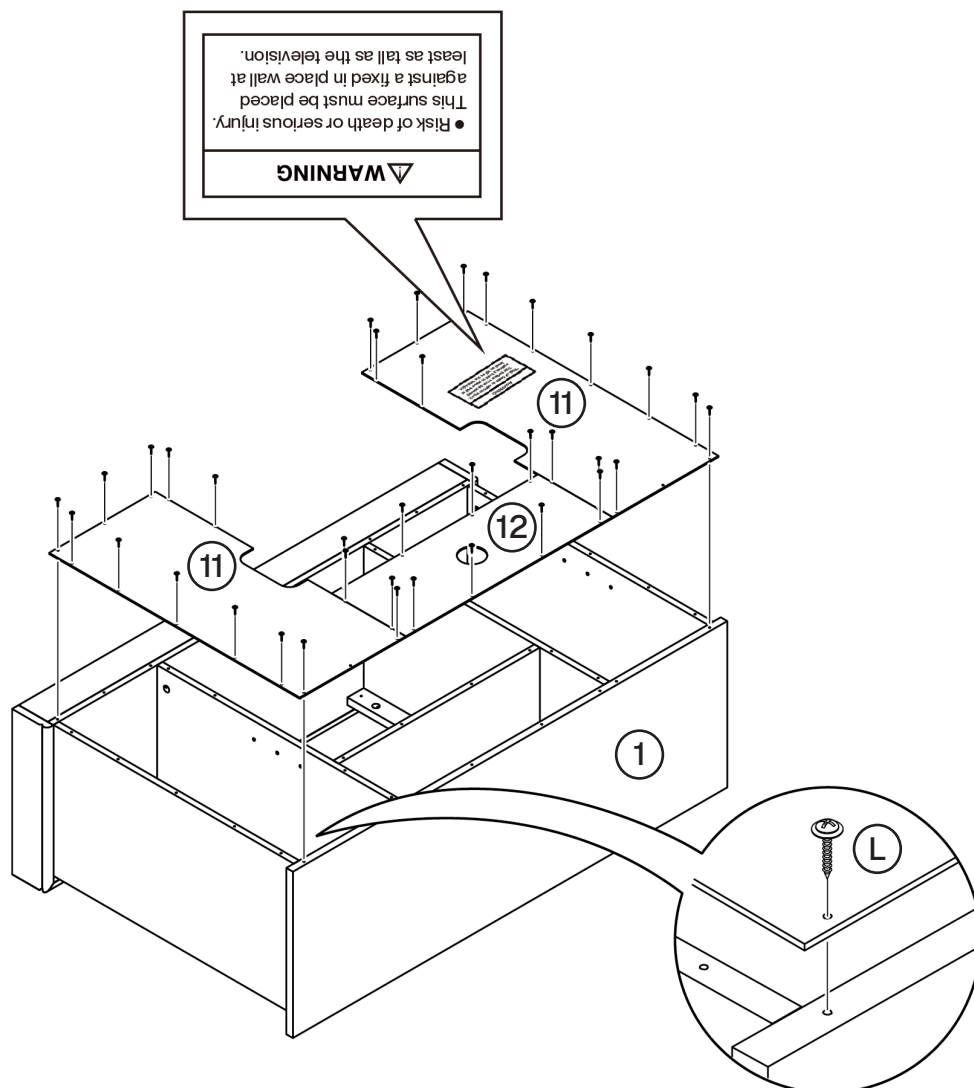

14

Installing fireplace heater

 - ★ Careful when handling glass front panel to prevent injury or damage.
- ★ Do not attempt to install the fireplace heater from the front of the mantel. It will not fit.
- ★ Refer to the user's manual provided with the fireplace for exact instruction.

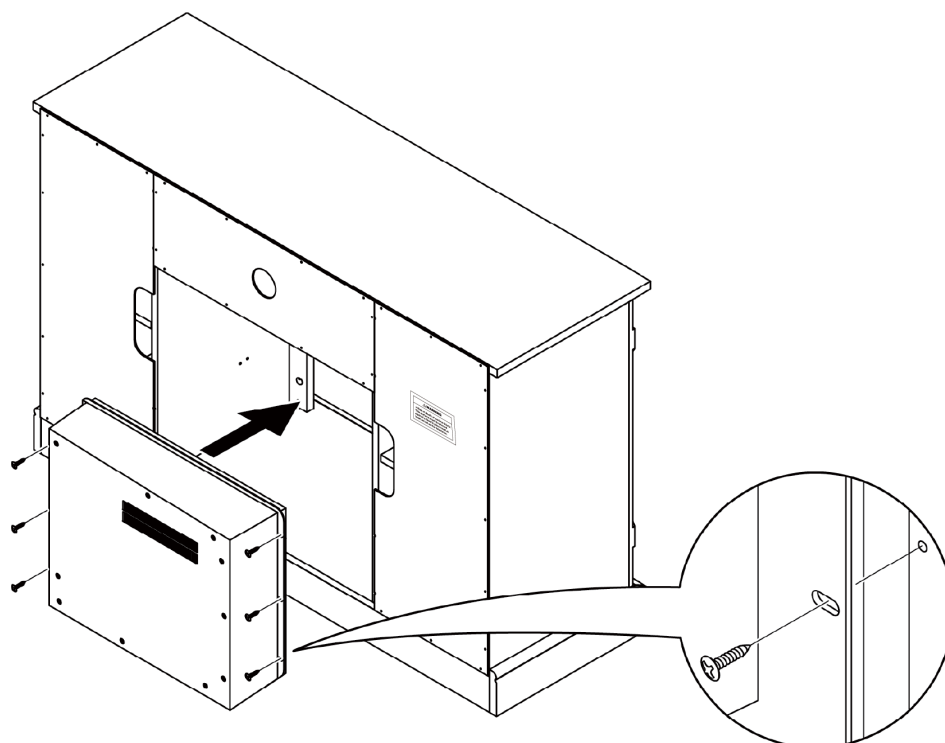


The screws for installation are in the packing case of the fireplace.

15

Inserting shelf pegs and putting on side storage shelf panels




 K 8x

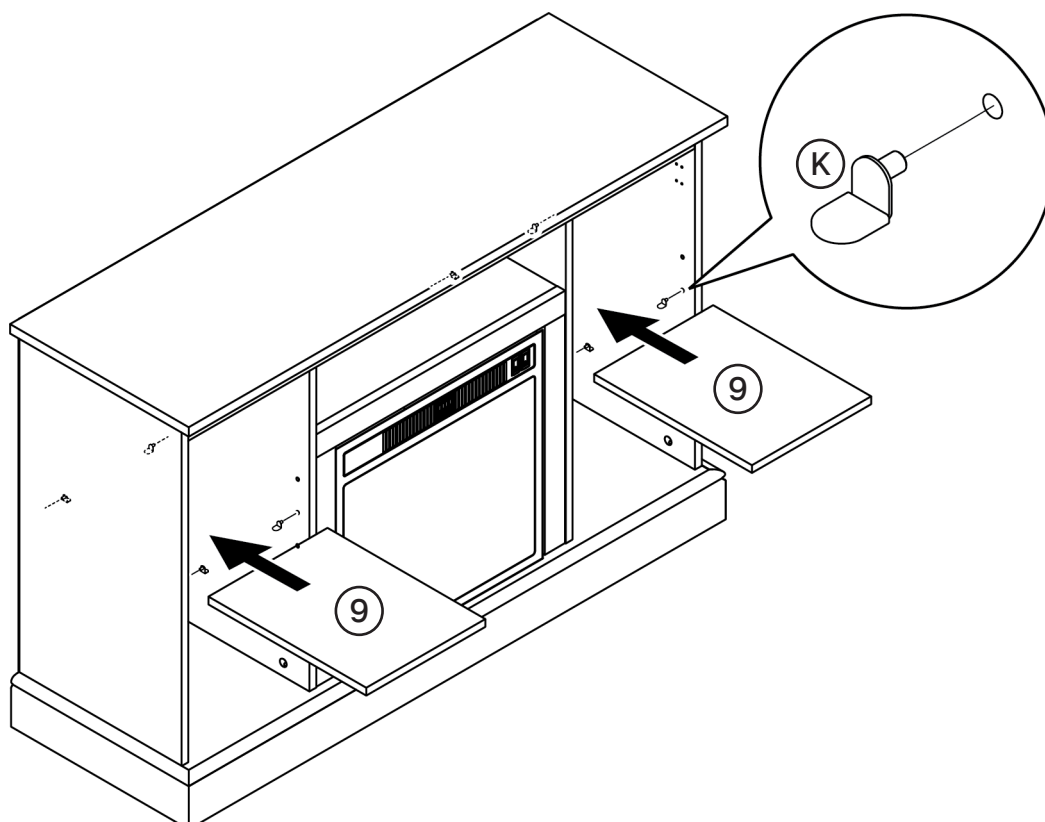


16

 Attaching door hinges

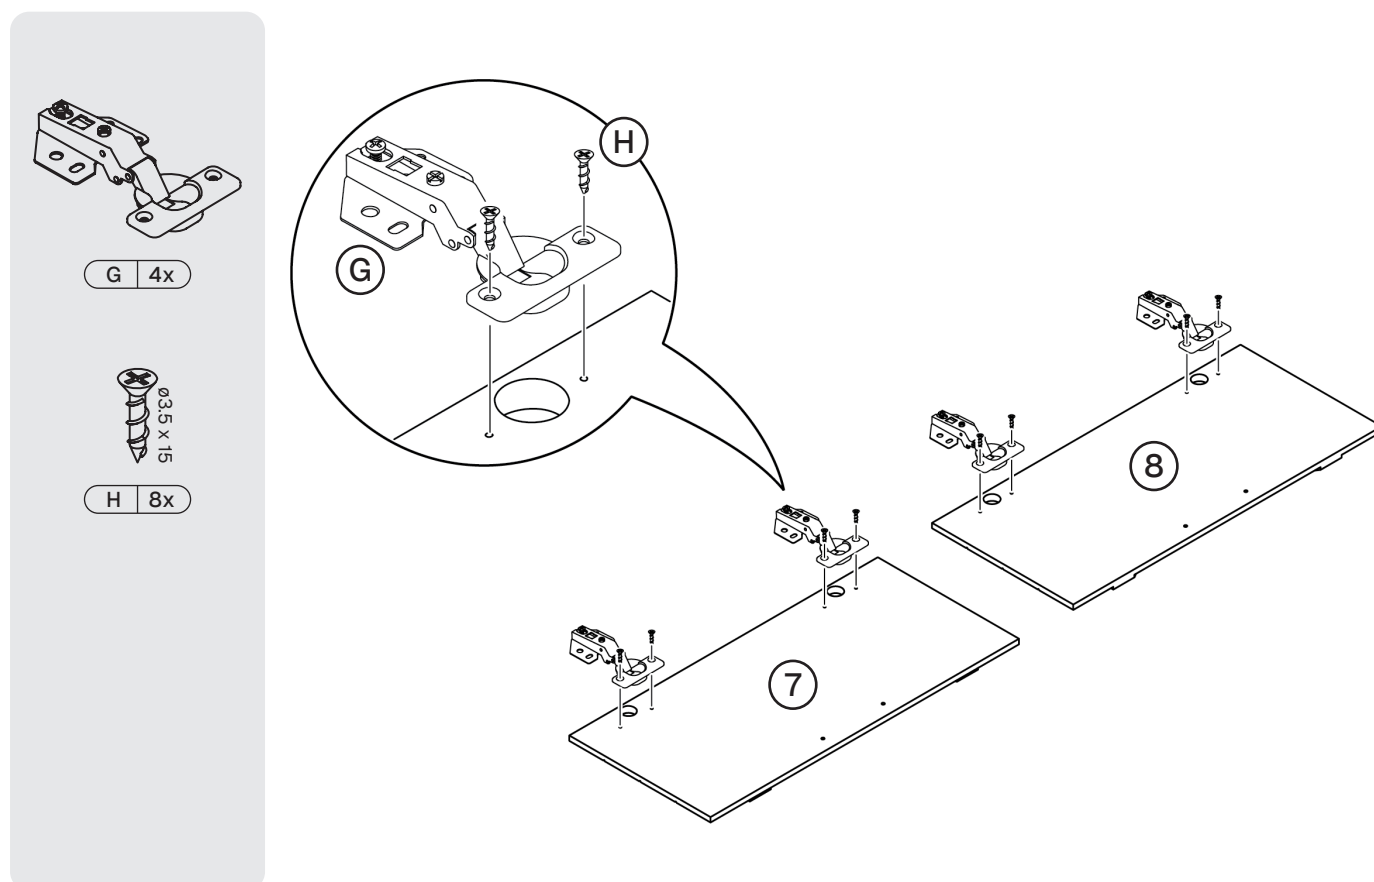

17

 Attaching door handles

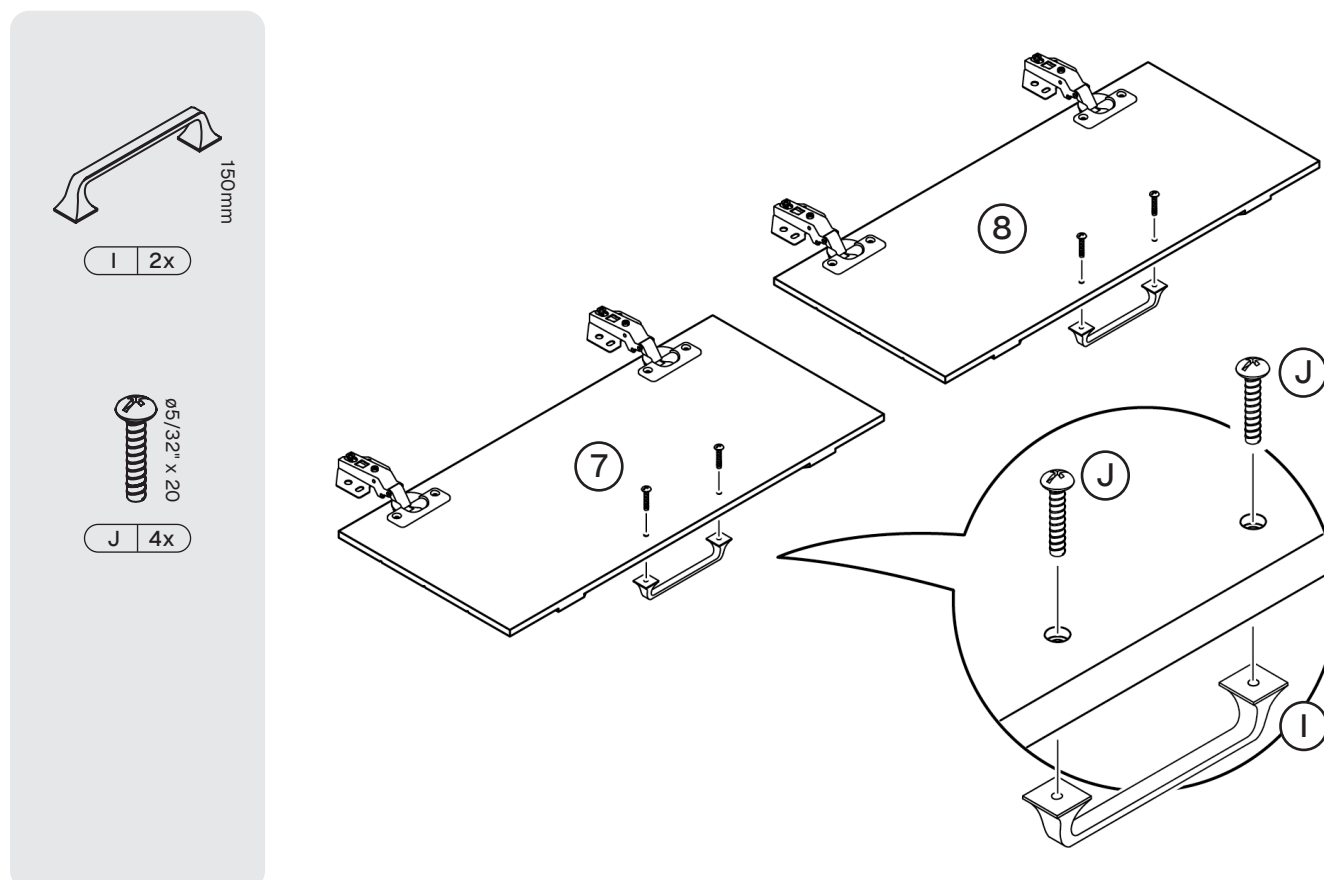


18


Attaching cabinet doors



 H 16x




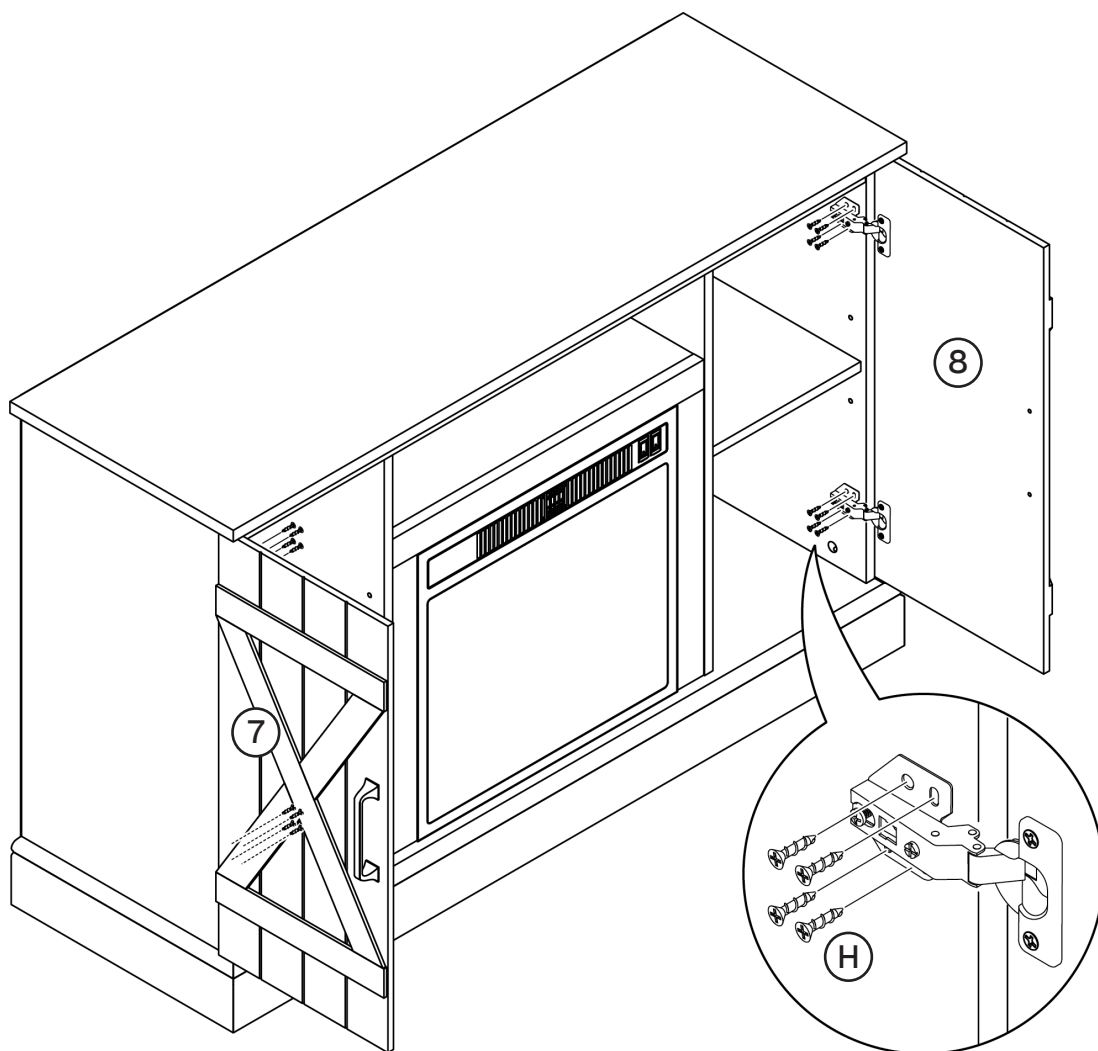


i






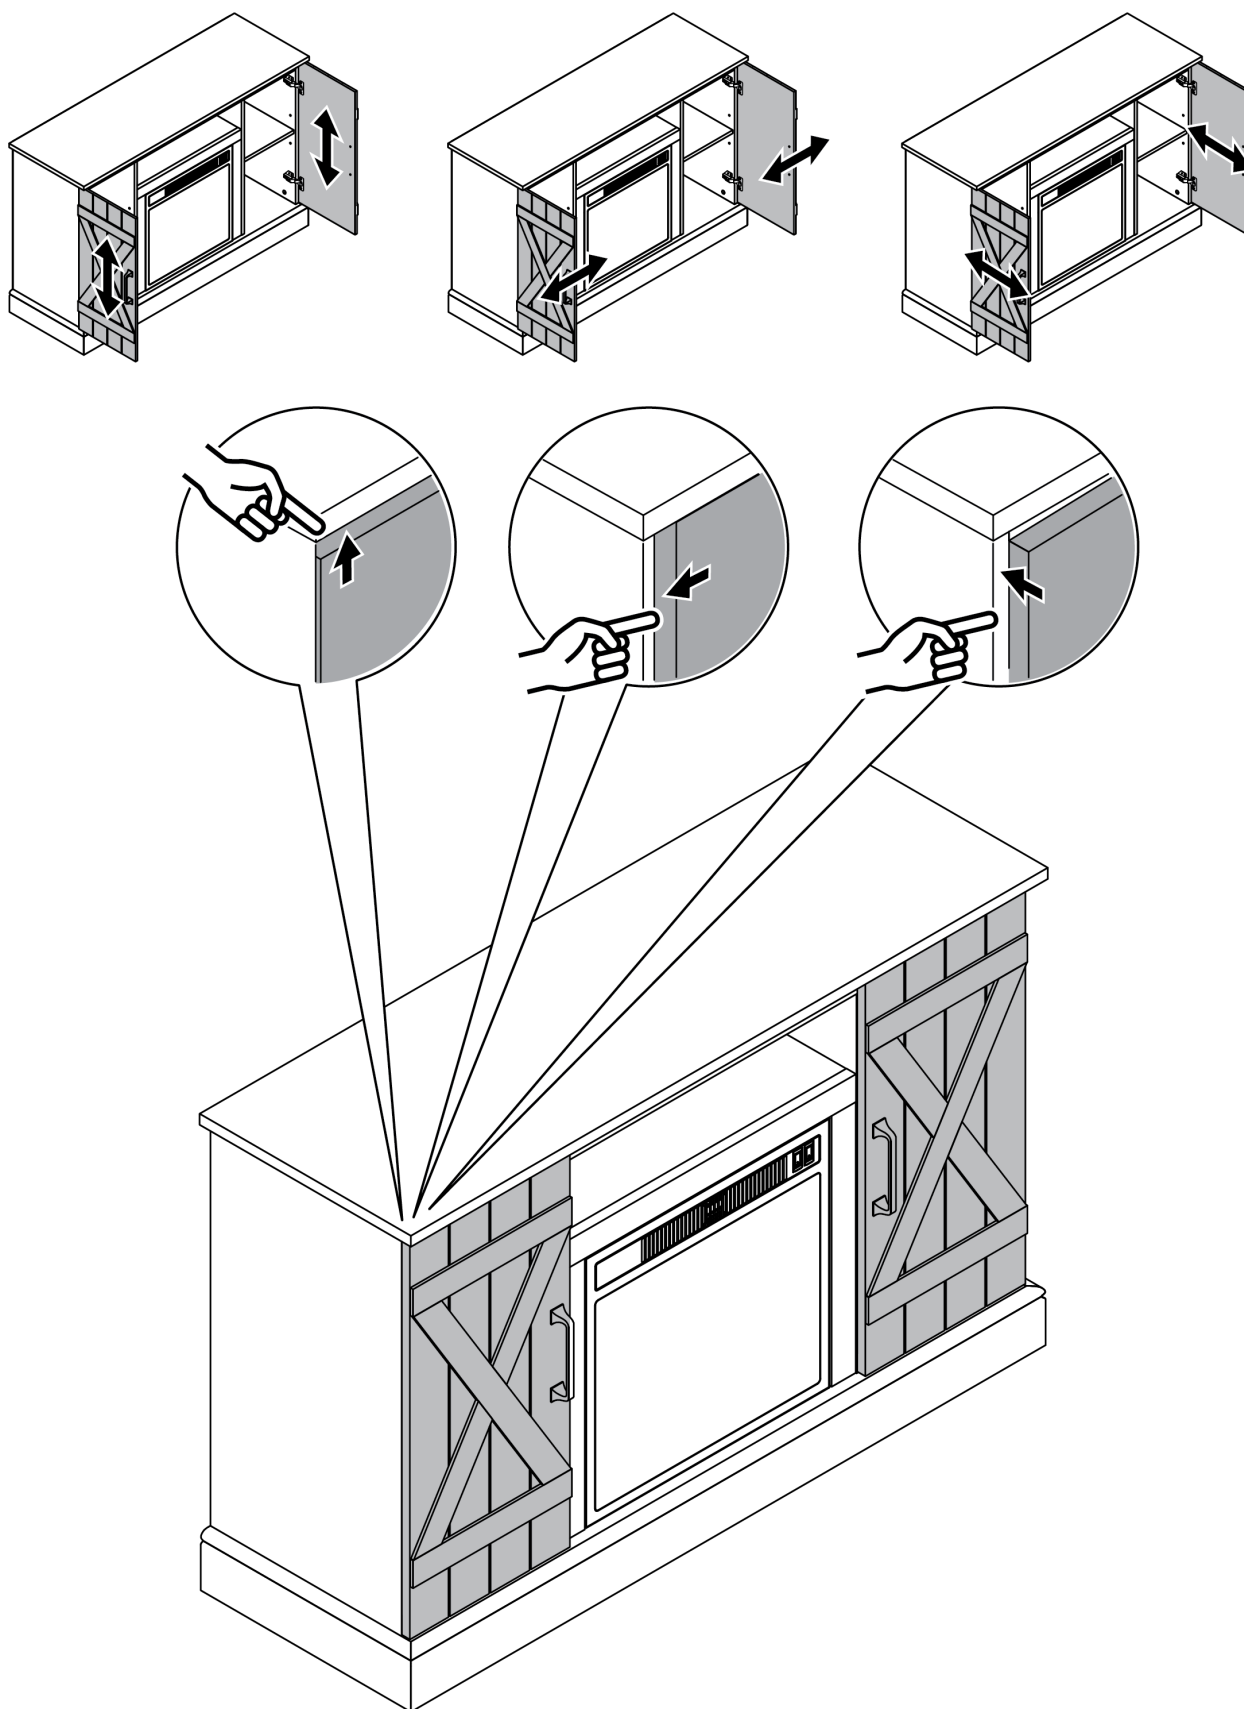 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

    i

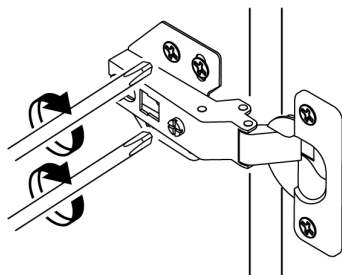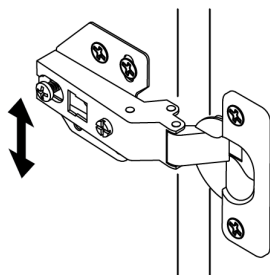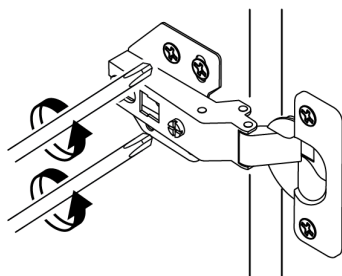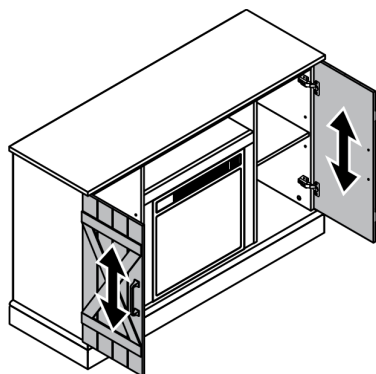

      Loosen the screws on the mounting plate to adjust the door **up and down**.

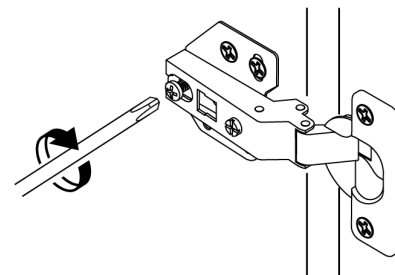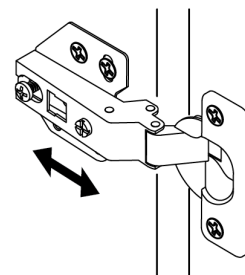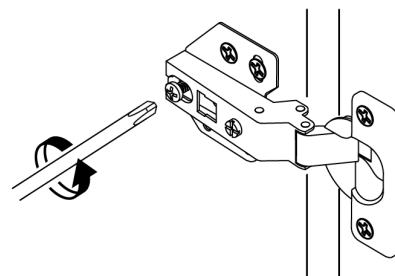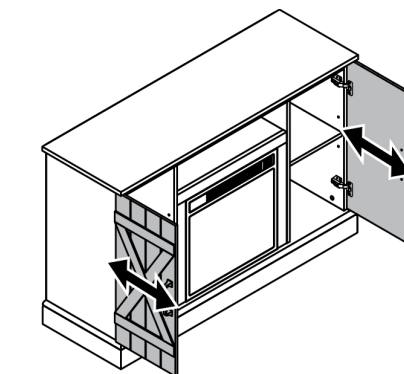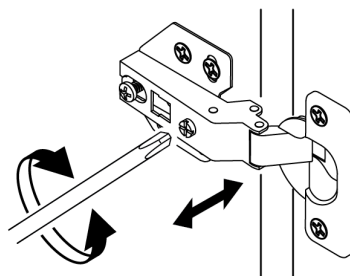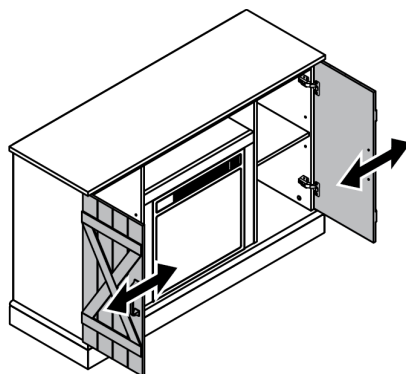

Adjust the screw on the hinge to micro-adjust the door from **side to side**.

Loosen the screws on the hinge arm to adjust the door **in and out**.

19

 
Attaching anti-tipping straps



N 2x



P 2x

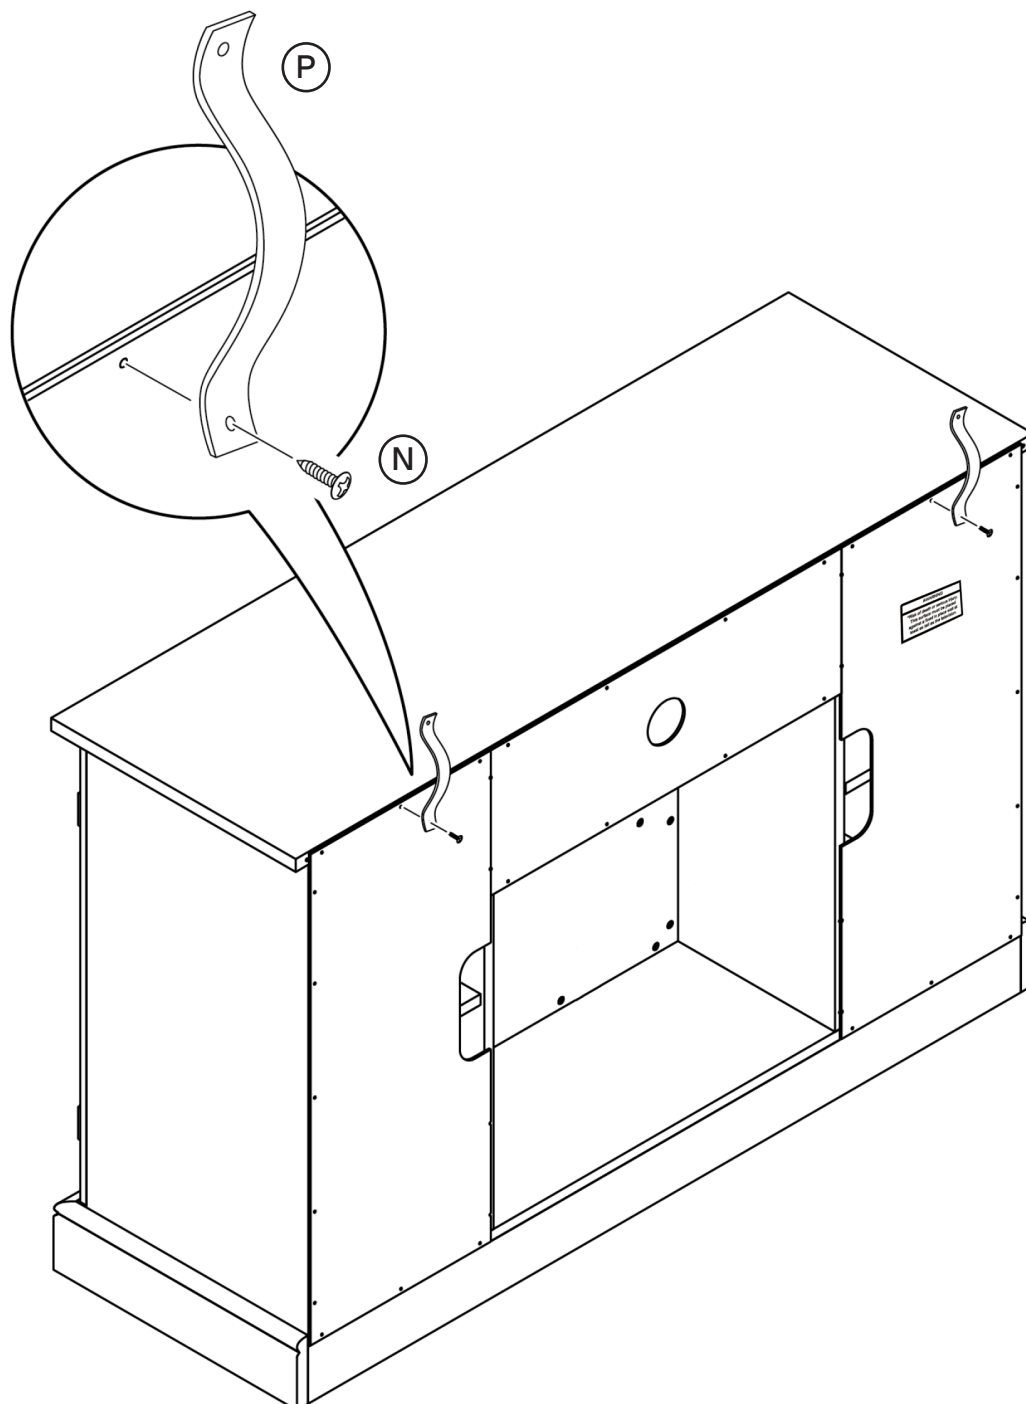

20

 
 
Affixing the TV stand to a wall



M 2x



O 2x

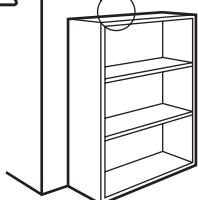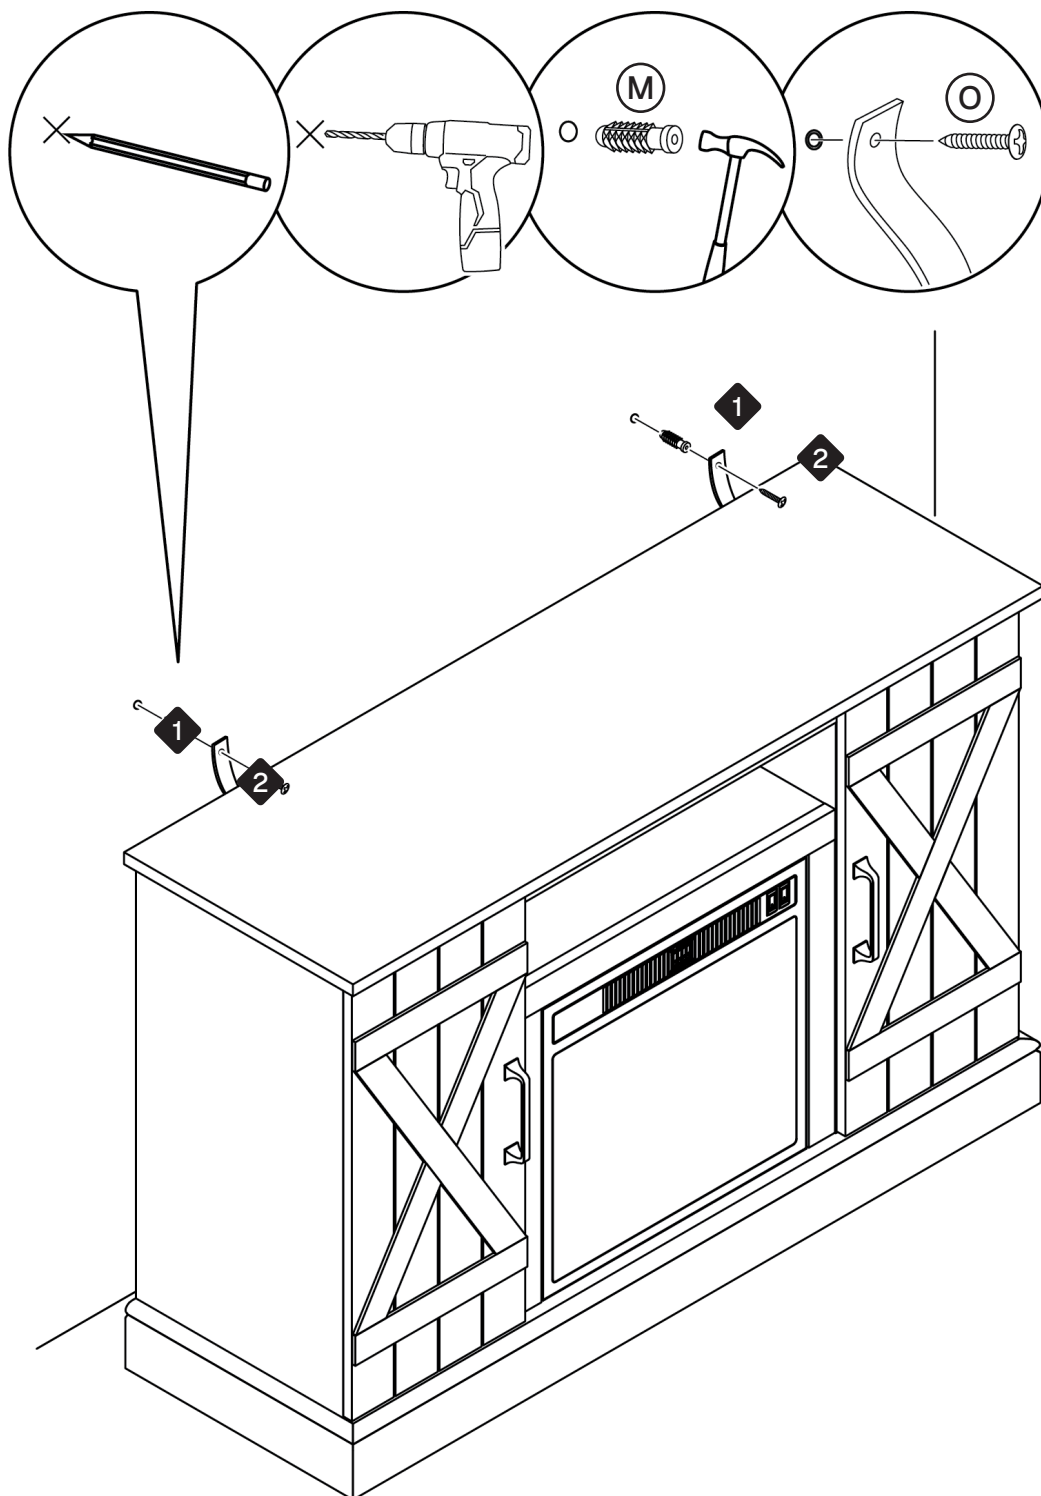


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

21

Attaching wood strip

 ★ TV or other objects should be placed behind the wood trim to prevent them from falling off.

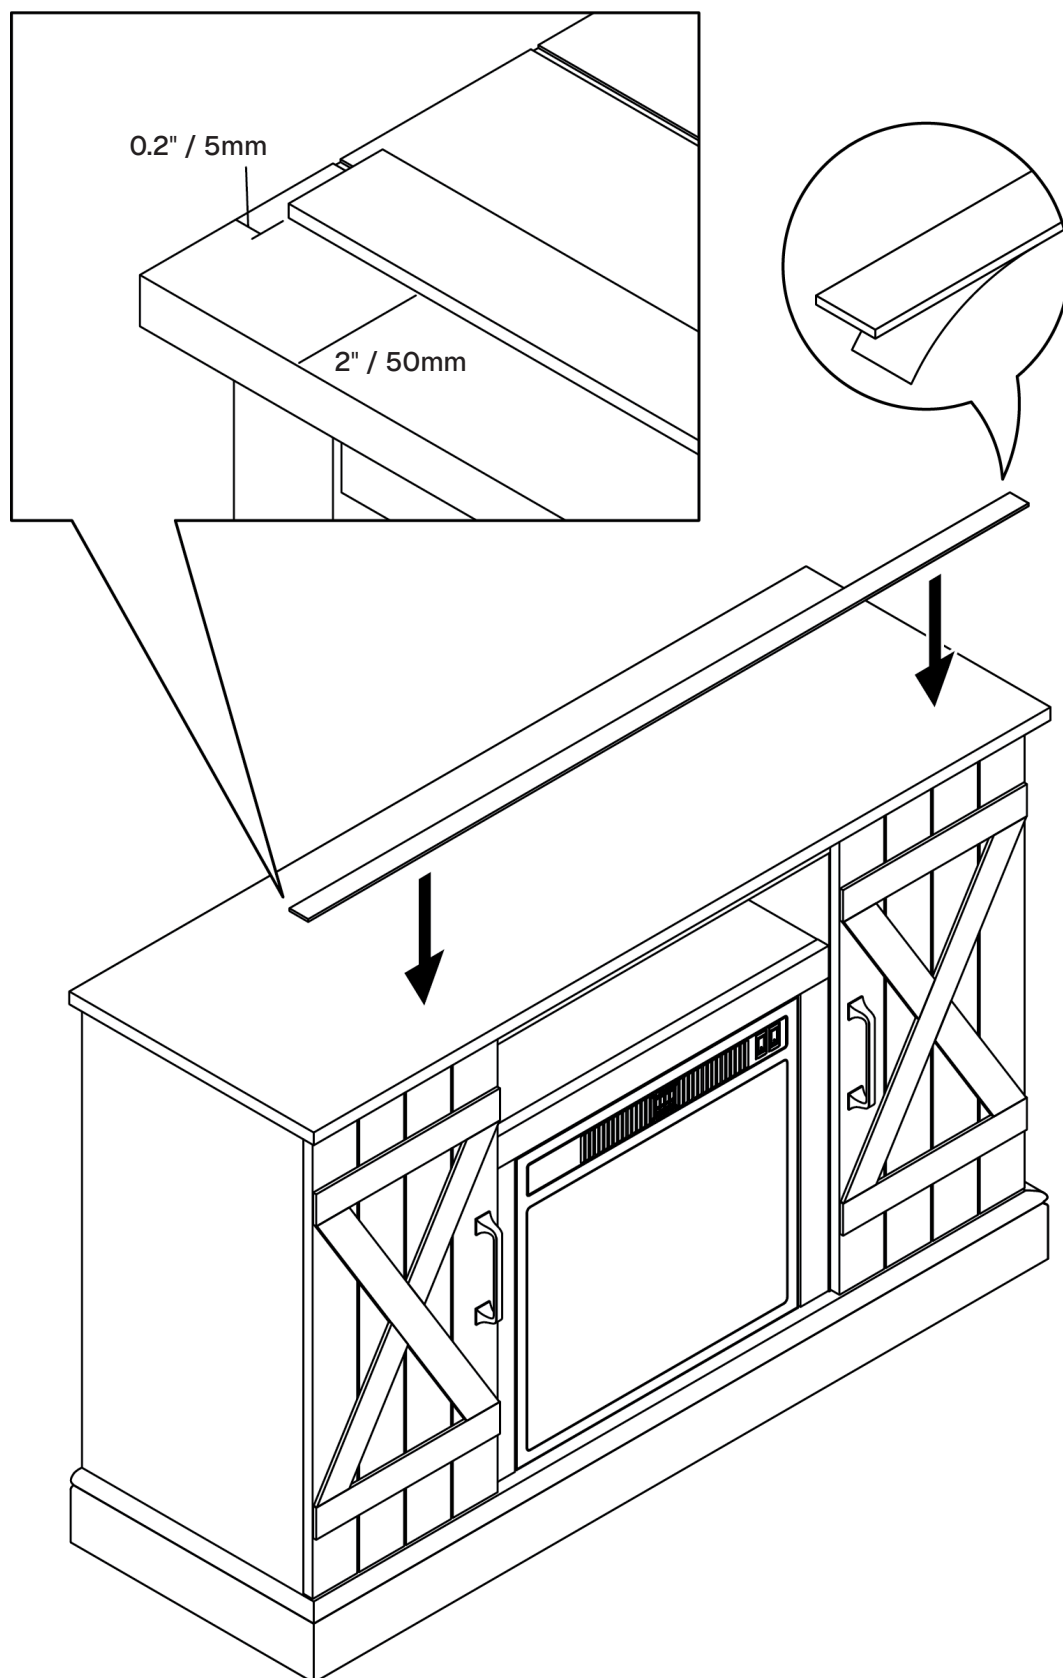



WARNING

For use with televisions weighing 80lbs (36.3kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



NOTICE

The recommended maximum width of the television is 75 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.

Warranty

BELLEZE products comes with a 1-year warranty from the date of delivery.
Register your product on our website to enjoy out limited lifetime warranty!

After-Sale Service



Encounter any difficulties or missing parts?



Contact us at **1-800-682-6376** or email us at **support@belleze.com**



We will send you replacement.



Hassle free!
No need to worry about repackaging and sending your item back.

Contact Us



support@belleze.com



1-800-682-6376