



WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT.

LIST OF PARTS:

1. TOYS	1 PC
2. WOODEN ROCKER	1 PC
3. WOODEN HANDLES	2 PCS
4. WASHER RINGS	4 PCS
5. WING NUTS	4 PCS



WARNING

CHOKING HAZARD - Small parts.

Not for children under 3 yrs.

Adult assembly required

ASSEMBLY INSTRUCTIONS

STEP 1:

INSERT THE ATTACHED SCREWS UNDER THE TOYS LEGS INTO THE HOLES ON THE WOODEN ROCKER.


STEP 2:

PLACE THE WASHER RINGS AND WING NUTS ON THE SCREWS AND TIGHTEN BY HAND.

STEP3:

SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE TOYS .

FOR EXAMPLE:

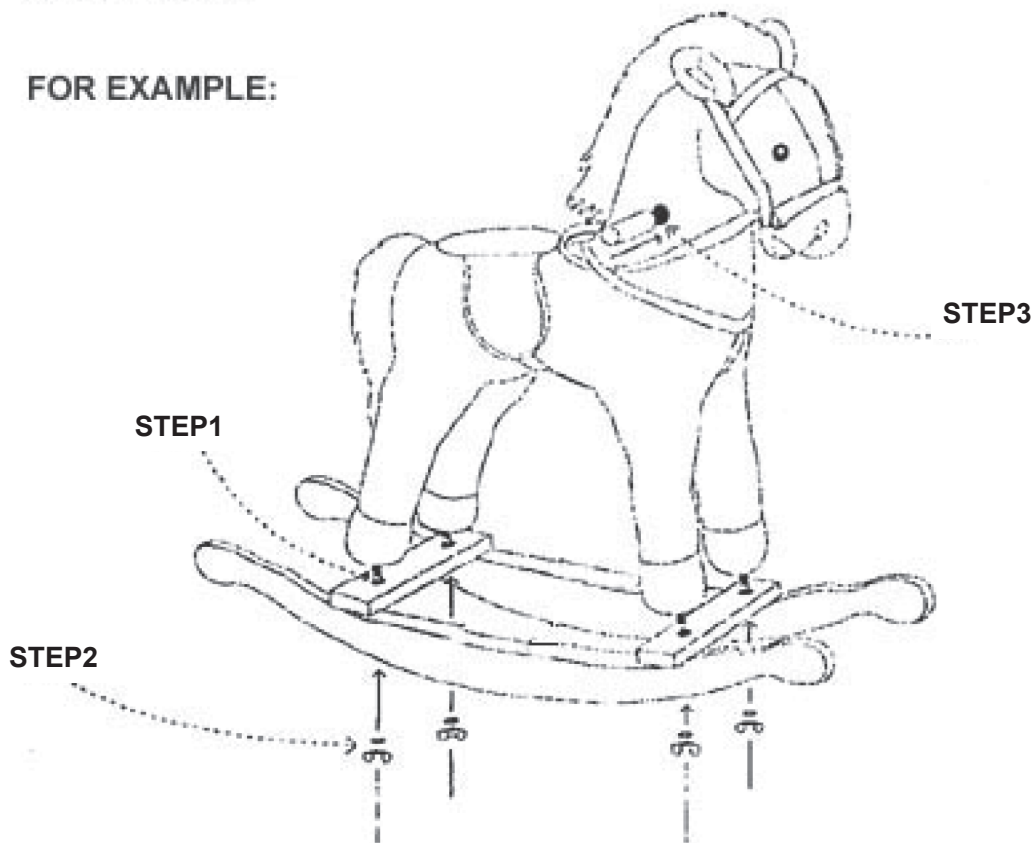

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard(carbon-zinc), or re-chargeable batteries.