

ASSEMBLY INSTRUCTIONS



TOOLS REQUIRED

 


Allen Wrench
(Included)



2 - People
Recommended

ASSEMBLY RATING




EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

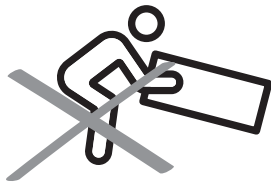

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

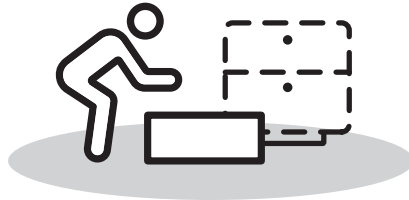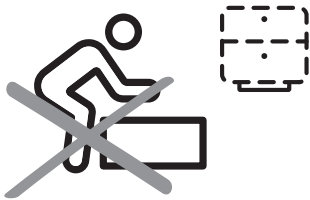


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.

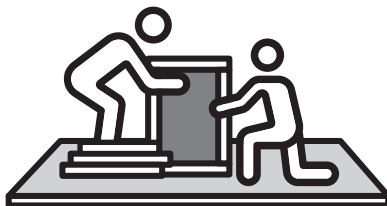

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

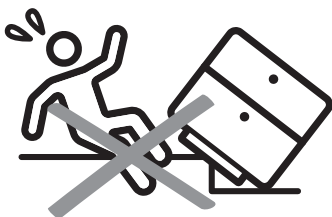

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

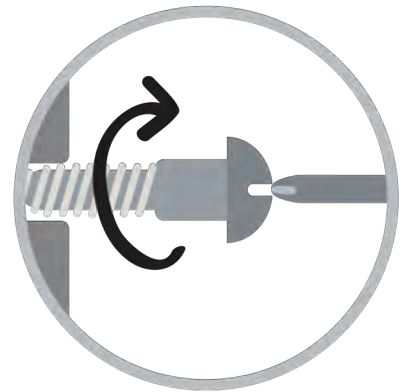


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

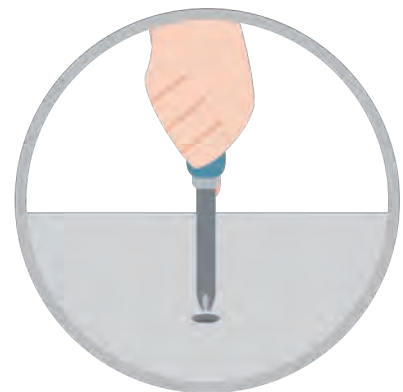

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

END TABLE

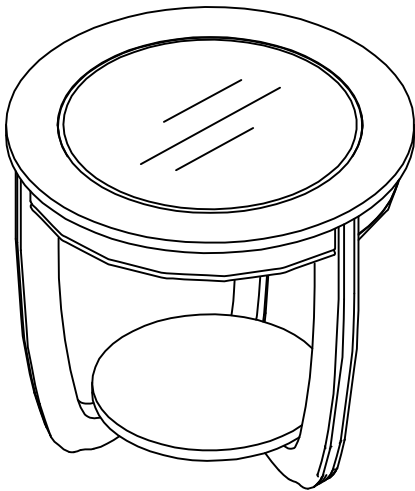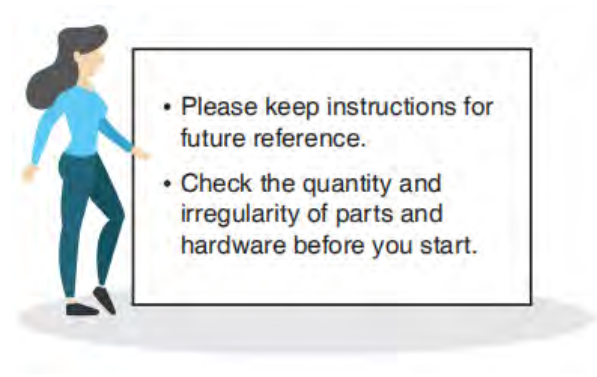

PARTS

#1 1pc	#2 1pc	#3 3pcs	#4 1pc
			
Glass	Top Frame	Feet	Bottom Panel

HARDWARE

#A 6pcs	#B 6pcs	#C 3pcs	#D 9pcs
			
Bolt Ø1/4"X5/8"	Bolt Ø1/4"X1"	Bolt Ø1/4"X1-1/2"	Lock Washer Ø1/4"
#E 9pcs	#F 1PC	#G 3PCS	
			
Flat Washer Ø1/4"X19mm	Allen Wrench 4mm	Metal Plate	

ASSEMBLY INSTRUCTIONS


1

Part #3 X3pcs

Hardware #B X6pcs

Hardware #G X3pcs

Hardware #F X1pc

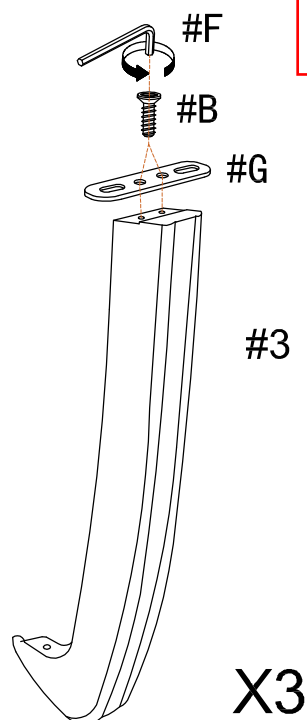

Align metal plate (#G) to the feet (#3), then secure by using bolts (#B).

2

Part #2 X1pc

Part #4 X1pc


Hardware #A X6pcs

Hardware #C X3pcs

Hardware #D X9pcs

Hardware #E X9pcs

Hardware #F X1pc

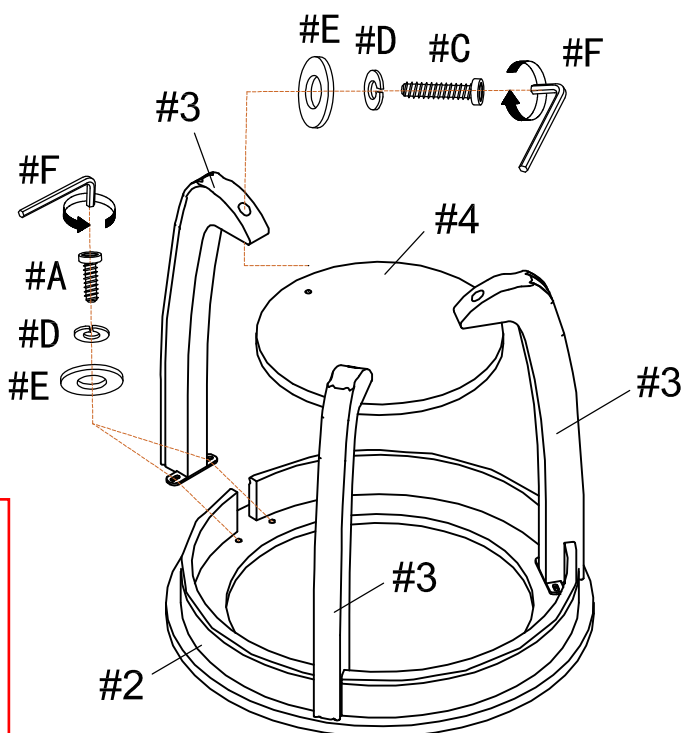


Align feet (#3) to the top (#2) and bottom (#4). Secure the feet (#3) to the bottom (#4) by using bolts (#C) with washers (#D,E). Secure the feet (#3) to the top (#2) by using bolts (#A) with washers (#D,E).

ASSEMBLY INSTRUCTIONS


3

Part **#1** X1pc

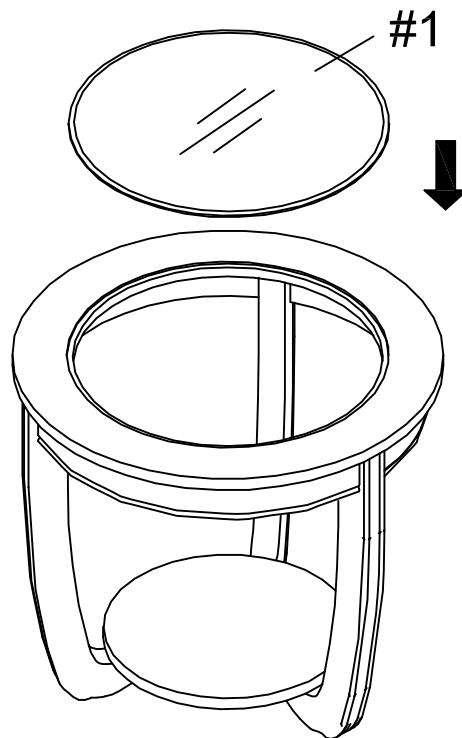

Carefully place glass (#1) onto the product.

4

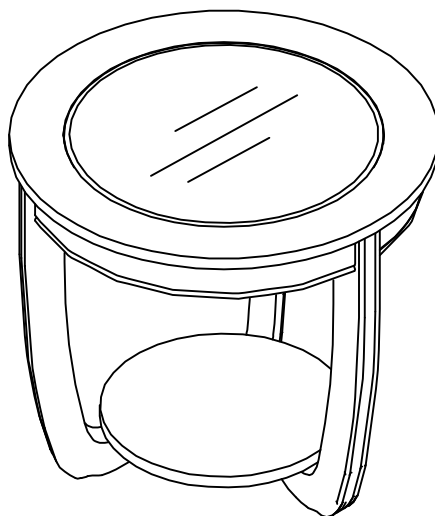

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.