

ELECTRONIC GUN SECURITY CABINET

INSTRUCTION MANUAL



 


 






 
 

 
 


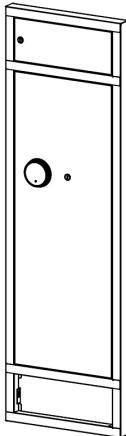










Keep children or unauthorized persons away from your guns

COMPONENT DESCRIPTION


Hi friend,

Door Frame

Thank you for your purchase, please take a few minutes to read the instruction manual for better use of the product. If you have any questions, please contact the seller for your service.

<div>Door Frame 1 Pc</div> <div></div>	<div>Side Panel-L 1 Pc</div> <div></div>	<div>Side Panel-R 1 Pc</div> <div></div>	<div>Back Panel 1 Pc</div> <div></div>	<div>Top Panel 1 Pc</div> <div></div>	
				<div>Partition 2 Pc</div> <div></div>	
				<div>Bottom Panel 1 Pc</div> <div></div>	
<div>Drawer Door</div> <div></div>	<div>Drawer Panel</div> <div></div>	<div>Drawer Back Panel</div> <div></div>	<div>Left Gun Bracket 1 Pc</div> <div></div>	<div>Right Gun Bracket 1 Pc</div> <div></div>	<div>Back Gun Bracket 1 Pc</div> <div></div>
<div>Left and Right Gun Rack 2PCS</div> <div></div>	<div>Back Gun Rack</div> <div></div>	<div>Partition Buckle 8 PCS</div> <div></div>	<div>Self-Tapping Screw 54</div> <div></div>	<div>External Power Box</div> <div></div>	<div>Magnetic LED Light</div> <div></div>
<div>Screwdriver 1 Pc</div> <div></div>	<div>Gloves</div> <div></div>	<div>Expansion Bolt 4PCS</div> <div></div>	<div>Keys</div> <div></div>	<div>Instruction</div> <div></div>	
<div>Top Keys</div> <div></div>	<div>Left Silde Rail</div> <div></div>	<div>Right Silde Rail</div> <div></div>	<div>Drawer Keys</div> <div></div>		

 STRUCTURAL SCHEMATIC

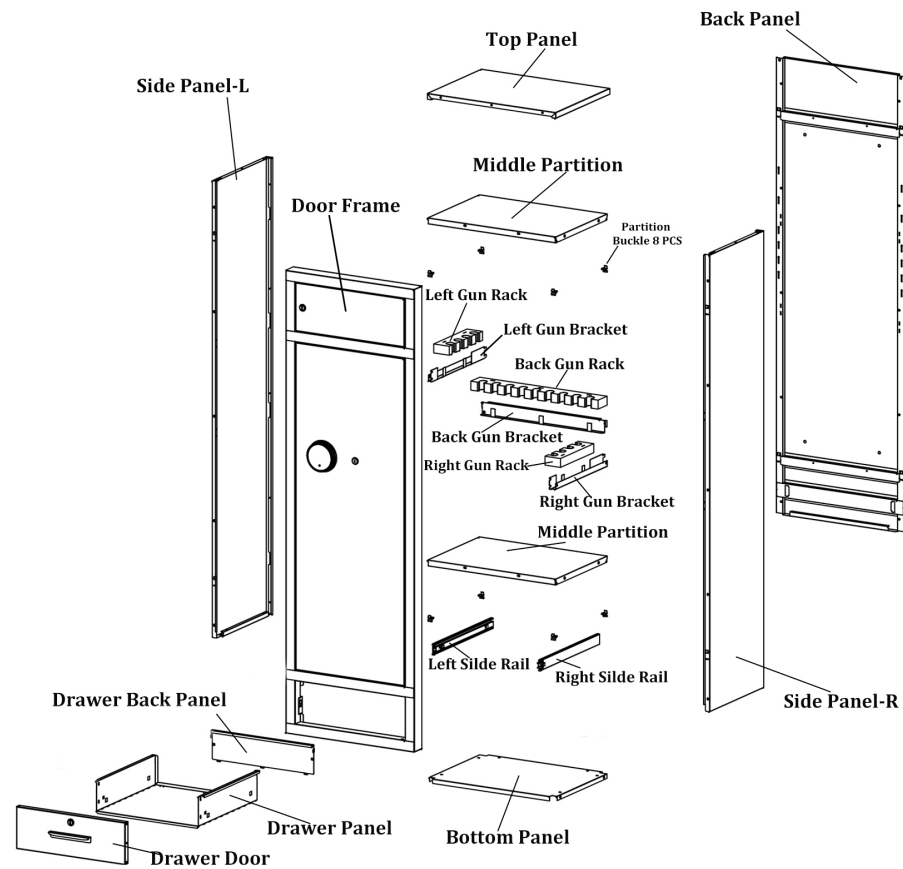

- Check the materials to make sure they are working correctly and are not damaged.
- Refer to the illustrations to identify the parts and accessories of the gun cabinet.
- If any parts are missing or goods are damaged, please contact us, and we will provide you with a satisfactory solution.



WARNING

 


Tip Over Hazard

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.

INSTALLATION INSTRUCTIONS


 X10

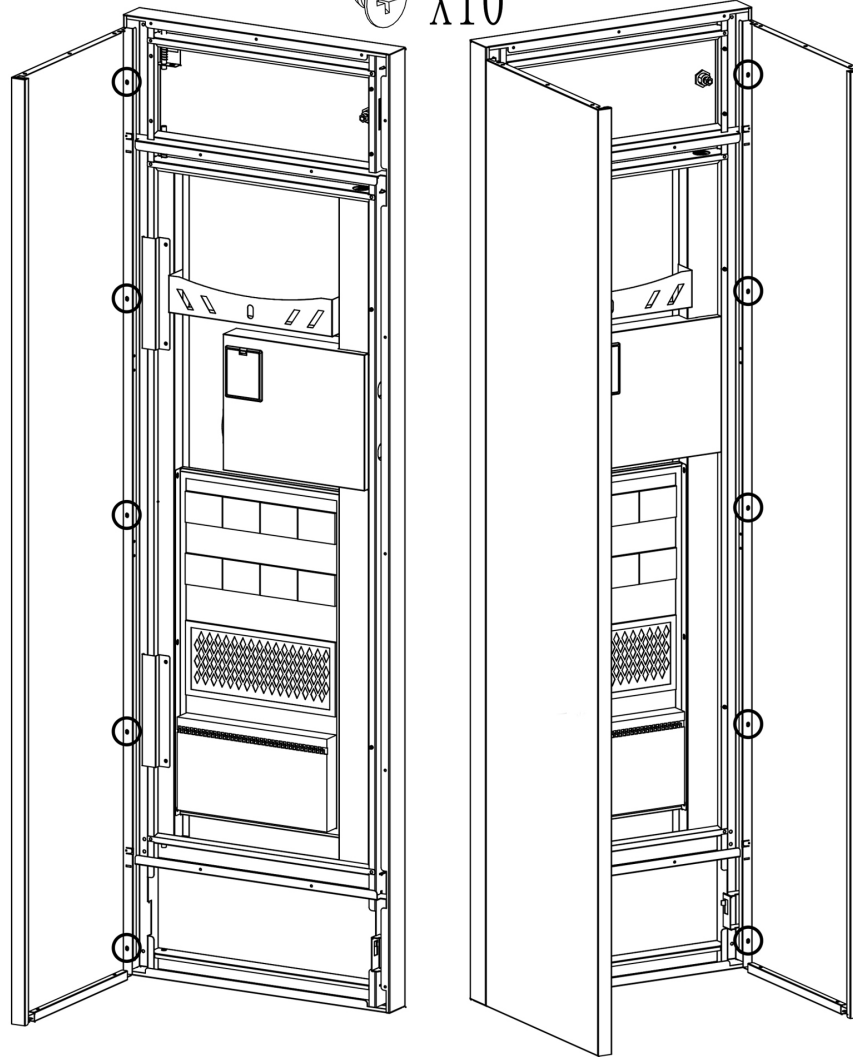

Step 1:

Connect the door frame to the left and right side panels with self-tapping screws.

 INSTALLATION INSTRUCTIONS

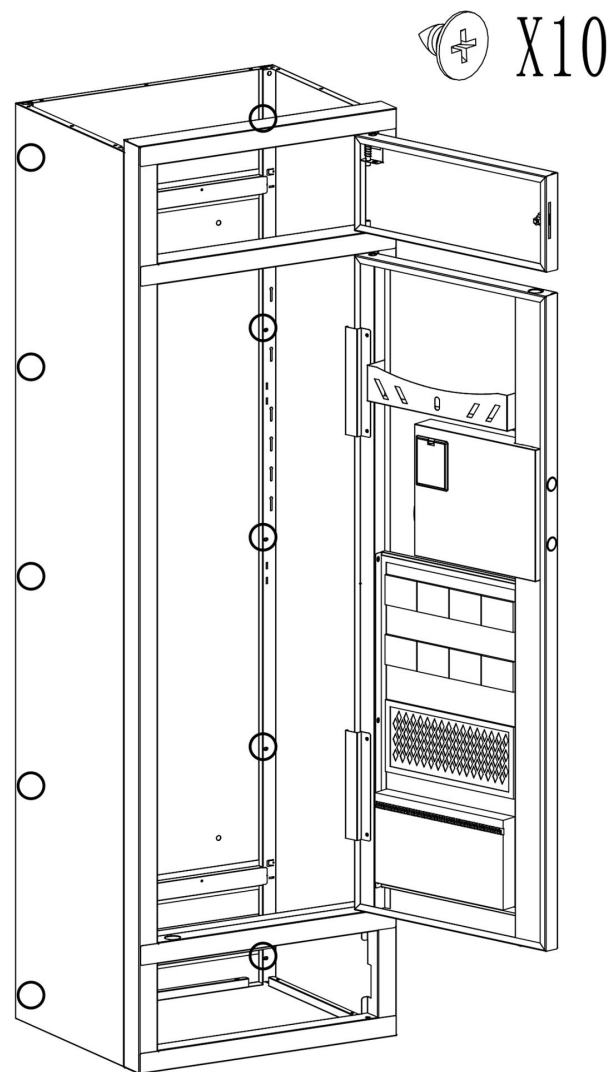


Step 2:

Connect the back panel to the left and right side panels with self-tapping screws.

INSTALLATION INSTRUCTIONS

 
 X6

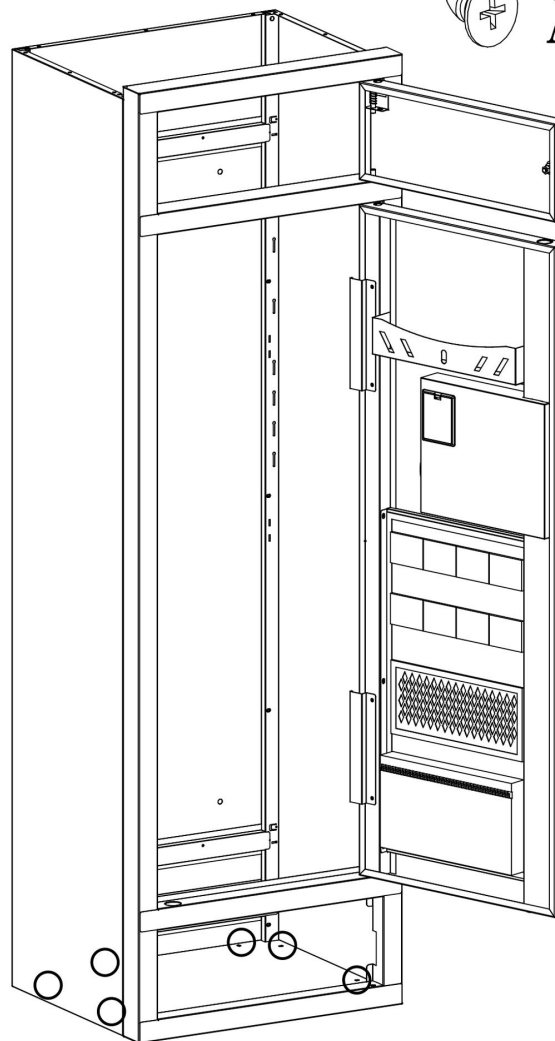

Step 3:

Install the bottom panel and connect it to the bottom with self-tapping screws.

 
INSTALLATION INSTRUCTIONS

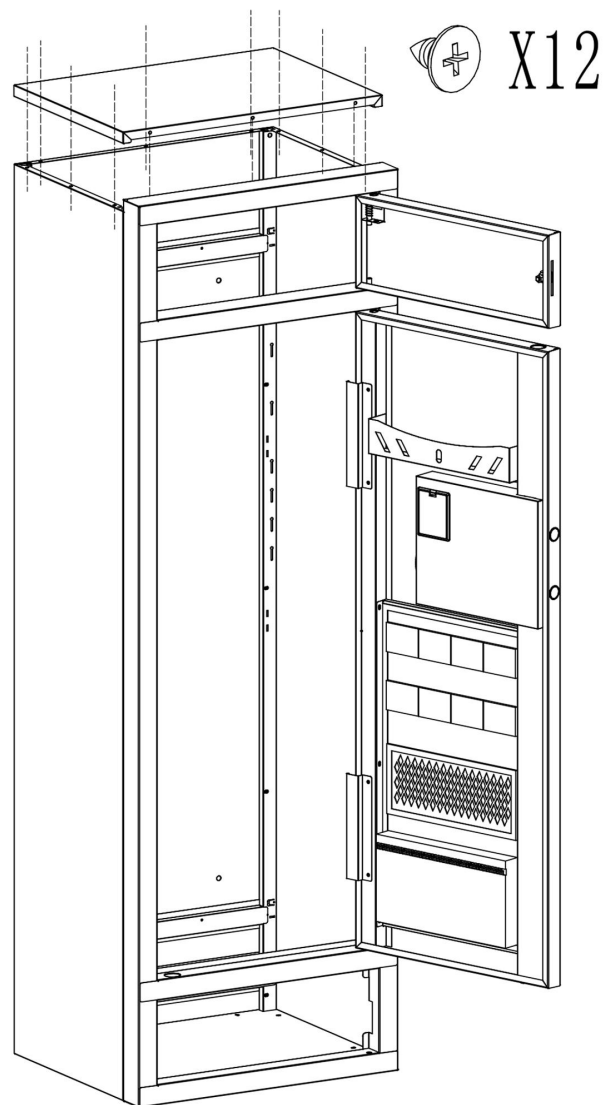


Step 4:

Install the top panel and connect it to the top with self-tap
-ping screws.


 
INSTALLATION INSTRUCTIONS

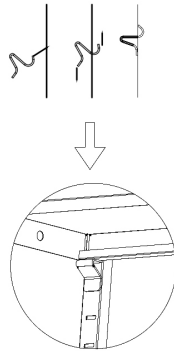

 Partition are put in place and cocked,
hold down partition

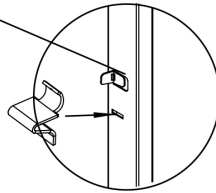

  
After placing the partition, connect
it with self-tapping screws.

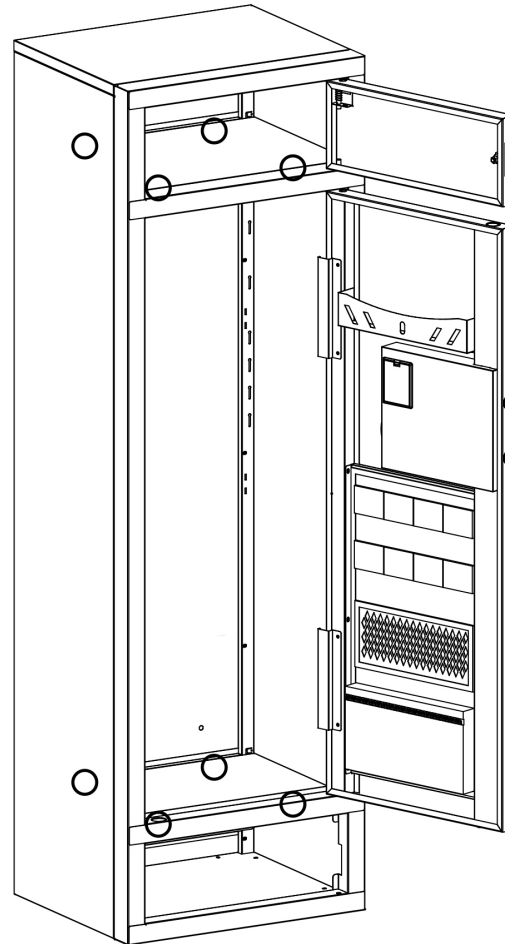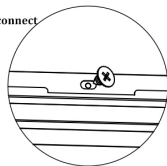

Step 5:

Install the partition buckle, then put the partition on the partition buckle, and then use self-tapping screws to fix it.

 
INSTALLATION INSTRUCTIONS

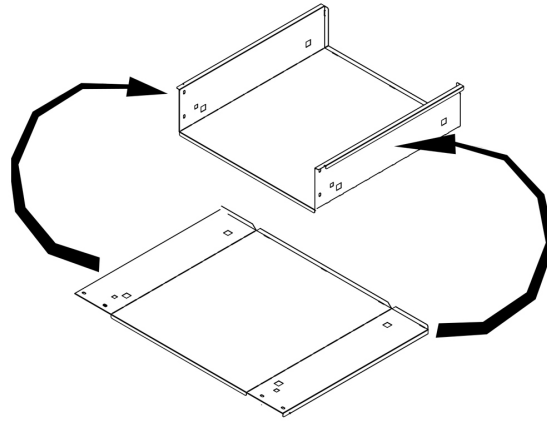

Step 6:

Bend upwards drawer panel

 
INSTALLATION INSTRUCTIONS

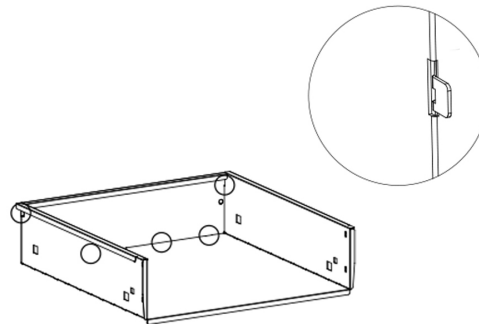

Step 7:

Link bent drawer panel with drawer back panel
and snap in the corresponding

 
INSTALLATION INSTRUCTIONS

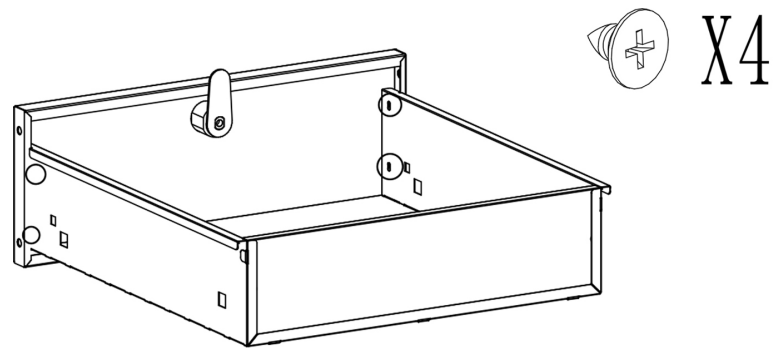

Step 8:

Connect the assembled part in step 7 to the drawer door and fix it with self-tapping screws

 
INSTALLATION INSTRUCTIONS

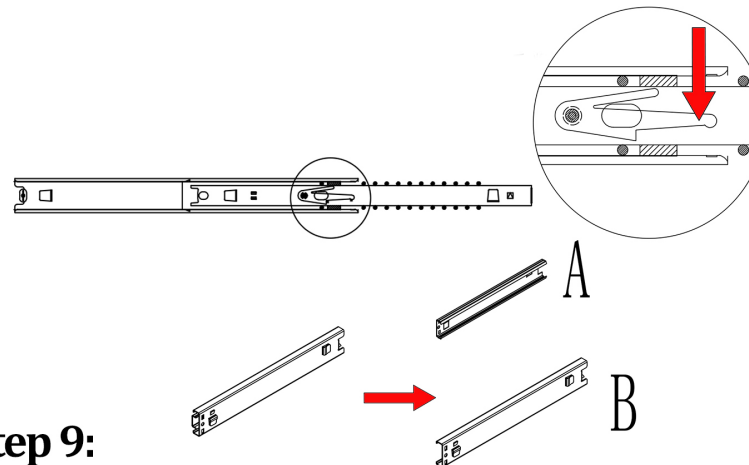

Step 9:

Turn the shrapnel shown in the picture to divide the slide rail into two parts, A and B.

 INSTALLATION INSTRUCTIONS


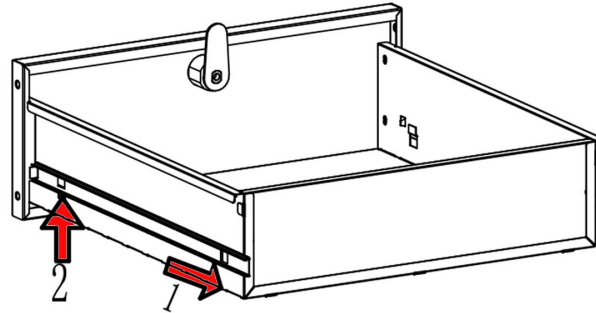


Step 10:

Snap the slide rail B into the rear hole and lift it upwards


INSTALLATION INSTRUCTIONS

  Step 11:

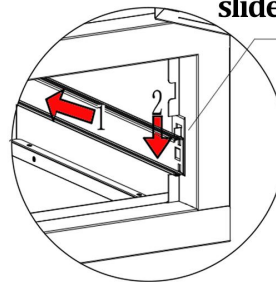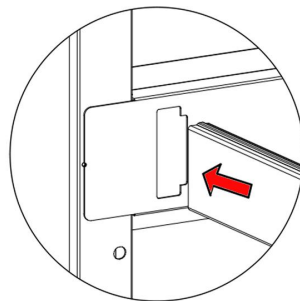

After inserting it into the slide, break the corner up.

 
INSTALLATION INSTRUCTIONS

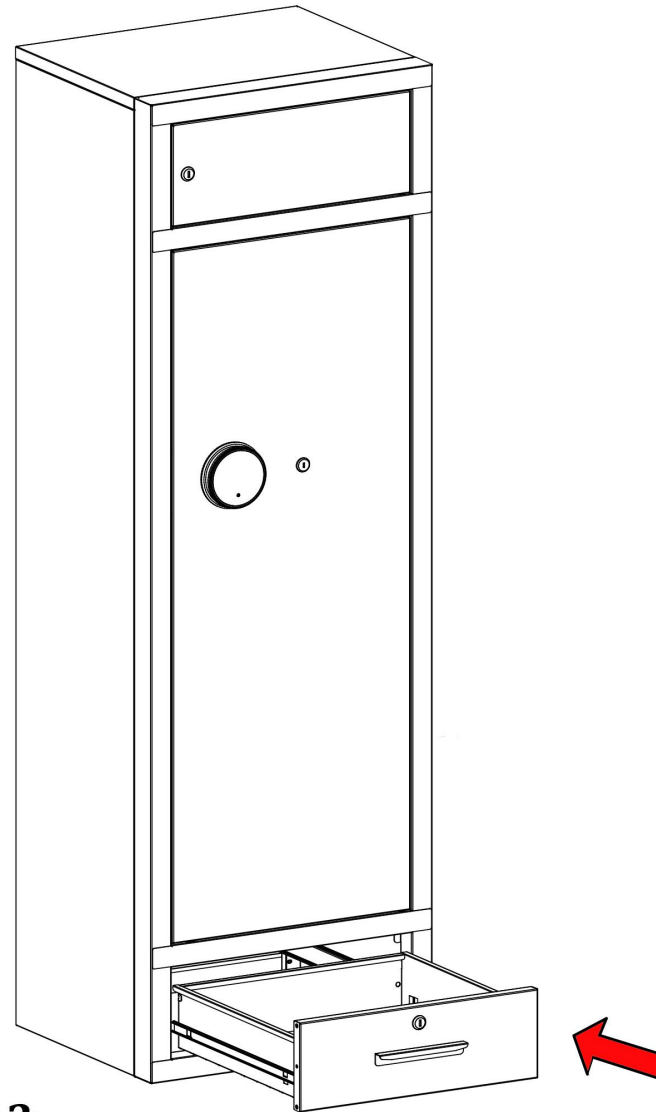


Step 12:

Match the notches of the inner and outer slide rails, push into the drawer, and the installation is complete

 
INSTALLATION INSTRUCTIONS

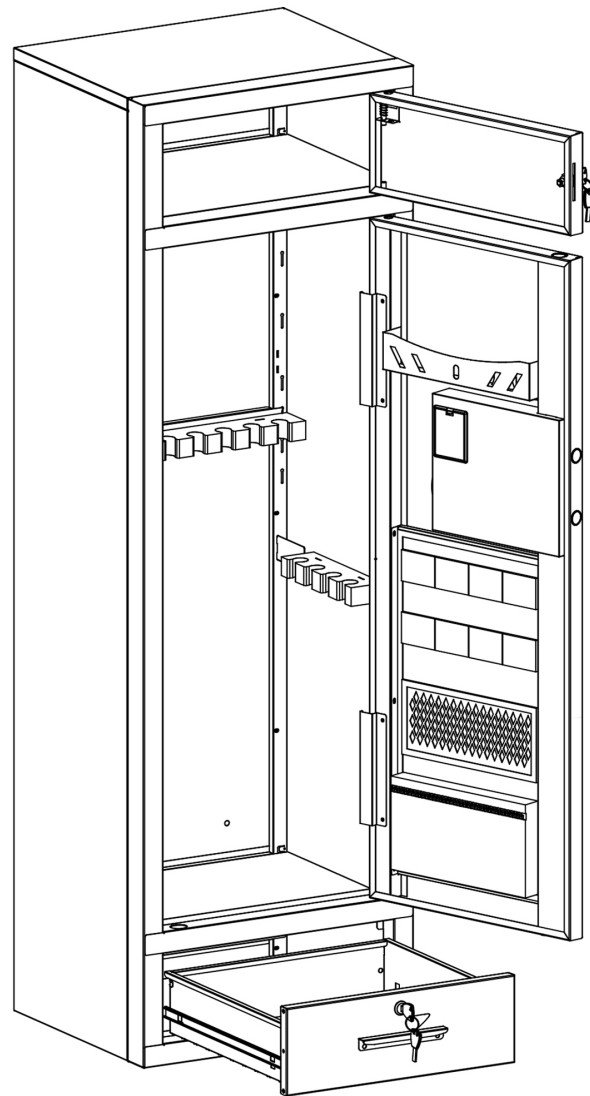

  Bend both side flanges of
the back gun bracket at 90°

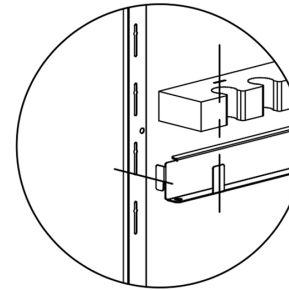

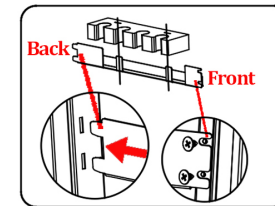



Attach the left and right gun rack
to each side as shown in the diagram



Step 13:

Final step, mounting the gun rack

  THE FIRST TIME OPENING

1.Insert the key		2.Turn the key-board.	
3.Insert 4 AA alkaline batteries (not included)		Please do not use rechargeable or different brands of batteries	

 
PERSONAL PASSWORD SETTING

Original factory password: 123456

This gun safe can be set with two sets of passwords

SET UP THE FIRST PASSWORD

1. Press the green setting button on the back of the door while the keypad light is off, the buzzer will sound once and the keyboard light

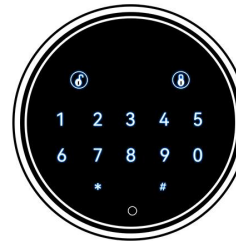

2. Enter any new 3-12 digits code, press the "#" button to confirm. The buzzer will sound once and the indicator light will be off. Password is set successfully.

Note: After setting your password, please test the new password to ensure it is valid.

SETTING THE SECOND SET OF PASSWORDS

1. Wake up the keypad, enter "00" and press the green setup button on the back of the door.
2. Enter your second password, then press the "#" button to confirm.

HOW TO OPEN THE GUN SAFE

1. Wake up the keypad by touching it to enter the password you have set up.
2. Press the "#" bottom to confirm, the indicator light is on, and the buzzer beeps twice, indicating that the password is entered correctly.
3. Turn the handle clockwise.

NOTE: This electronic combination lock has a power-down protection function, the code will not disappear.

SYSTEM INITIALIZATION

Open the gun safe, press the green setting button for 5 seconds, the system will restore the initialized settings and clear all passwords.

VIBRATION ALARM SETTING

1. The vibration alarm electronic lock has the functions of setting alert and eliminating alert.
2. Alert mode setting method: Touch to wake up the keypad, press "*" to enter the alert state.

LOW BATTERY ALERT

1. The gun safe uses four 1.5V alkaline batteries. If the voltage is insufficient, there will be an audible alert when the door is opened and the keypad light will flash for about 30 seconds to remind you that the batteries are low. You need to replace the batteries in time.
2. If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the safe.

ALARM FUNCTION

When continuously enter the wrong password 3 (5) times, the system will automatically alarm for 30 (60) seconds, enter the correct password can eliminate the alarm sound.

MUTE MODE

Touch to wake up the keypad, input "11", then press the "#", the buzzer will sound a long beep, indicating that all sounds are turned on or off successfully.

TECHNICAL PARAMETERS

1. Working power supply : 4 No. 5 "AA" alkaline batteries
2. Working voltage range : 4.2V-7V
3. Working undervoltage point : $4.6V \pm 0.20V$
4. Operating current : $\leq 380mA$
5. Static current : $35\mu A$

Q

What if I lose my keys?

A

Please contact us by email for the key code (the code is next to the keyhole) and we will make a replacement for you!

Q

What if the battery is run off?

A

 
Open the battery box cover, Insert 4AA batteries, Insert the external battery box hole and enter the code to open the gun safe

Easy Installation

1. Drill appropriately sized holes wherever you like.

2. Hand thread the expansion screws through the pre-drilled holes in the safe.

3. Tighten the screws and check that they are secure.

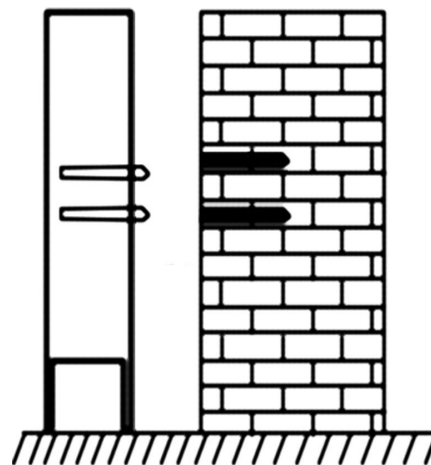

WARNING



Tip Over Hazard

· Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.

· Children should not play around the safe at any time.