

# HD

HAUTE DECOR

5' Mountain Fir Tree  
100 ct. Warm White LED Lights  
Item # DCCT0508



**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

## PARTS LIST

- 1 EA. STAND
- 1 EA. TREE POLE
- 1 EA. TREE SECTION

## NOTES

- Requires 3 D 1.5V Batteries (Sold Separately)
- Alkaline Batteries Recommended
- Includes Timer: 6 Hours On / 18 Hours Off Cycle

## ASSEMBLY

CAREFULLY REMOVE THE CONTENTS FROM THE CARTON AND KEEP THE CARTON FOR FUTURE STORAGE. BE SURE TO UNTANGLE ANY WIRES THAT MAY BE TANGLED WITH OTHER ITEMS. PLEASE DO NOT FORCIBLY REMOVE ANY CONTENTS.

**Step 1:** Locate the **STAND** (see **Fig. 1**) and place it where you are going to set up the tree – ensure that it is on a level surface. **THIS PRODUCT IS SUITABLE FOR INDOOR AND COVERED OUTDOOR USE.**

**Step 2:** Locate the **TREE POLE** and slide it onto the **STAND** (see **Fig. 2**). Push the **TREE POLE** down until it is sitting flush with the top of the **STAND**.

**Step 3:** Locate the **TREE SECTION** and slide it down into the **TREE POLE** (see **Fig. 3**). Make sure it is seated securely.



Fig. 1



Fig. 2



Fig. 3

## BATTERY OPERATING INSTRUCTIONS

1. Locate the battery box (see **Fig. 4**). Open the battery box by unfastening clips on the sides.
2. Insert 3 D batteries (not included) with the correct polarity (+/-) as indicated on the battery box.
3. Close battery box by fastening clips securely and ensure gasket is in position to keep out water.
4. To turn the lights ON and start the automatic 24-hour timer, press the **TIMER ON/OFF** button on front of battery box. Timer is automatically preset for lights to stay on for 6 hours and turn off for 18 hours. It is recommended to first activate your lights at the time that you want them to come on each day. *NOTE: Product does not have a steady on feature. It only operates on a timer.*
5. To deactivate lights and timer at any time, press the button again.
6. If the lights become dim, then replace with new batteries.

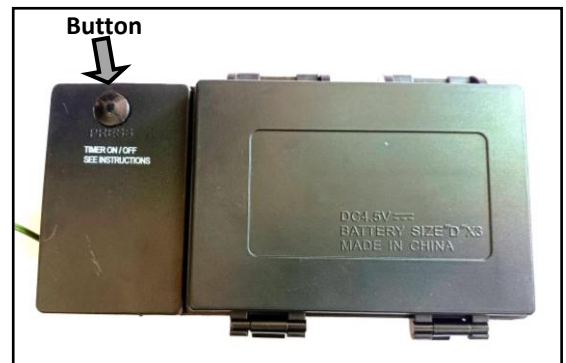


Fig. 4

If some bulbs do not light, please go to the **TROUBLESHOOTING FOR LIGHTS** section.

## BATTERY WARNING

- Always purchase the correct size and grade of battery.
- DO NOT mix old and new batteries.
- Replace all batteries of a set at the same time.
- DO NOT mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+and-).
- Remove batteries when the product is not in use.
- Remove used batteries promptly.
- Non-rechargeable batteries are NOT to be recharged.
- DO NOT dispose of batteries in fire. Batteries may explode or leak.
- Recycle or dispose of batteries according to local and federal government requirements.

## SHAPING

**SOME SHAPING IS RECOMMENDED SINCE THE TREE HAS BEEN PACKED INSIDE A BOX. THE TREE CAN BE RESHAPED TO ITS ORIGINAL FULLNESS BY BENDING AND SEPARATING THE BRANCHES.**

1. Turn the lights on as you are shaping the tree.
2. Reference the tree image on the front page of this instruction manual. It will help guide you on how the tree looks properly shaped.
3. Shape by section and layer, starting at the bottom of the tree and working your way up to ensure all branches are shaped.
4. This tree has a downswept appearance. Gently lower each branch to a downward angle.
5. Offset the branches from one another to hide the tree's pole and fill spaces. Continue spreading the tips until they resemble that of a real tree.
6. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Your tree is now ready to decorate and enjoy!

## CLEANING & CARE

**AS YOU WILL BE USING THE TREE EVERY YEAR, IT IS RECOMMENDED TO KEEP IT IN GOOD CONDITION AND CLEAN.**

- Dust gently using a soft cloth or fabric duster.
- Do NOT use any chemicals or solvents to clean.
- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the bulbs.
- Follow all the Storage and Safety Instructions.

## STORAGE

**PROPER TREE HANDLING AND STORAGE WILL HELP YOU GET THE MOST OUT OF YOUR TREE FOR MANY YEARS TO COME.**

1. Remove any ornaments and decorations that were added by you and did not come with the tree.
2. Remove batteries from the battery box.
3. After the tree is used outdoors, allow the tree to dry thoroughly prior to packing.
4. Starting at the top, separate the tree section, tree pole, and stand, being sure not to roughly handle as it could cause damage to the parts and could loosen or break bulbs.
5. Compress the tree section by squeezing the branches together so that it will fit more easily into the storage box or container. You can also tie a ribbon or cord around the section to secure the branches closer together for storage.
6. Place all the parts gently back into the storage box. The box will help prevent the tree from being damaged should it get bumped in your garage, basement, or other storage location. Tape the box shut to keep out any dust or insects. When packing up the tree, please ensure that there is no undue strain or stress on the light sets to ensure they do not get cut, frayed, or damaged.
7. Be sure to store the tree in a cool, dry area free of water and moisture to prevent mold and mildew from accumulating and a musty odor developing. Exposing your tree to excessive heat or humidity may damage your tree. **DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F. STORE THE CARTON FLAT AND NOT UPRIGHT ON ITS SHORT END.**

## TROUBLESHOOTING FOR LIGHTS

**IF YOUR LIGHTS ARE NOT WORKING, FOLLOWING ARE TROUBLESHOOTING STEPS TO TRY:**

1. Push the TIMER ON/OFF button on the battery box.
2. Check to ensure rubber protection over button intended to keep out water is not damaged.
3. Ensure all batteries are fresh, inserted fully, and in correct polarity (+ and -) positions.

**NOTE:** LED bulbs are permanent and cannot be removed from the light sets.

## IMPORTANT SAFETY

**THIS TREE IS SAFE FOR INDOOR AND COVERED OUTDOOR USE.**

**PLEASE READ AND FOLLOW ALL THE INSTRUCTIONS AND WARNING TAGS THAT ARE ON THE TREE AND PROVIDED WITH THE TREE.**

**SAVE THESE INSTRUCTIONS – THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.**

**BASIC PRECAUTIONS SHOULD ALWAYS BE PRACTICED INCLUDING THE FOLLOWING:**

- **WARNING!** This is not a toy. For decorative use only. Keep out of reach of children.
- Do not operate this product if the battery box or light set is damaged. Always inspect for signs of damage or wear.
- Do not immerse the tree or any of its components in water or other liquids.
- This seasonal use product is not intended for permanent installation or use.
- This product is not intended for commercial purposes.
- Do not secure the wiring of this product with staples or nails or place on sharp hooks or nails.
- Do not alter the construction of the wiring in any way.
- Do not use this product for anything other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or light string.
- Do not close doors or windows on the product or light set cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Do not mount or support strings in a manner that can cut or damage the wire insulation.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not place your tree where it is likely to wobble due to uneven floors or thick carpeting. Place on a hard, flat surface.

## FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CANADA ICES COMPLIANCE STATEMENT

This device complies with CAN ICES-005 (B) / NMB-005 (B). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## CUSTOMER SERVICE

**THANK YOU FOR YOUR PURCHASE!**

Comments or questions?

Contact us at 1-877-359-0115

[customerservice@haute-decor.com](mailto:customerservice@haute-decor.com)

Haute Decor

PO Box 1594

Allen, TX 75013



©2024 Haute Decor

Made in China