 


ASSEMBLY INSTRUCTIONS

Marquise Accent Cabinet

ITEM# 67815

|                          |                      |                                             |                                              |                                                                                                                                                                            |
|--------------------------|----------------------|---------------------------------------------|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASSEMBLY<br>REQUIREMENTS | 2-Person<br>Assembly | 1.5 Hours<br>Assembly Time<br>(Approximate) | Assembly<br>Tools Required<br>(Not Provided) | <br> |
|--------------------------|----------------------|---------------------------------------------|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|


Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Email: [replacementparts@buylateral.com](mailto:replacementparts@buylateral.com)  
Within 30 days from delivery date

**PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS.**

 **THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY- NOT FOR COMMERCIAL USE.**

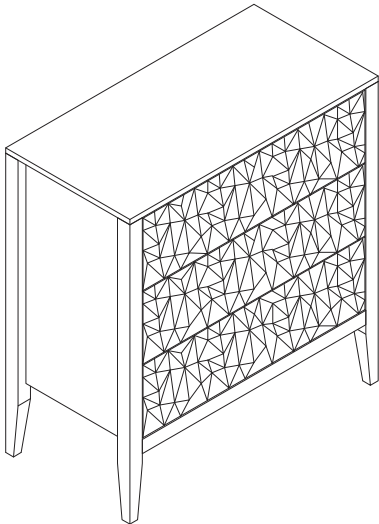

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.  
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.


# ASSEMBLY INSTRUCTIONS
 
## Marquise Accent Cabinet    ITEM# 67815

### Parts List

| Part # | Part Name          | Quantity | Part # | Part Name                  | Quantity |
|--------|--------------------|----------|--------|----------------------------|----------|
| (1)    | Top Panel          | 1        | ( 9 )  | Support Rail               | 1        |
| (2)    | Left Frame         | 1        | (10)   | Front Support Rail         | 2        |
| (3)    | Right Frame        | 1        | (11)   | Drawer Bottom Support Rail | 3        |
| (4)    | Bottom Panel       | 1        | (12)   | Drawer Left Panel          | 3        |
| (5)    | Bottom Back Rail   | 1        | (13)   | Drawer Right Panel         | 3        |
| (6)    | Bottom Front Rail  | 1        | (14)   | Drawer Back Panel          | 3        |
| (7)    | Back Panel         | 2        | (15)   | Drawer Bottom Panel        | 3        |
| (8)    | Back Panel Support | 1        | (16)   | Drawer Front Panel         | 3        |

### Parts Assembly Overview

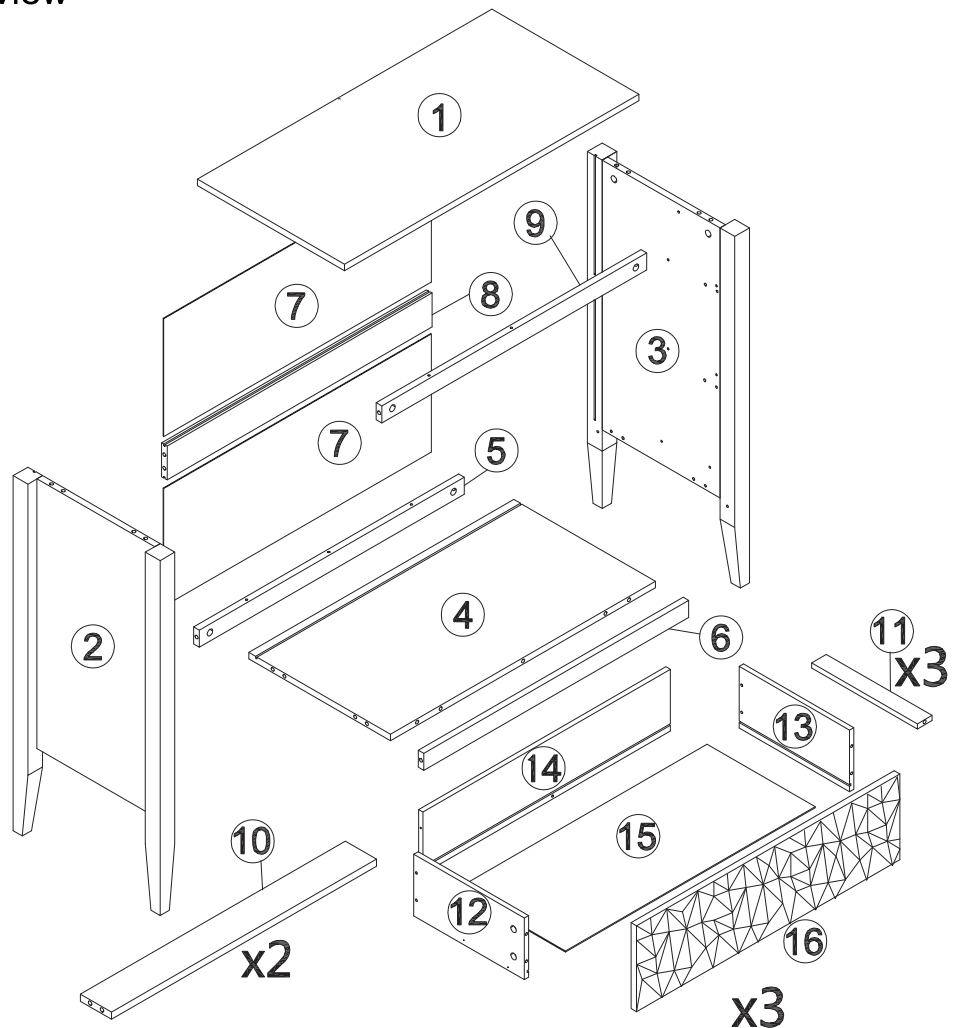

# ASSEMBLY INSTRUCTIONS

## Marquise Accent Cabinet

ITEM# 67815

### Hardware List



A x44 PCS  
Cam-bolt



B x44 PCS  
Cam-lock  
Ø15x10mm



 
C x 12 PCS  
Wood Dowel  
8x30mm




D x 10 PCS  
Screw  
4x35mm




E x 12 PCS  
Screw  
4x25mm

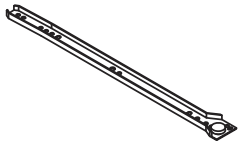


F x 3 PCS  
Drawer Track

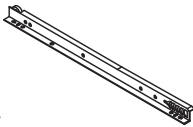 

G x 3 PCS  
Drawer Runner

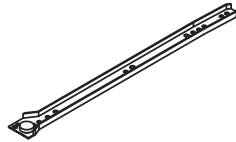 


H x 3 PCS  
Drawer Track

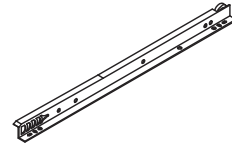 

I x 3 PCS  
Drawer Runner



 J x 33 PCS  
Screw  
3x12mm



K x 4 PCS  
Foot Pad



Lx8PCS  
Screw  
3x14mm



Mx 8PCS  
Panel Stopper



 
Nx1 PCS  
Safety Strap



Ox1 PCS  
Screw  
4x14mm



Px1 PCS  
Wall Anchor



Qx3 PCS  
Snap Button



Rx 3 PCS  
Metal Plate

## INSTRUCTIONS FOR CAM-BOLT & CAM-LOCK

 


CAM-BOLT




CAM-LOCK


### Tools Required




### INSERTING AND TIGHTENING CAM-BOLT

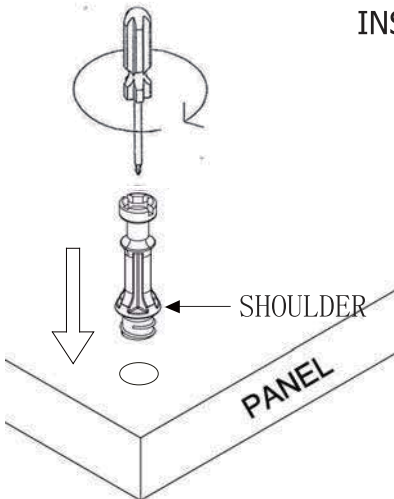 

 Place Cam-bolt on pre-drilled hole and screw in vertically

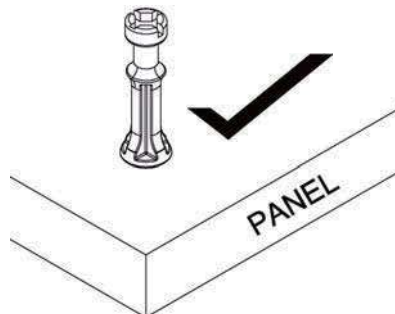

 
Shoulder is flushed (on the same level) with the panel.

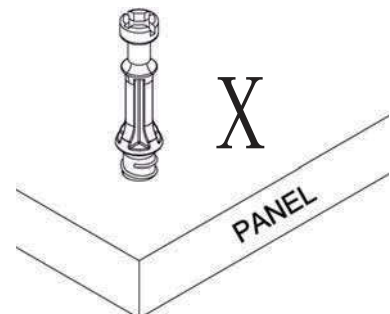

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

### INSERTING CAM-LOCK

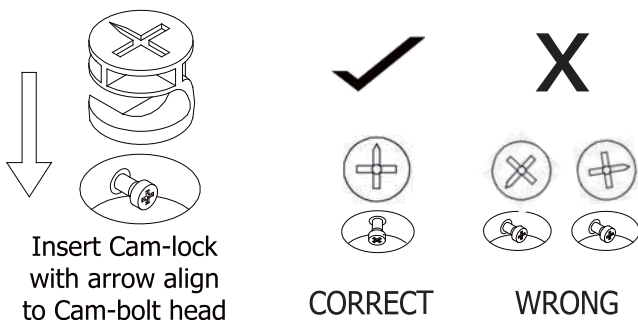 


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

### TIGHTENING CAM-LOCK

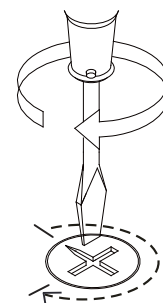 


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


# ASSEMBLY INSTRUCTIONS
 
## Marquise Accent Cabinet    ITEM# 67815

### STEP 1

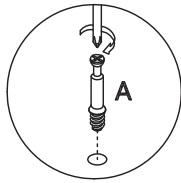

A x22


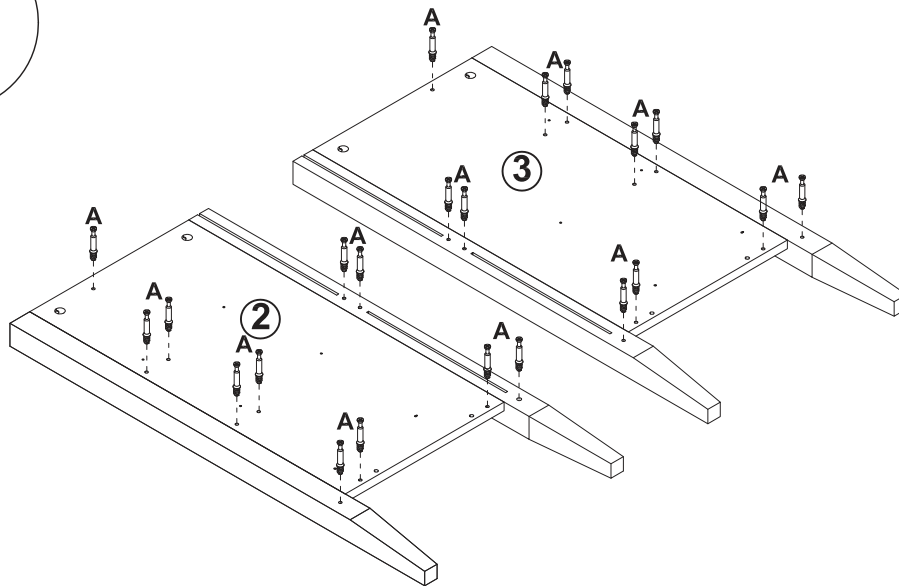 


Place Right Frame (3) and Left Frame (2) as shown on a material that does not scratch or damage the parts and screw in Cam-bolt (A) into the designated holes. (Refer to page 4 for instruction on inserting and tightening Cam-bolts.)

### STEP 2

  J x12

3x12mm

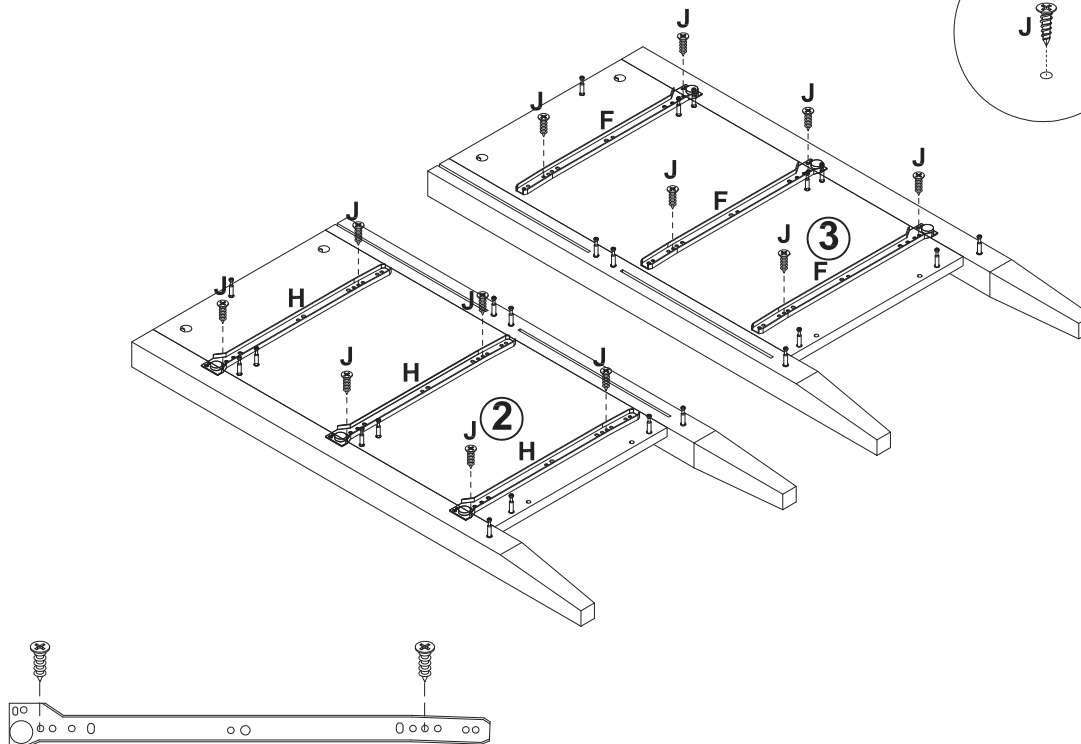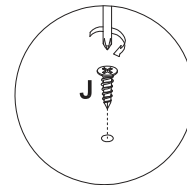



Position Drawer Track (F & H) to align the designated screw holes to the pilot holes on Left Frame (2) and Right Frame (3) and fasten with Screw (J). Note the orientation of the (F & H).

# ASSEMBLY INSTRUCTIONS

  
## Marquise Accent Cabinet

ITEM# 67815

### STEP 3

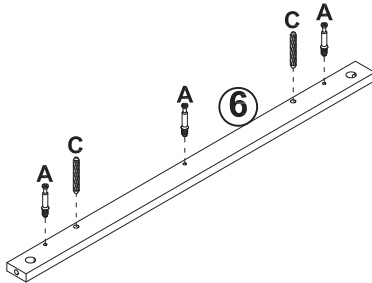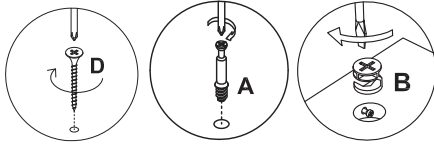

Drawing 3A

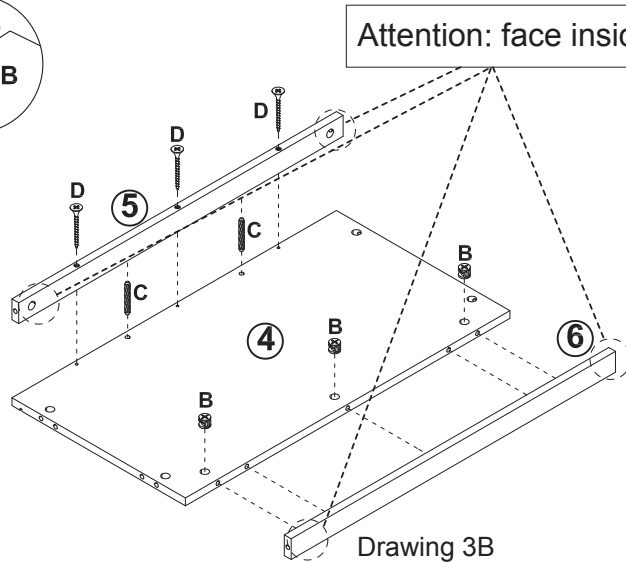 


Drawing 3B


|          |     |
|----------|-----|
| A        | x 3 |
|          |     |
| B        | x 3 |
|          |     |
| Ø15x10mm |     |
| C        | x 4 |
|          |     |
| 8x30mm   |     |
| D        | x 3 |
|          |     |
| 4x35mm   |     |

- Refer to Drawing 3A - Place Bottom Front Rail (6) as shown on a material that does not scratch or damage the part and screw in Cam-bolt (A) into the designated holes.
- Refer to Drawing 3B - Lay Bottom Panel (4) as shown and attach (6) to the edge of (4). Insert Cam-lock (B) into designated holes on (4) and turn clockwise to lock onto Cam-bolt. (Refer to page 4 for instruction on inserting and fastening Cam-lock.)
- Insert Wood Dowel (C) to designated holes on (4) and attach Bottom Back Rail (5) to (4). Next, use Screw (D) to fasten (5) to (4).

### STEP 4

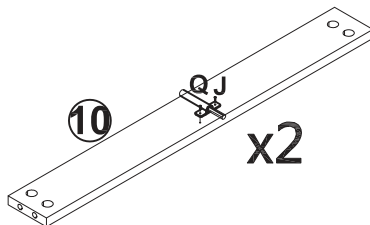 

x2

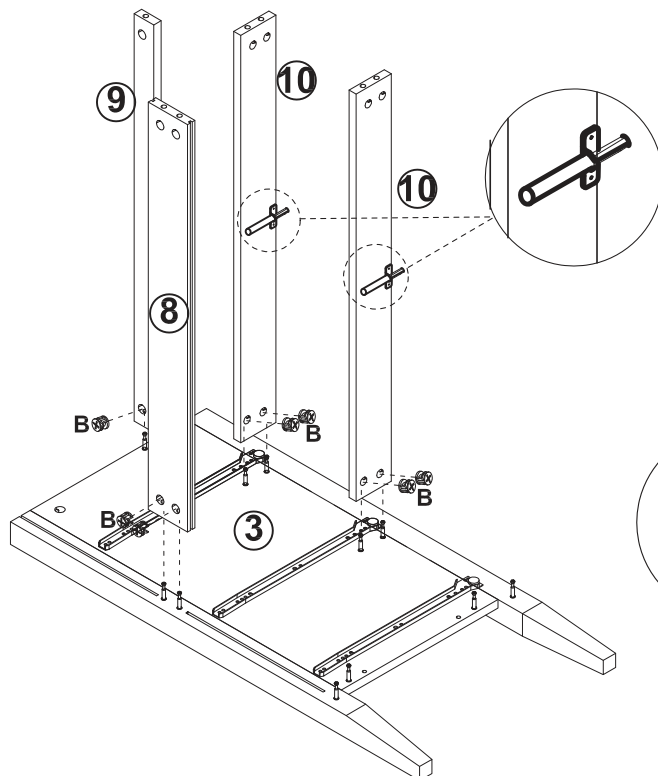 

|          |     |
|----------|-----|
| B        | x 7 |
|          |     |
| Ø15x10mm |     |
| J        | x 4 |
|          |     |
| 3x12mm   |     |
| Q        | x 3 |
|          |     |



- Refer to Drawing 4A - Place Front Support Rail (10) as shown on a material that does not scratch or damage the parts and use Screw (J) to fasten Snap Button (Q) at the pilot holes on (10).
- Attach Back Panel Support (8), Support Rail (9) & (10) to Right Frame (3) from STEP 2 via cam-bolt on (3).
- Insert Cam-lock (B) into the designated holes on (8, 9 & 10) and turn clockwise to lock onto cam-bolt.

# ASSEMBLY INSTRUCTIONS
  
## Marquise Accent Cabinet


ITEM# 67815

### STEP 5

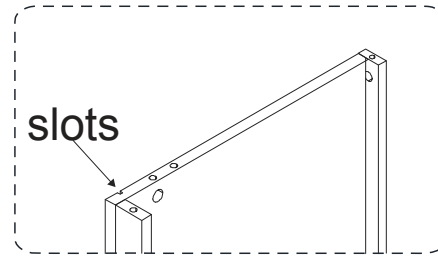
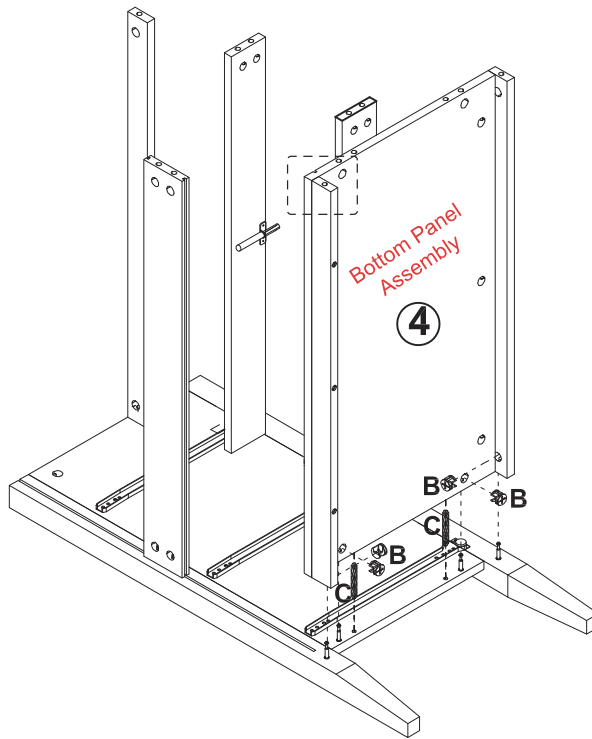


|                                                                                     |     |
|-------------------------------------------------------------------------------------|-----|
| B                                                                                   | x 4 |
|  |     |
| Ø15x10mm                                                                            |     |
| C                                                                                   | x 2 |
|  |     |
| 8x30mm                                                                              |     |

 - Insert Wood Dowel (C) into the designated holes on Right Frame (3) as shown.
- With assistance, **attach Bottom Panel Assembly** from STEP 3 via wood dowels and cam-bolts **on the Right Frame**.
- Insert Cam-lock (B) into designated holes on **Bottom Panel Assembly** and turn clockwise to lock onto cam-bolt.

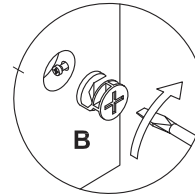

### STEP 6

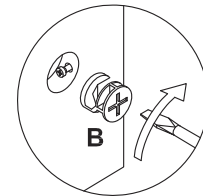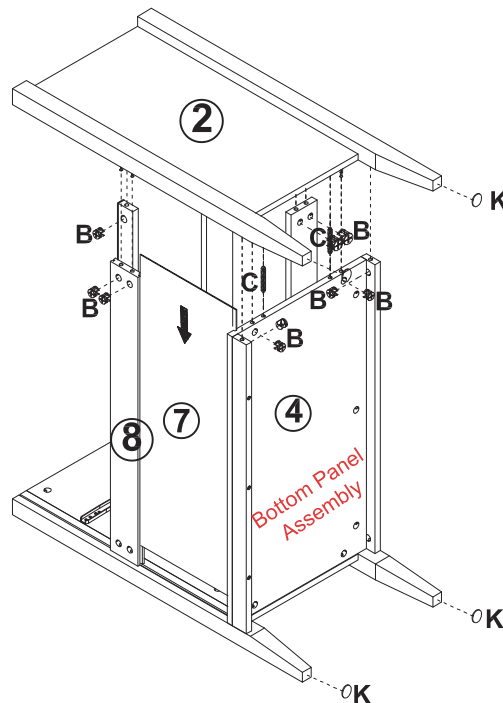  


|                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|
| B                                                                                     | x11 |
|  |     |
| Ø15x10mm                                                                              |     |
| C                                                                                     | x 2 |
|  |     |
| 8x30mm                                                                                |     |
| K                                                                                     | x 4 |
|  |     |

- Fit Back Panel (7) via groove on Back Panel Support (8) and Bottom Panel (4). Check that the side edge of (7) fits into the groove on Right Frame (3).
- Insert Wood Dowel (C) into the designated holes on Bottom Panel (4) as shown and attached Left Frame (2) to the assembly via Cam-lock (B) & Wood Dowel (C). Check that the side edge of (7) fits into the groove on Left Frame (2).
- Insert Cam-lock (B) into designated holes on Bottom Panel Assembly, Back Panel Support (8), Support Rail (9) & Front Support Rail (10) and turn clockwise to lock onto Cam-bolt.
- Affix Foot Pad (K) on the bottom of Frame (2) & (3).

# ASSEMBLY INSTRUCTIONS
 
## Marquise Accent Cabinet      ITEM# 67815

### STEP 7

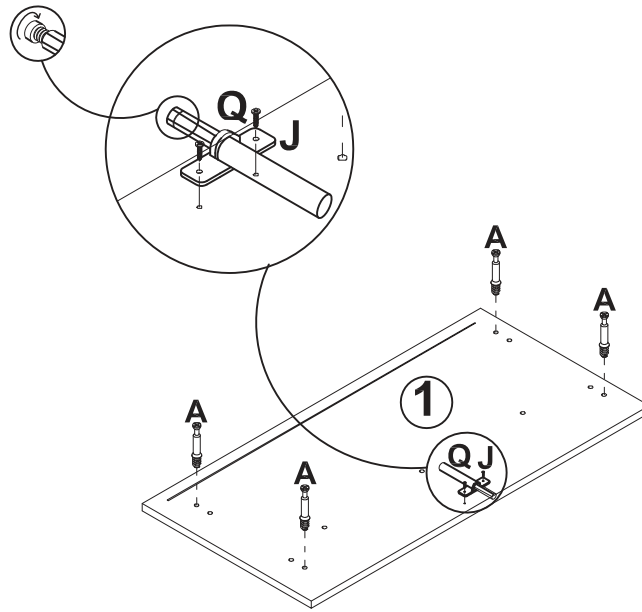

A x 4



J x 2





Q x 1



- a) Place Top Panel (1) as shown on a material that does not scratch or damage the part.
- b) Screw in Cam-bolt (A) into the designated holes.
- c) Use Screw (J) to affix Snap Button (Q) at the pilot holes as shown.

### STEP 8

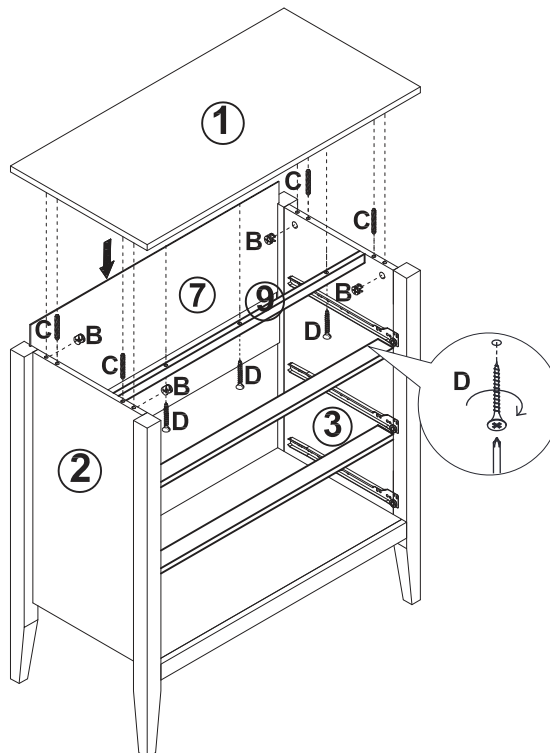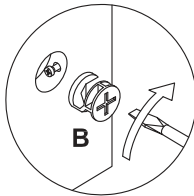  

B x 4



Ø15x10mm

C x 4



8x30mm

D x 3




4x35mm

- a) Fit Back Panel (7) via groove on Left Frame (2), Right Frame (3). Check that the bottom edge of (7) fits into the groove on Back Panel Support (8).
- b) Insert Wood Dowel (C) into the inner 2 holes on the top edge of (2) and (3).
- c) Attached Top Panel (1) to (2 & 3) as shown via cam-bolt and Wood Dowels (C) on the respective parts. Check that the top edge of (7) fits into the groove on the bottom side of (1). Next, insert Cam-lock (B) into the designated holes on (2 & 3) and turn clockwise to lock onto cam-bolt.
- d) Use Screw (D) to fasten (1) to Support Rail (9).

# ASSEMBLY INSTRUCTIONS

 
## Marquise Accent Cabinet      ITEM# 67815

### STEP 9

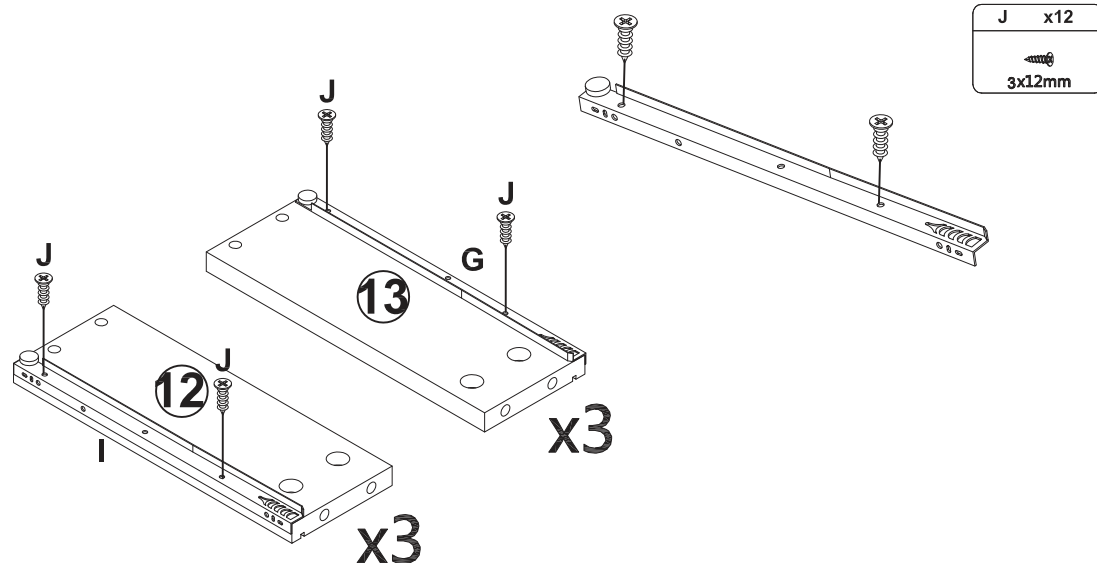

- Lay the drawer parts as shown on a material that does not scratch or damage the parts.
- On Drawer Left Panel (12), position Drawer Runner (I) to align the designated screw holes to the pilot holes on (12). Note the orientation of (I). Use Screw (J) to fasten (I). Do not tighten the screws completely until all screws are in place.
- Use the above procedure to fasten Drawer Runner (G) to Drawer Right Panel (13).

### STEP 10

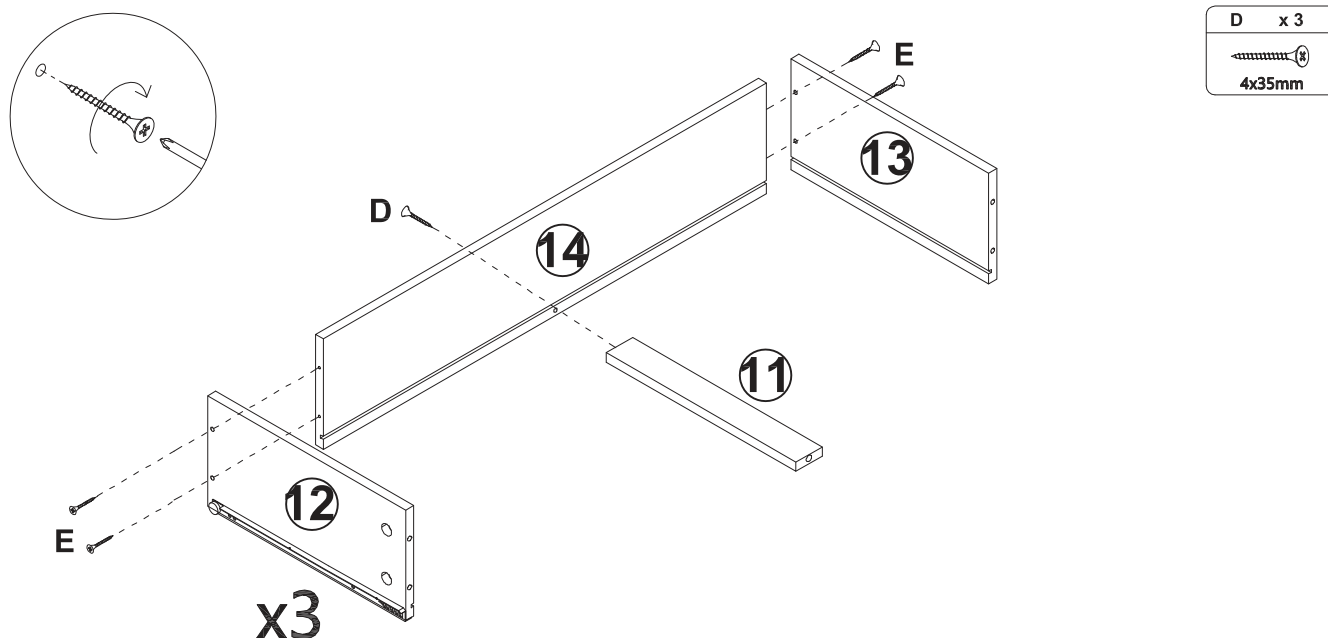 


- Use Screw (E) to fasten Drawer Left & Right Panel (12 & 13) to Drawer Back Panel (14). Note the alignment of the groove on the panels.
- Use Screw (D) to fasten Drawer Bottom Support Rail (11) to Drawer Back Panel (14).

# ASSEMBLY INSTRUCTIONS
 
## Marquise Accent Cabinet

ITEM# 67815

### STEP 11

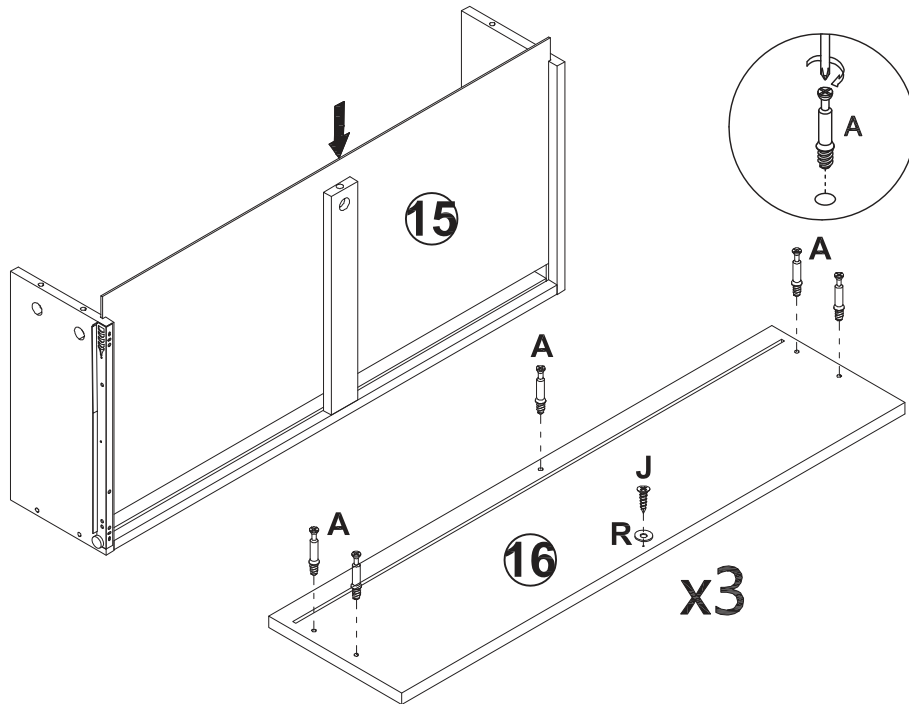

A x15



J x 3




R x 3



- Fit Drawer Bottom Panel (15) via groove on Drawer Left and Right Panel. Check that the edge of Bottom Panel (15) fits into the groove on Drawer Back Panel.
- Screw Cam-bolt (A) into the designated holes on Drawer Front Panel (16).
- Use Screw (J) to fasten Metal Plate (R) at the pilot hole on (16) as shown.


### STEP 12

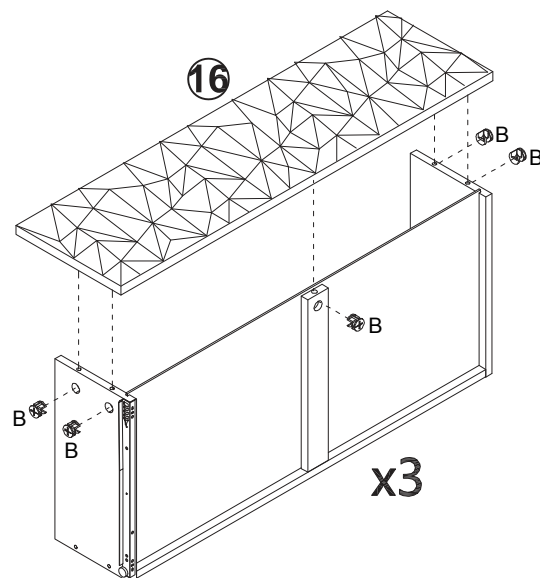 

B x15



 Ø15x10mm

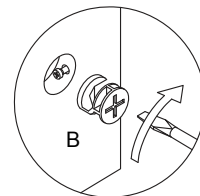


- Attach Drawer Front Panel (16) to Drawer Side Panel and Drawer Bottom Support Rail via cam-bolts on (16).
- Insert Cam-lock (B) into designated holes on side panels and bottom support rail and then turn cam-lock clockwise to lock onto Cam-bolt.

# ASSEMBLY INSTRUCTIONS
 
## Marquise Accent Cabinet

ITEM# 67815

### STEP 13

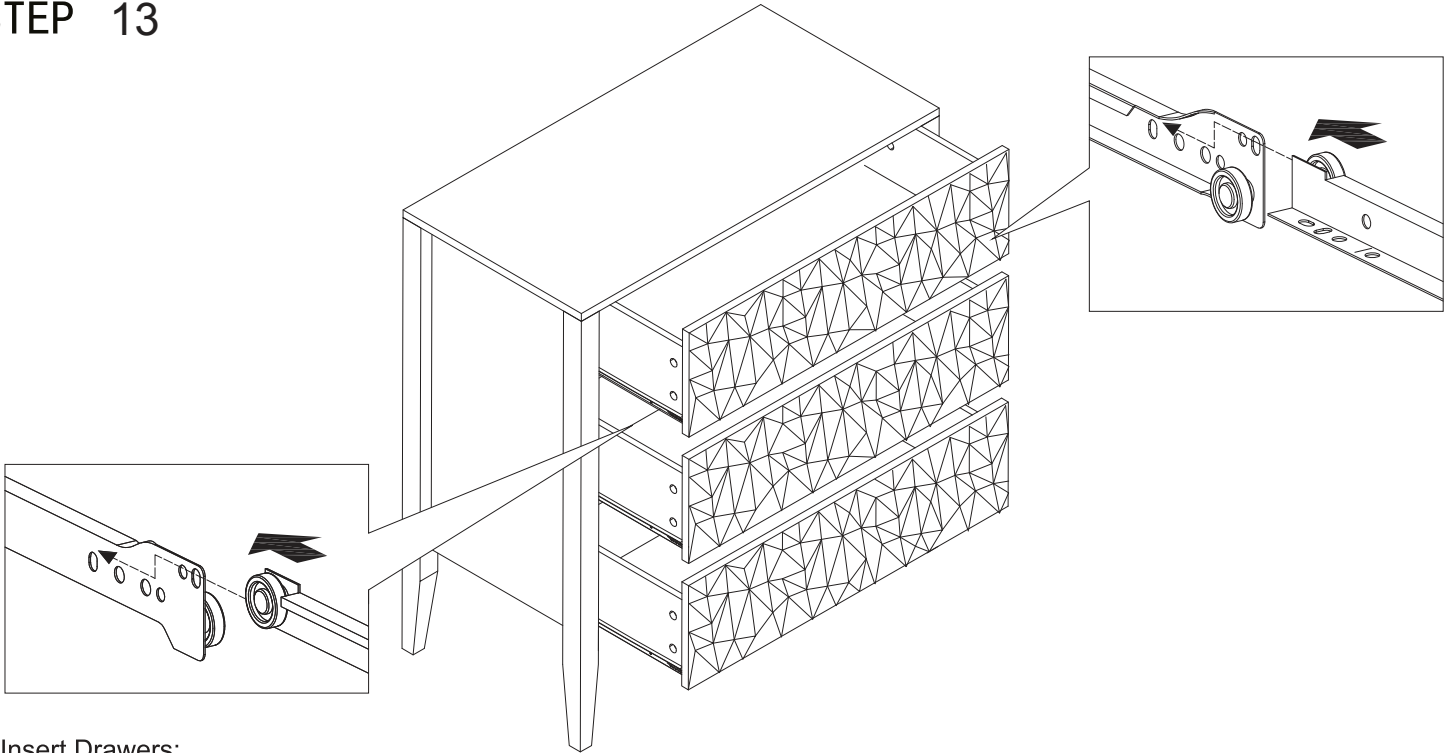


#### Insert Drawers:

Position roller on Drawer Runner on drawer side panel to be above the roller on Drawer Track on Left and Right

Frame and then slide roller on Drawer Runner into rail on the Drawer Track.

Next, push drawer squarely and gently to allow Drawer Runner to slide into Drawer Track.
 
### STEP 14

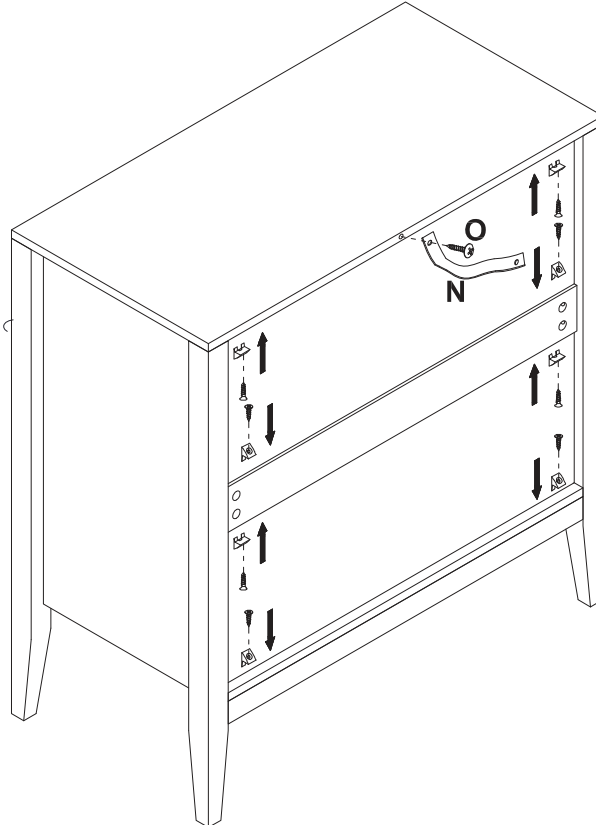

L x 8



M x 8



3x14mm

N x 1



O x 1



4x12mm

a) Wedge Panel Stopper (L) at each corner as shown to fit into the groove and against Back Panel (7), and fasten (L) with Screw (M).

b) Use a Phillips screwdriver to drive Screw (O) to fasten Safety Strap (N) into the pilot hole at the center of the back edge of Top Panel.


ASSEMBLY INSTRUCTIONS  
**Marquise Accent Cabinet     ITEM# 67815**

## STEP 15

 Secure Cabinet.

(Do not skip this Step)

|                                                                                               |     |
|-----------------------------------------------------------------------------------------------|-----|
| D                                                                                             | x 1 |
| <br>4x35mm |     |
| P                                                                                             | x 1 |
|            |     |

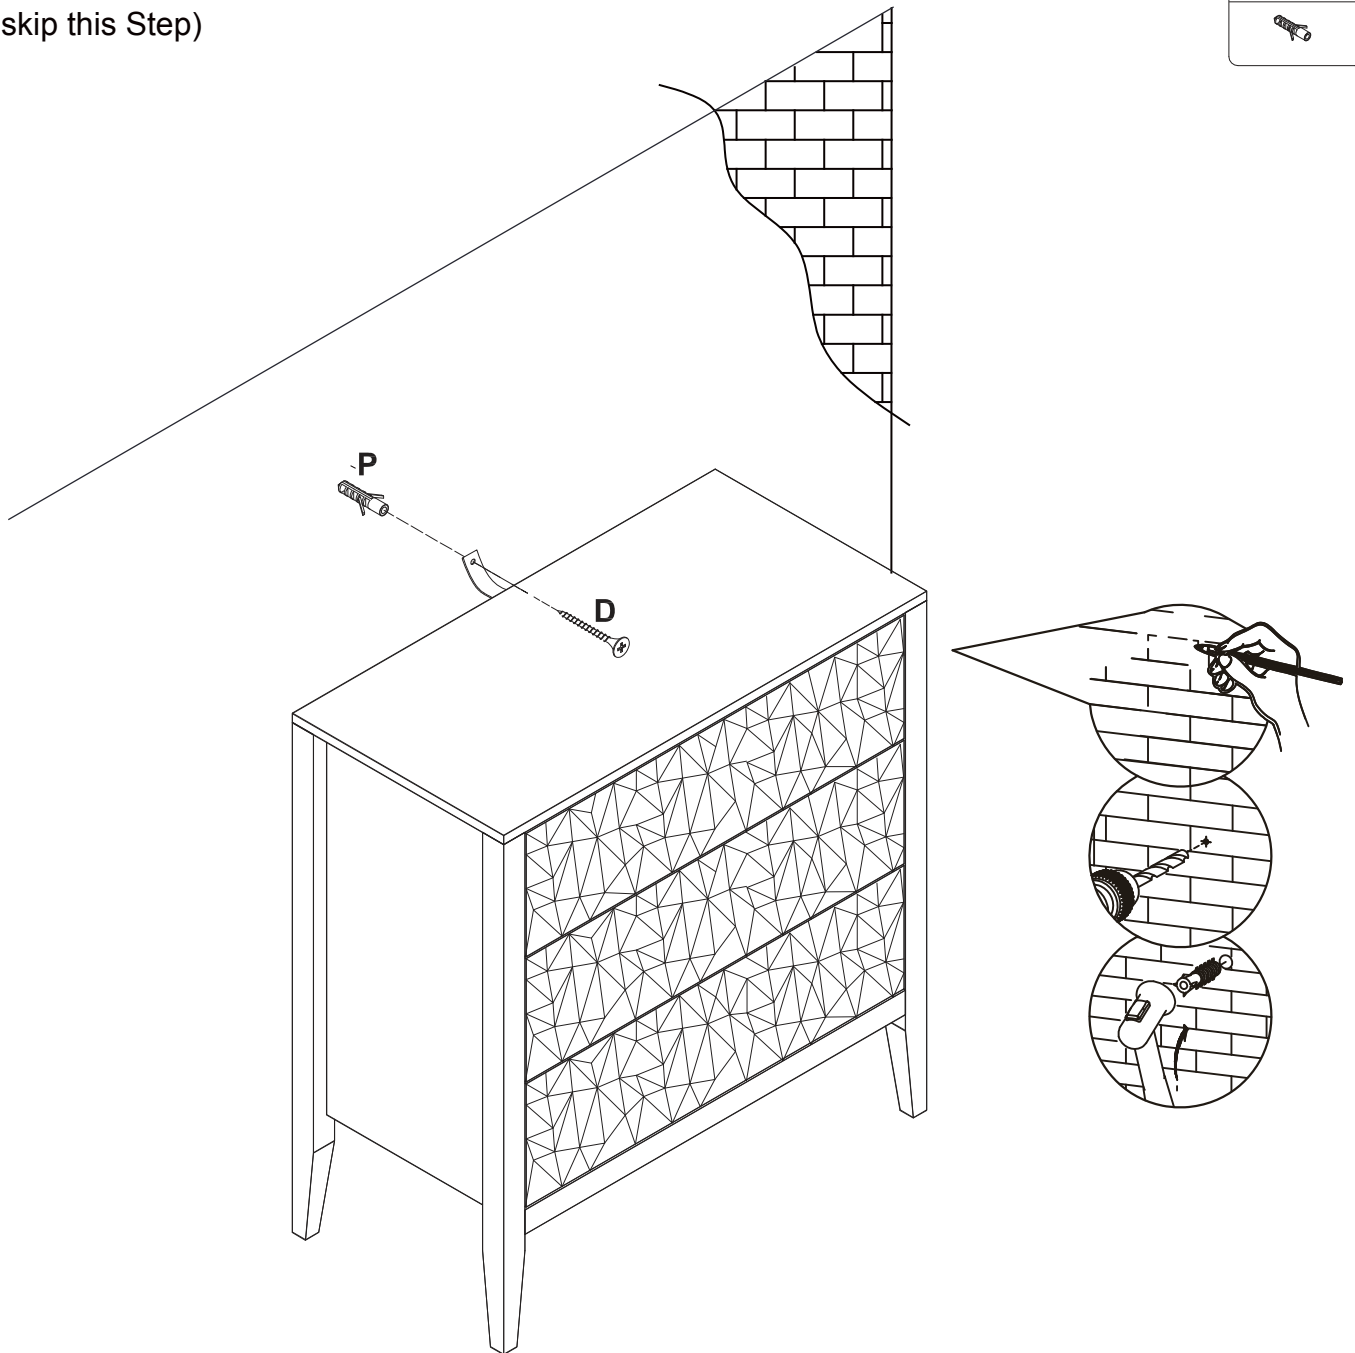

- a) Select the location to place the Cabinet.
- b) Mark location on the wall where the Safety Strap (N) is to be anchored which will be the location for Wall Anchor (P).
- c) On the marked location, drill a hole in the wall that will fit (P).
- d) Fit (P) into the drilled hole. Ensure that the Wall Anchor fits securely in the wall.
- e) Use Screw (D) to affix the free end of Strap (N) to the Wall Anchor (P).

**The assembly of the Cabinet is complete.**