

|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| <b>Product Name:</b> | Merry Christmas Snowman Trio Holiday Decoration with Battery-Operated Lights |
| <b>SKU #:</b>        | WHHD2043                                                                     |

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

**Before You Start**

Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.

**Note:** The snowman battery box is for indoor display only. The material of the snowman family can be displayed outdoors.

*Retain the instructions for future use and save the carton for storing your snowman family.*


**Assembly and Instruction Procedure (no tools required for assembly):**

- Remove all parts from the packaging.
- Assemble the snowman father / mother's head onto the body by inserting the rods into loops as shown in the pictures above. Use zip tie supplied to fasten the KD section to get a steady body.
- Wrap the scarf around their neck.
- Assembly is now complete for the father and mother.
- Assemble the snowman kid's hat on top of head and hands onto the body by inserting the rods into loops as shown in the illustration.
- Attach the gift box to the middle of the snowman kid.
- Assembly is now complete for the kid.
- Connect the snowman father / mother together using the zip tie to tighten the middle section where the circular rings meet. Install the metal support bracket at the back by inserting the rods into loops.
- Insert the Merry Christmas sign into the holes in the hands of Snowman father and Snowman mother.
- Finally, insert the middle snowman into the hole marked in red.
- Assembly is now complete.
- Insert 3 x AA batteries (not included) in the battery box. The ON/OFF switch is on the side of the battery box.


|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| <b>Product Name:</b> | Merry Christmas Snowman Trio Holiday Decoration with Battery-Operated Lights |
| <b>SKU #:</b>        | WHHD2043                                                                     |

### Assembly Illustration:

**Father:**

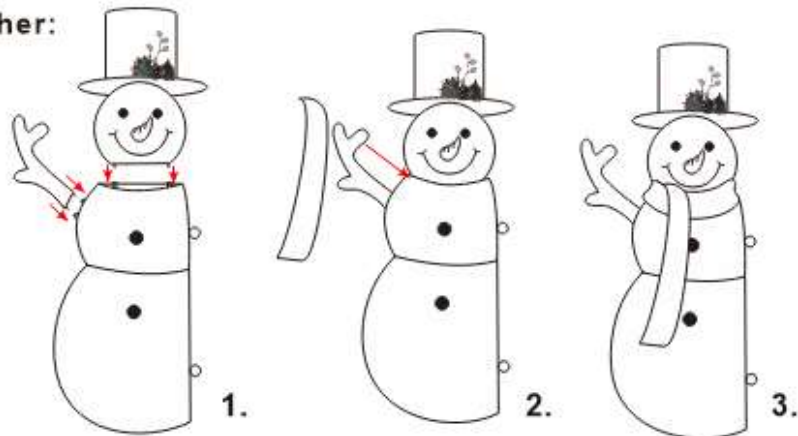


**Mother:**

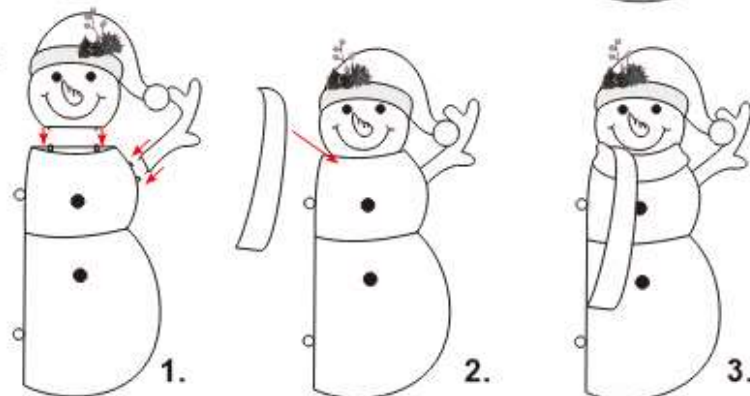

**Kid:**



|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| <b>Product Name:</b> | Merry Christmas Snowman Trio Holiday Decoration with Battery-Operated Lights |
| <b>SKU #:</b>        | WHHD2043                                                                     |

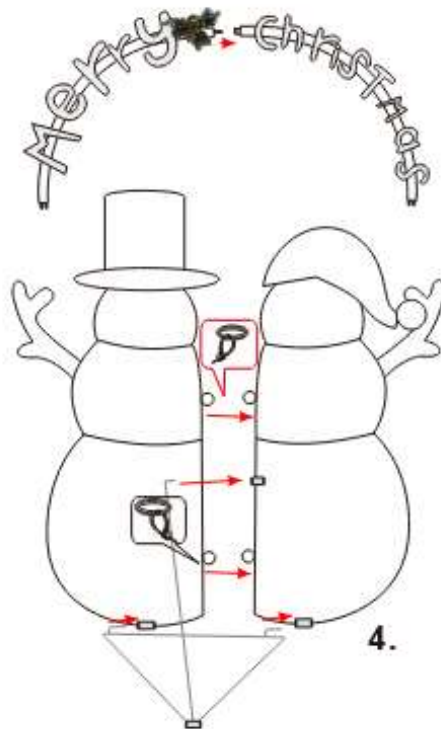

4.



5.



6.

|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| <b>Product Name:</b> | Merry Christmas Snowman Trio Holiday Decoration with Battery-Operated Lights |
| <b>SKU #:</b>        | WHHD2043                                                                     |



### Warnings:

1. Do not place it near fireplaces, candles, outdoor heaters, or other similar sources of heat. The snowman set is not flame retardant.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the decoration may fall or blow into.
3. Make sure the final assembly is stable.
4. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

### Troubleshooting:

- Snowman family not straight: Ensure to use zip ties to tighten. Check if the back support bracket is stable
- Lights not working: check that the batteries are installed correctly.

Note: If this does not solve the problem with the snowman set, please do not disassemble the decoration. Please contact customer service for assistance.

### Storage:

- Remove batteries from the battery box.
- Disassemble the parts of the snowman.
- Put the snowman parts and accessories back into the carton.
- Store the product in a cool and dry place, avoid direct sunlight, and ensure that the temperature does not exceed 35 degrees Celsius ° C (95 ° F).