


User Manual

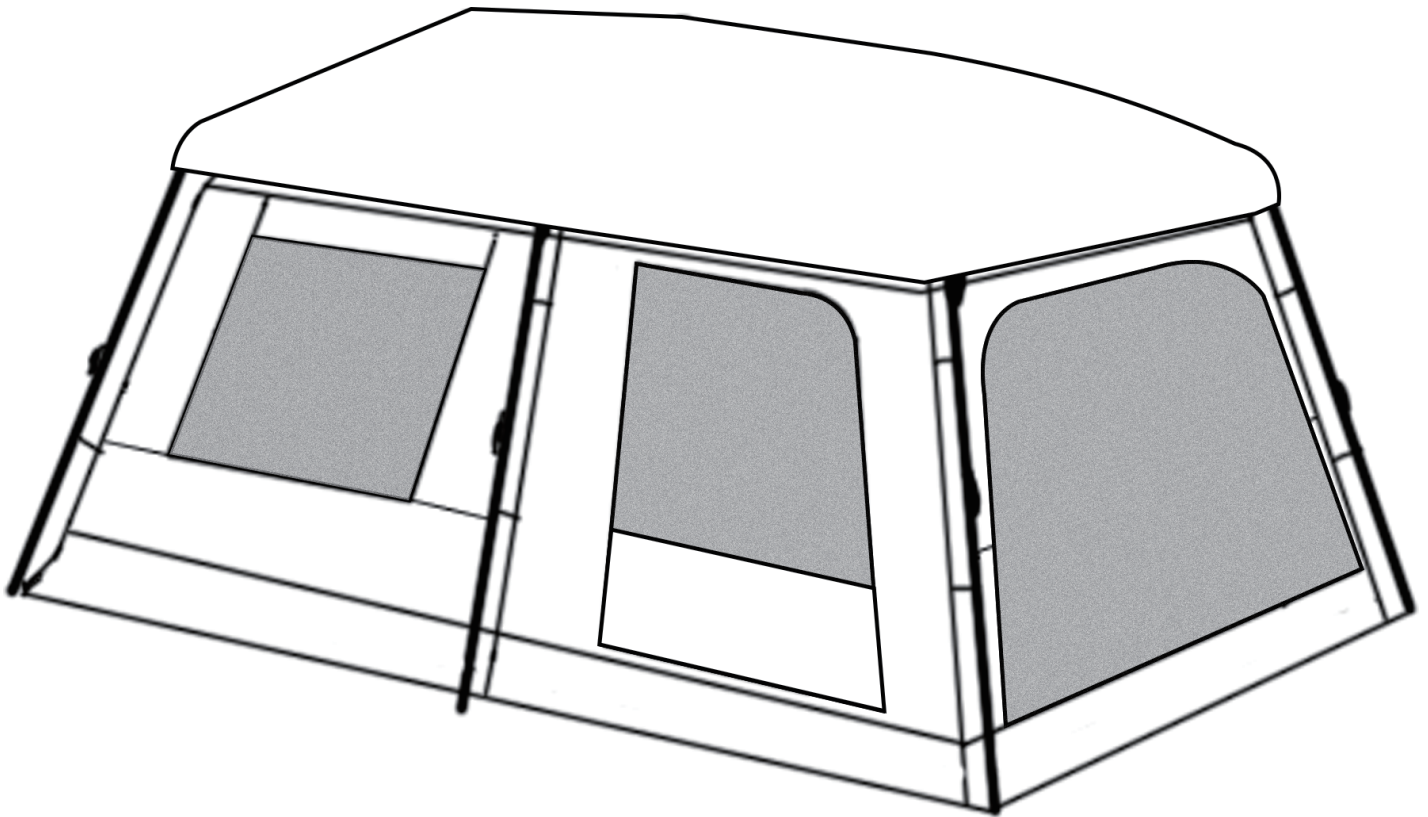

SKU: PXJFOT114GN


SKU: PXJFOT114NA

Thanks for your trust in buying our product, please contact us through Amazon Message if you experience any issues. We will reply in 24/7 hours.


Here's the way to contact us:

1. Log in Yours Amazon Account.
2. Choose "Orders" in the top right-hand corner.
3. Find the Orders You Purchased & Click "the seller's brand".
4. Click "Ask a question" & "An order I placed".
5. Choose "Select a subject" & "Other Shipping Question".
6. Click "Write message" & "Send e-mail".
7. If you prefer to contact us via email, you can also write to **customer01service@hotmail.com**.


Tent Size:

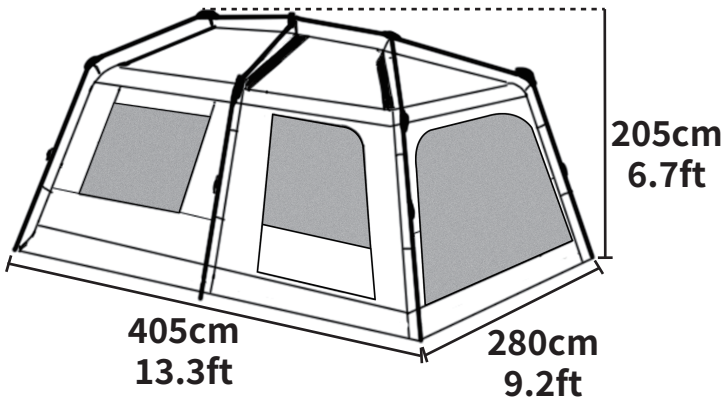

Accessory:

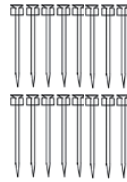


Tent stake X16

 


Landing pole X4




Windrope X10

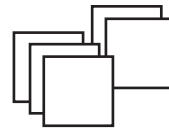


Repair patch X5

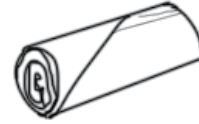

Tent body X1

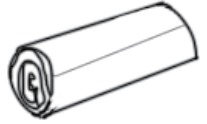

Curtain X1

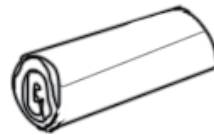

Top cover X1




Storage bag X1

ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us. We will check and offer you the best solution soon.


How to Put Together:

1

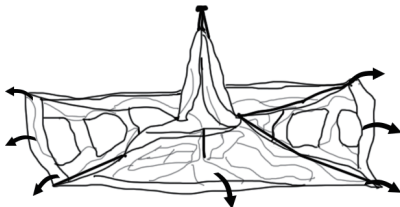


1. Take it out of the storage bag, loosen the straps, and unfold the tent.
Note: Once the tent is out, organize small accessories and storage bags in one place in case they get lost.

2

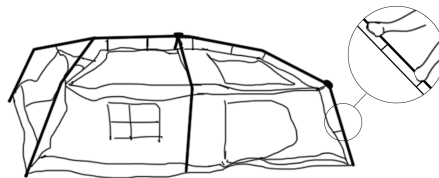

2. Lift the rod joint. Extend the tent pole until the retraction makes a scratching sound and locks the tent pole.


3

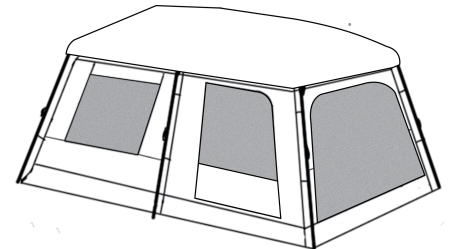

3. Put the top over the tent. Secure the tent by hitting ground pegs and pulling the wind rope to complete the setup.


How to Fold and Storage it:

1

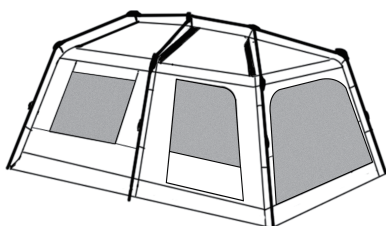


1. Take down the top cover, put away the wind rope and the stakes, take down the curtain inside the tent, and store it separately to prevent loss.

2

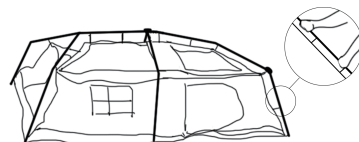


2. Press the red button on the tent to fold the tent pole.

3

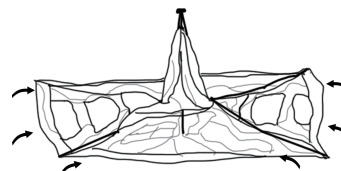

3. Fold the four corners of the tent inward in turn, and tie the tent with a binding tape to make the tent more compact.

4

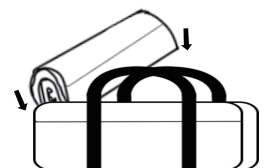

4. Finally, place the folded tent and all accessories into a storage bag for carrying and storage more compact.


STORAGE INSTRUCTIONS

- **Clean & Dry:** If you won't be using it for a while, make sure it's completely clean and dry before folding it for storage.
- **Storage Environment:** Store it in a cool, dry, and well-ventilated place. Avoid direct sunlight and put some desiccant packs inside to keep moisture and chemicals away.
- **Regular Maintenance:** Even if you haven't used your tent for a long time, check it regularly for mold, discoloration, signs of aging, or other damages. Fix any issues promptly to extend its lifespan.

CARE INSTRUCTIONS

- **Clean before storage (including tent poles).**
Before storing, clean off any dirt and other natural debris. Keep tent poles, stakes, and other accessories clean as well.
- **The best way to clean the tent is to use water and a soft brush, then allow it to air dry.**
- **We strongly recommend using a separate ground cloth to prolong the lifespan of the tent floor and help maintain cleanliness.**
- **Keep the zippers clean and occasionally use zipper lubricant.**
- **If in the process of use, accidentally cut a small hole, you can use repair subsidies to repair it.**

User Manual

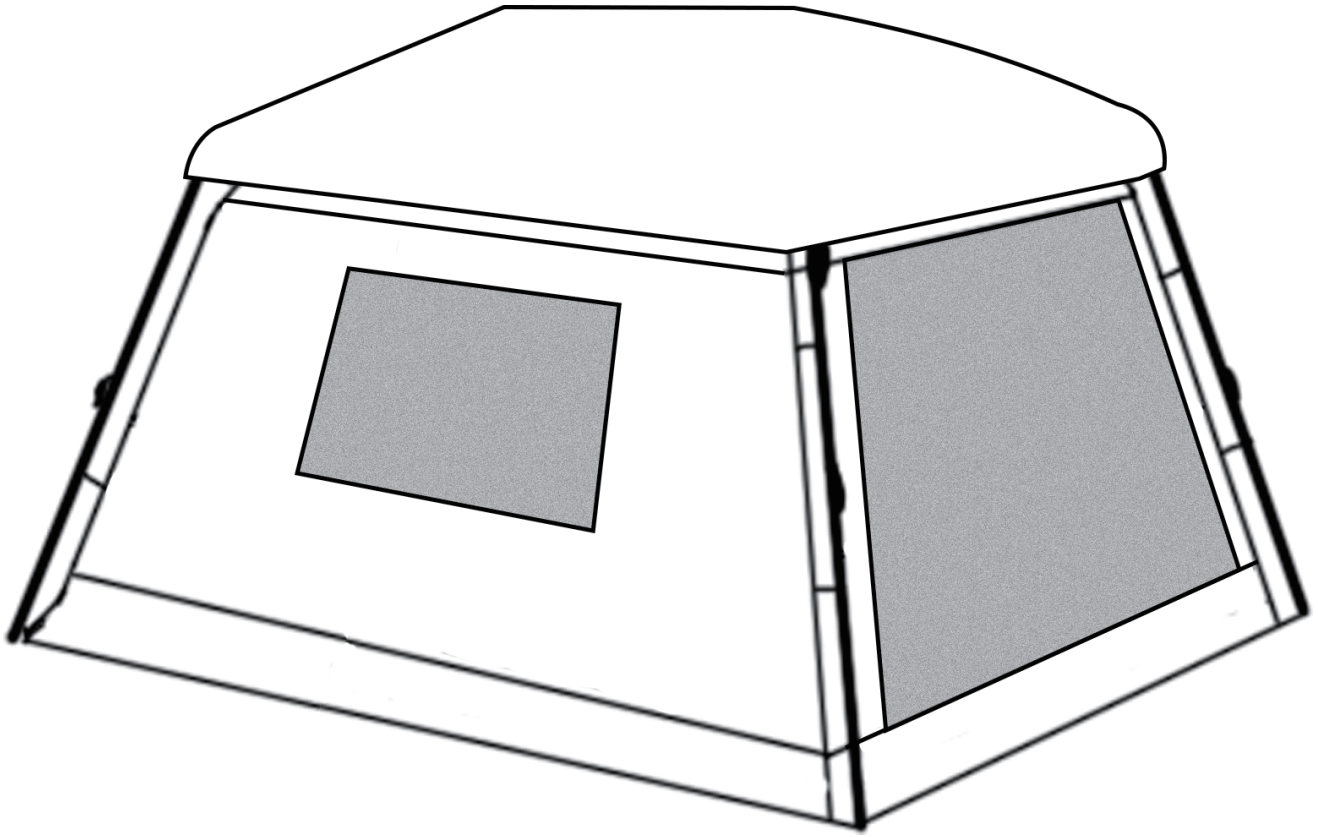

SKU: PXJFOT115GN


SKU: PXJFOT115NA

Thanks for your trust in buying our product, please contact us through Amazon Message if you experience any issues. We will reply in 24/7 hours.

Here's the way to contact us:

1. Log in to your Amazon Account.
2. Choose "Orders" in the top right-hand corner.
3. Find the Orders You Purchased & Click "the seller's brand".
4. Click "Ask a question" & "An order I placed".
5. Choose "Select a subject" & "Other Shipping Question".
6. Click "Write message" & "Send e-mail".
7. If you prefer to contact us via email, you can also write to **customer01service@hotmail.com**.

Tent Size:

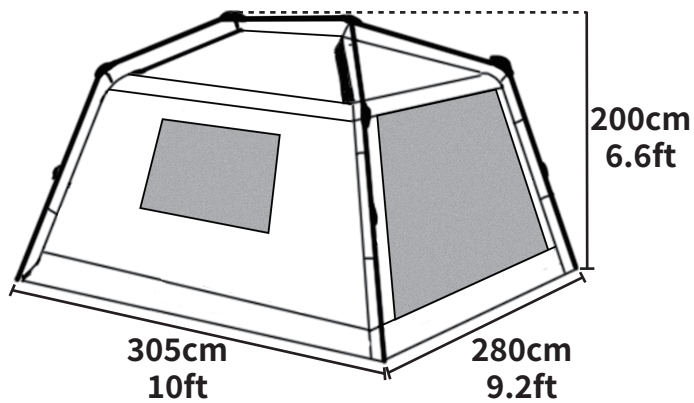

Accessory:




Tent stake X10




Landing pole X2




Windrope X6

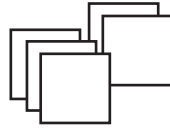

Repair patch X5

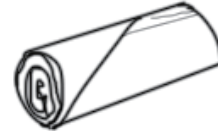

Tent body X1

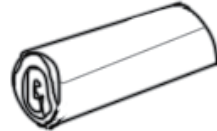

Top cover X1



Storage bag X1

ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us. We will check and offer you the best solution soon.


How to Put Together:

1




1. Once you take the tent out of the storage bag, gather the small accessories and storage bags in one place so that they won't get lost. Then, hold the tent firmly and turn the pole joints outward to pop it open.

2

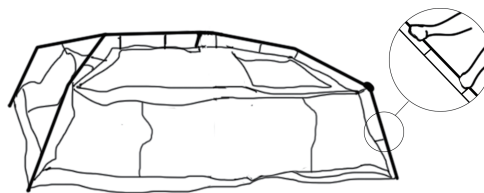

2. Lift the rod joint. Extend the tent pole until the retraction makes a scratching sound and locks the tent pole.


3

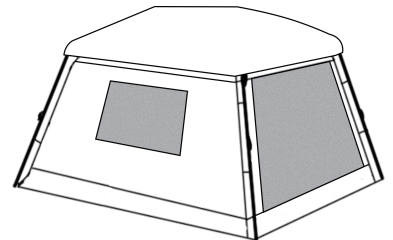

3. Put the top over the tent. Secure the tent by hitting ground pegs and pulling the wind rope to complete the setup.


How to Fold and Storage it:

1

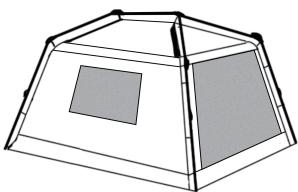


1. Take down the top cover, put away the wind rope and the stakes, take down the curtain inside the tent, and store it separately to prevent loss.

2

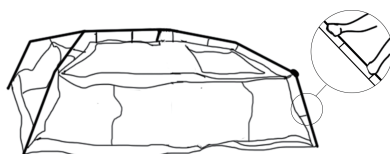


2. Press the red button on the tent to fold the tent pole.

3

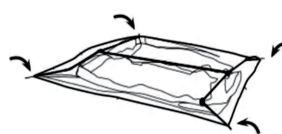

3. Fold the four corners of the tent inward in turn, and tie the tent with a binding tape to make the tent more compact.

4

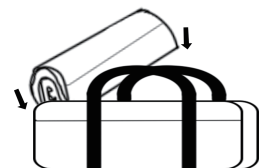

4. Finally, place the folded tent and all accessories into a storage bag for carrying and storage more compact.

STORAGE INSTRUCTIONS

- **Clean & Dry:** If you won't be using it for a while, make sure it's completely clean and dry before folding it for storage.
- **Storage Environment:** Store it in a cool, dry, and well-ventilated place. Avoid direct sunlight and put some desiccant packs inside to keep moisture and chemicals away.
- **Regular Maintenance:** Even if you haven't used your tent for a long time, check it regularly for mold, discoloration, signs of aging, or other damages. Fix any issues promptly to extend its lifespan.

CARE INSTRUCTIONS

- **Clean before storage (including tent poles).**
Before storing, clean off any dirt and other natural debris. Keep tent poles, stakes, and other accessories clean as well.
- **The best way to clean the tent is to use water and a soft brush, then allow it to air dry.**
- **We strongly recommend using a separate ground cloth to prolong the lifespan of the tent floor and help maintain cleanliness.**
- **Keep the zippers clean and occasionally use zipper lubricant.**
- **If in the process of use, accidentally cut a small hole, you can use repair subsidies to repair it.**