

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

 
1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.• Do not defeat or remove the drawer interlock system.
	<p><i>This is a permanent label. Do not remove!</i></p>

 

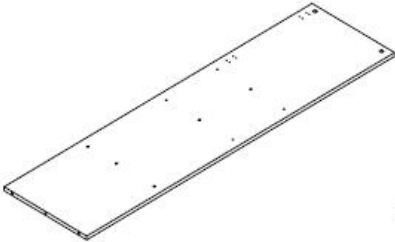 
Assembly Instructions



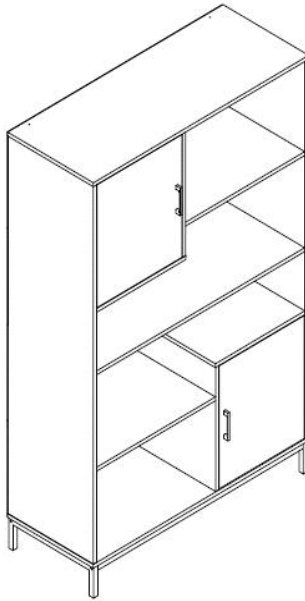


Caution: You must read this before you proceed



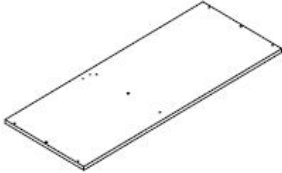

 
 


Bookcase







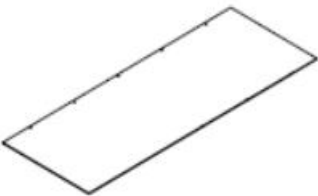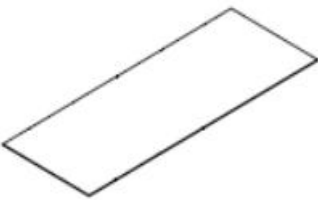


 





 
Parts List

 


 



 

 
Label	Picture	Description	QTY
A		Top Panel	1
B		Bottom Panel	1
C		Left Panel	1

D		Right Panel	1
E		Shelf	2
F		Middle Shelf	1
G		Upper Divider Panel	1
H		Bottom Divider Panel	1

I		Bottom Panel of Upper Cabinet	1
J		Top Panel of Bottom Cabinet	1
K		Upper Door Panel	1
L		Bottom Door Panel	1
M		Back Panel	2
N		Middle Back Panel	2
O		Metal Tube	2
P		Metal Frame	2


Hardware

Label	Picture	Description	QTY
①		Cam Lock (Φ 15*9.5mm)	25
②		Cam Bolt (M6*24mm)	25
③		Wooden Dowel (Φ 8*30mm)	17
④		Bolt (M6*30mm)	13
⑤		Bolt (M4*20mm)	5
⑥		Screw (M4*40mm)	9
⑦		Hinge	4
⑧		Magnet	2
⑨		Screw (M3*16mm)	5
⑩		Screw (M3*12mm)	5
⑪		Screw (M3.5*12mm)	25
⑫		Allen Wrench	1
⑬		Bolt (M3*12mm)	34
⑭		Handle	2

⑮		Holes Cover	25
⑯		Magnetic Bar	2
⑰		Metal Gasket	8
Cabinet Restraint Device Hardware			
⑱		L-shape Metal Bracket	2
⑲		Screw (M4*35mm)	3
⑳		Screw (M6*15mm)	3
㉑		Plastic Dowel	3
㉒		Screwdriver (Not provided)	1
㉓		Power Drill (Not provided)	1
㉔		Hammer (Not provided)	1

Assembly Preparation

 Before
Beginning
Assembly:

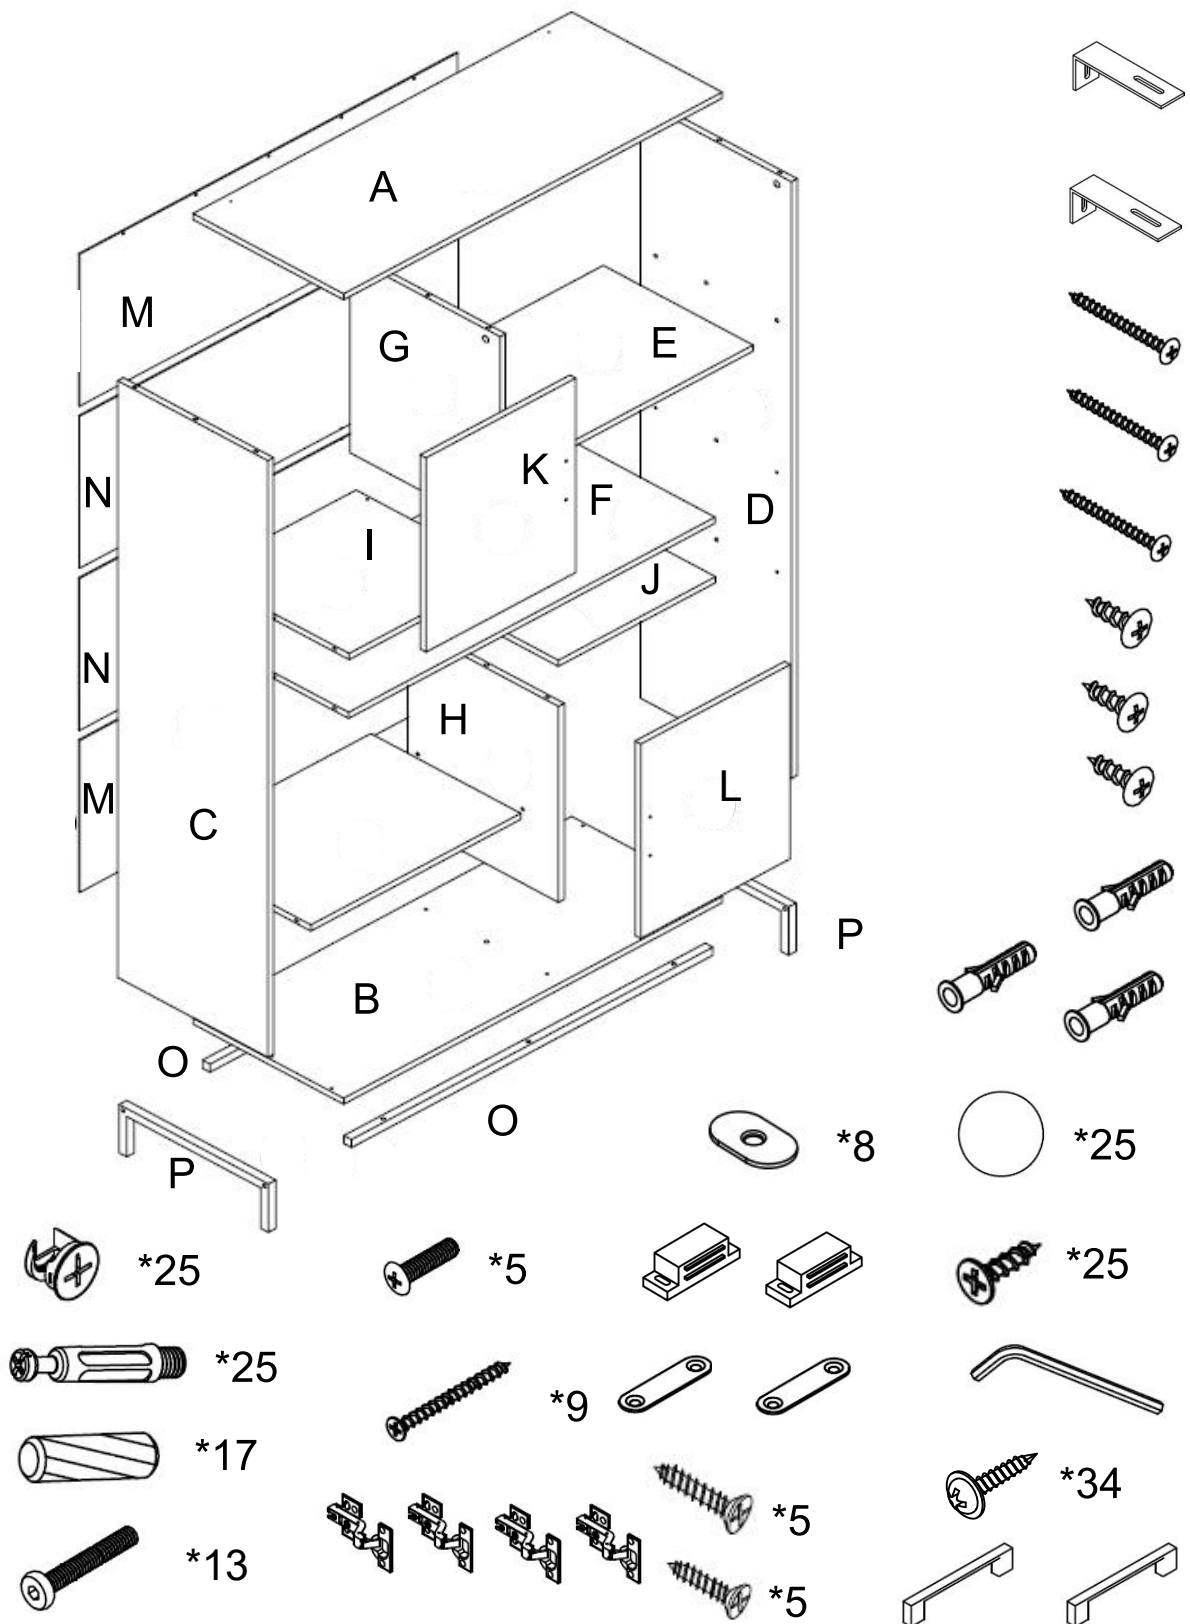

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- **Save all packaging until finished-**

Assembly Steps

Overview

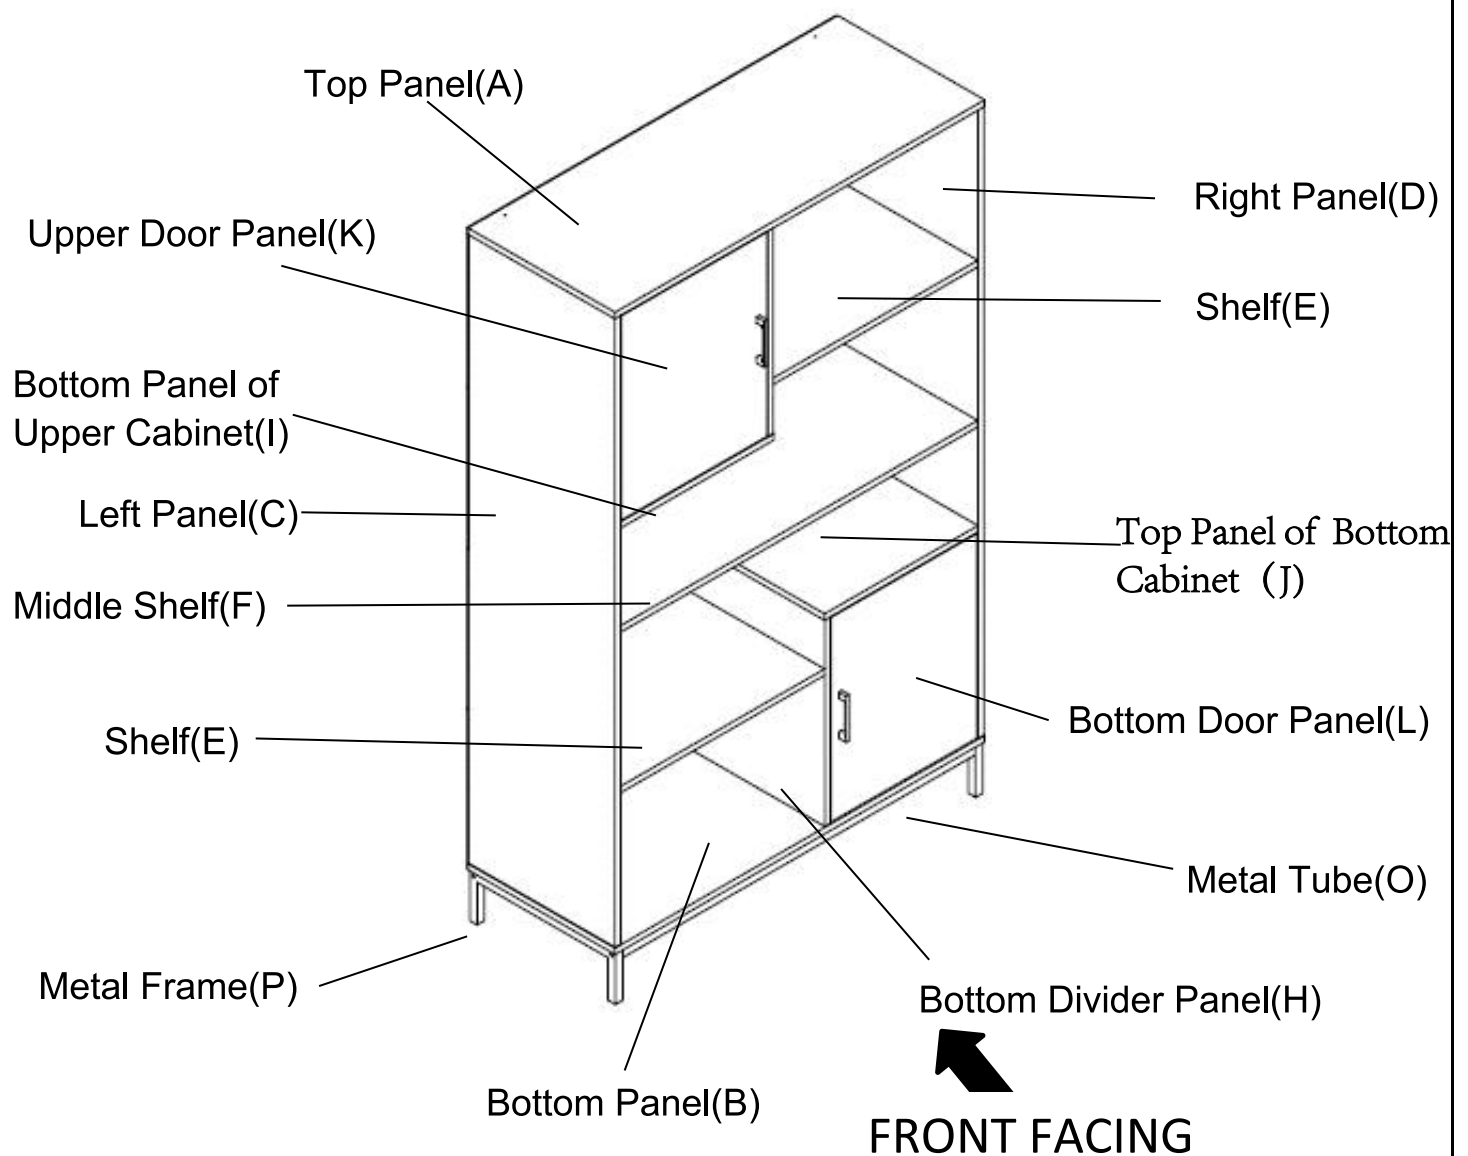


This Bookcase has multiple parts and may require up to 30 minutes to assemble.

To give you an overview of the Bookcase parts, the above picture is to help you put the various parts into perspective.

Please read through the instructions herebelow to familiarise the parts and steps before assembly.

 Step 1

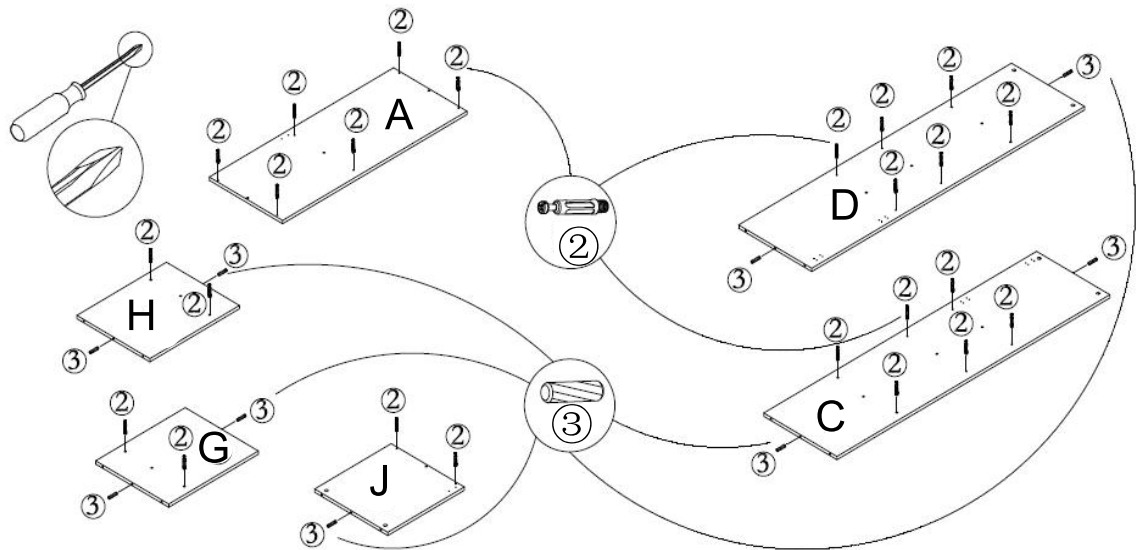


Open the carton and place all parts onto a clean, non-marring surface.

1.1) Insert Cam Bolt(②) into the mounting position of A,C,D,G,H,J as shown, lock by turning Cam Bolt(②) with Screwdriver(②).


1.2) Insert Wooden Dowel(③) into mounting positions on C,D,G,H,J as shown

 Step 2

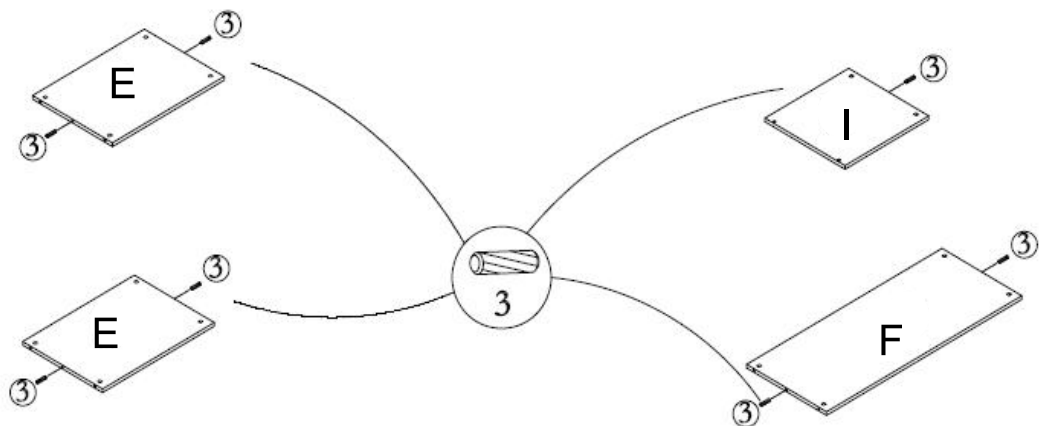


Insert Wooden Dowel(③) into mounting positions on E,I,F as shown

 Step 3

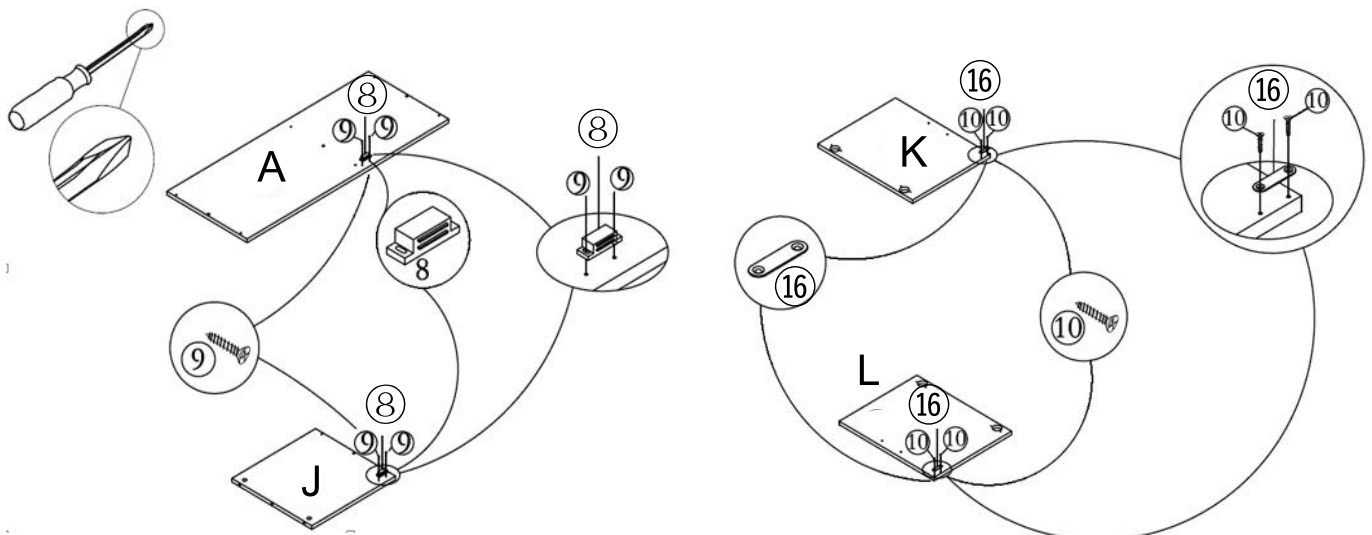

- 3.1) Attach Magnet(⑧) to Top Panel(A) and Top Panel of Bottom Cabinet(J) using Screw(⑨) with Screwdriver(②②).
- 3.2) Attach Magnetic Bar(⑩⑩) to Upper Door Panel(K) and Bottom Door Panel(L) using Screw(⑩) with Screwdriver(②②).

 Step 4

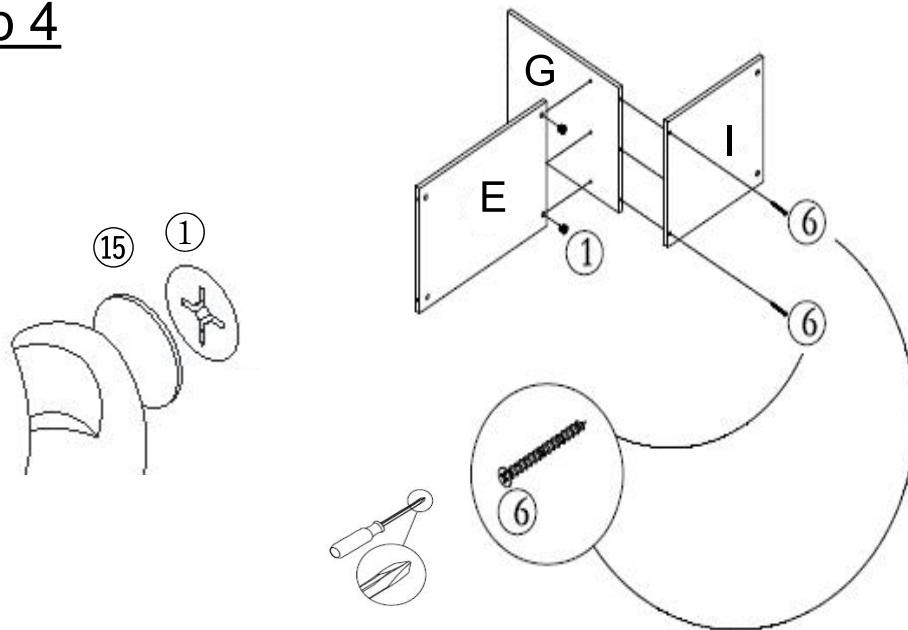


Insert Wooden Dowel on Upper Divider Panel(G) into the mounting positions on Bottom Panel of Upper Cabinet(I), then attach Bottom Panel of Upper Cabinet(I) to Upper Divider Panel(G) using Screw(⑥) with Screwdriver(②②).

Insert Wooden Dowel on Shelf(E) into the mounting positions on Upper Divider Panel(G), and Insert Cam Bolt on Upper Divider Panel(G) into the mounting positions on Shelf(E), then Insert Cam Lock(①) into the mounting positions of Shelf(E) and Upper Divider Panel(G).

Lock by turning Cam Lock(①) with Screwdriver(②②).

Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

 Step 5

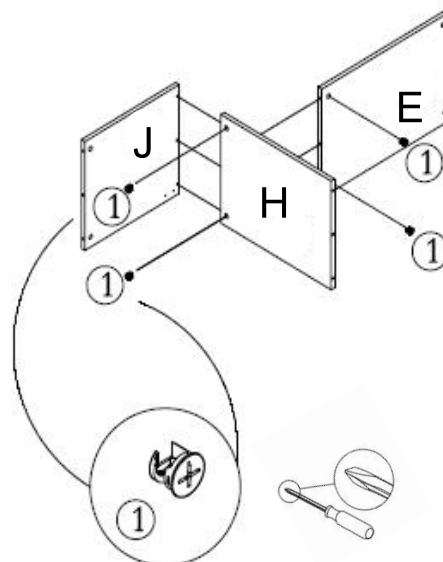


Insert Wooden Dowel on Bottom Divider Panel(H) into the mounting positions on Top Panel of Bottom Cabinet(J), and Insert Cam Bolt on Top Panel of Bottom Cabinet(J) into the mounting positions on Bottom Divider Panel(H), then Insert Cam Lock(①) into the mounting positions of Top Panel of Bottom Cabinet(J) and Bottom Divider Panel(H).

Lock by turning Cam Lock(①) with Screwdriver(②②).

Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.

 Step 6

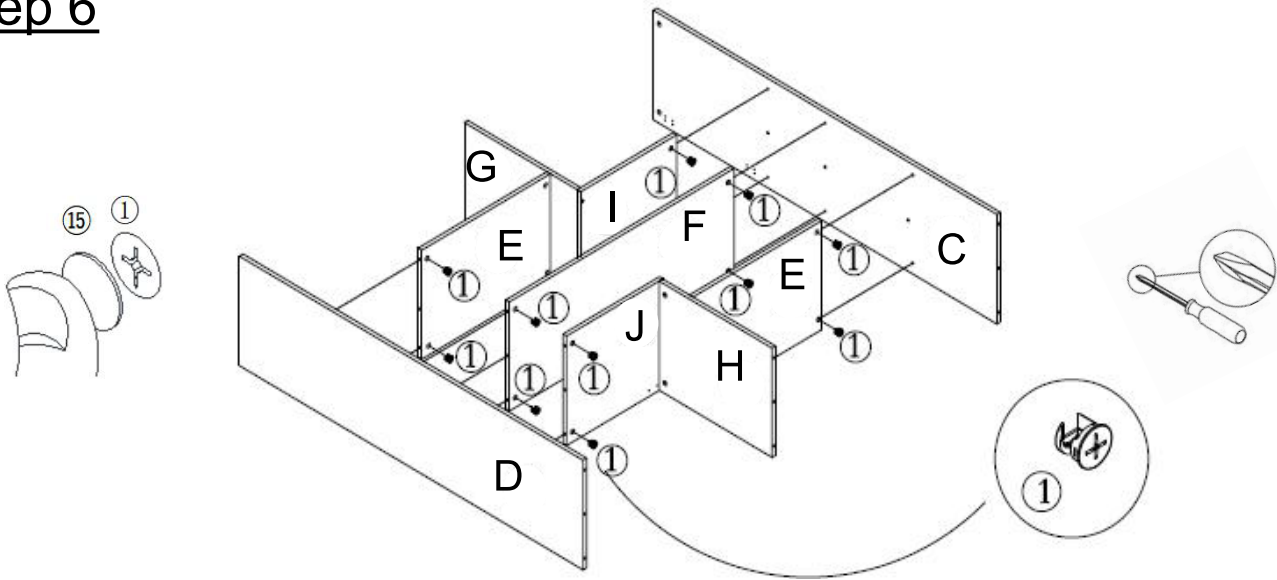


6.1) Insert Wooden Dowel on Bottom Panel of Upper Cabinet(I), Middle Shelf(F) and Shelf(E) into the mounting positions on Left Panel(C), and Insert Cam Bolt on Left Panel(C) into the mounting positions on Bottom Panel of Upper Cabinet(I), Middle Shelf(F) and Shelf(E), then Insert Cam Lock(①) into the mounting positions of Bottom Panel of Upper Cabinet(I), Middle Shelf(F), Shelf(E) and Left Panel(C).

Lock by turning Cam Lock(①) with Screwdriver(②②).

Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

6.2) Repeat the process from Step 6.1 to assemble the Right Panel(D) to Top Panel of Bottom Cabinet(J), Middle Shelf(F) and Shelf(E)

 Step 7

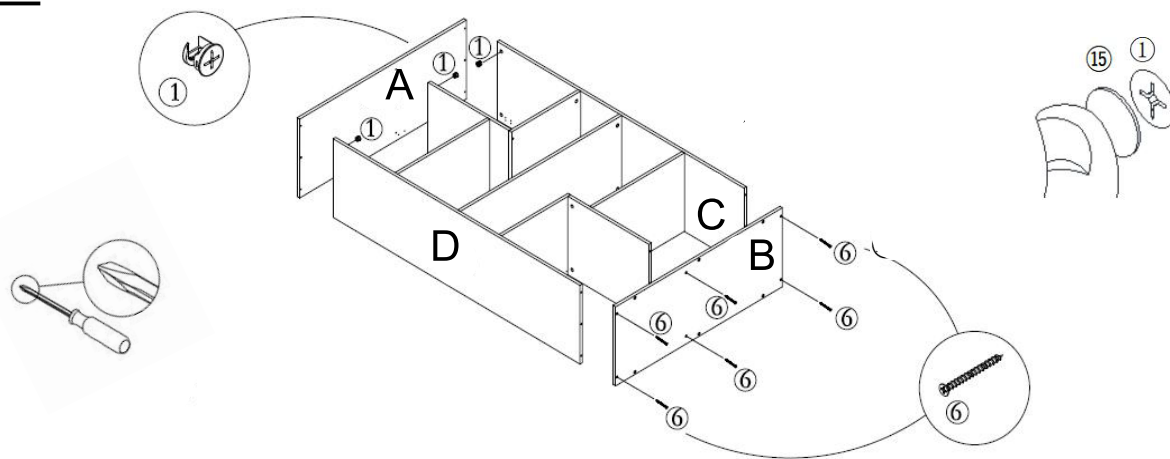


Insert Wooden Dowel on Upper Divider Panel(G), Left Panel(C) and Right Panel(D) into the mounting positions on Top Panel(A), and Insert Cam Bolt on Top Panel(A) into the mounting positions on Upper Divider Panel(G), Left Panel(C) and Right Panel(D), then Insert Cam Lock(①) into the mounting positions of Top Panel(A), Upper Divider Panel(G), Left Panel(C) and Right Panel(D).

Lock by turning Cam Lock(①) with Screwdriver(②②).

Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).


Insert Wooden Dowel on Bottom Divider Panel(H), Left Panel(C) and Right Panel(D) into the mounting positions on Bottom Panel(B), and Insert Cam Bolt on Bottom Panel(B) into the mounting positions on Bottom Divider Panel(H), Left Panel(C) and Right Panel(D), then attach Bottom Panel(B) to Bottom Divider Panel(H), Left Panel(C) and Right Panel(D) by using Screw(⑥) with Screwdriver(②②).

 Step 8

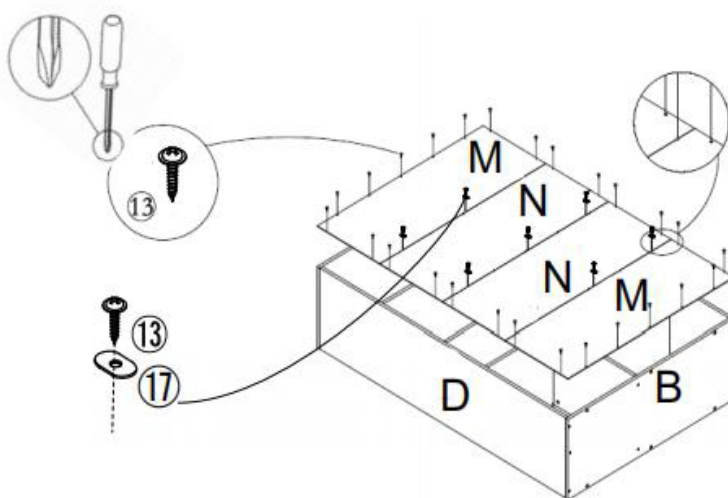


Attach Back Panel(M) and Middle Back Panel(N) to the frame of bookcase using Screw (⑬) and Metal Gasket(⑰) with Screwdriver(②②) like picture.

 Step 9

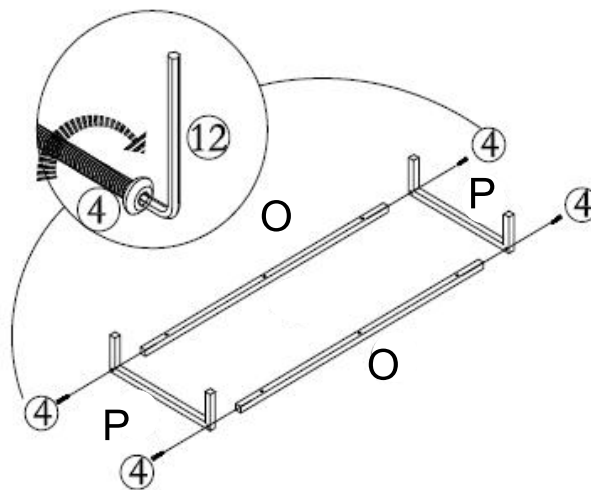


Attach Metal Frame(P) to Metal Tube(O) using Bolt(④) with Allen Wrench (⑫) as shown.

 Step 10

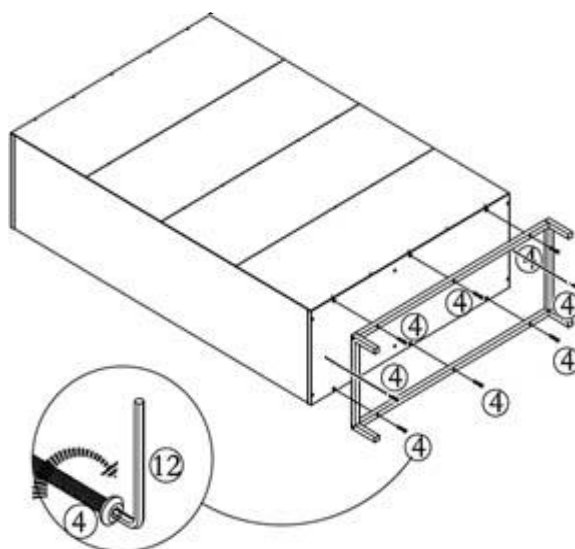


Attach Metal Tube(O) to Bottom Panel(B) using Bolt(④) with Allen Wrench (⑫) as shown.

 Step 11

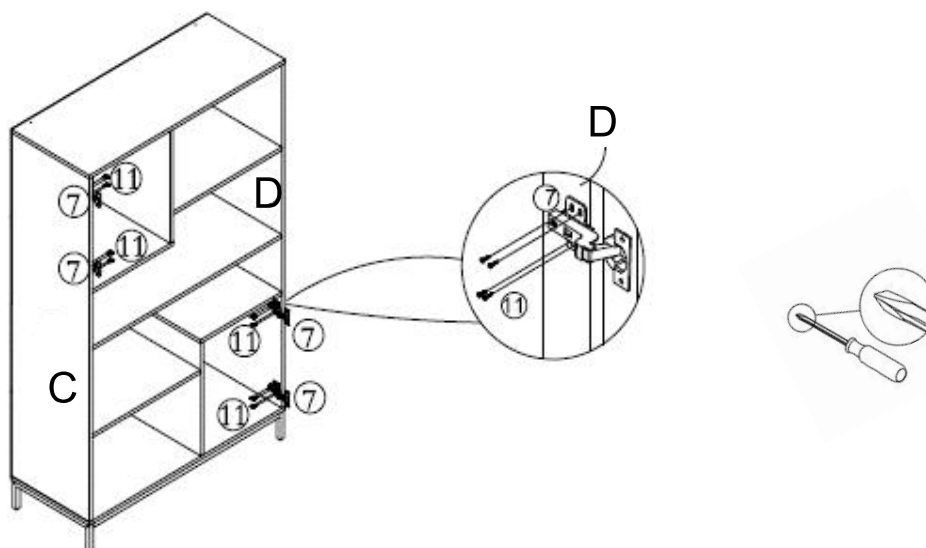

Attach Hinge(⑦) to Left Panel(C) using Screws(⑪) with Screwdriver(⑫⑫) as shown. Repeat the same process with Right Panel(D).

 Step 12



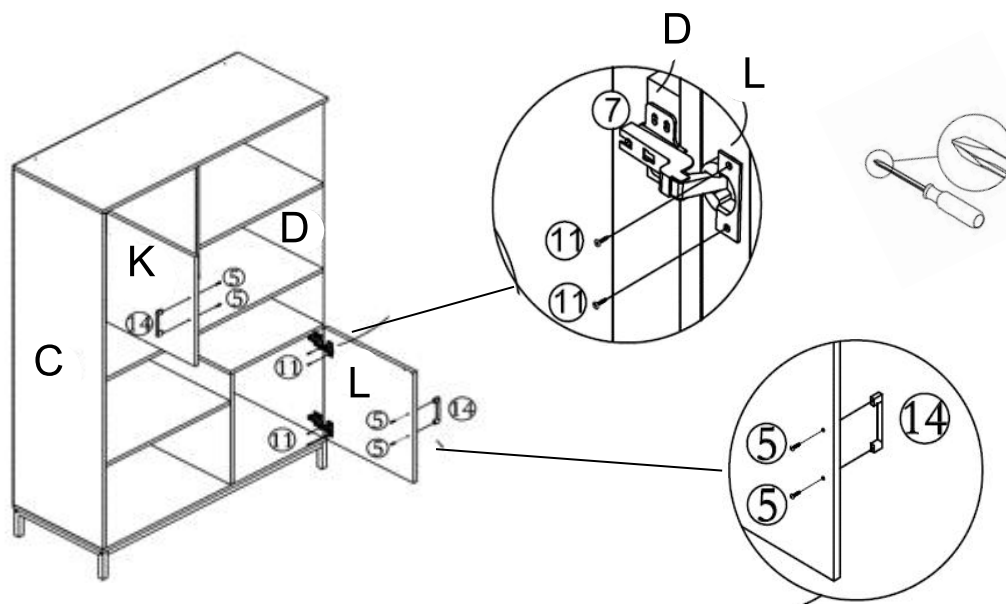


Attach Hinge(⑦) to Upper Door Panel(K) using Screws(⑪) with Screwdriver(②②) as shown.

Repeat the same process with Bottom Door Panel(L).



Attach Handle(⑭) to Upper Door Panel(K) using Bolt(⑤) with Screwdriver(②②).

   Repeat the same process to assemble Handle(⑭) to Bottom Door Panel(L)

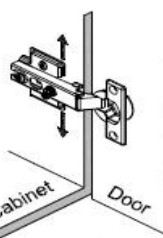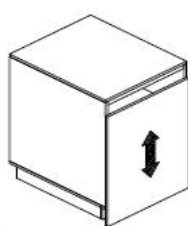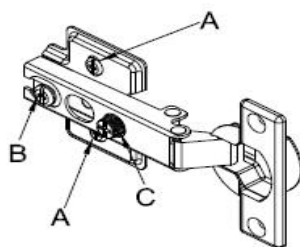



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

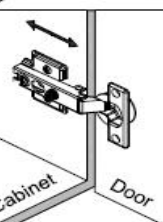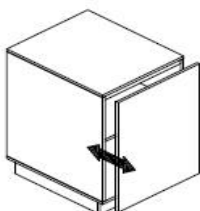

To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

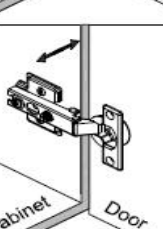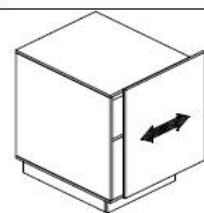

To adjust side ways.

 
Turning the screw "C" on BOTH hinges on each door.



WARNING



Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: **ALWAYS** secure this furniture to the wall using Cabinet Restraint Device.

See product instructions for more ways to help prevent furniture tip-over.

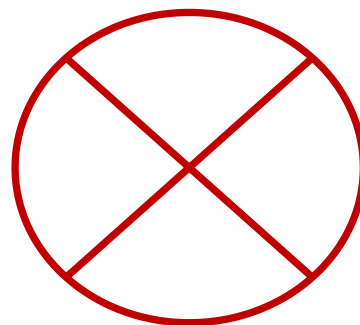

Usage For Cabinet Restraint Device:

  Step 13

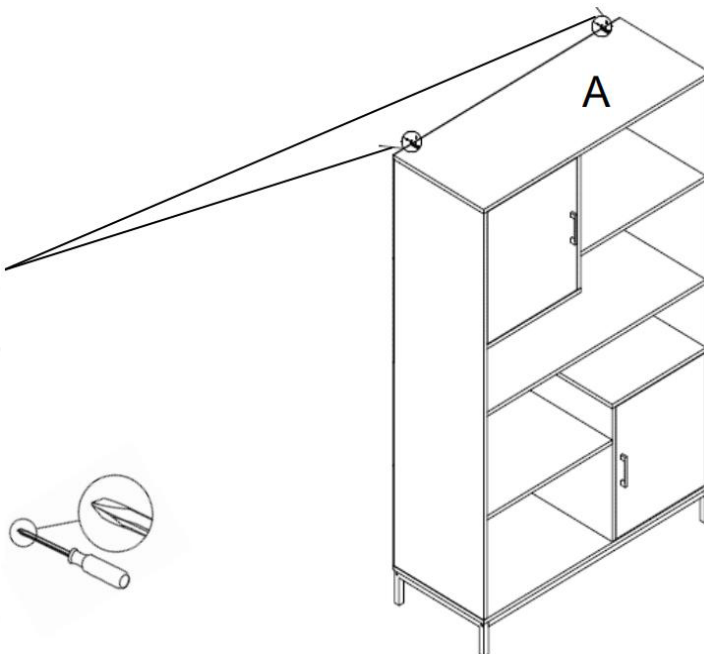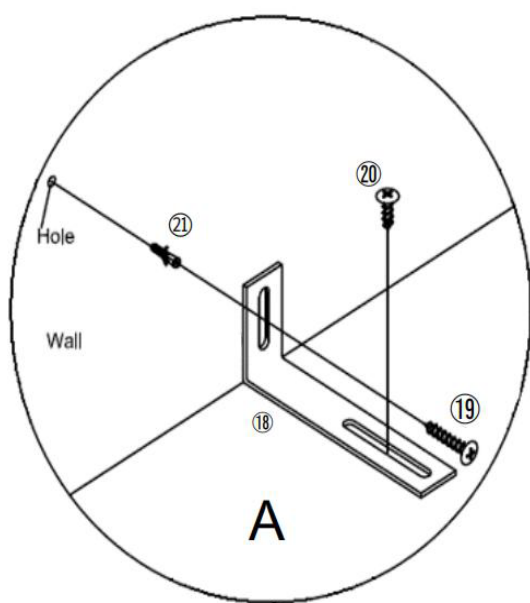

13.1) Use Power Drill(②③) Drill two mounting positions on wall at same height, insert Plastic Dowel(②①) into the mounting position with a Hammer(②④)(No provide).

13.2) Attach L-shape Metal Bracket(①⑧) to plastic Plastic Dowel(②①) using Screw(①⑨) with Screwdriver(②②). Note: The Metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.

13.3) Attach L-shape Metal Bracket(①⑧) to Top Panel(A) using Screw(②⑦) with Screwdriver(②②). Your Bookcase is ready for use.

This Bookcase can only be used on a flat, level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.