
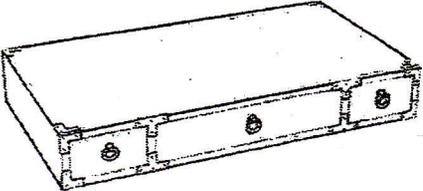
 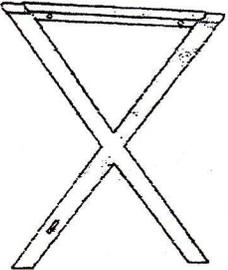



ASSEMBLY INSTRUCTION OF CAMPAIGN DESK

<p>1- Table top</p> 	<p>2- LEGS PAIR</p> 	<p>1- STRETCHER</p> 	<p>6- SCREWS</p>  <p>1- L-end key</p> 
--	---	--	--

1. Keep the table top upside down on a clean surface.

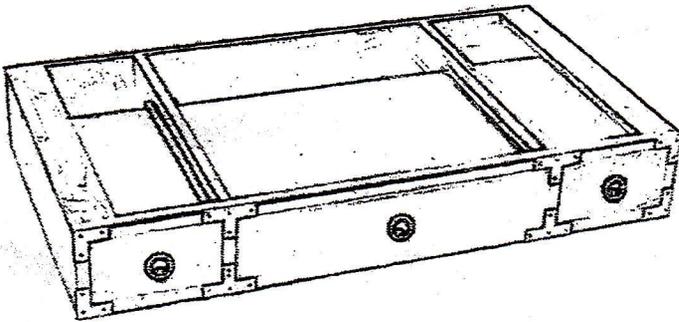

2. Fix screws on the front of both the legs, with the help of L-end key, as shown.

