


4'/5' Porch Swing



Assembly Guide

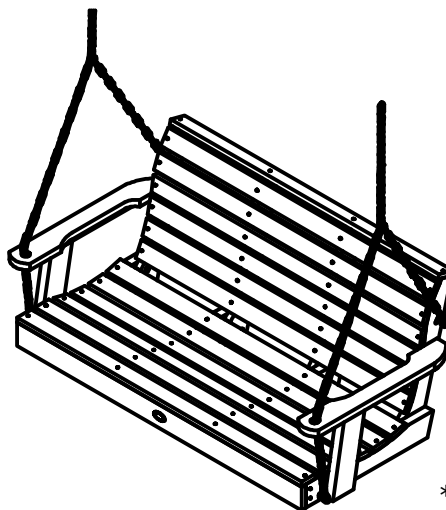

*Actual Style May Vary from
the One Pictured in this Guide

PORW1
PORW2


HARDWARE INCLUDED

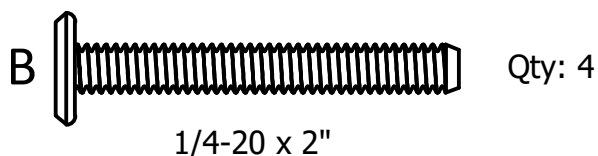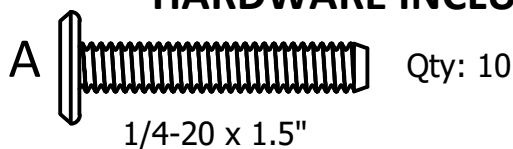

** Chain Attachment Kit

- 5/16-18 x 2" Eyebolt - Qty: 4
- 5/16-18 Nylon Lock Nut - Qty: 4
- 5/16 Flat Washer - Qty: 4
- HDK-CHAINLONG - Qty: 2
- HDK-CHAINSHORT - Qty: 2
- Chain Link Connector - Qty: 2

TOOLS INCLUDED

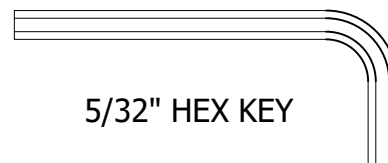


5/32" HEX KEY

CUSTOMER SUPPLIED TOOLS

1/2" or 13mm Wrench/Socket


IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.

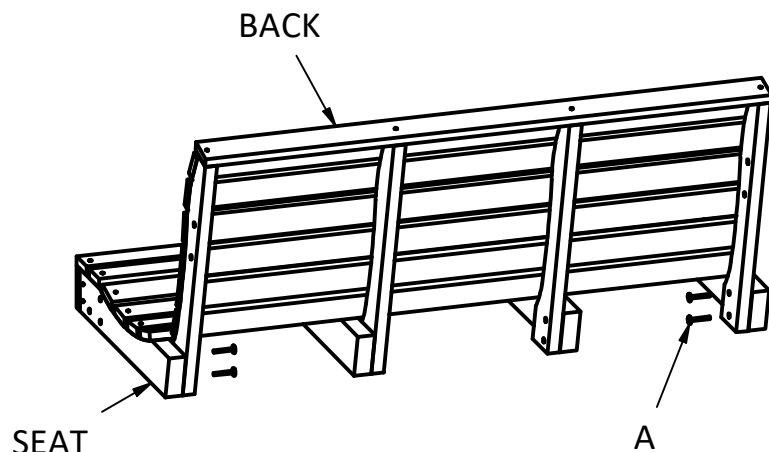


STEP 1 BACK OUTER

Attach Back to Seat using
(2) A Bolts on each side.

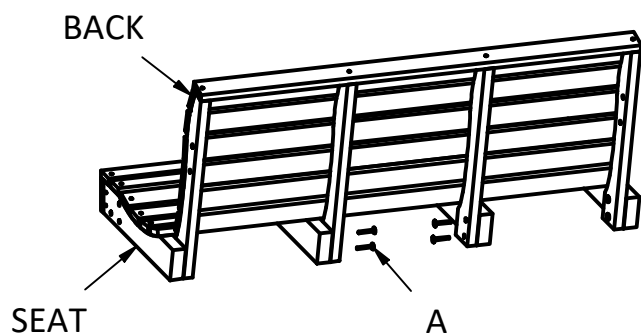

STEP 2 BACK INNER

Attach Back to Seat
using (2) A bolts on each side.

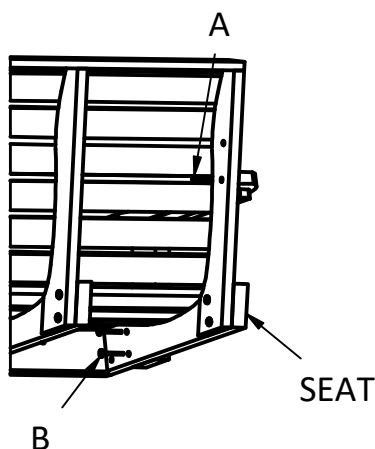


STEPS 3-4-5 ARMS

Attach Arm to Back
using (1) A Bolt.

Attach Arm to Seat
using (2) B Bolts.

Repeat on other Side.

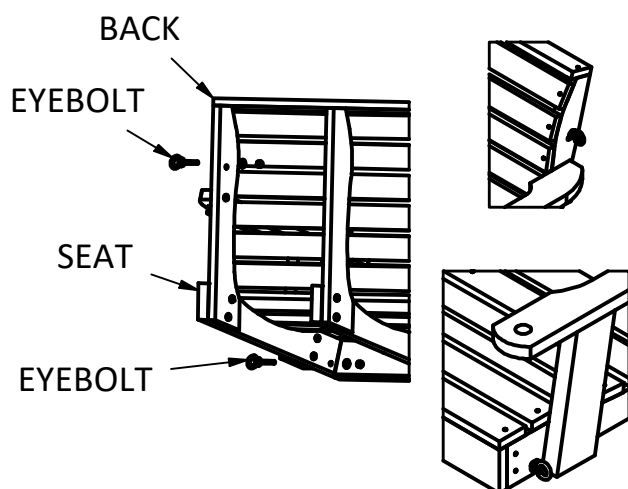


STEP 6-7-8 CHAIN BOLT

Attach Eyebolt to Back.
Insert bolt through Back, attach
washer and nut on inside of back.
Align Eyebolt as shown and tighten.

Attach Eyebolt to Seat.
Insert bolt through Seat, attach
washer and nut on inside of Seat.
Align Eyebolt as shown and tighten.

Repeat on other side.

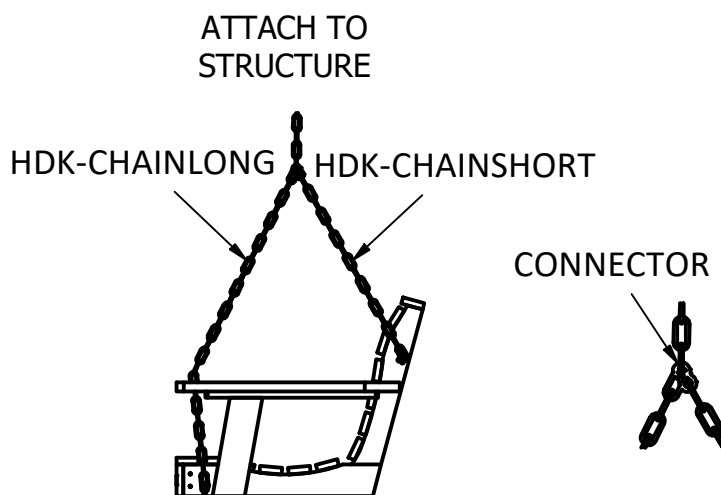

STEP 9-10-11-12 CHAIN ATTACHMENT

Attach HDK-CHAINSHORT to back Eyebolt, attach Chain
Link Connector to other end of chain.

Attach HDK-CHAINLONG to seat Eyebolt, guide chain
through hole in Arm and attach to other end of Chain
Link Connector so that arm is level as shown.

Repeat on other side.

Attach ends of HDK-CHAINLONG to structure.