

1. Remove packaging
2. Place casters in holes in 5 star base using pistons attached to caster
3. Put height adjustable piston into centre hole of five star base ensuring metal half is pointing upwards and the black half is inside the five star base
4. Put the seat on top of the piston by inserting the top of the piston into the hole in the bracket underneath the chair
5. Sit on chair