

Assembly & Installation Instructions

CAUTION: Read Instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

LA000164

WARNING -If any Special Control Devices are used with this Fixture, Follow the instructions Carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a Qualified Electrical Contractor.

WARNING -This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

CAUTION - All glass is fragile , use care when handling Glass component(s) and or Lamp(s).

WARNING -To comply with the National Electrical Code and Underwriters Laboratories requirements, when installed outdoors, or in wet locations, the edge of the wall plate coming in contact with the mounting surface, must be sealed with a latex waterproof caulking to prevent water from entering the outlet box.



ASSEMBLY STEPS:

PASOS PARA ENSAMBLAR:

1. C,B _____ A
2. J _____ K 
3. D,E _____ B
4. P _____ N

PRODUCT FUNCTION DEBUGGING:

1. F,G,H _____ I

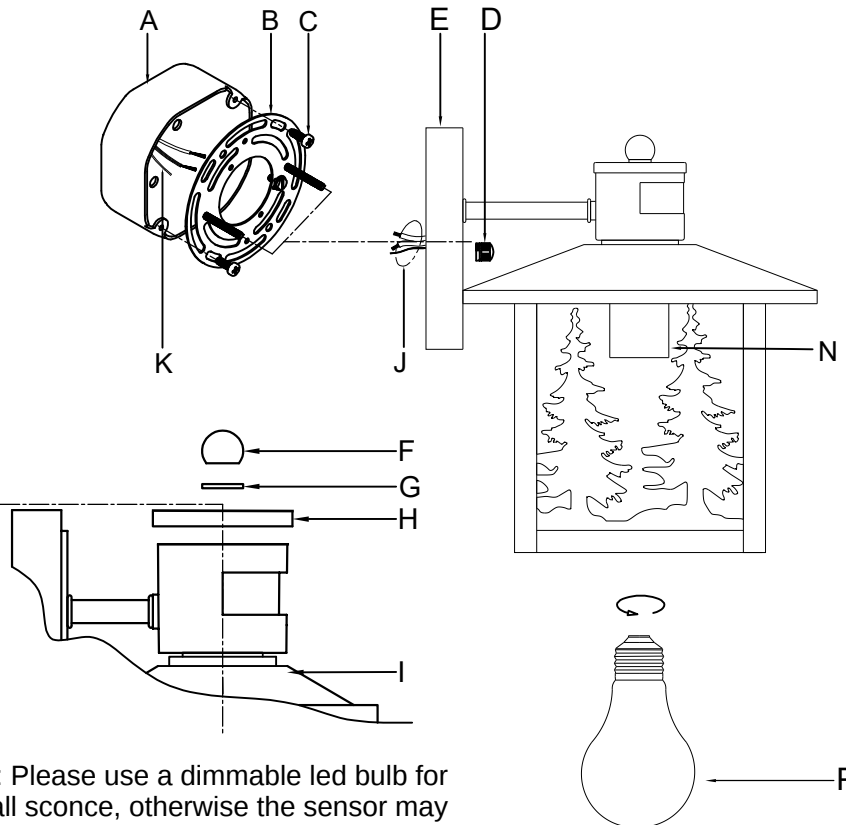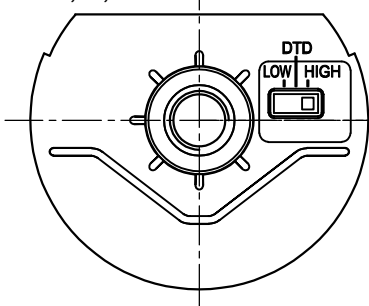

Product Function:


Auto High Mode: Default Factory Setting. Automatically turn on 30% brightness at dusk, 100% brightness when motion is detected, then back to 30% brightness after 120s without motion sensing.

Auto Low Mode: 1) Remove the knob and cover of the sensor on the top of the light, toggle the switch to from Auto High Mode to Auto Low Mode; 2) Keep off at dusk, automatically turn on 100% brightness once motion is detected, then turn off after 120 seconds when no motion is detected.

Manual Override Mode: 1) Change the Auto High/Low Mode to Manual Override Mode by pressing the wall switch "off-on" 1 time within 0.5-2 seconds; 2) Keep on 100% brightness at night for 8 hours, then automatically turn off at dawn and back to Auto High/Low Mode.


DTD mode: 1) Turn on the lighting fixture at full brightness at dusk and turn off at dawn automatically.

Notes: 1) To ensure the above function works properly, please keep the wall switch always "ON" after installation.
2) When turn off the wall switch for more than 10 seconds, it will be back to Auto High/Low Mode.

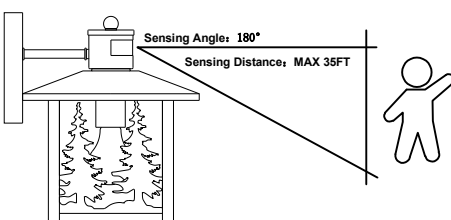

NOTE: Please use a dimmable led bulb for this wall sconce, otherwise the sensor may malfunction and cause the wall sconce to stay on for long periods of time even during the day.

After securing fixture to the wall it is recommended that the gap between the wall and the fixture backplate be sealed on the top and both sides, with a good quality waterproof caulk or silicone sealant (NOT INCLUDED)-see Drawing 1.

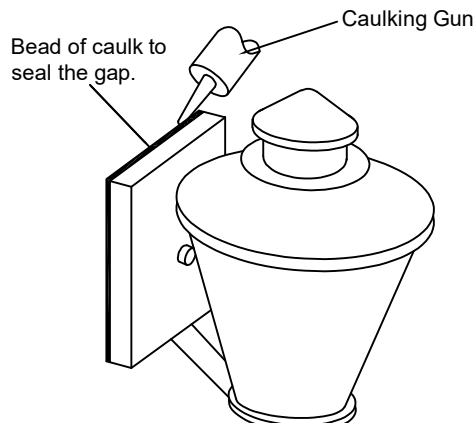

**A,P,K
(NOT FURNISHED)
(NO INCLUIDA)
(NON FOURNIE)**

