 


DRESSER

Assembly Instructions - Please keep for future reference

N704P263505K

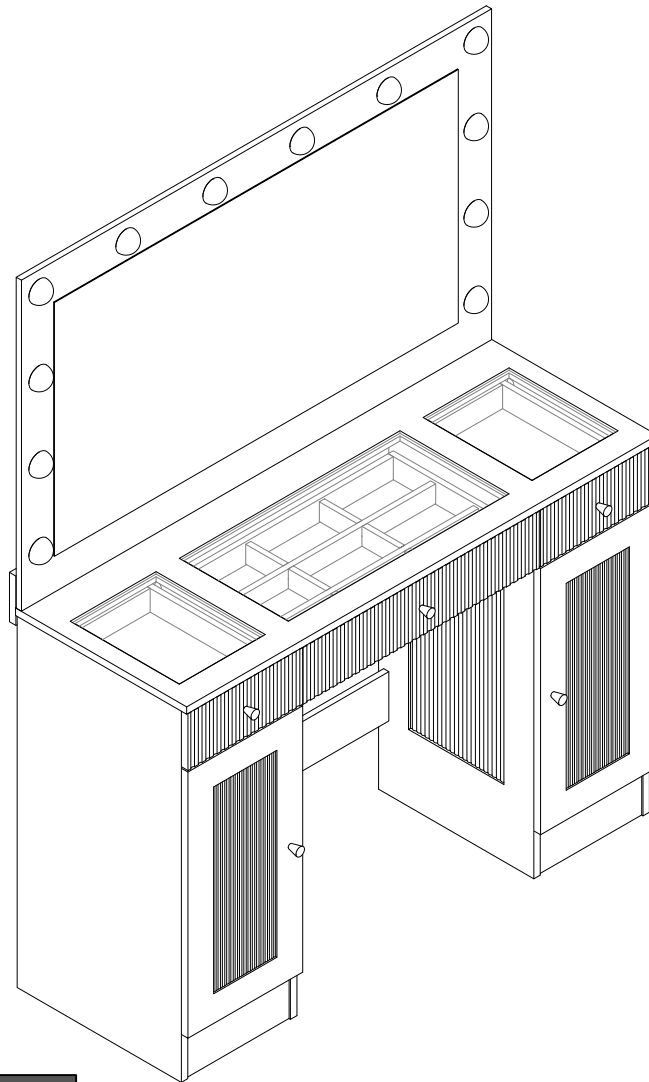

Dimensions


Width-43inch

Depth-16.3inch+11inch

Height-56.7inch

Important – Please read these instructions fully before starting assembly

 Issue 1 - 24/12/20

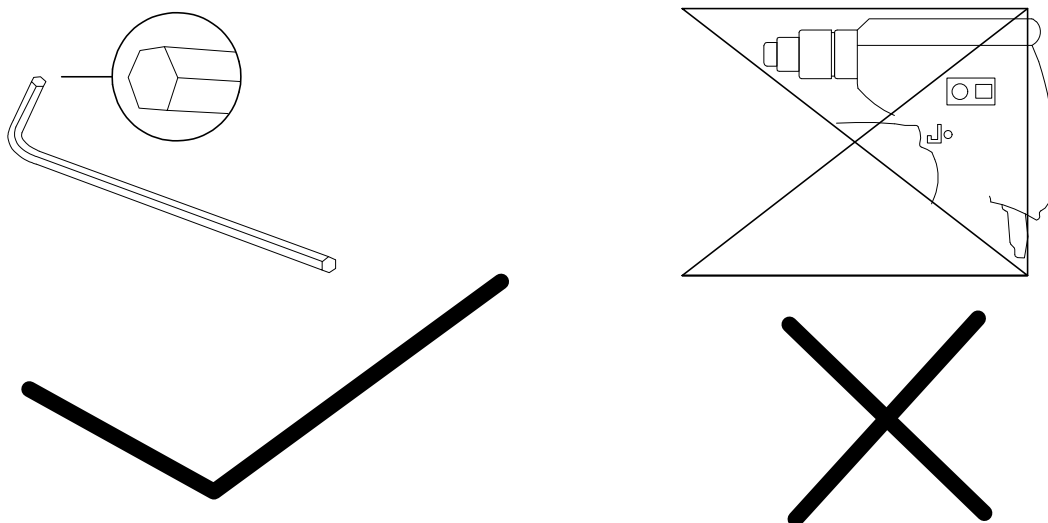

(DE): Verwenden Sie beim Anbringen der Tischplatte keinen Bohrer! Bitte verwenden Sie die im Paket enthaltenen Werkzeuge.

(UK): Do not use an electric drill when installing the desktop! Please use the tools provided in the package.

(FR): Ne pas utiliser de perceuse électrique lors de l'installation du plateau de table ! Veuillez utiliser les outils fournis dans l'emballage.

(IT): Non utilizzare un trapano elettrico durante l'installazione del piano del tavolo! Si prega di utilizzare gli strumenti forniti nella confezione.

(ES): ¡No utilice un taladro eléctrico al instalar el escritorio! Por favor, use las herramientas incluidas en el paquete.

(NL): Gebruik geen elektrische boormachine bij het monteren van het tafelblad! Gebruik de meegeleverde gereedschappen uit de verpakking.

(SE): Använd inte en elektrisk bormaskin vid montering av bordsskivan! Använd de verktyg som medföljer i förpackningen.

(PL): Nie używaj wiertarki elektrycznej podczas montażu blatu! Użyj narzędzi dołączonych do opakowania.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

 
 
 
 
 
 
 
 
 
 
 
 
 
 
Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

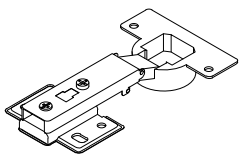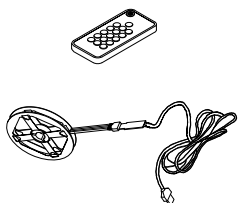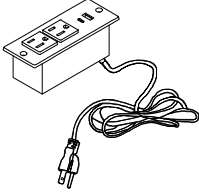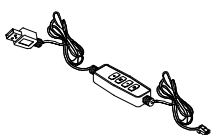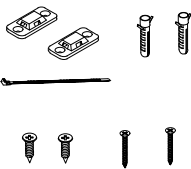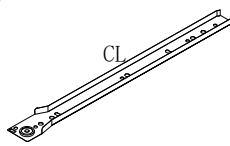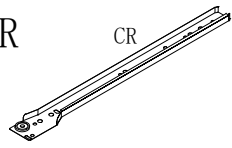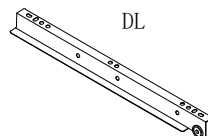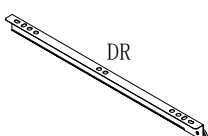(A)  Cam Bolt x42	(B)  Cam Lock x42	(C)  3.5*14 Screw x50	(D)  6*40 Screw x9
(E)  6*23 Screw x4	(F)  Hinge x4	(G)  handle x5	(H)  4*18 Screw x5
(I)  Wooden tenon x8	(J)  Light belt x1	(K)  Plate sales x8	(L)  Socket x1
(M) M-1  Light bulb x12	(N)  power cord x1	(O)  4*35 Screw x12	(P)  Prevent falling accessories x2
M-2  The screw on the light bulb x12			
CL  Runner300mm x3	CR  Runner300mm x3	DL  Runner300mm x3	DR  Runner300mm x3
 bolt driver x1	 6-point screwdriver x1		

  Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).

 
EN_ It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

FR_ Il est parfois nécessaire d'ajuster les charnières pour un meilleur alignement des portes. Servez-vous des instructions ci-dessous comme guide.

ES_ Puede que sea necesario ajustar los quicios de forma que se alineen las puertas. Use las instrucciones que aparecen debajo como guía.

DE_ Möglicherweise müssen Sie die Scharniere so einstellen, dass die Türen ausgerichtet sind. Verwenden Sie die nachstehenden Anweisungen als Leitfaden.

IT_ Potrebbe essere necessario regolare le cerniere in modo che le porte siano allineate. Per fare ciò attenersi alle istruzioni sottostanti.

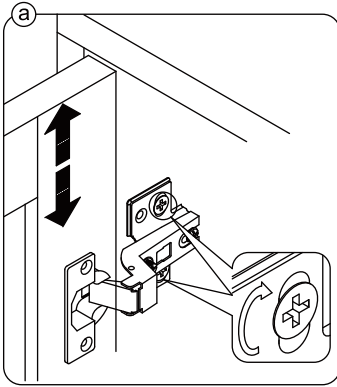


EN_ To adjust the door vertically loosen the screw as shown and move up and down as needed.

FR_ Si vous souhaitez régler la porte **verticalement**, desserrez la vis comme indiqué et déplacez la porte de haut en bas selon les besoins.

ES_ Para ajustar la puerta **verticalmente** afloje el tornillo tal y como se muestra y muévelo hacia arriba o hacia abajo según sea necesario.

DE_ Um die Tür **vertikal** auszurichten, lösen Sie die Schraube wie abgebildet und bewegen Sie sie nach Bedarf nach oben oder nach unten.

 IT_ Per allineare la porta **verticalmente** allentare la vite come mostrato e spostarla in alto o in basso secondo necessità.

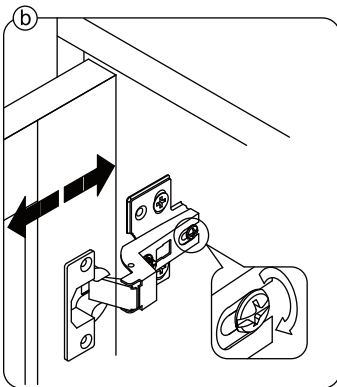


EN_ To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

FR_ Si vous souhaitez ajuster l'**écart** entre la porte et le cadre principal, tournez la vis dans le sens des aiguilles d'une montre ou dans le sens inverse, si nécessaire.

ES_ Para ajustar el **espacio** desde la puerta al marco principal, gire el tornillo en sentido horario o antihorario, según se necesite.

DE_ Um den **Abstand** von der Tür zum Hauptrahmen auszurichten, drehen Sie die Schraube je nach Bedarf im oder gegen den Uhrzeigersinn.

 IT_ Per regolare lo **spazio** tra la porta e il telaio principale, avvitare o svitare la vite secondo necessità.

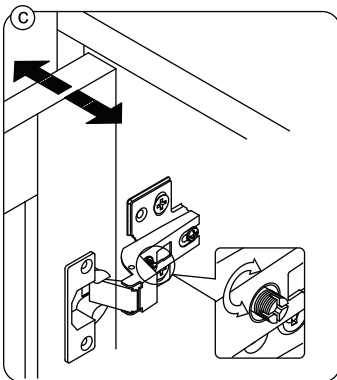


EN_ To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

FR_ Si vous souhaitez ajuster la porte **latéralement**, ajustez la vis comme indiqué en tournant dans le sens des aiguilles d'une montre ou dans le sens inverse des aiguilles d'une montre.

ES_ Para ajustar la puerta **lateralmente** ajuste el tornillo tal y como se muestra girándolo en sentido horario y antihorario.

DE_ Um die Tür **seitlich** auszurichten, stellen Sie bitte die Schraube wie abgebildet durch Drehen im oder gegen den Uhrzeigersinn ein.

 IT_ Per allineare la porta **lateralmente** regolare la vite come mostrato, avvitandola o svitandola.

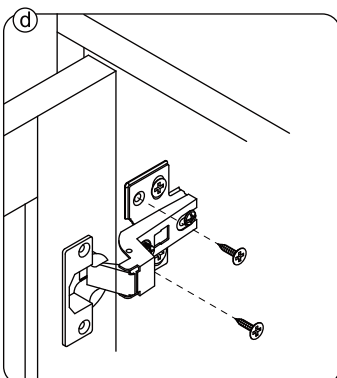

EN_ Please fix other screws

FR_ Merci de serrer les autres vis.

ES_ Fije los demás tornillos

DE_ Befestigen Sie bitte die anderen Schrauben

IT_ Fissare le altre viti

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

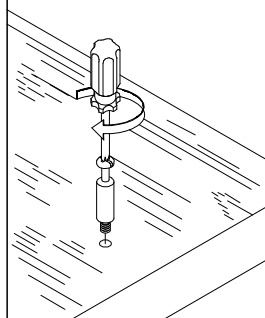

Step 2

Push the male camlock into the entry hole.

 2

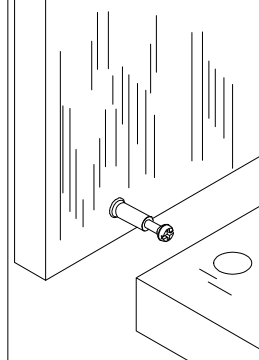


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

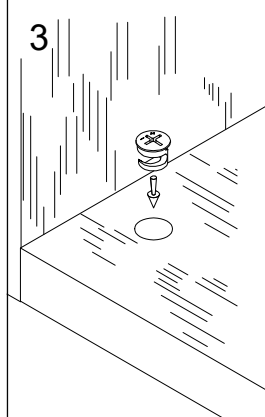


Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

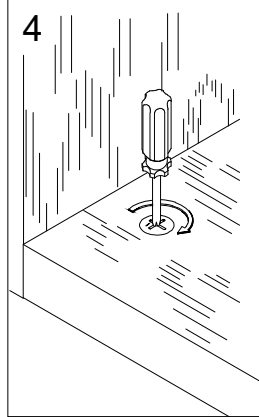


Tools required









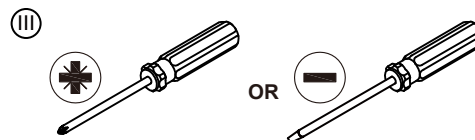 
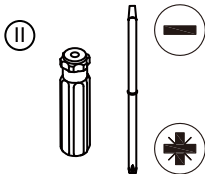 
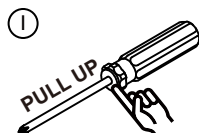 


Screwdrivers can be converted to Phillips and Slotted.






 
Assembly Instructions

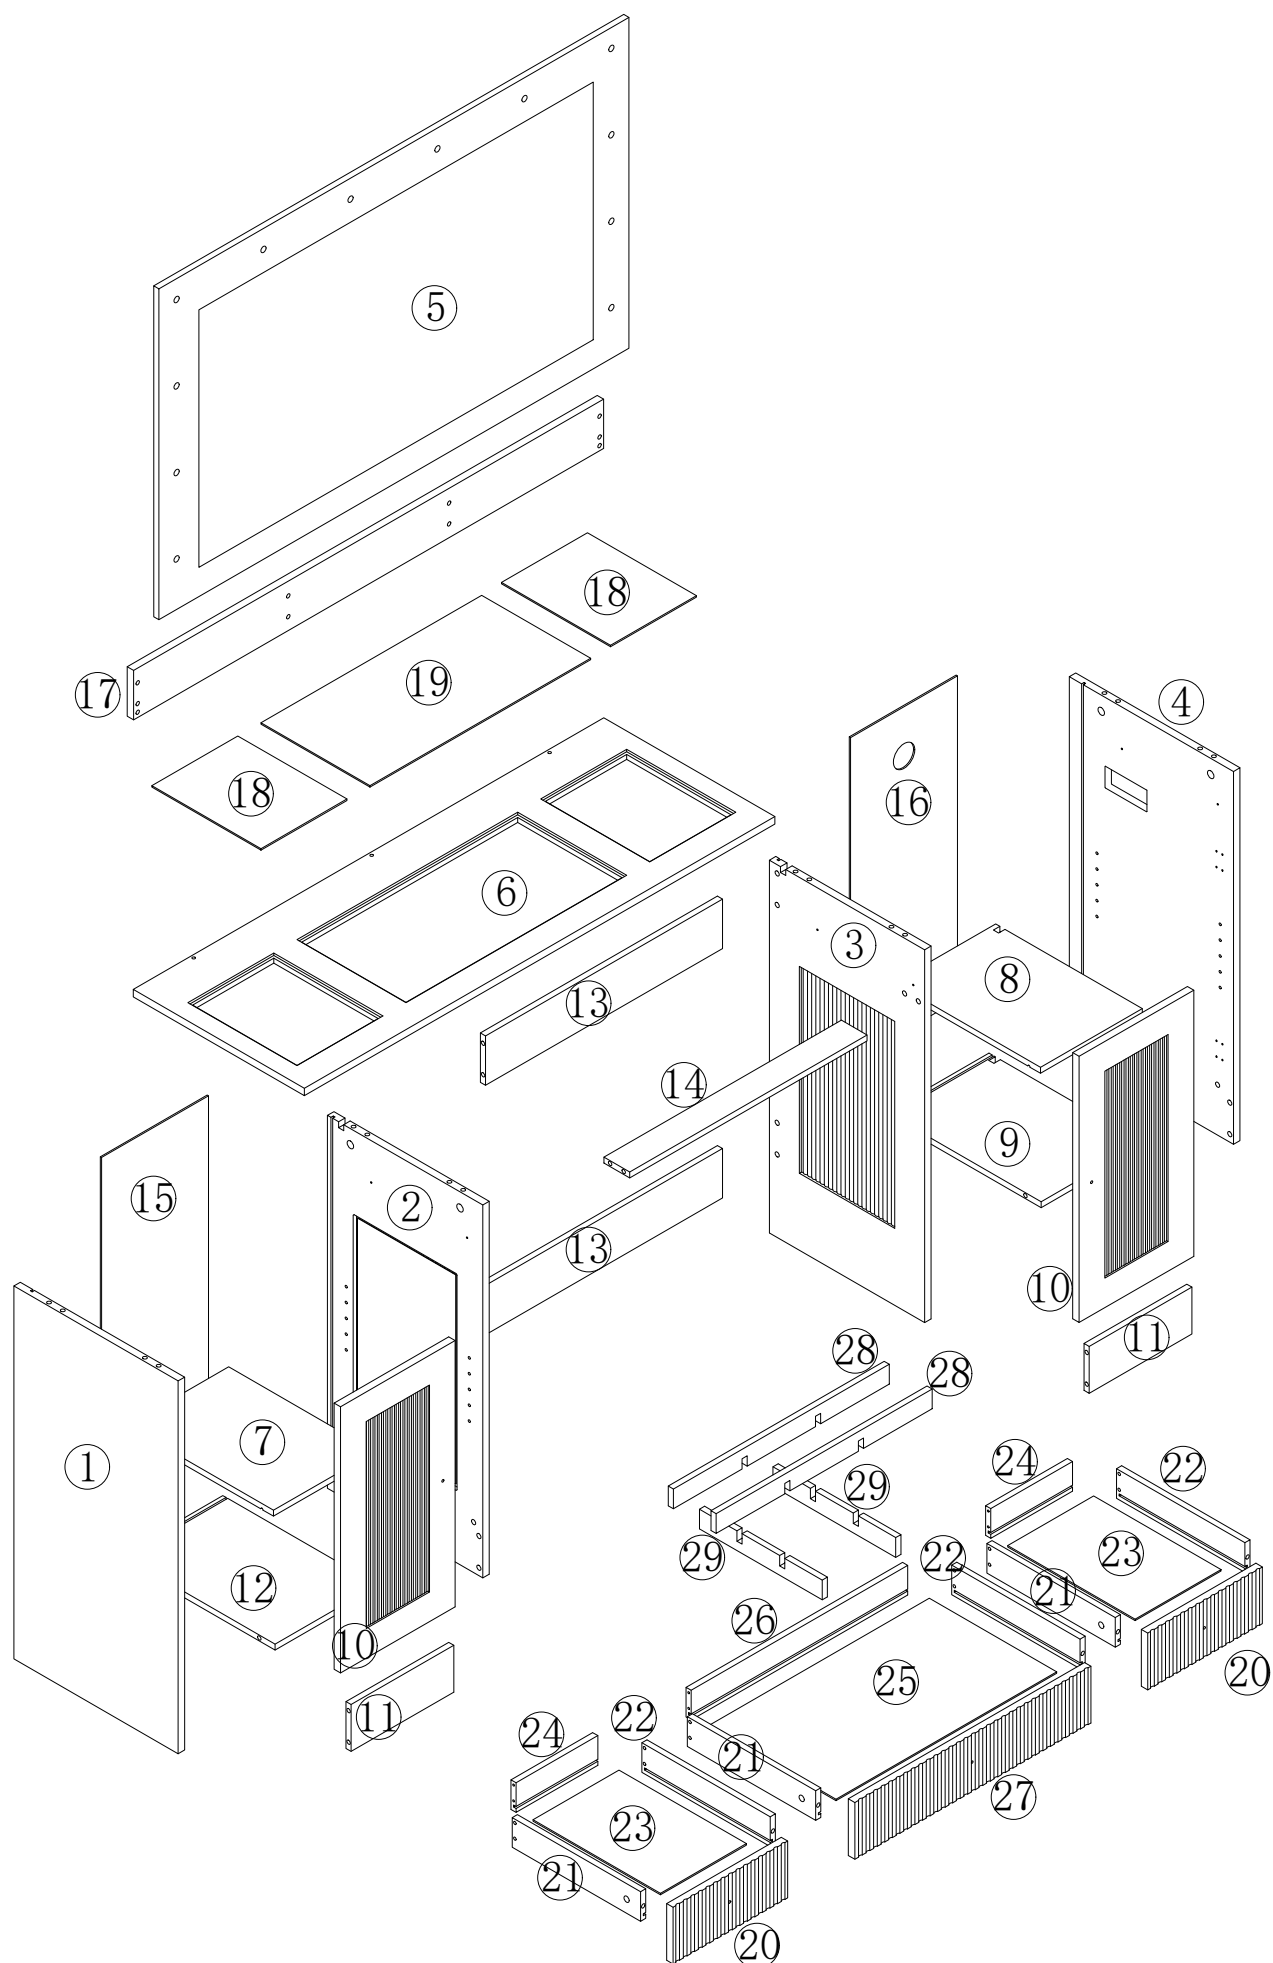

Assembly Instructions

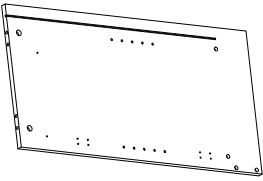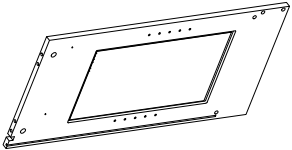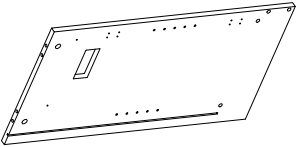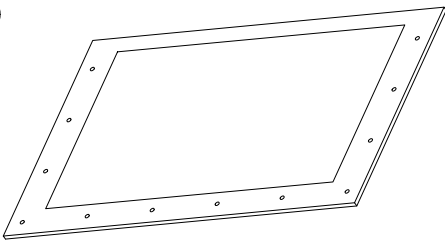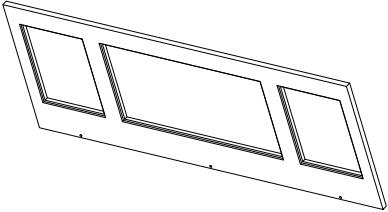           
①  755*384*15mm 1	⑧  340*237*12mm 1
②  755*363*15mm 1	⑨  362*240*12mm 1
③  755*363*15mm 1	⑩  539*268*15mm 2
④  755*384*15mm 1	⑪  240*95*12mm 2
⑤  1099*670*15mm 1	⑫  362*240*12mm 1
⑥  1100*400*15mm 1	⑬  554*100*12mm 2
⑦  340*237*12mm 1	⑭  555*60*12mm 1

      Assembly Instructions

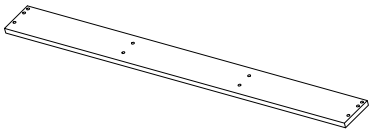⑮  657*250*3mm 1	⑳  300*60*12mm 3
⑯  657*250*3mm 1	㉑  298*201*3mm 2
⑰  1099*100*15mm 1	㉒  191*60*12mm 2
⑱  255*200*3mm 2	㉓  516*298*3mm 1
⑲  516*255*3mm 1	㉔  506*60*12mm 1
㉀  268*115*15mm 2	㉕  552*115*15mm 1
㉁  300*60*12mm 3	㉖  505*40*12mm 2
	㉗  287*40*12mm 2

Assembly Instructions

 
Step 1

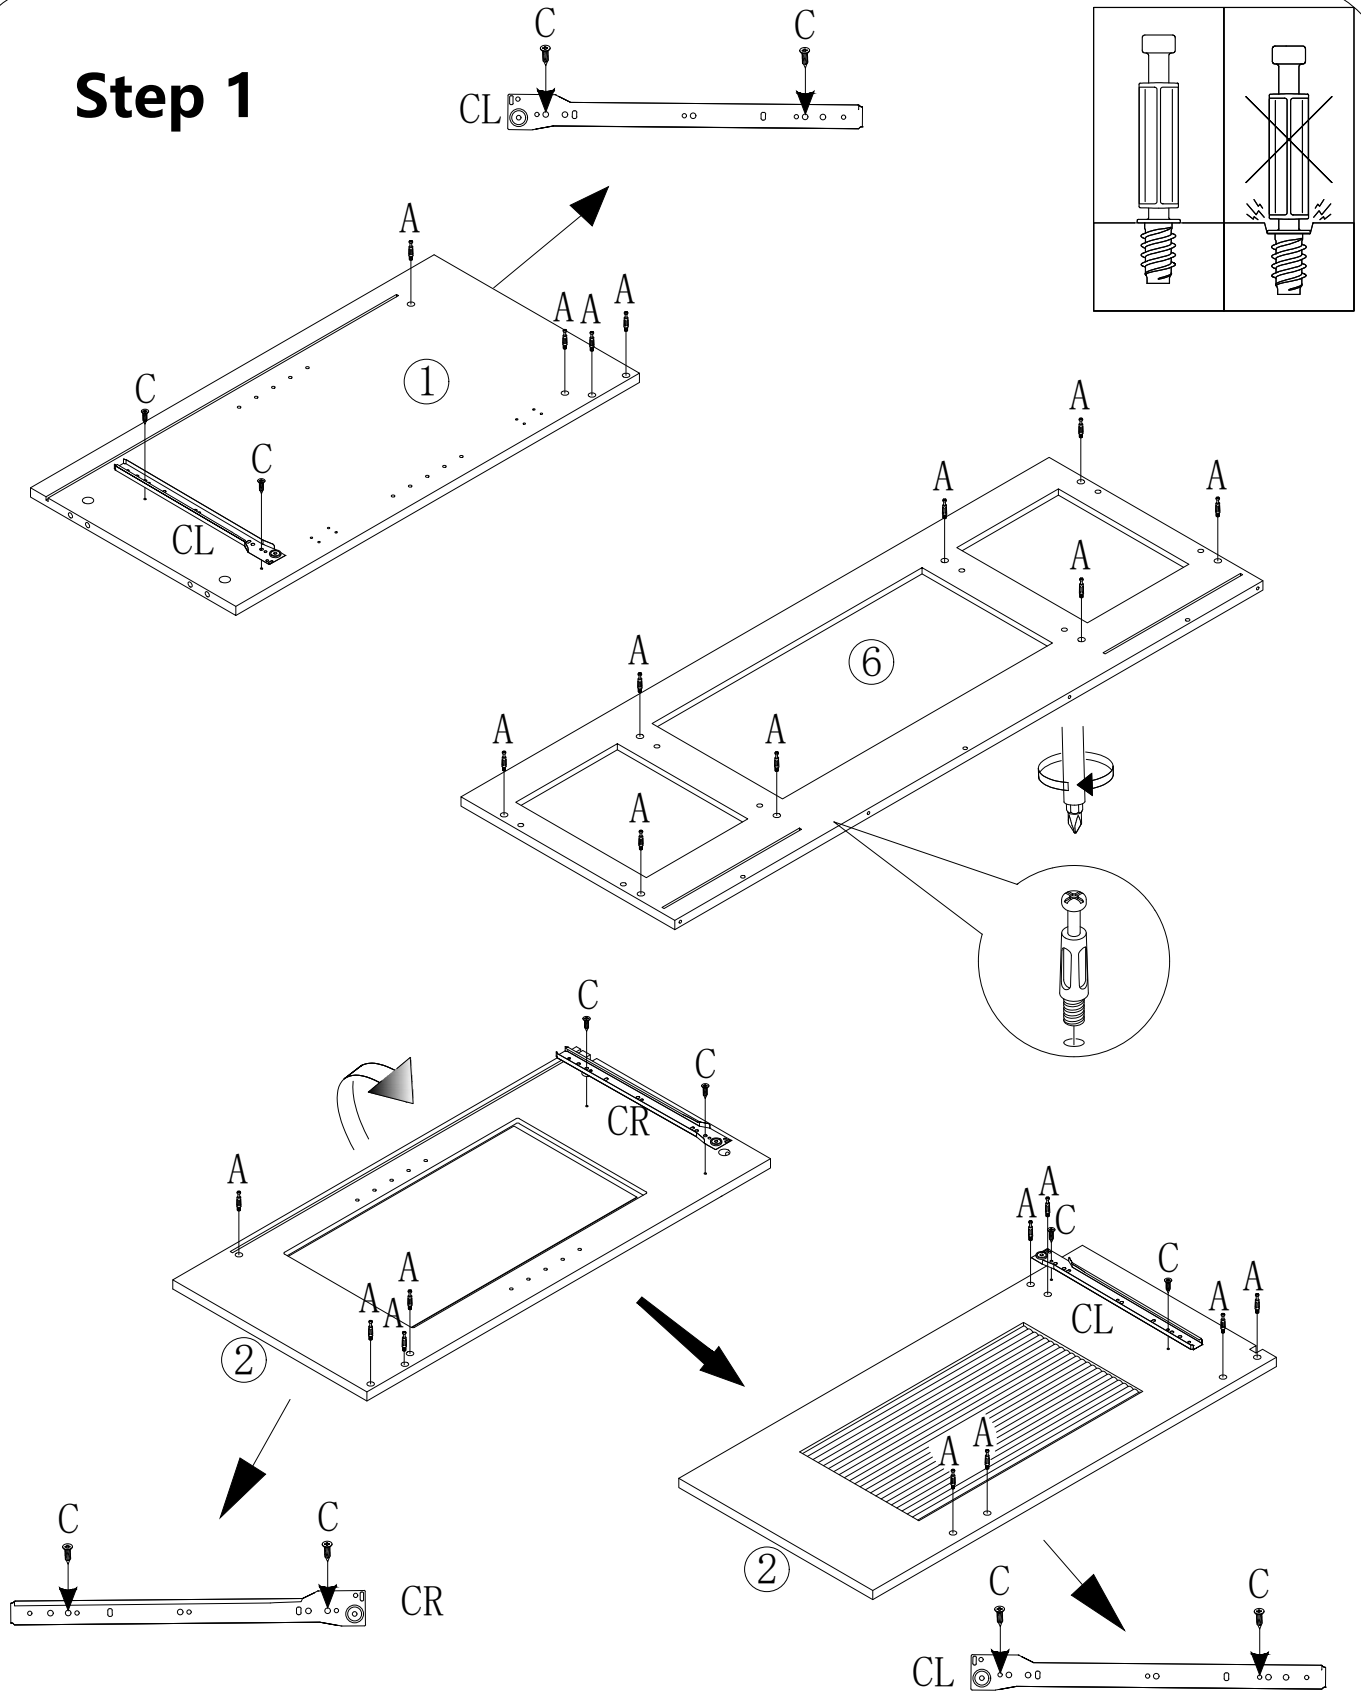

CL	CR	C	A
Runner300mm x2	Runner300mm x1	3.5*14 Screw x6	Cam Bolt x22

Assembly Instructions



 
Step 2

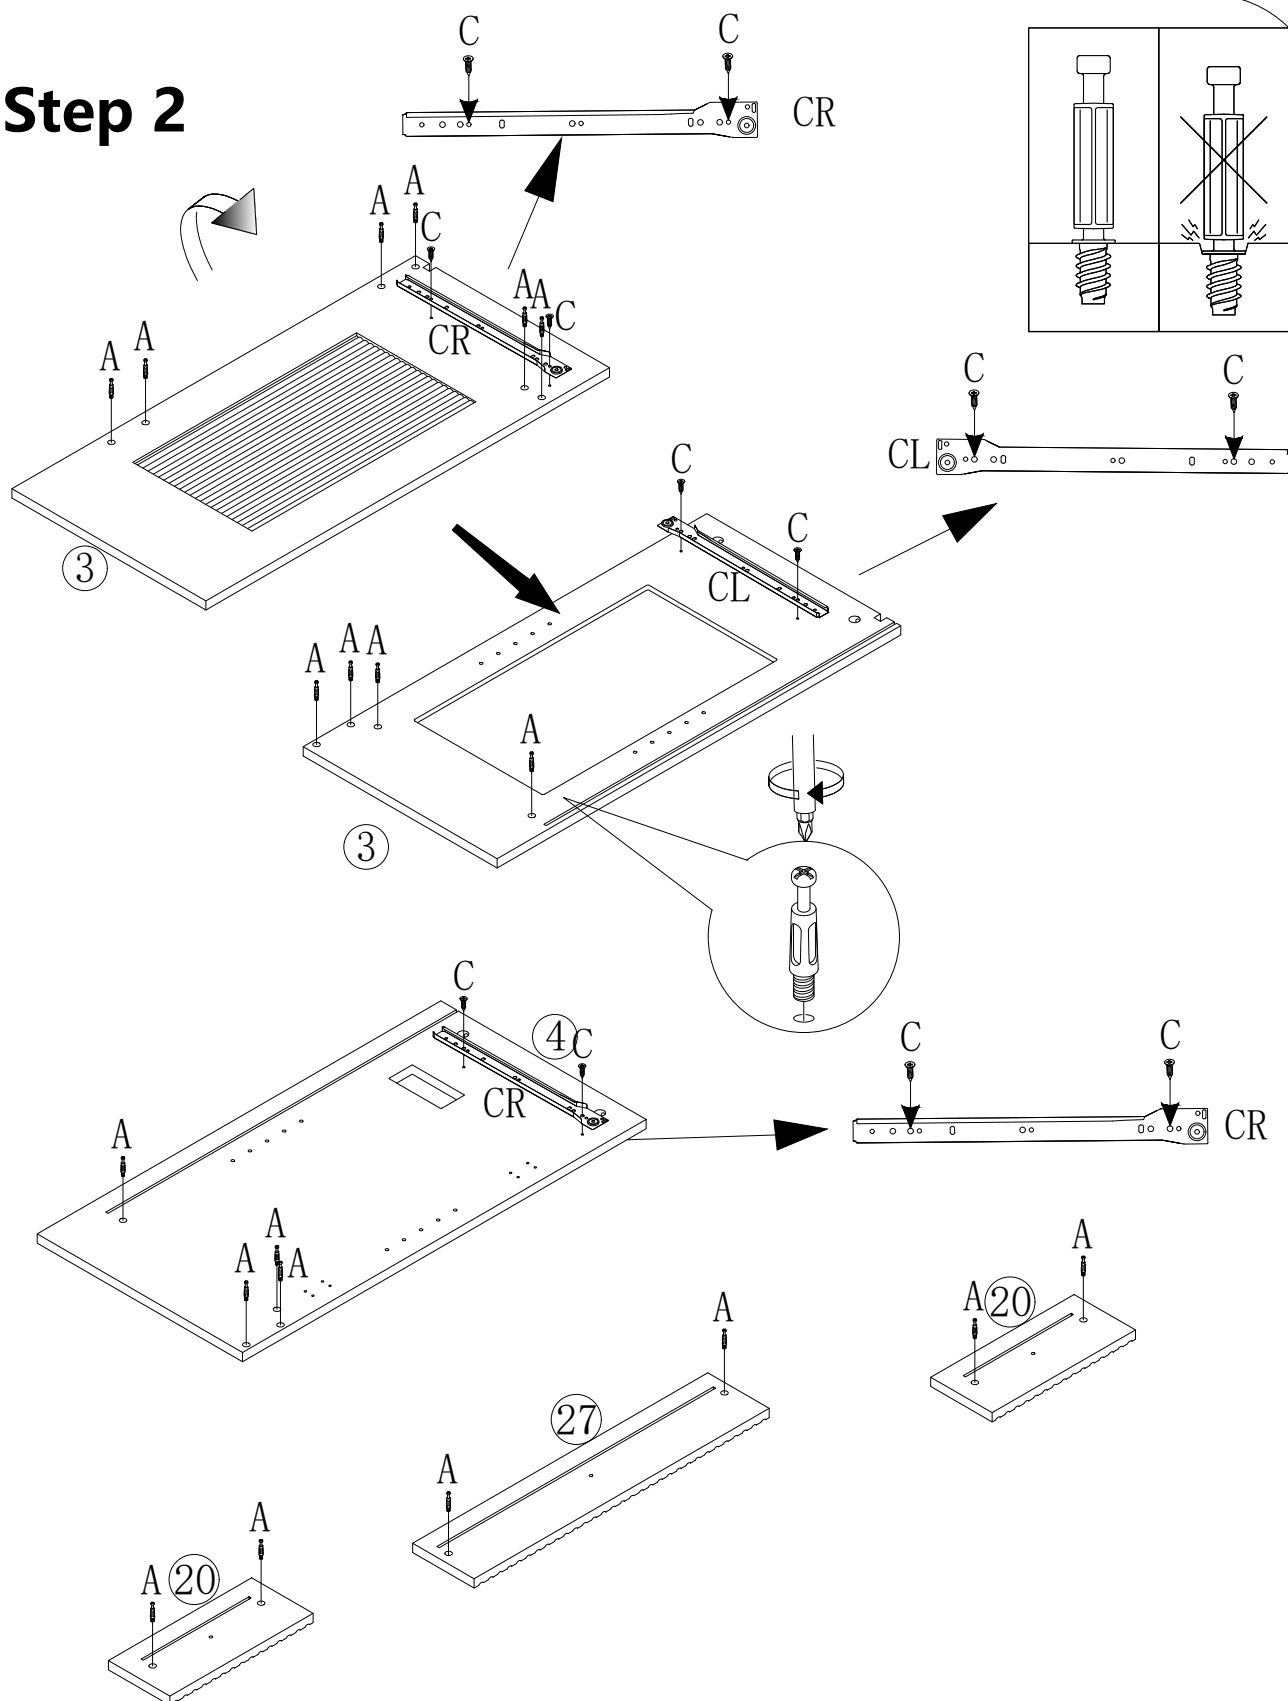

CL	CR	C	A
Runner300mm x1	Runner300mm x2	3.5*14 Screw x6	Cam Bolt x20

Assembly Instructions

   Step 3

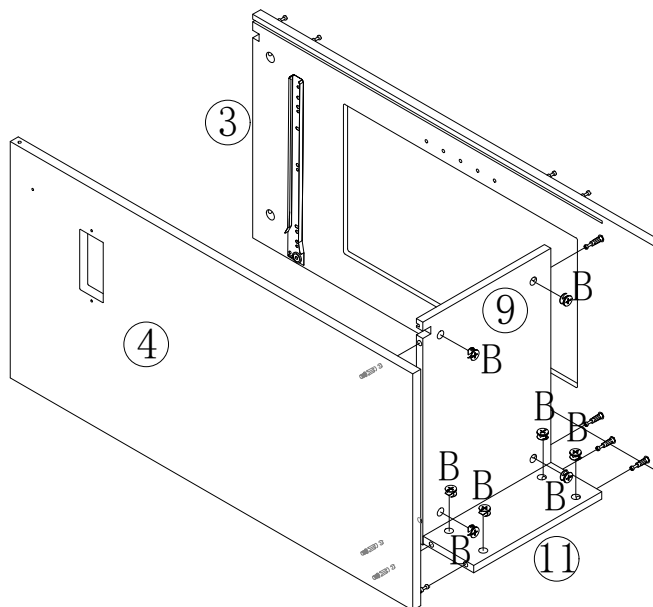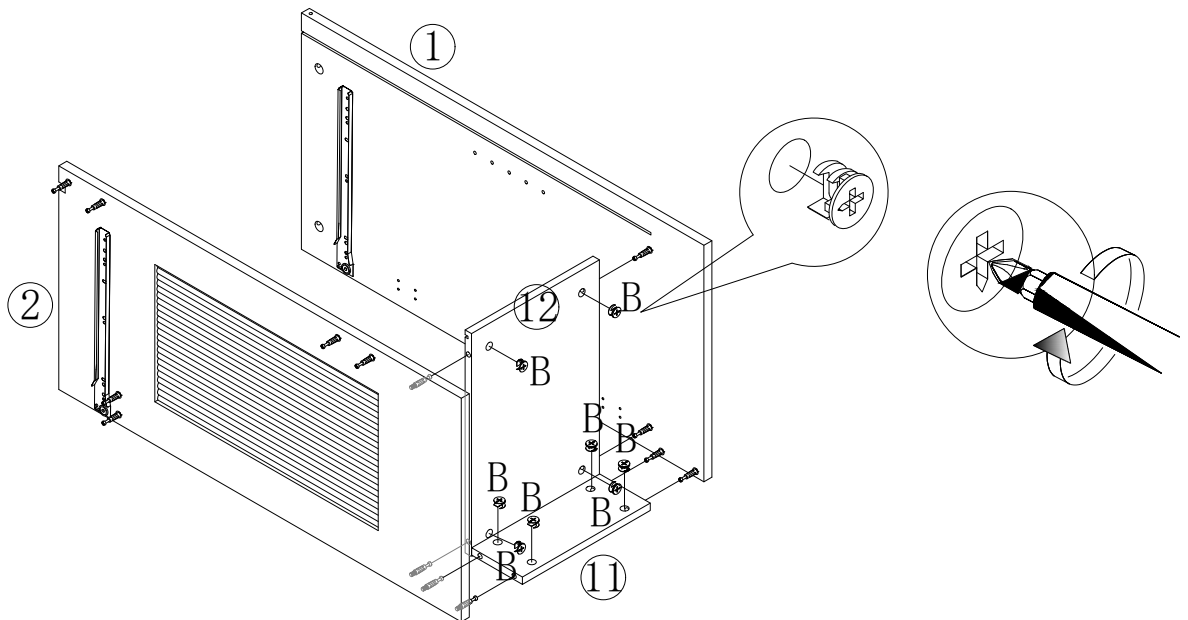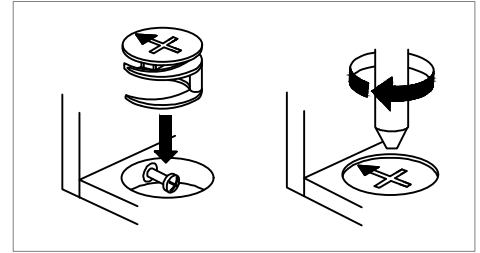


B



Cam Lock x16


Assembly Instructions

 Step 4

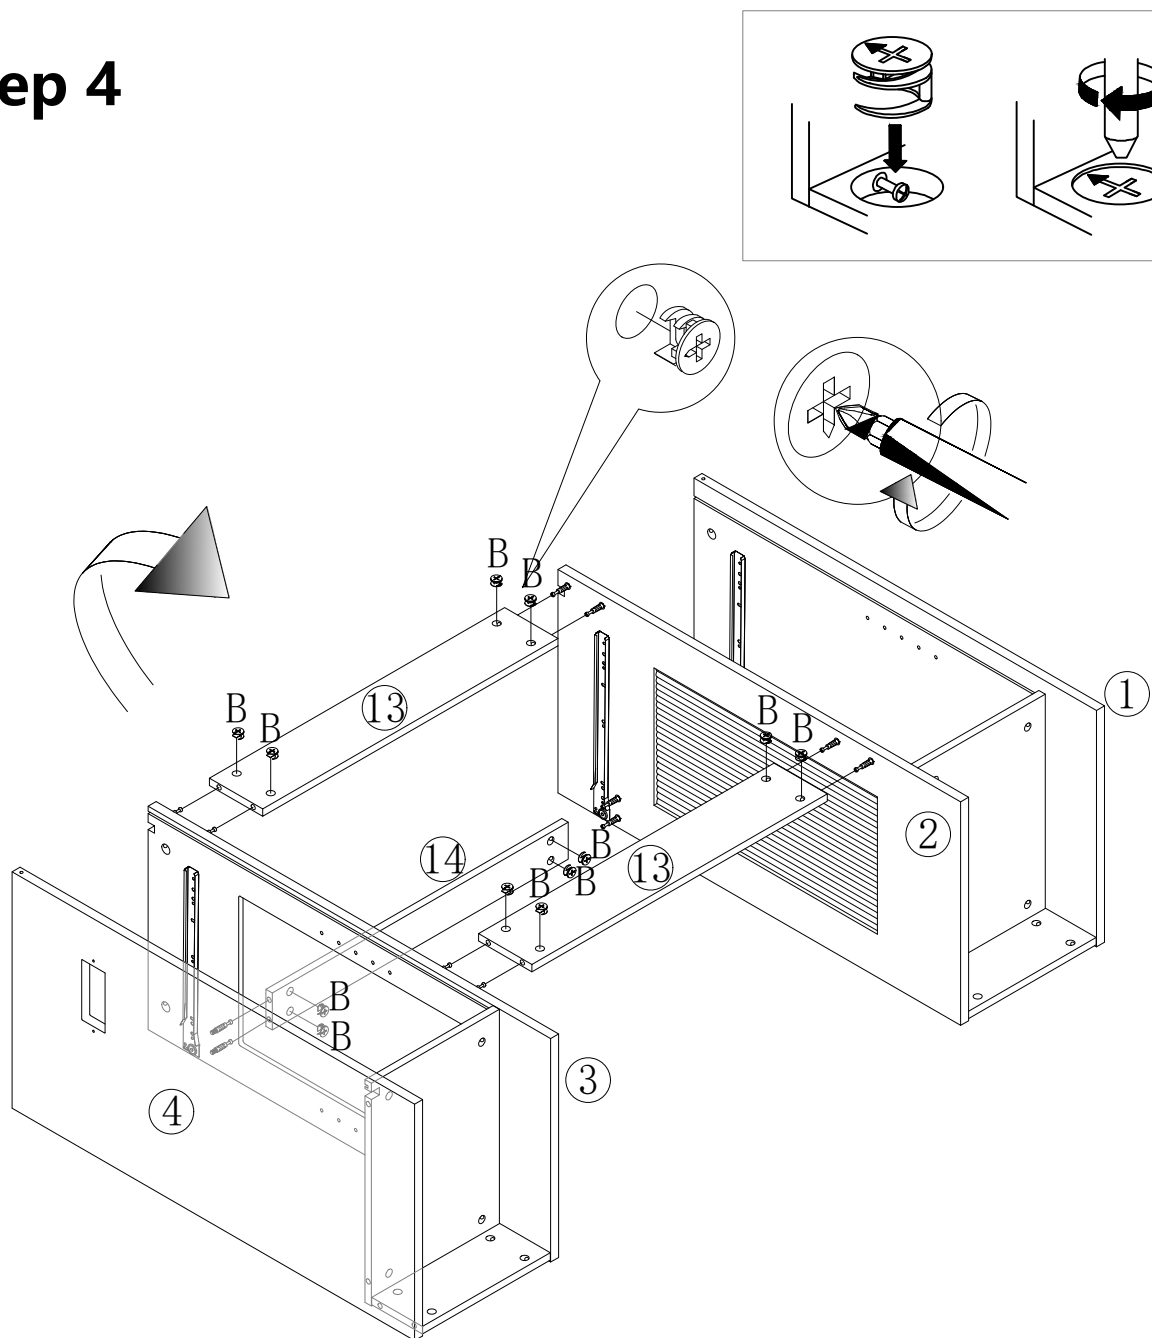

Assembly Instructions

 Step 5

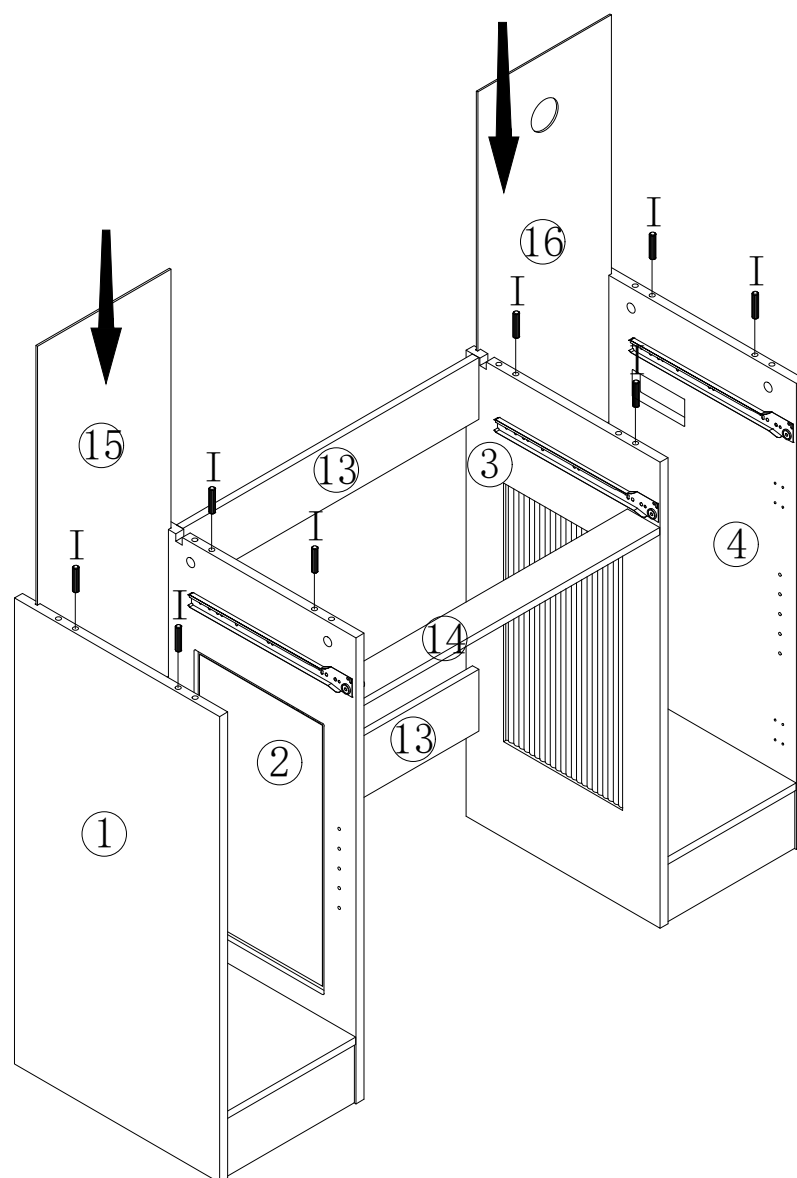


I




Wooden tenon x8

Assembly Instructions

  
Step 6


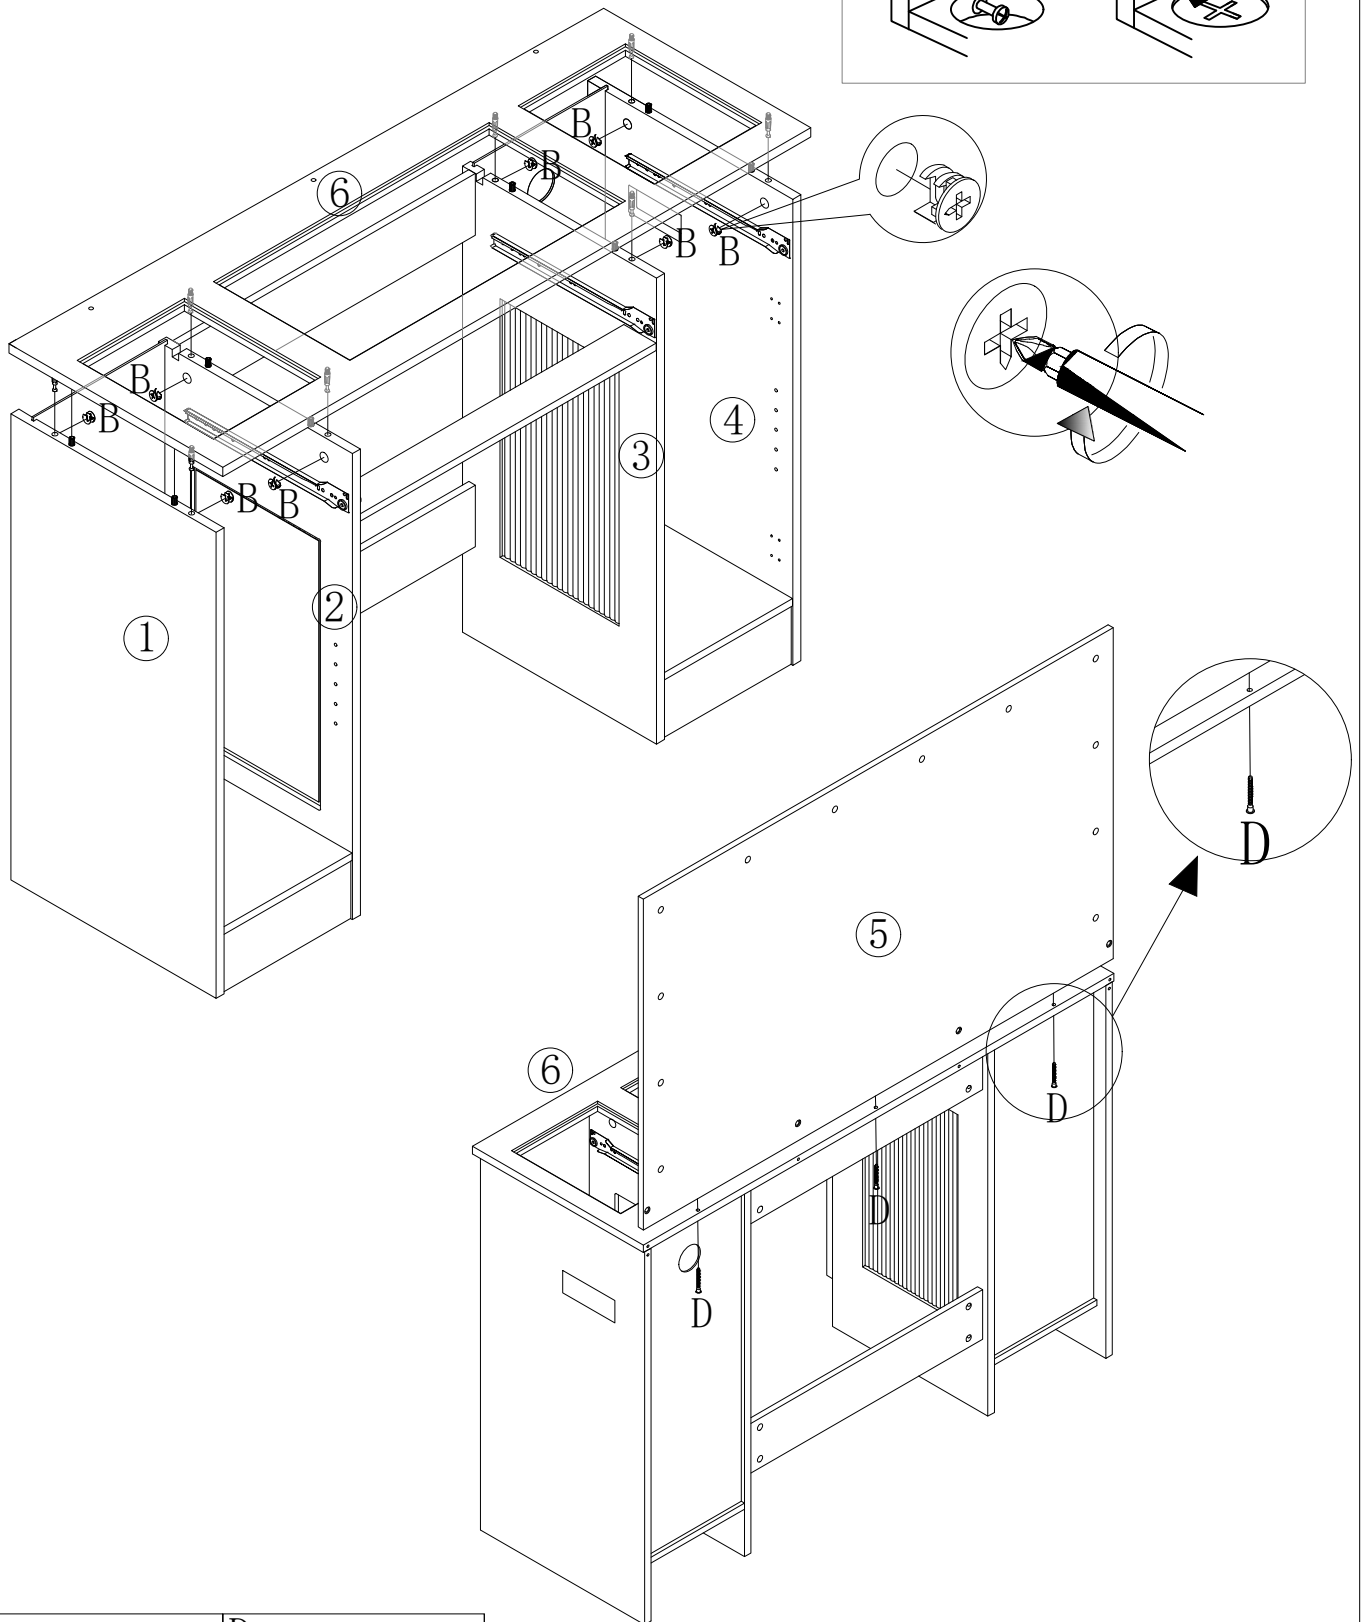


B	D
	
Cam Lock x8	6*40 Screw x3

Assembly Instructions

 
 
 
Step 7

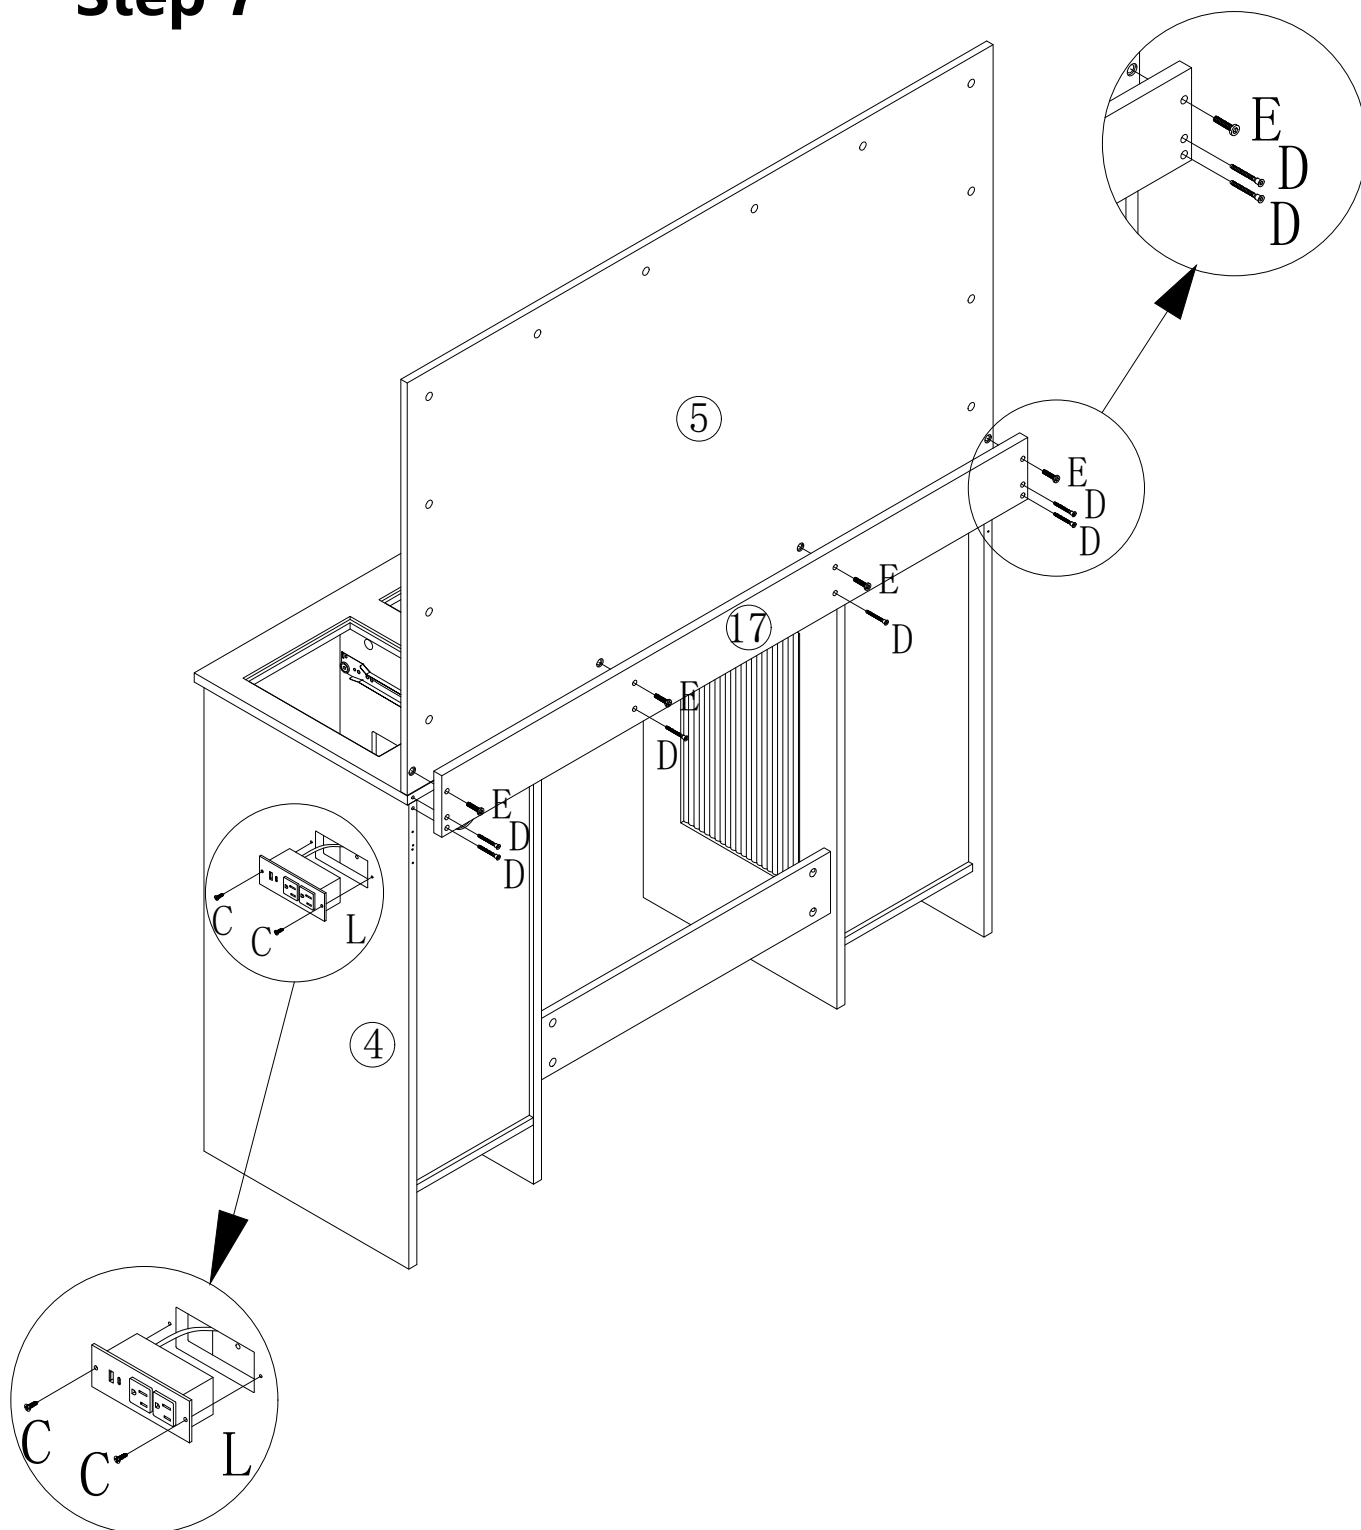

C  3.5*14 Screw x2	D  6*40 Screw x6	E  6*23 Screw x4	L  Socket x1
--	--	--	--


Assembly Instructions

   Step 8

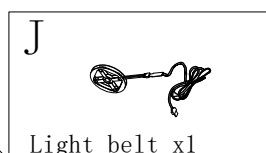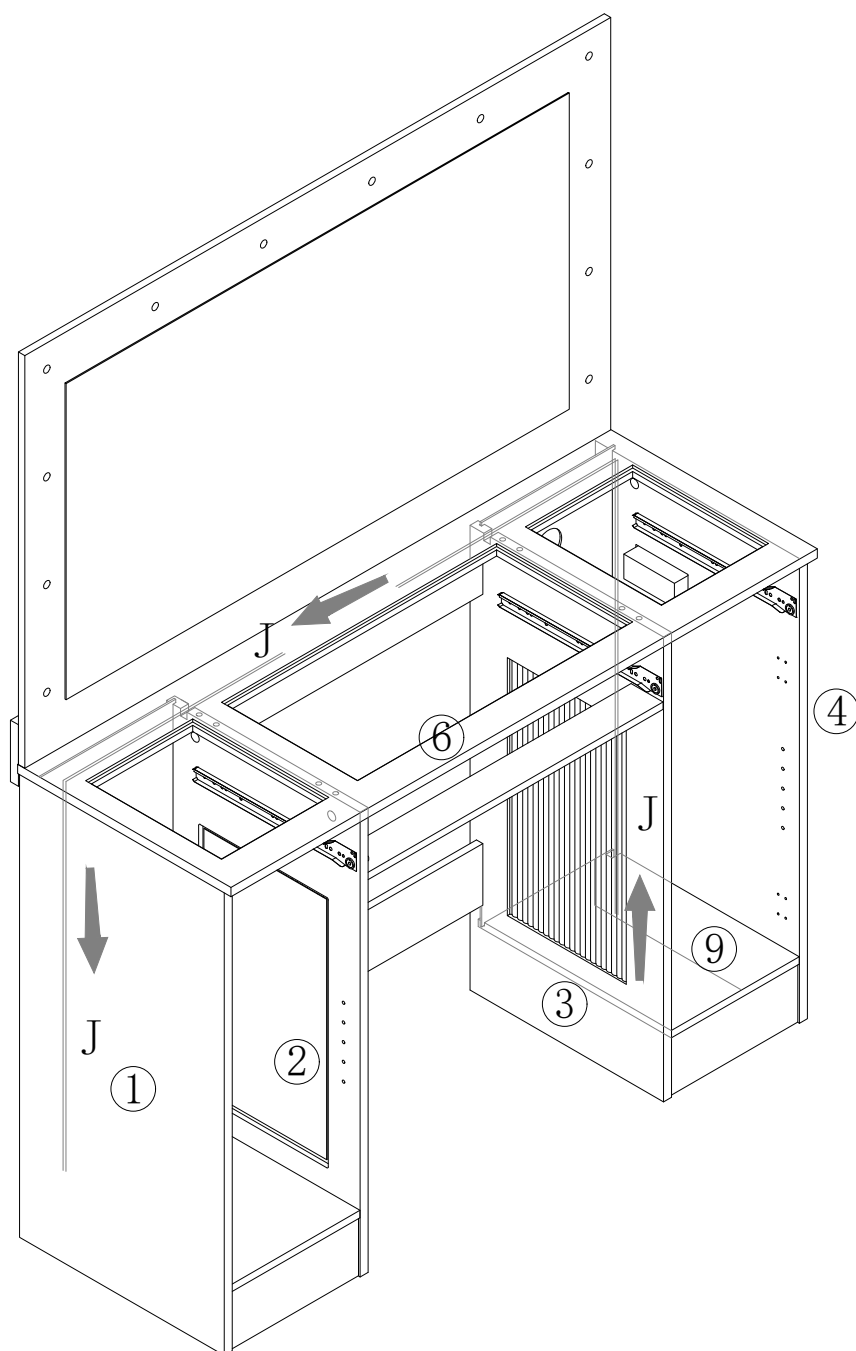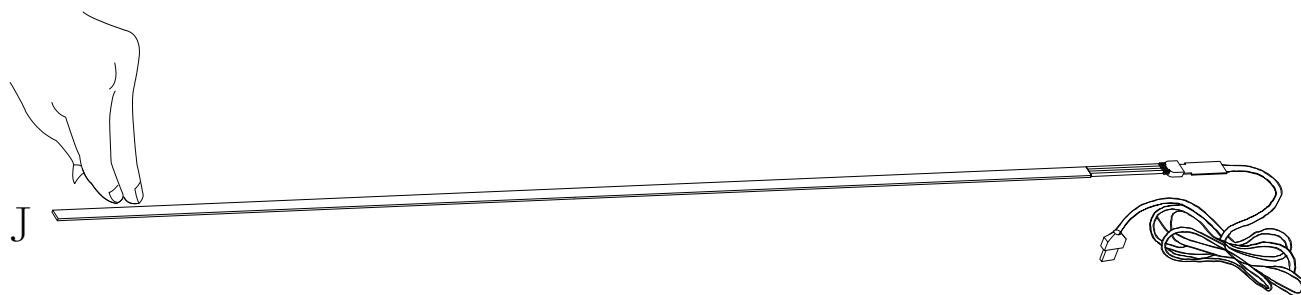

Assembly Instructions

 Step 9

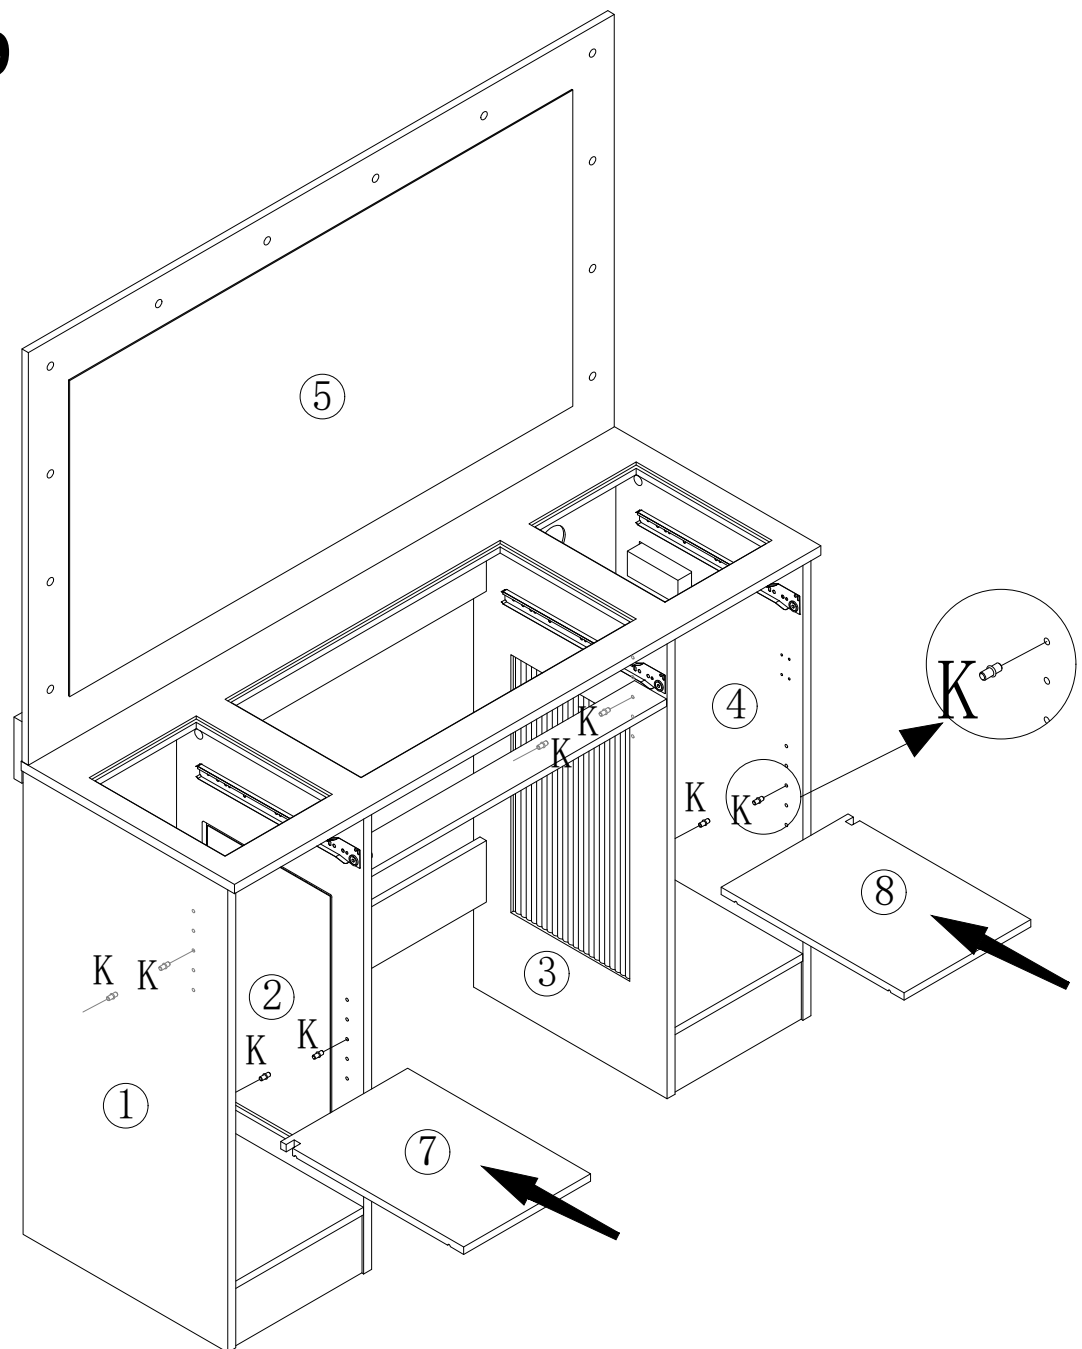

 
K

 


Plate sales x8

Assembly Instructions



Step 10

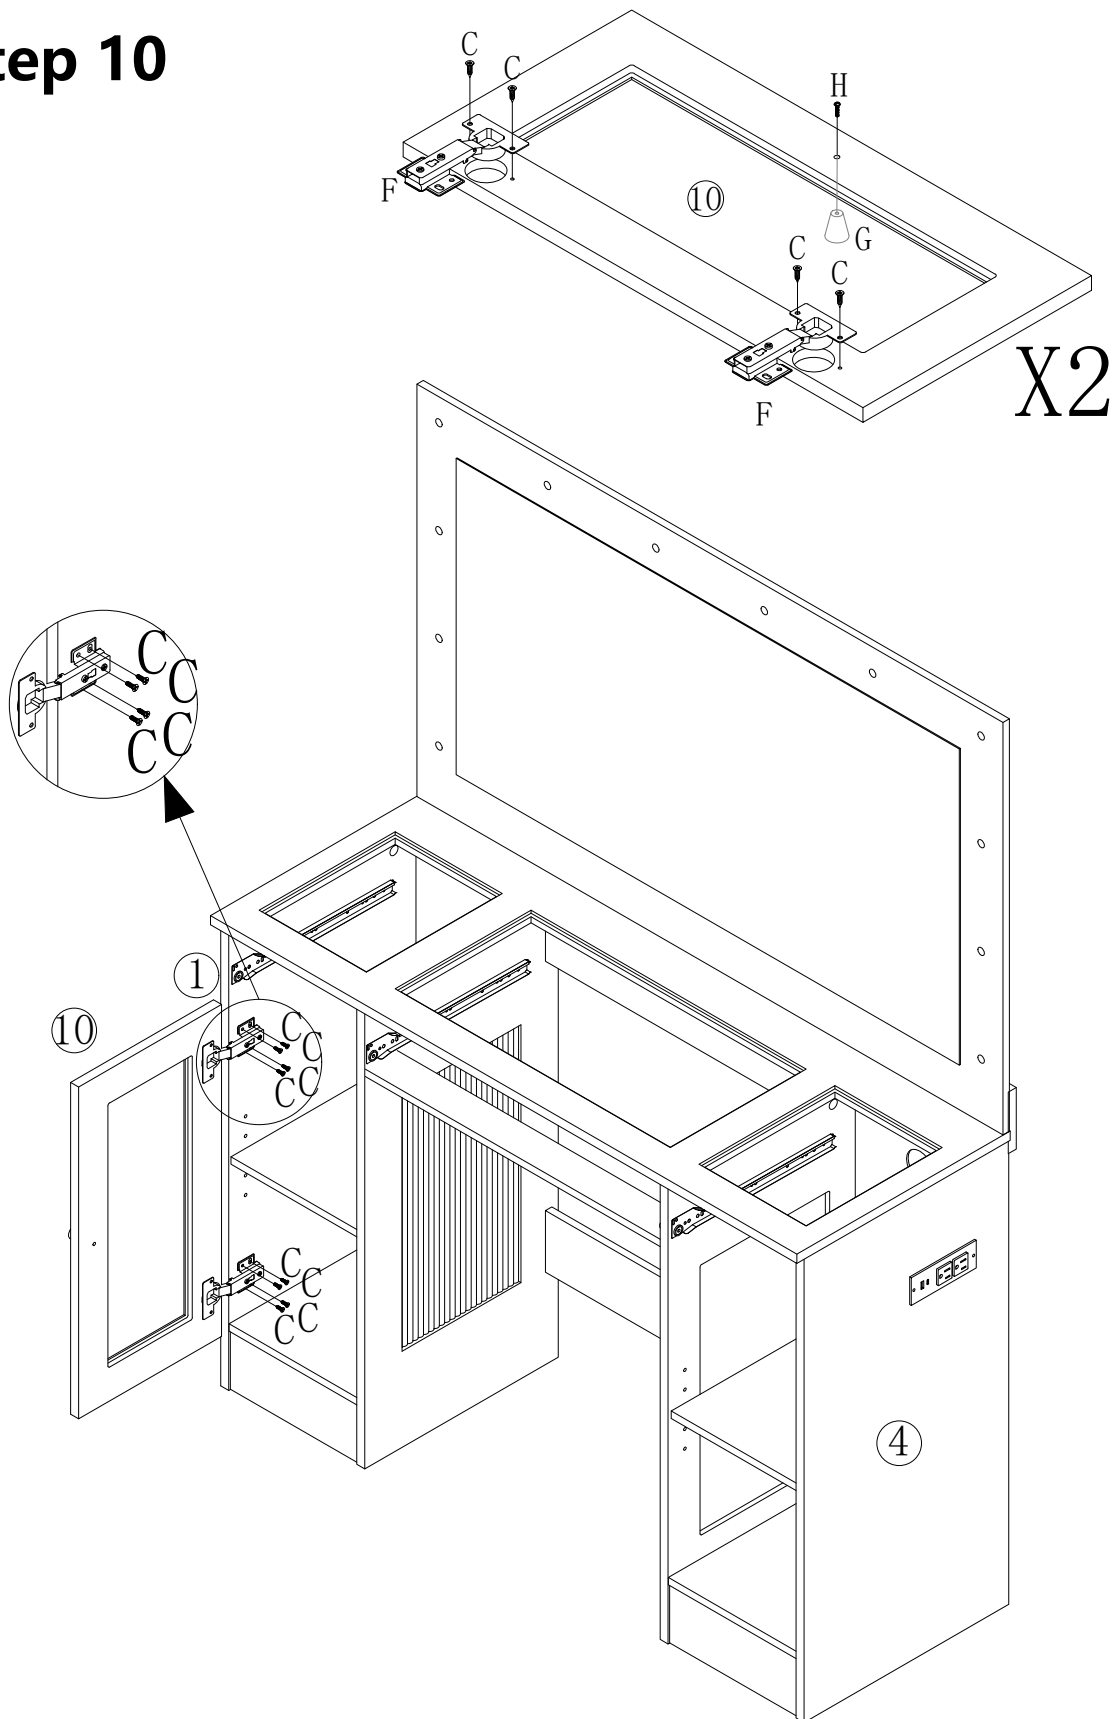

C	F	G	H
			
3.5*14 Screw x16	Hinge x4	handle x2	4*18 Screw x2


Assembly Instructions

  Step 11

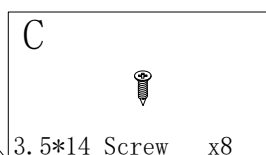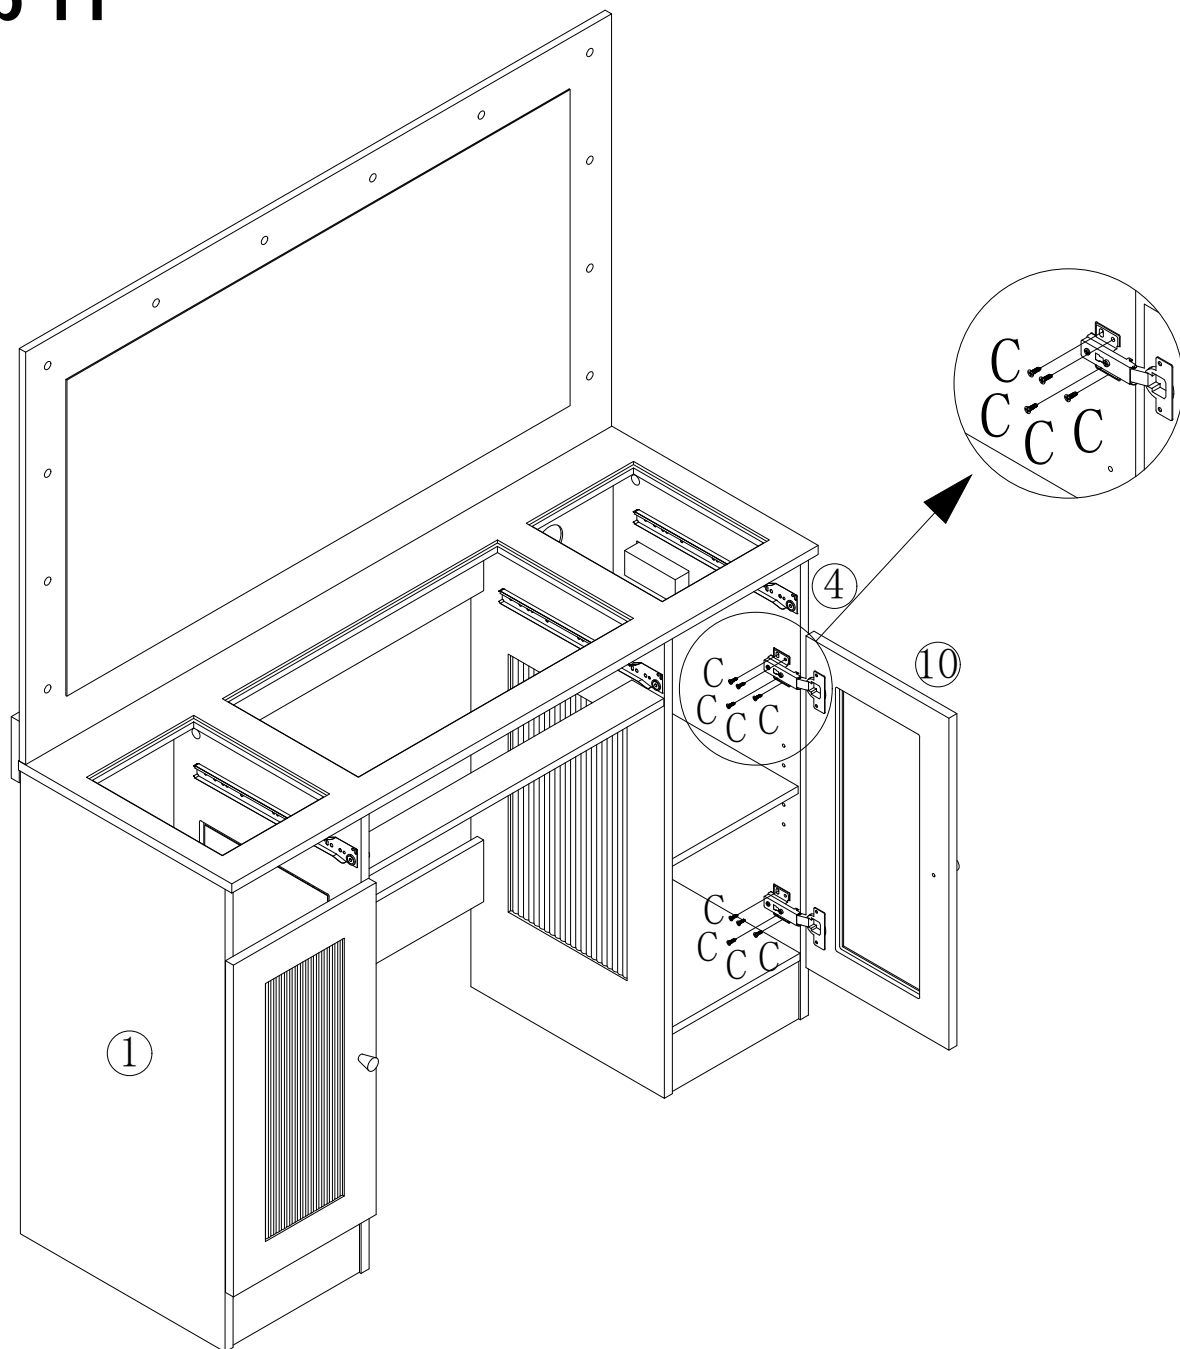

Assembly Instructions


 
Step 12

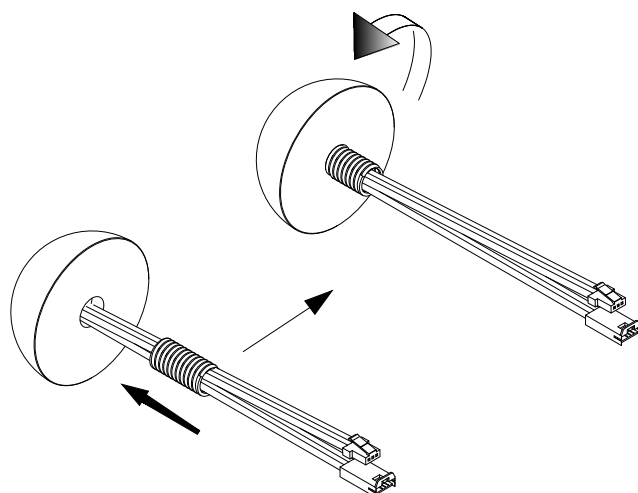

M-1

X12

  Step 13

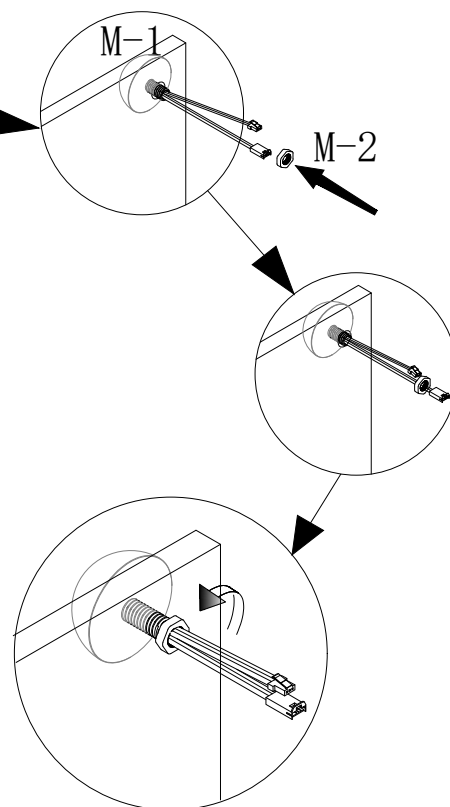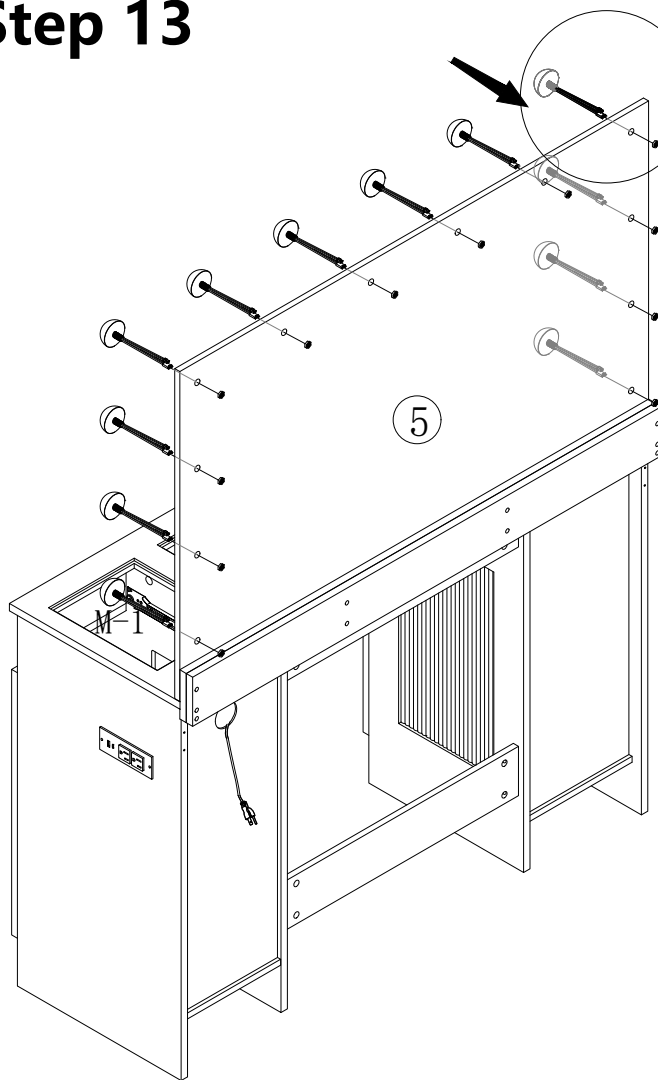

M-1



Light bulb x12

 
M-2

 


The screw on the
light bulb x12

Assembly Instructions

Step 14

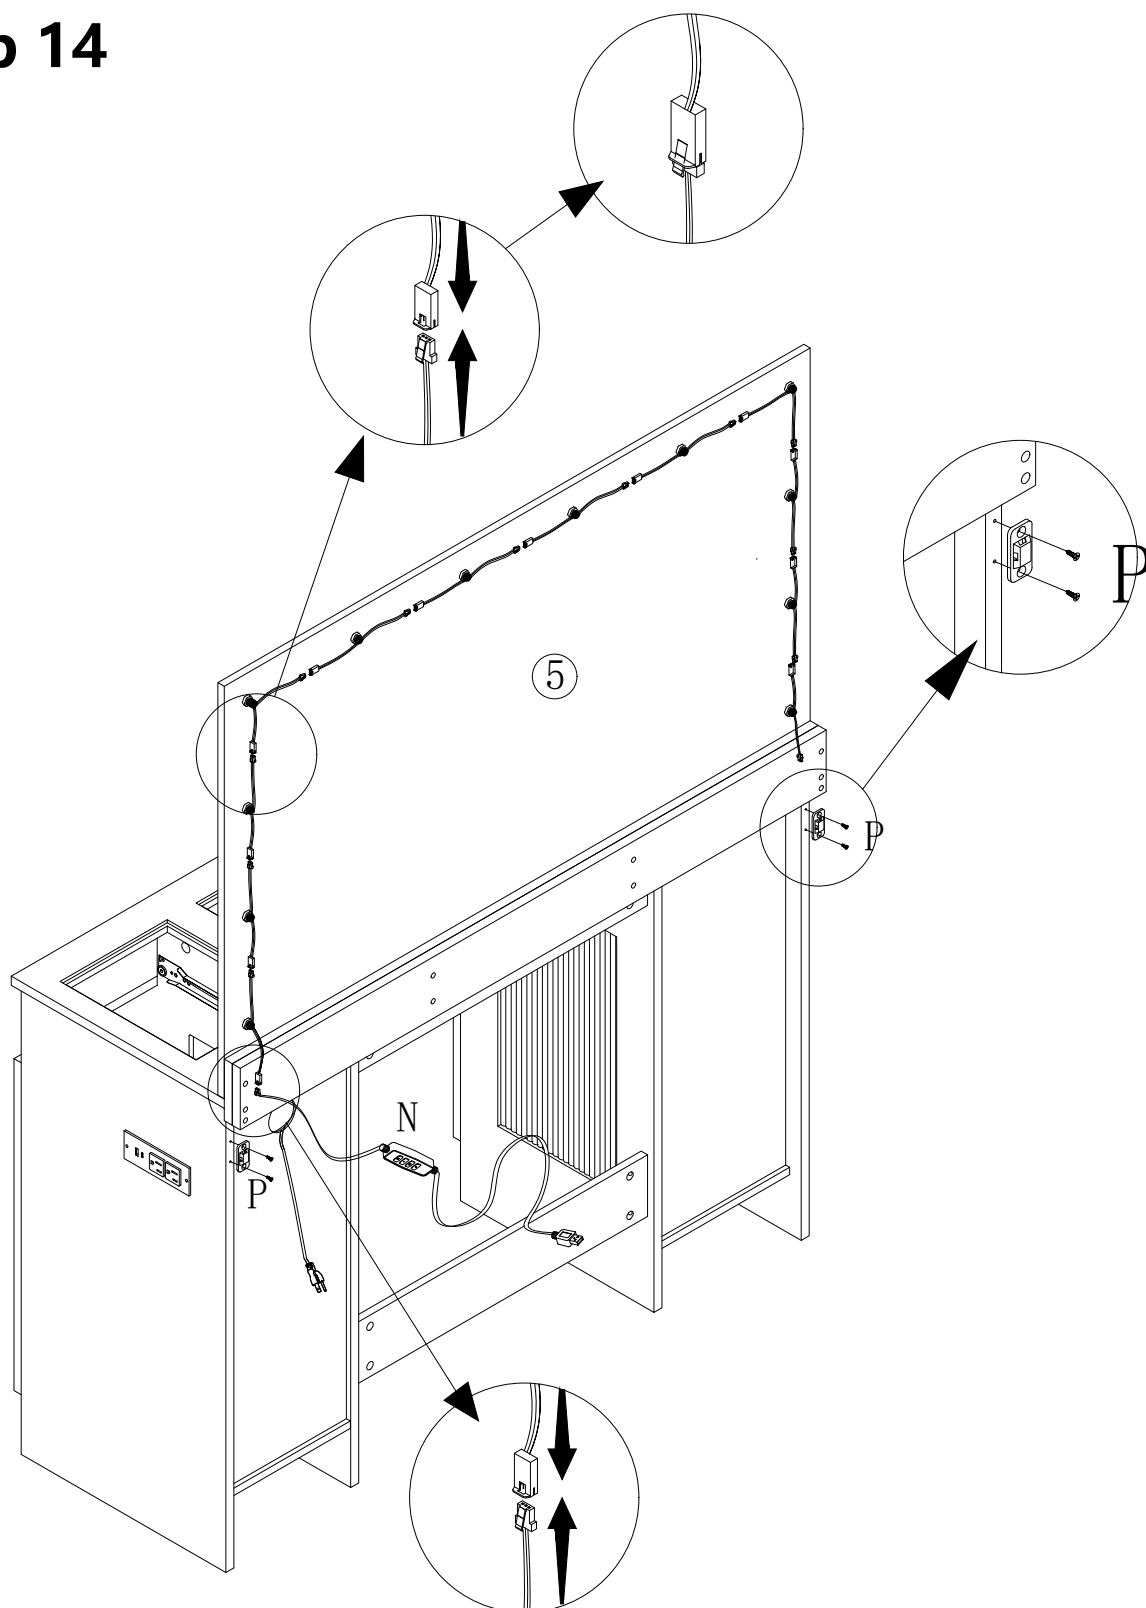


N  power cord x1	P  Prevent falling accessories
---	---

Assembly Instructions

Step 15

 WALL

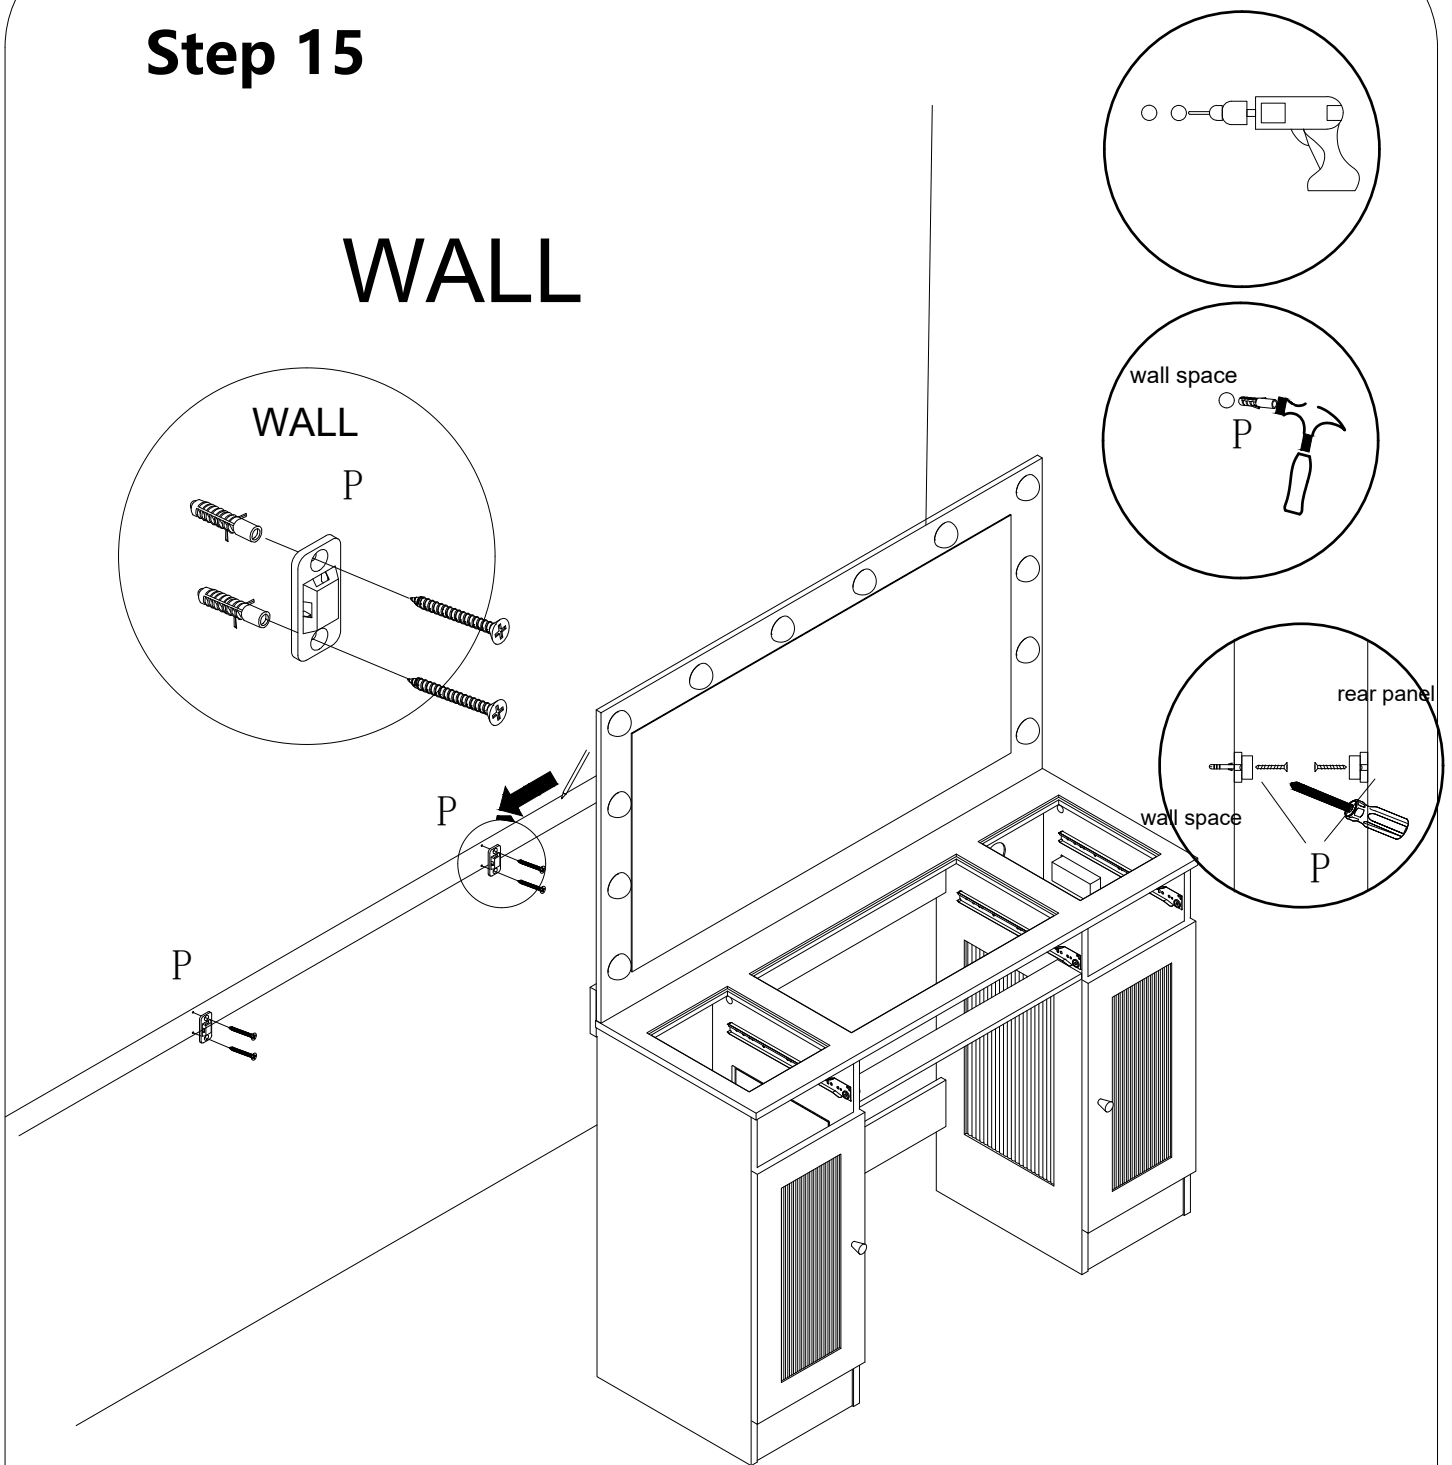


After the cabinet assembly, please install the wall fixing device on the back of the cabinet to avoid accidents. Install at a location based on your needs.




Assembly Instructions

 Step 16

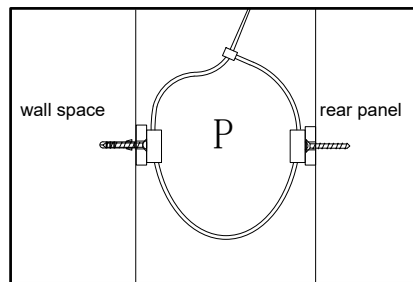


WALL

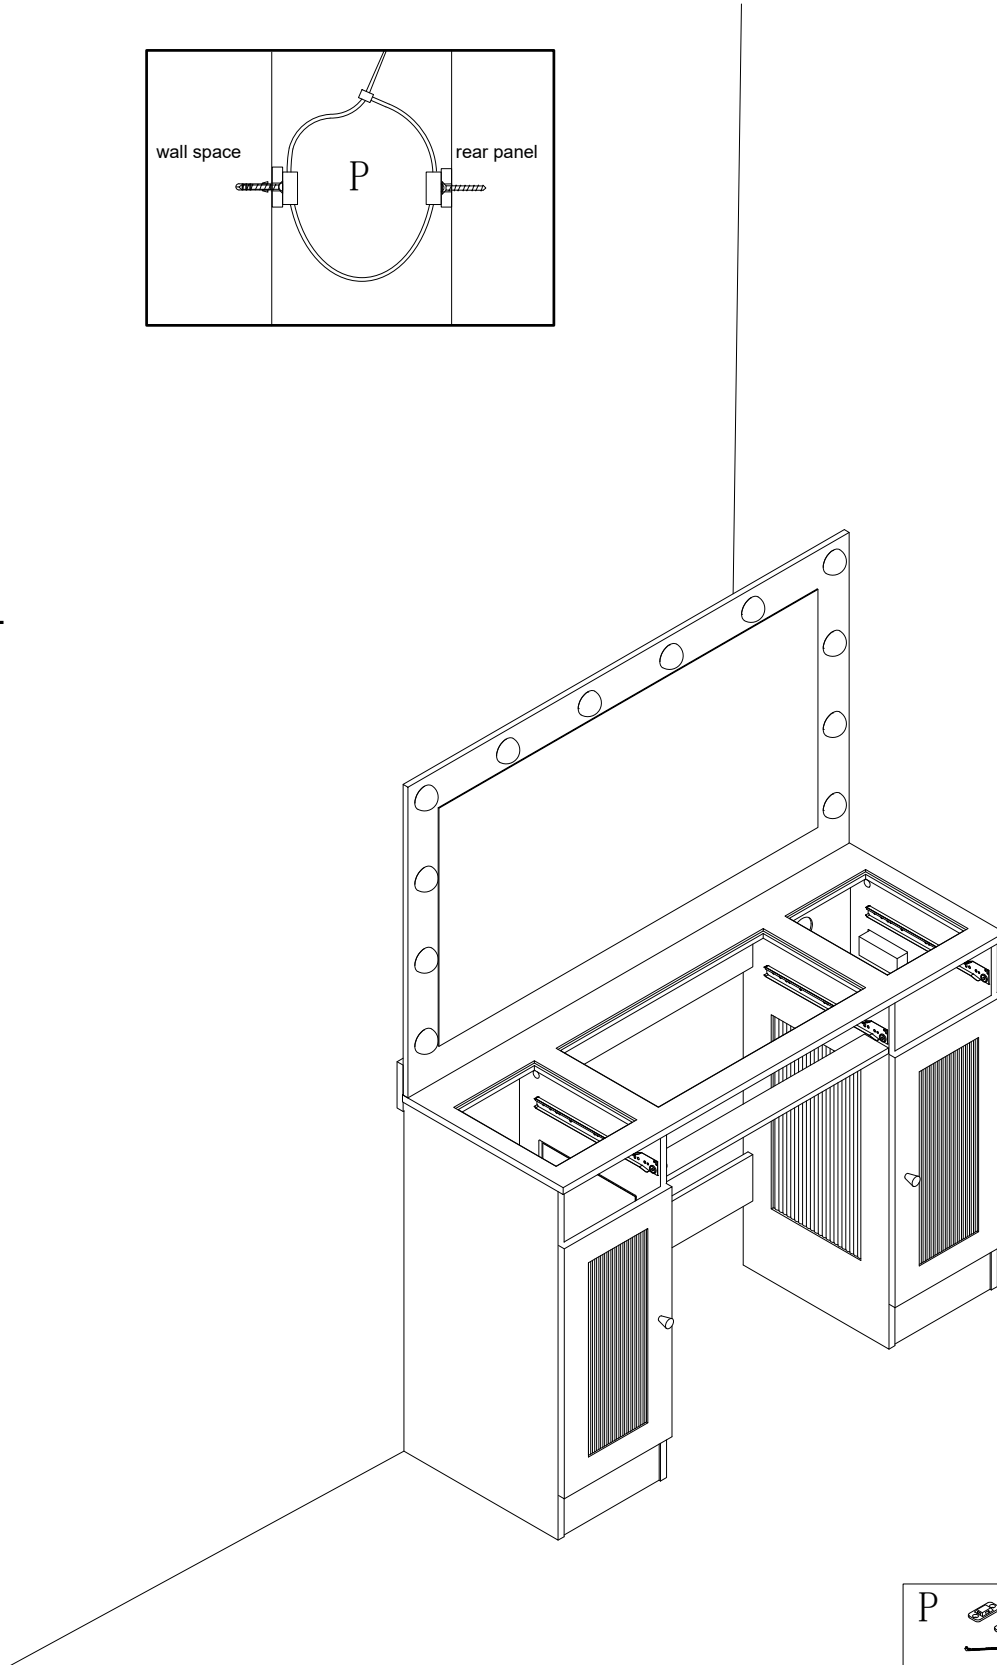 

Assembly Instructions

 Step 17

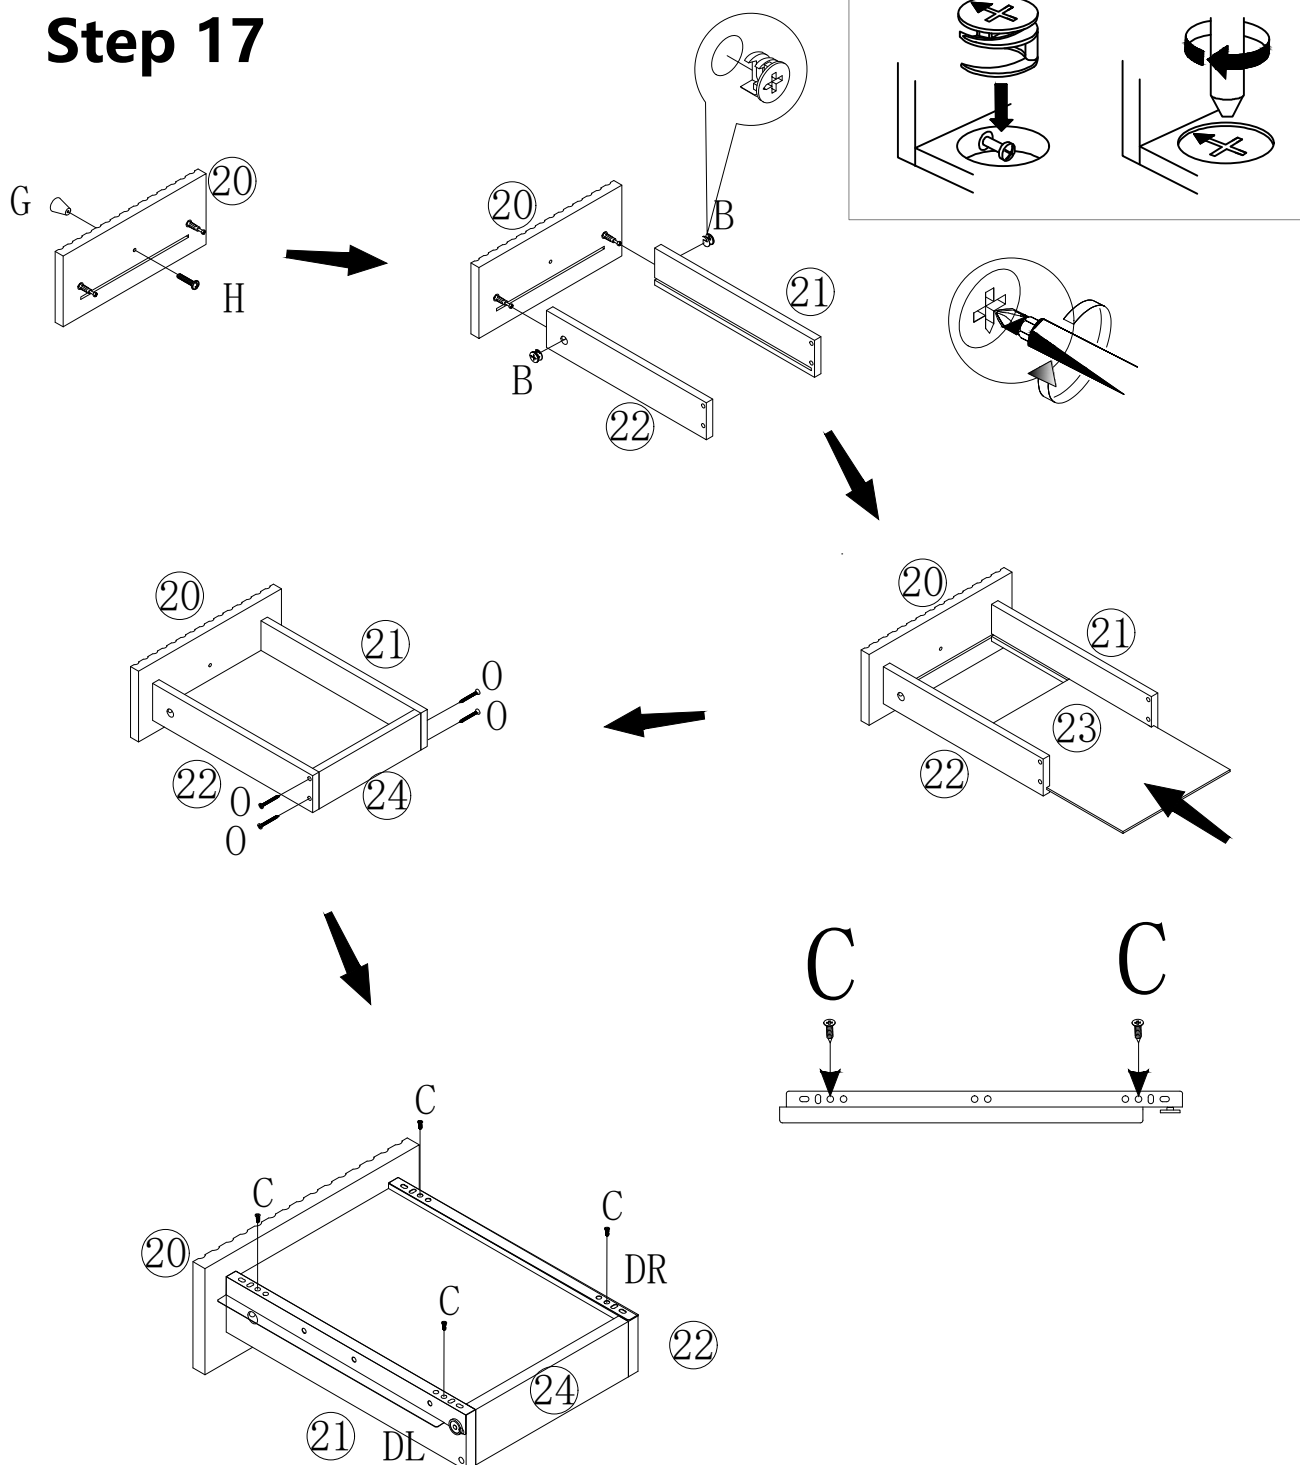


X2

B  Cam Lock x4	C  3.5*14 Screw x8	G  handle x2	H  4*18 Screw x2
0  4*35 Screw x8	DL  Runner300mm x2	DR  Runner300mm x2	

Assembly Instructions


 
Step 18

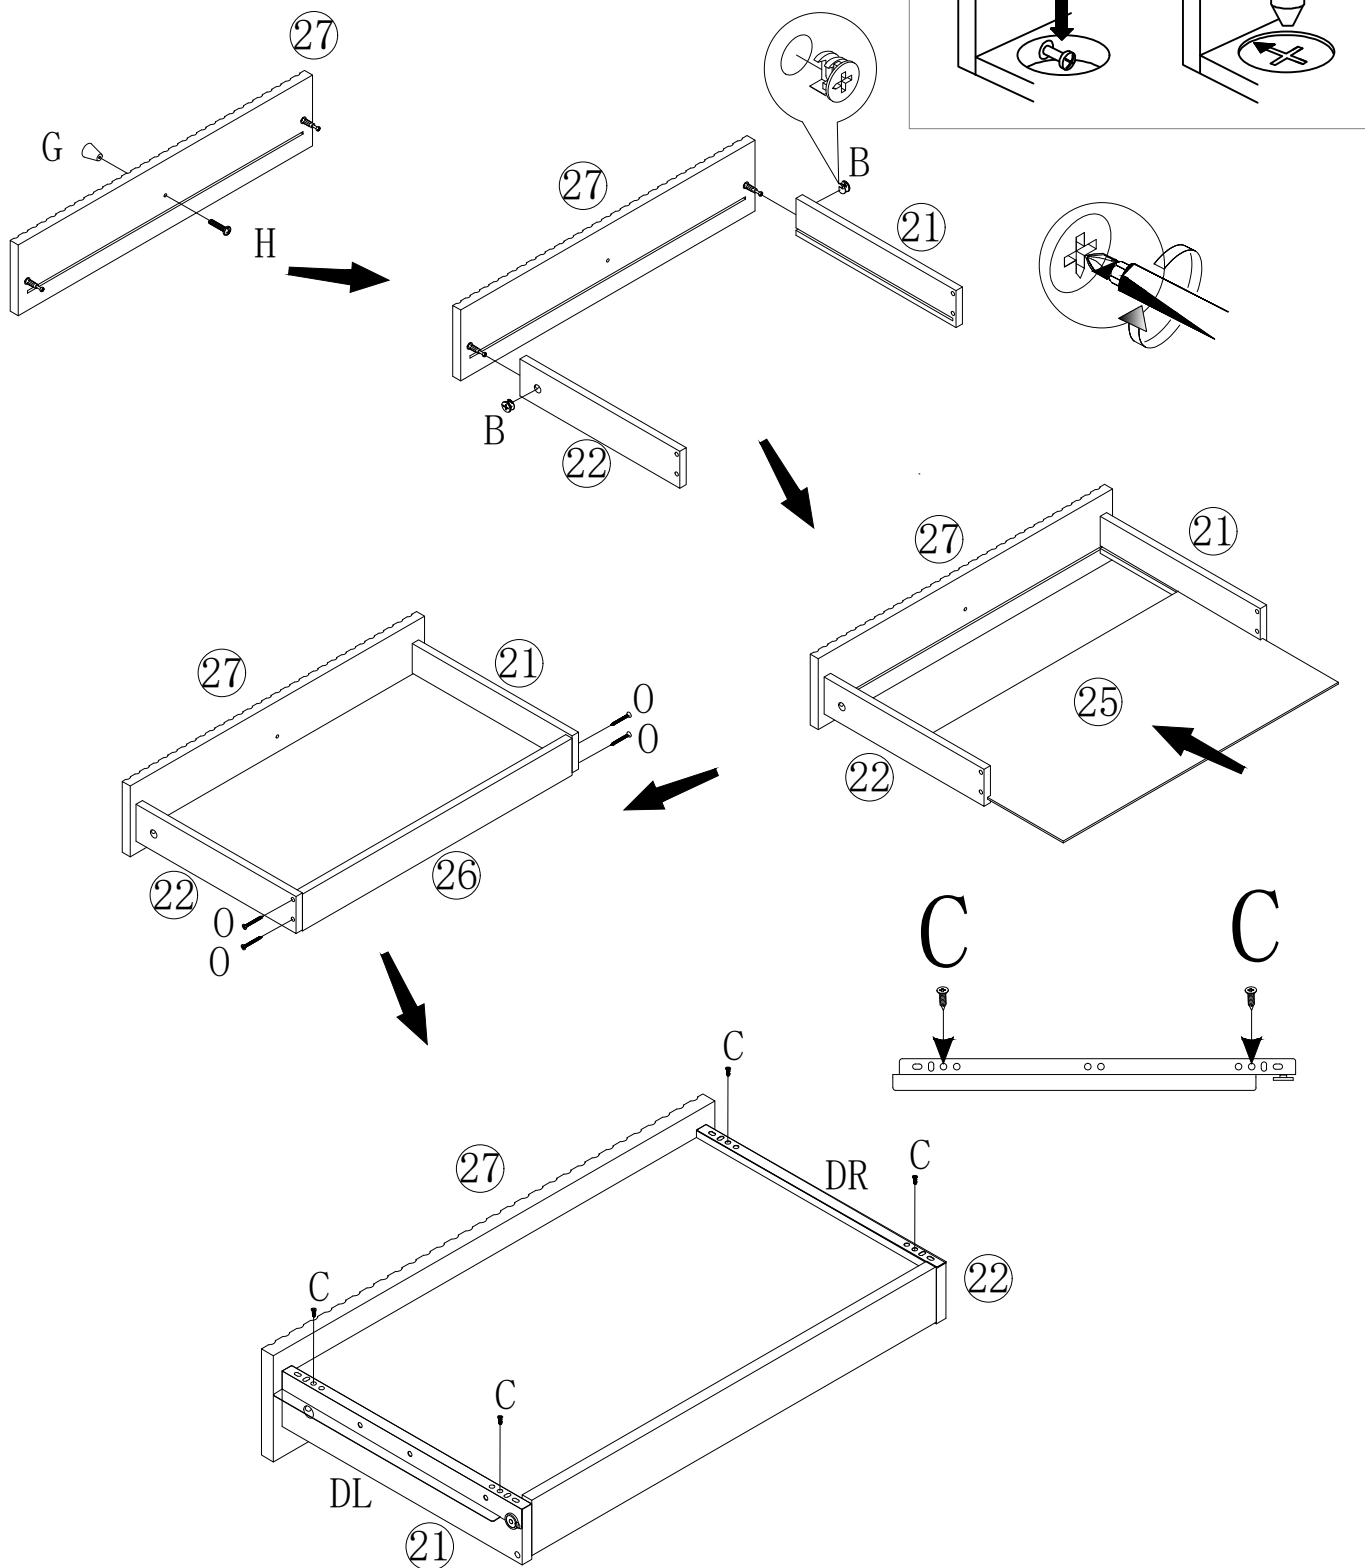

B  Cam Lock x2	C  3.5*14 Screw x4	G  handle x1	H  4*18 Screw x1
O  4*35 Screw x4	DL  Runner300mm x1	DR  Runner300mm x1	

Assembly Instructions

  Step 19

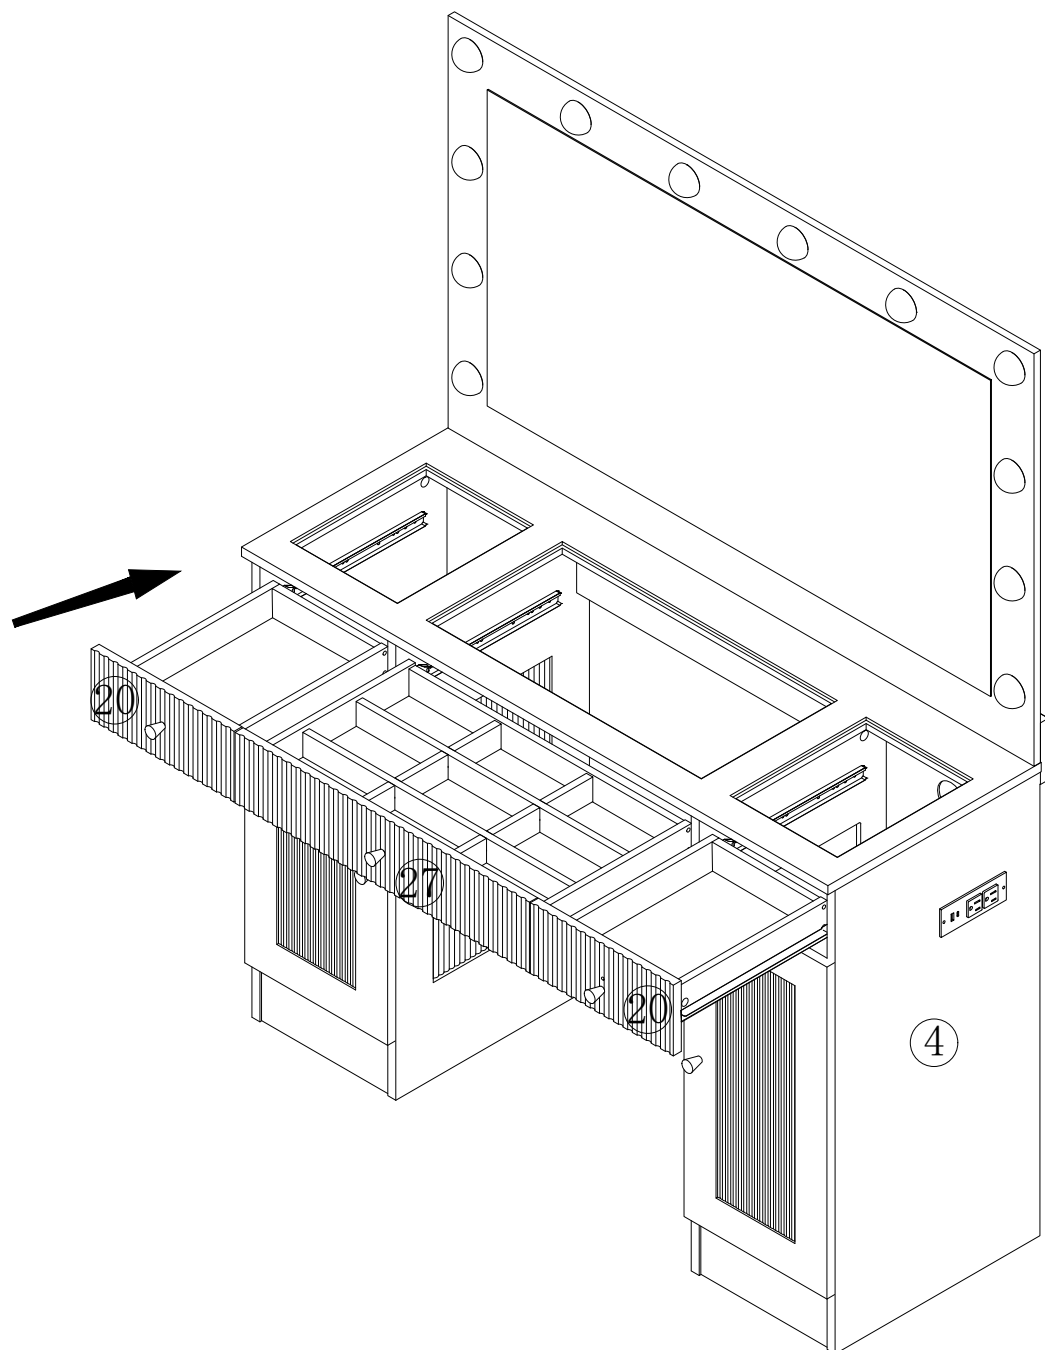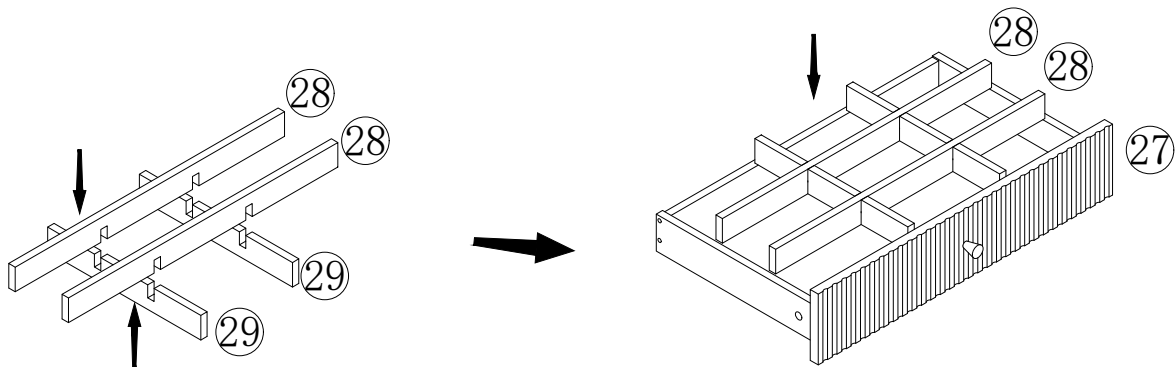

Assembly Instructions

Step 20

