 



**CAUTION:**When tightening the screws,tighten sequentially.Do not tighten any screws fully and then towards the next one.When every part is OK, then tighten all the screws.














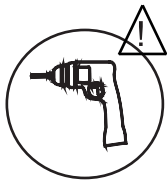


PLEASE BE CAREFUL DO NOT DAMAGE THE  
HOLE POSITION WHEN YOU USE POWER TOOLS !


If there are any missing parts, please contact us, and we will send you a brand new replacement.

               We also offer an exclusive one-month service where we provide product replacements without the need for repairs, as long as the damage is not caused by human error.

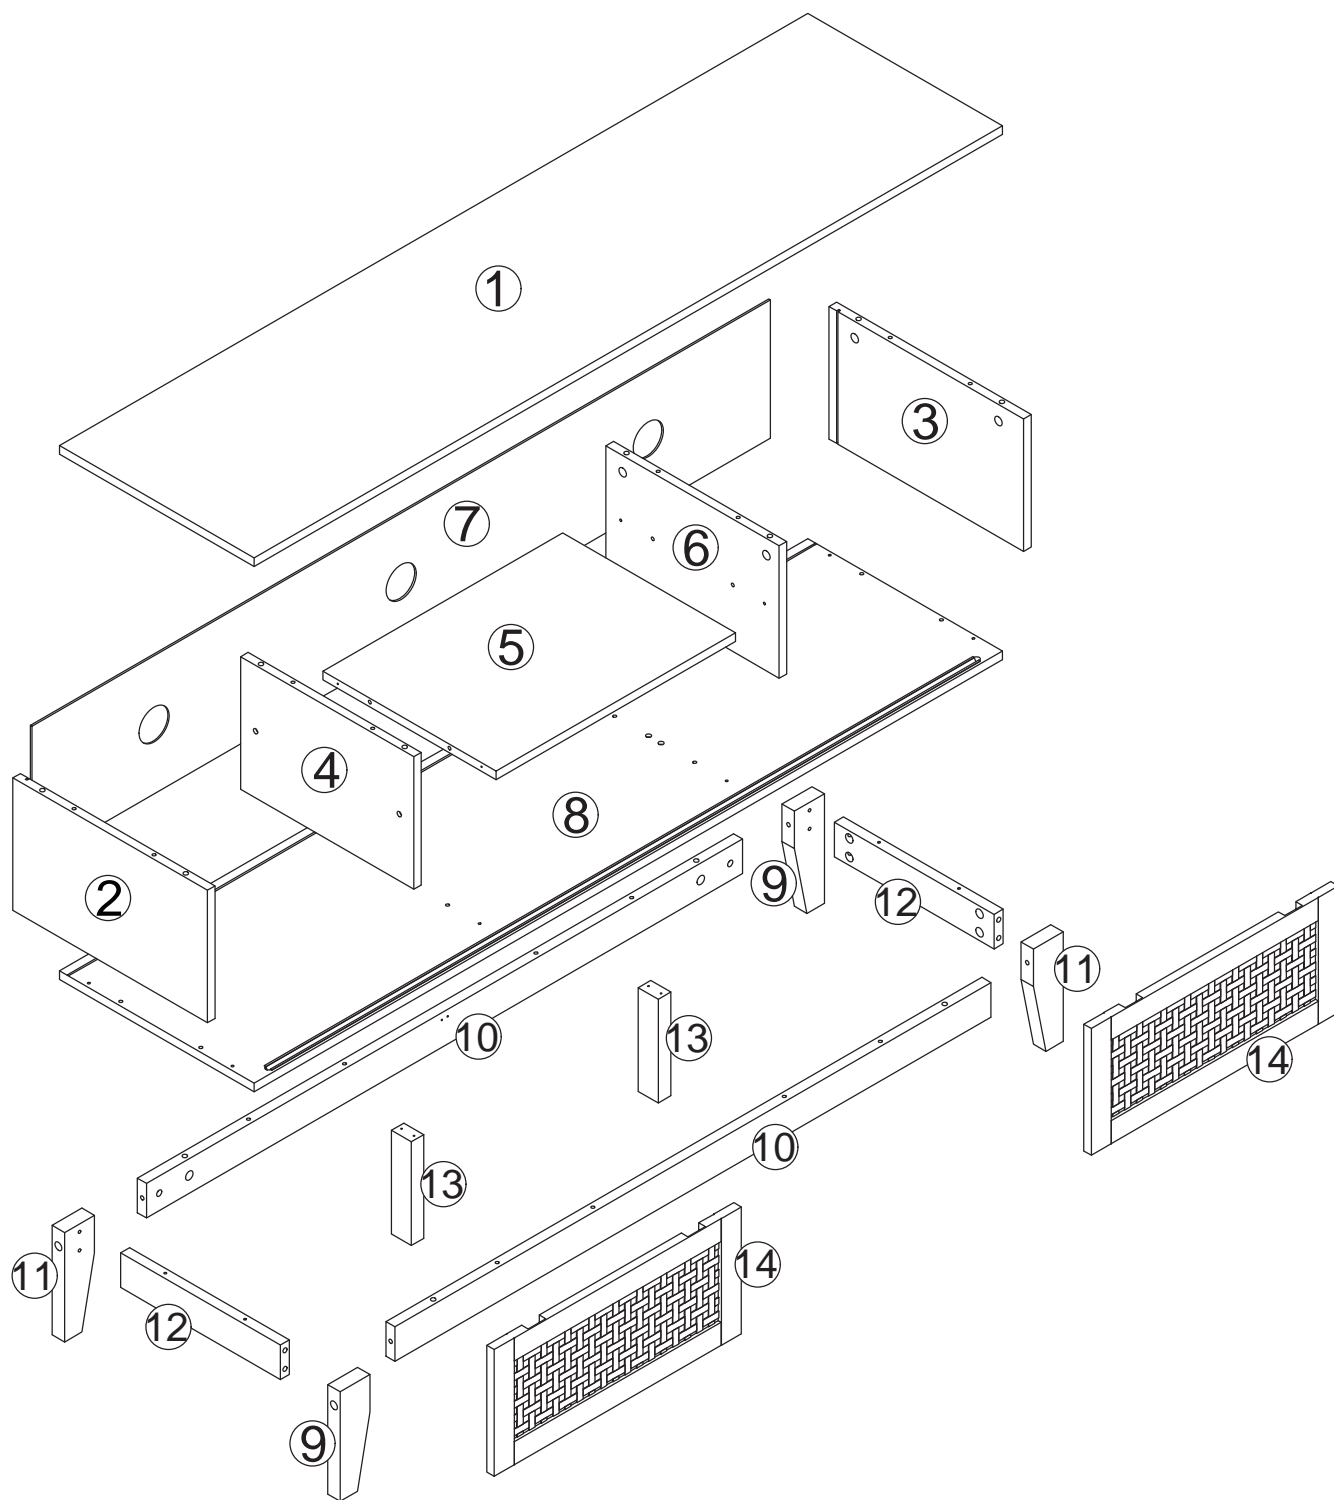
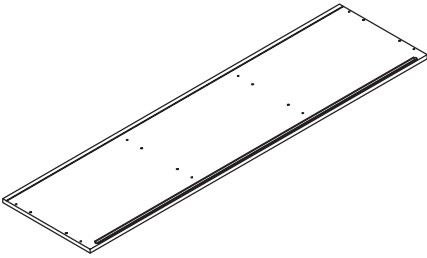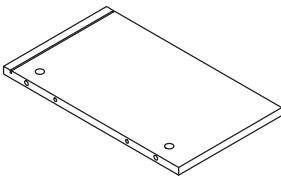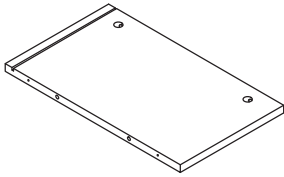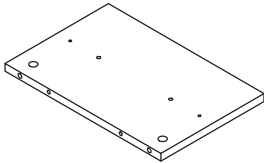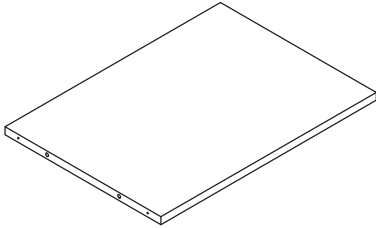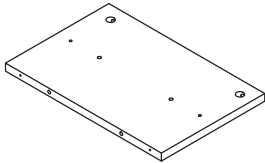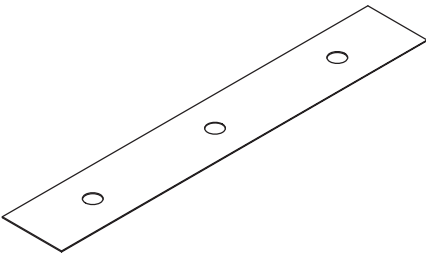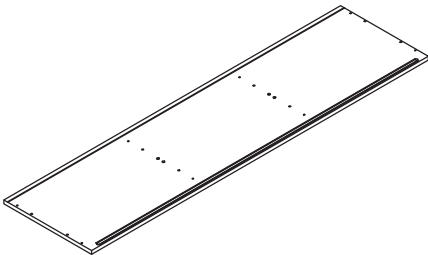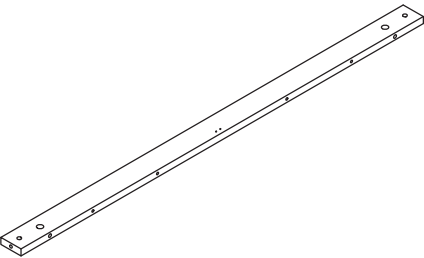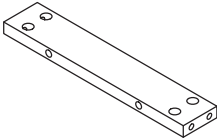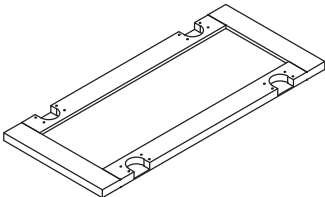
<p>①x1</p> 	<p>②x1</p> 	<p>③x1</p> 
<p>④x1</p> 	<p>⑤x1</p> 	<p>⑥x1</p> 
<p>⑦x1</p> 	<p>⑧x1</p> 	<p>⑨x2</p> 
<p>⑩x2</p> 	<p>⑪x2</p> 	<p>⑫x2</p> 
<p>⑬x2</p> 	<p>⑭x2</p> 	

 A X20(+1)



Ø6x35mm

B X20(+1)



Ø15x10mm

C X28(+2)



 
Ø6x30mm

D X16(+1)




Ø4x35mm

E X4



F X4

 

G X32(+2)



H X2



I X8



J X4



Ø6x80mm

K X4



Ø10x10mm

L X10(+1)



M X10(+1)

 


Ø3x16mm

N X2



O X4




P X4





## SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

 WHEN FITTING CAMLOCK  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING QUICKFIT  
TURN CLOCKWISE UNTIL SECURE

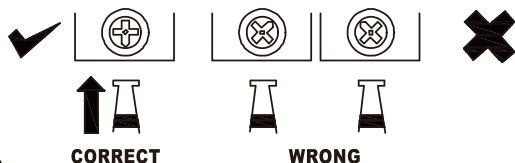


CAM-LOCK

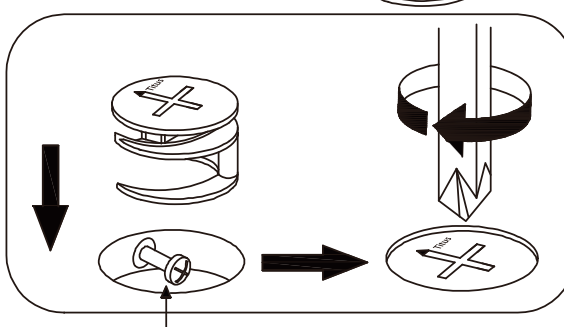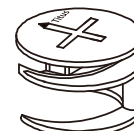  



Quickfit head needs to be in centre

QUICKFIT

 Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

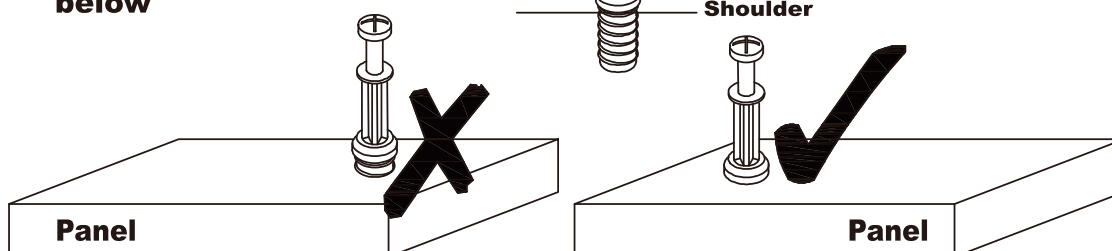


1

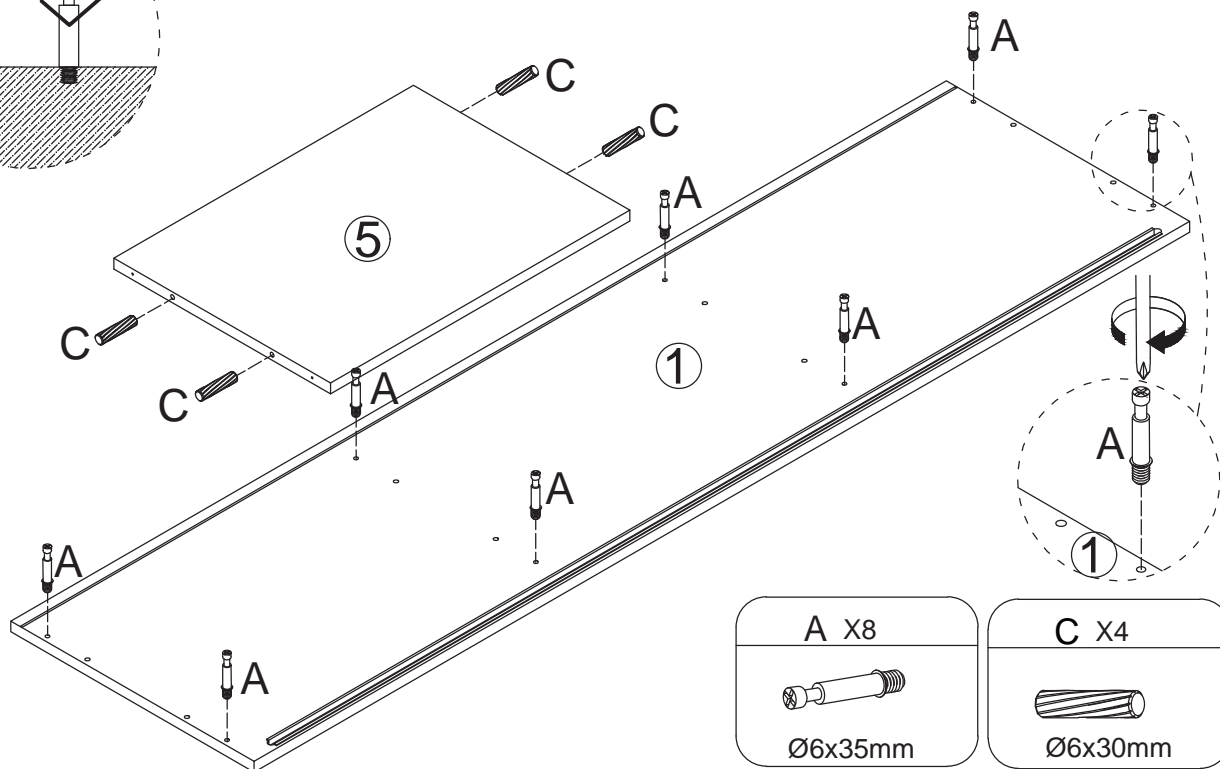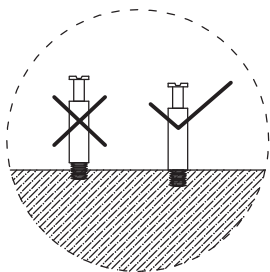  



2




 
No edge banding

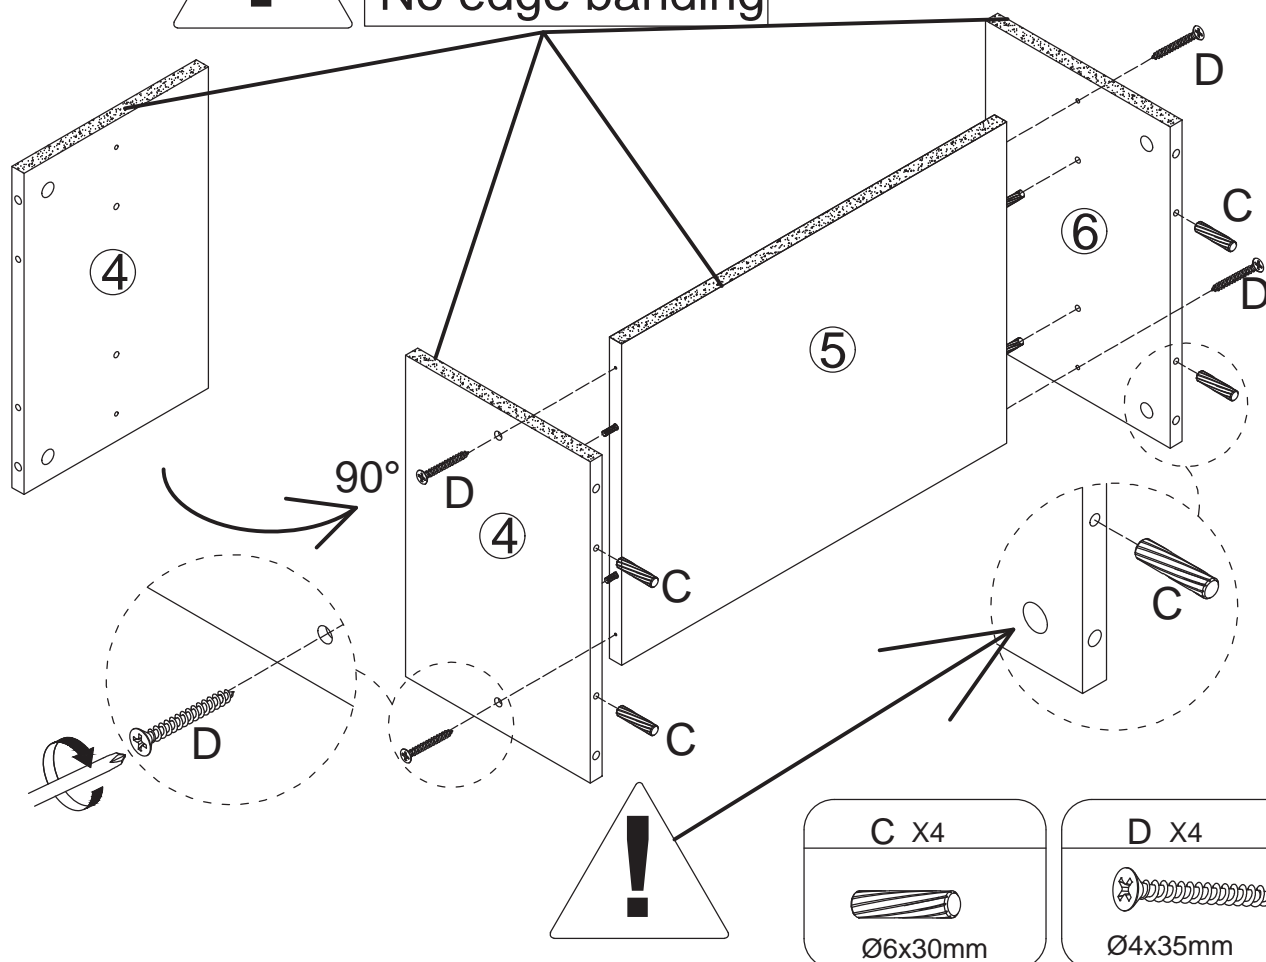


3

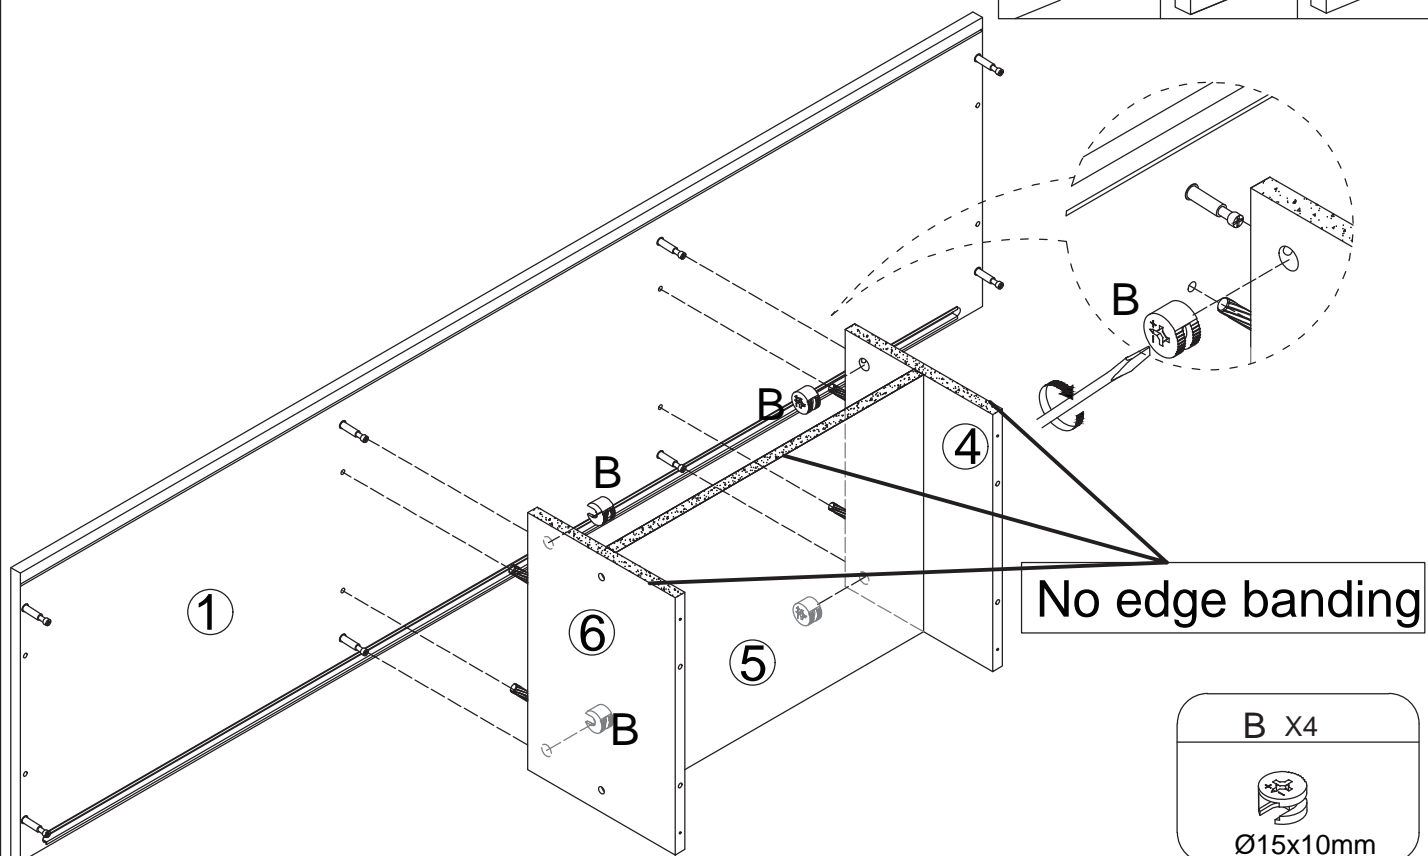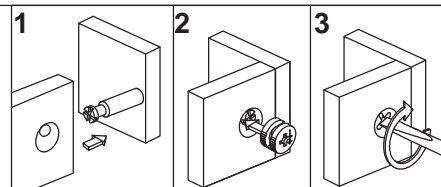  



4

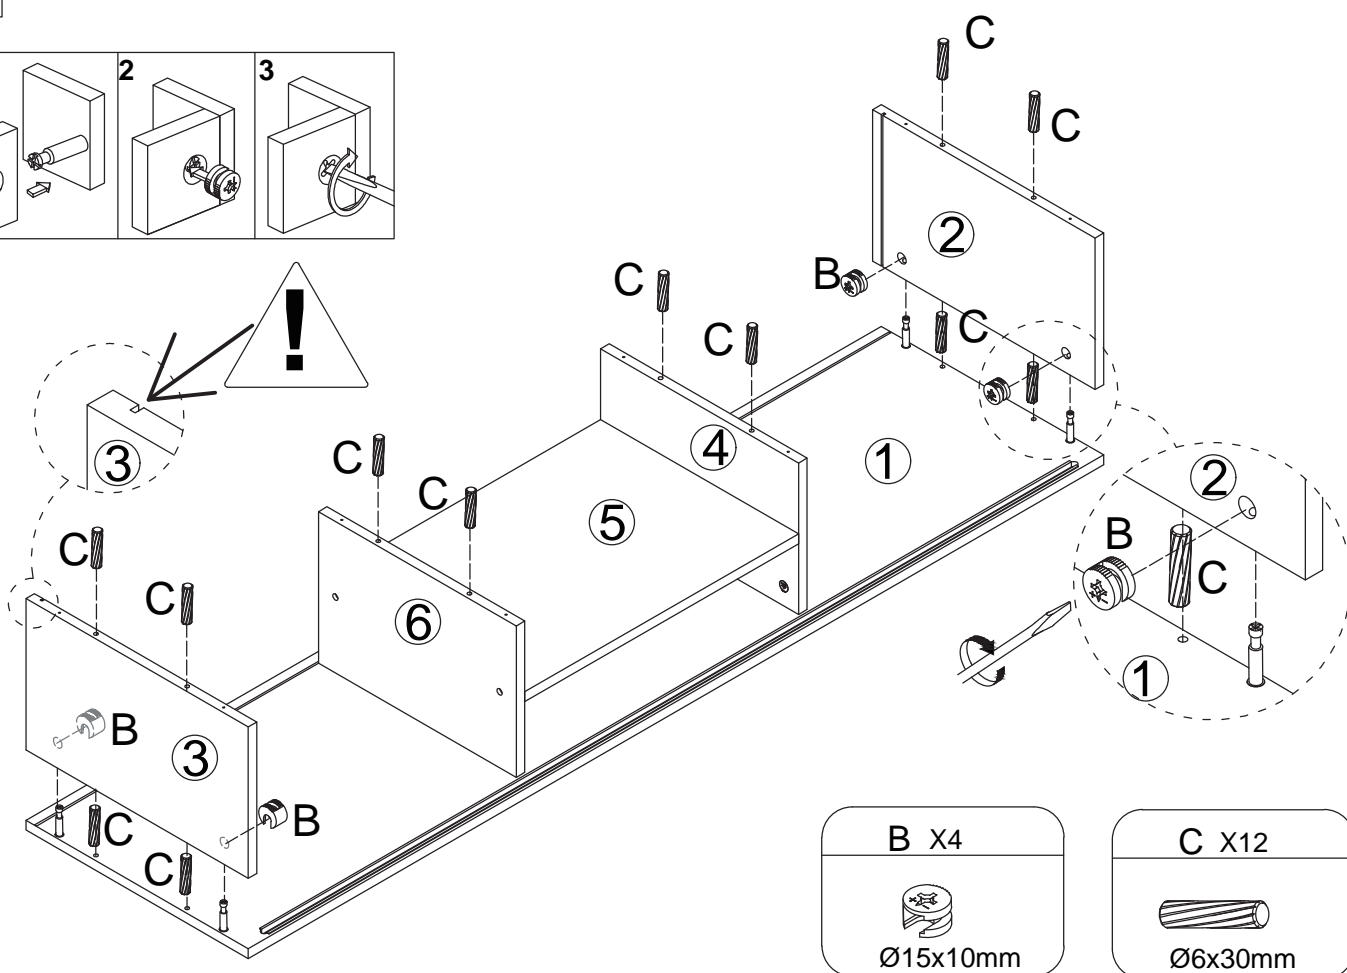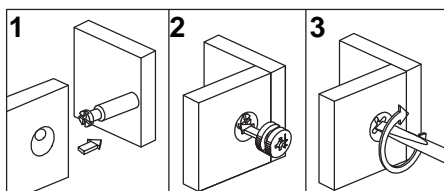  

5

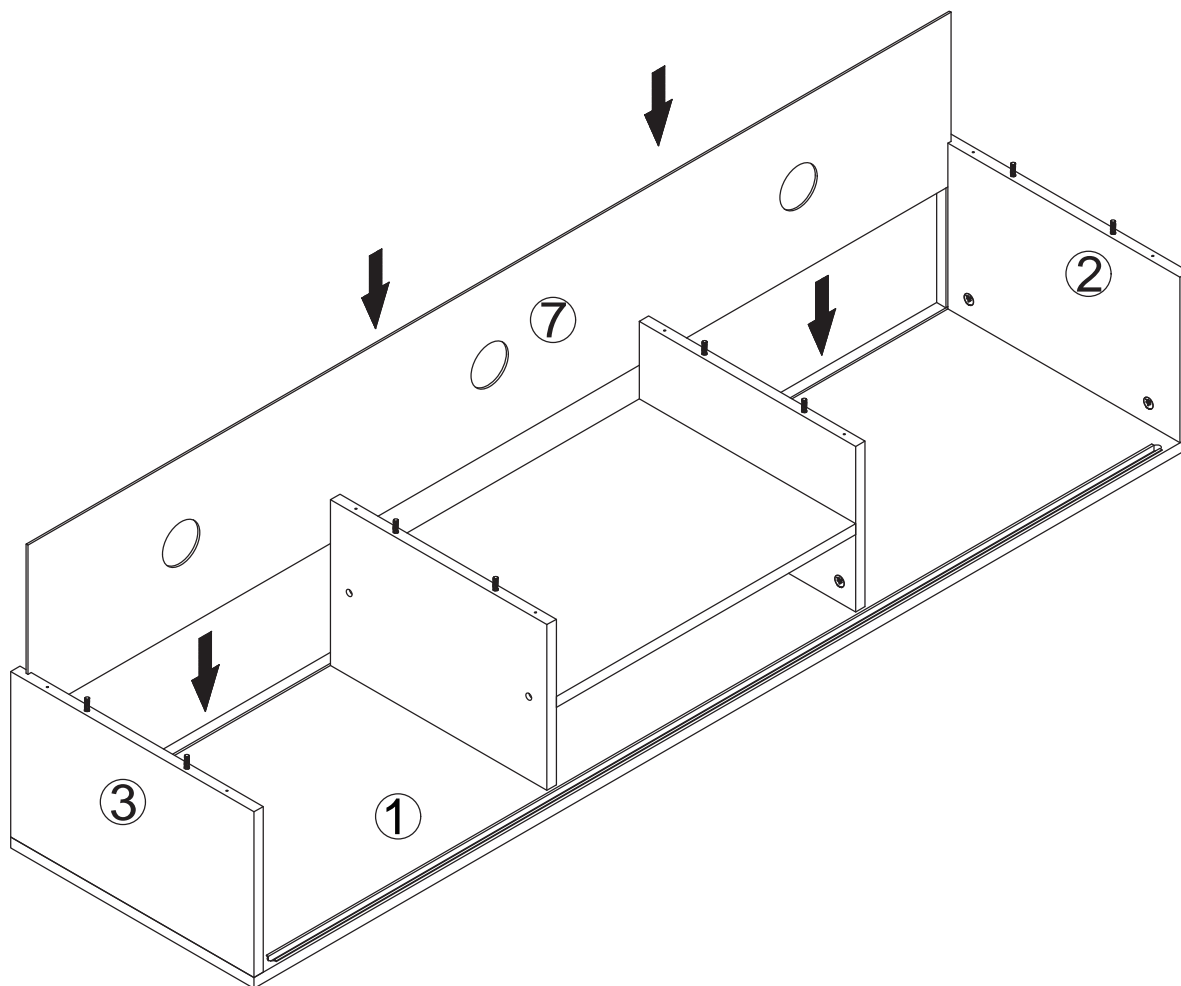 


6

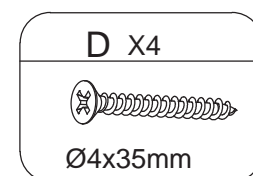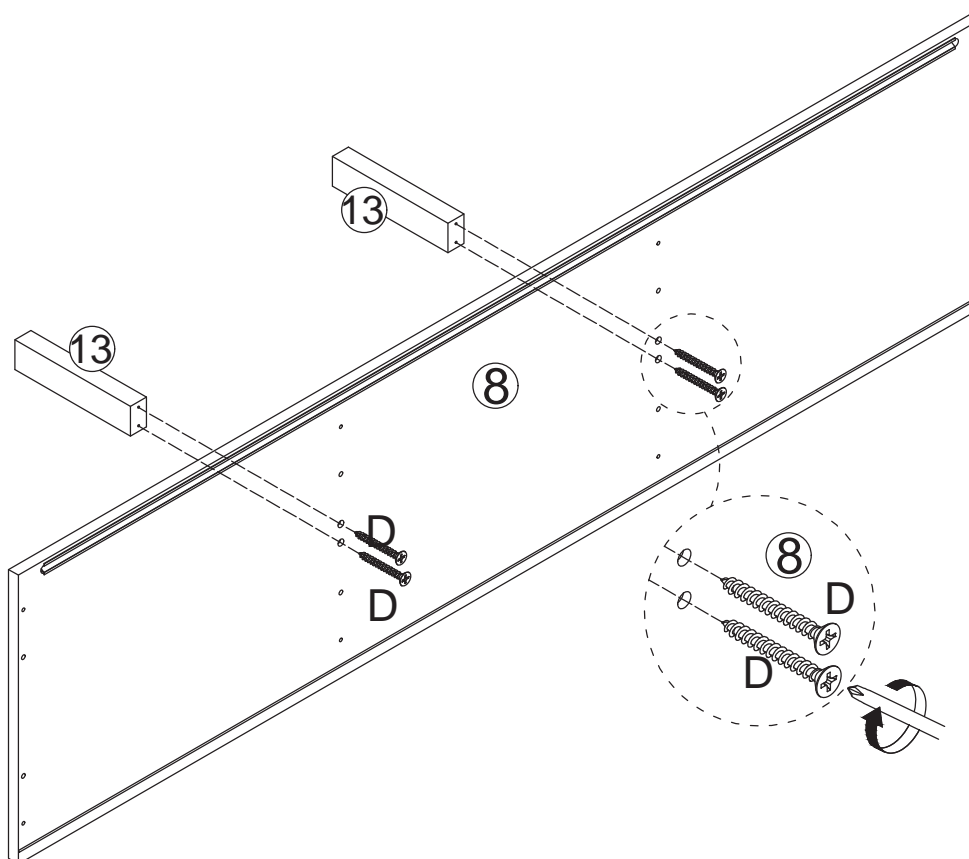  



7

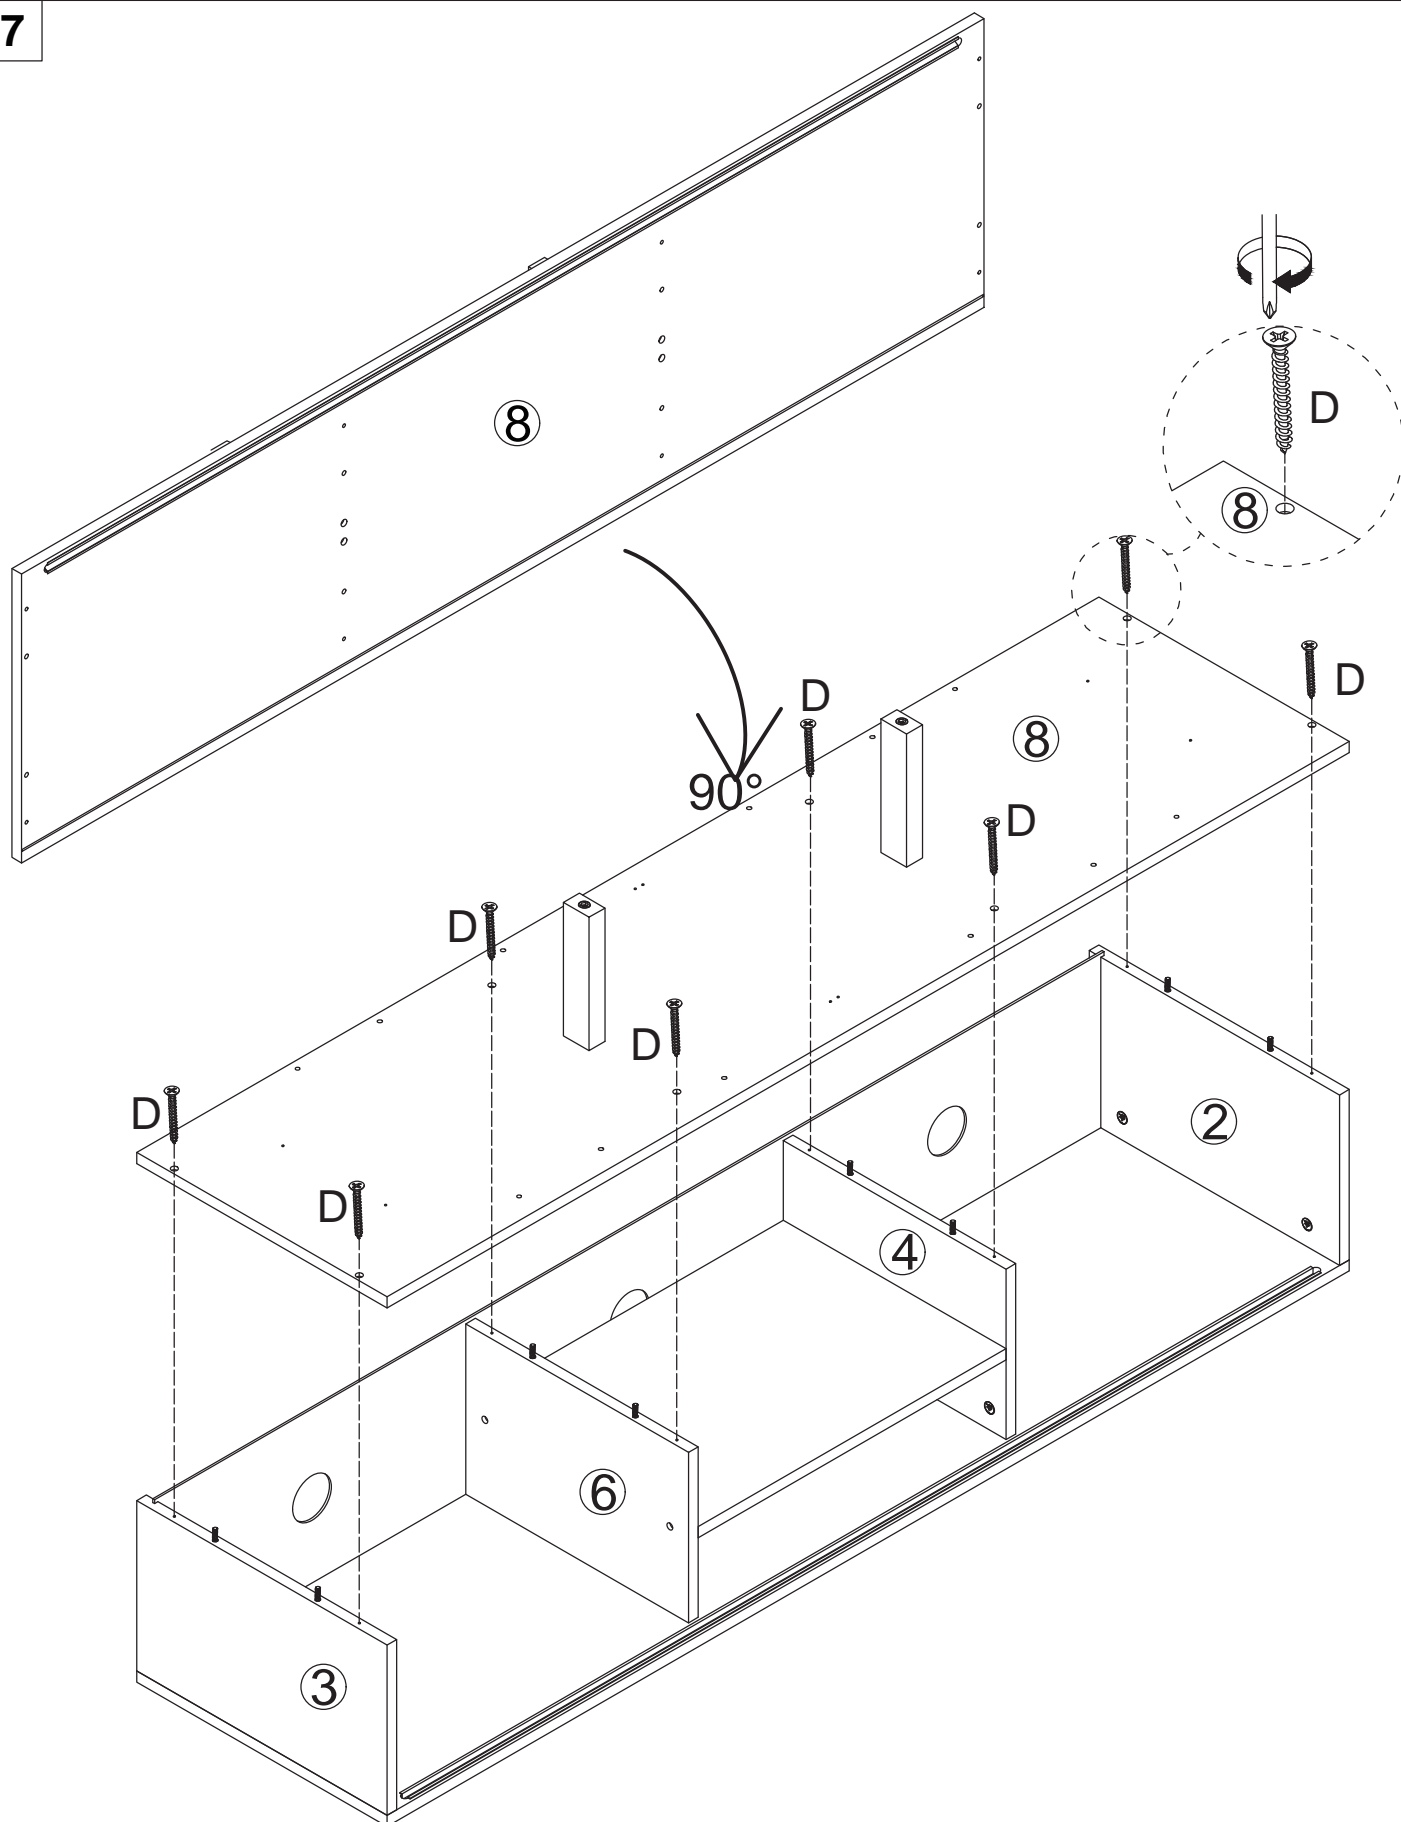 


D X8




Ø4x35mm

 
8

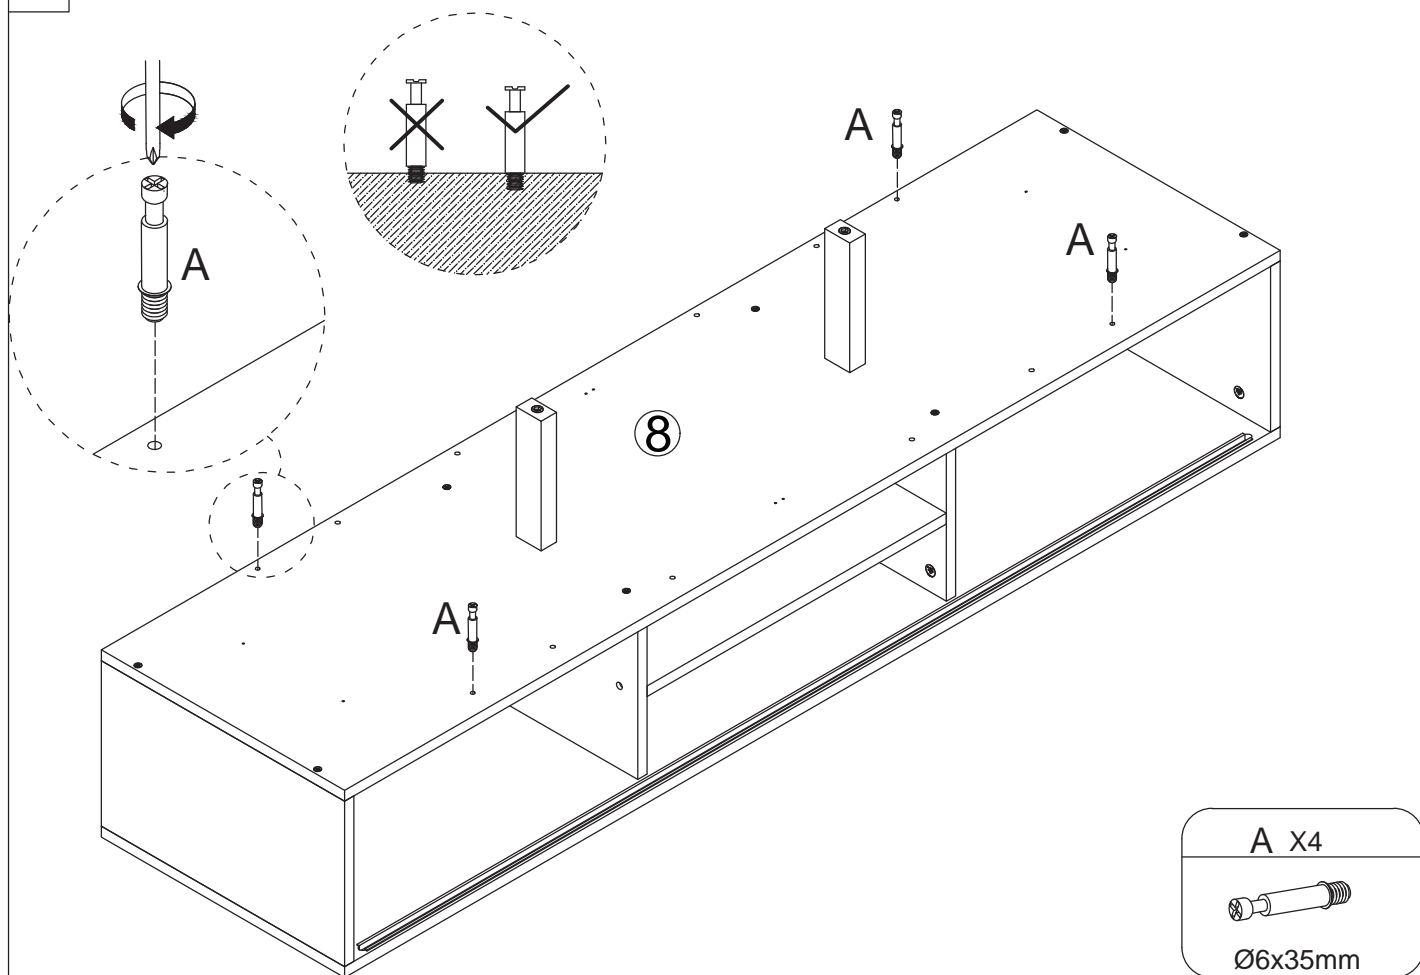


9


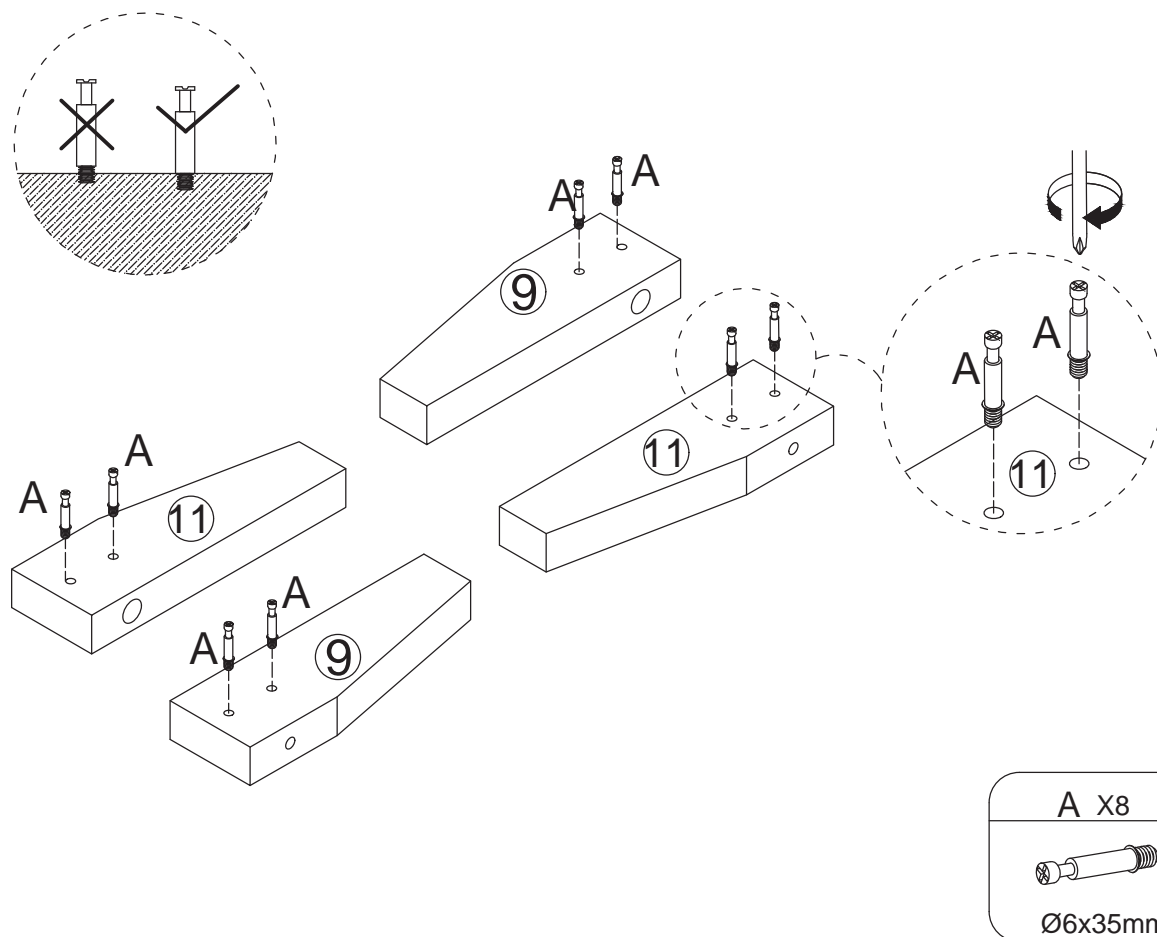 


10

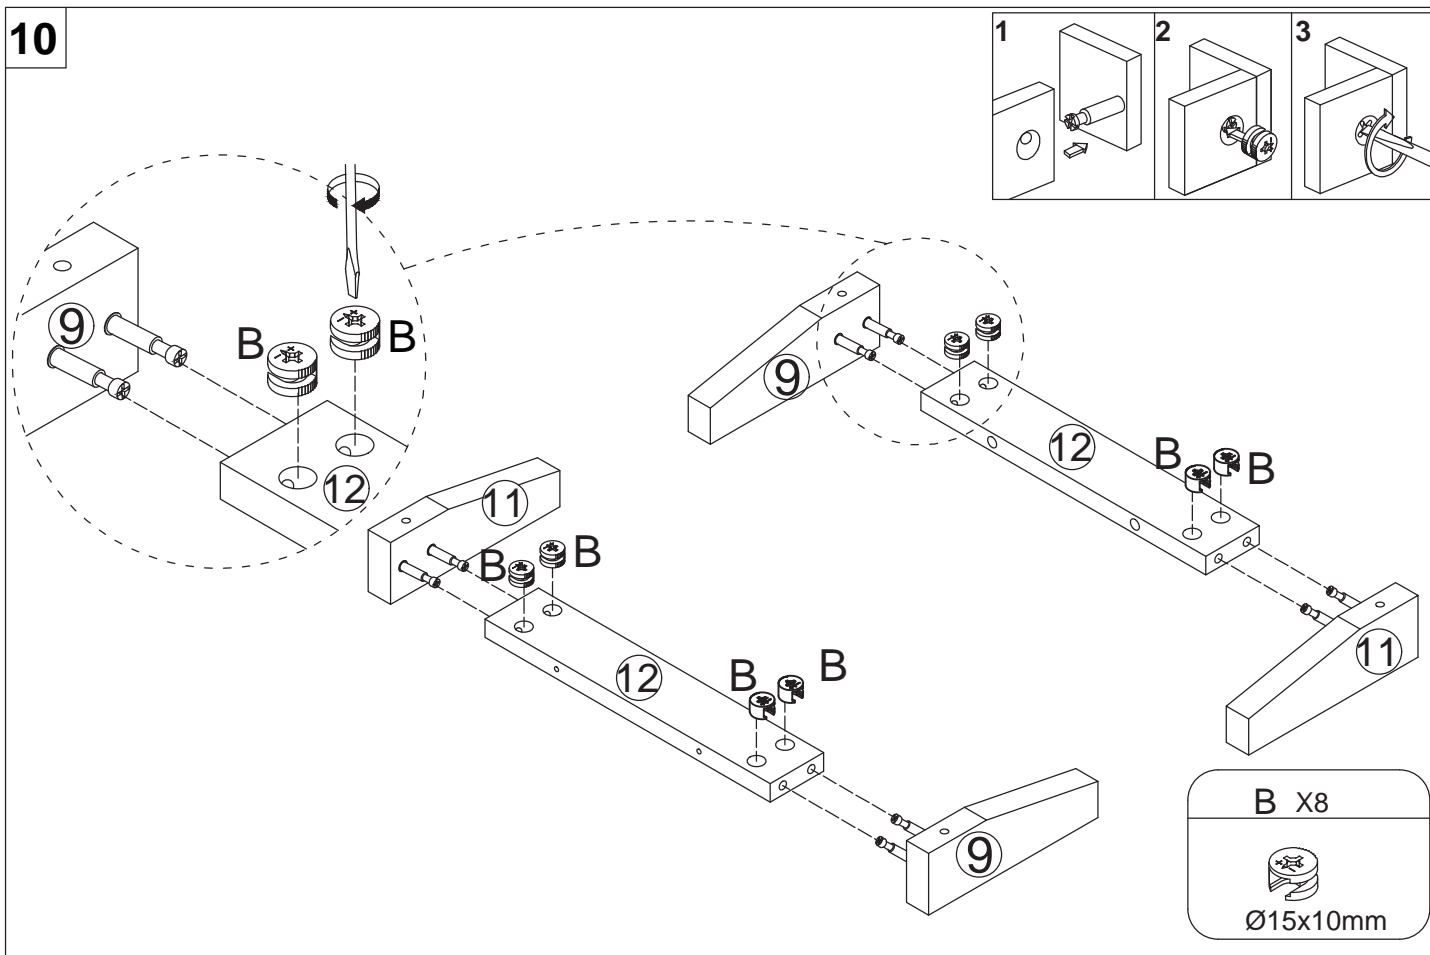 

11

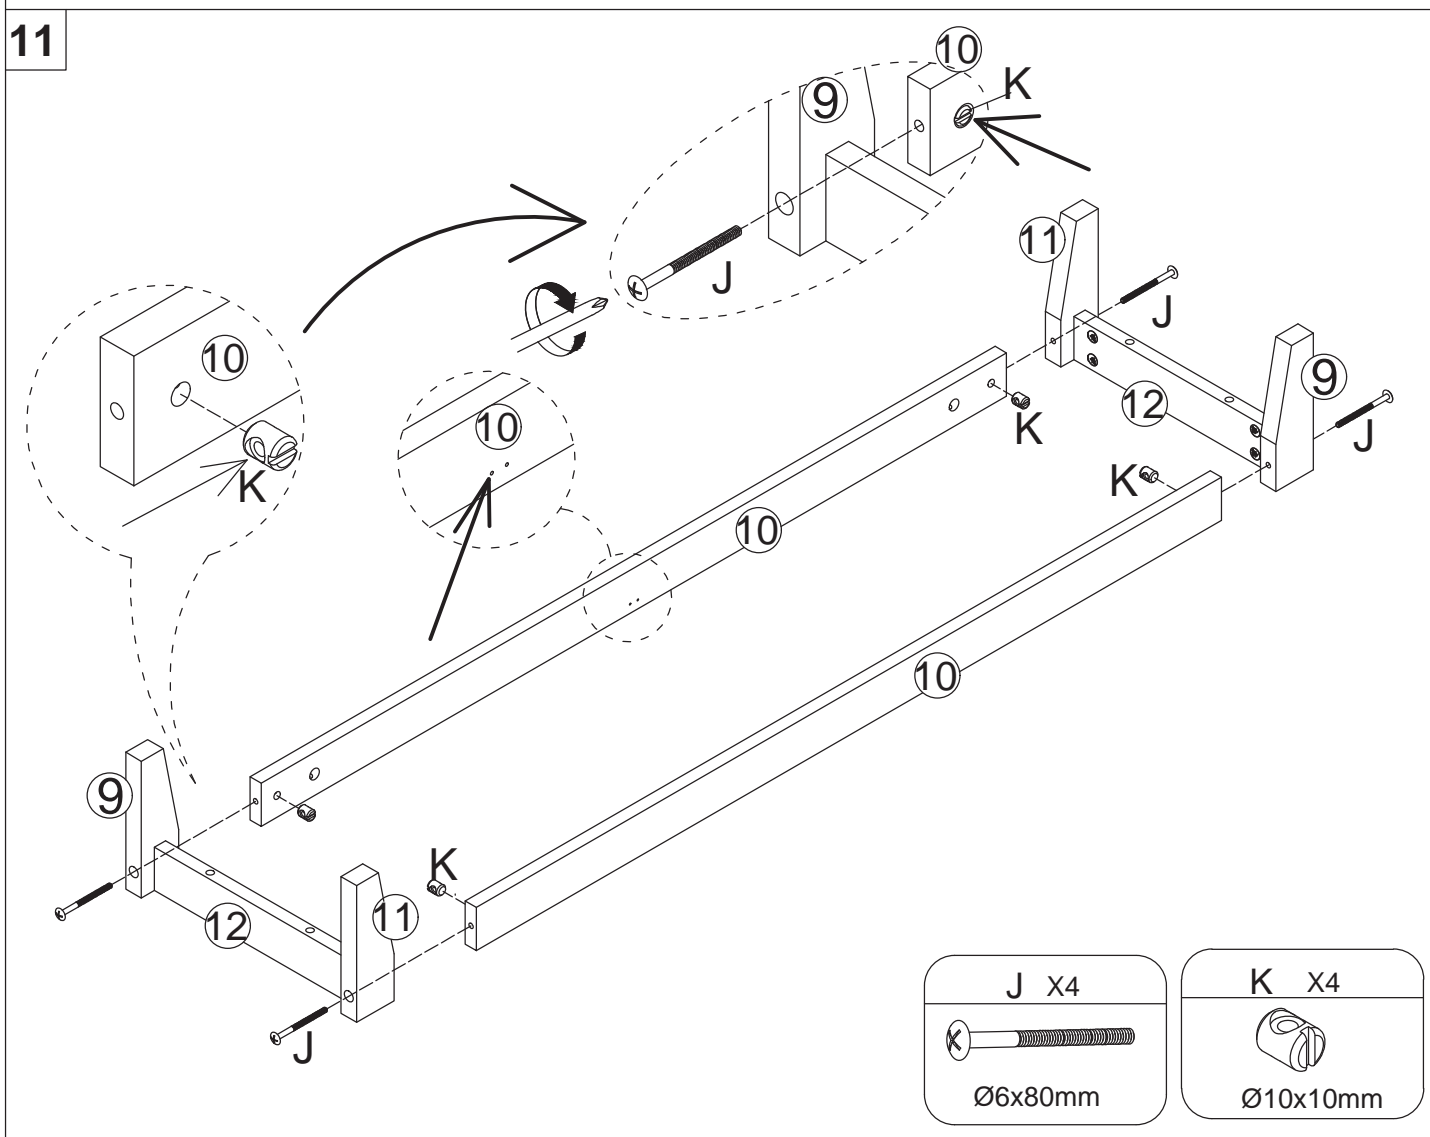 

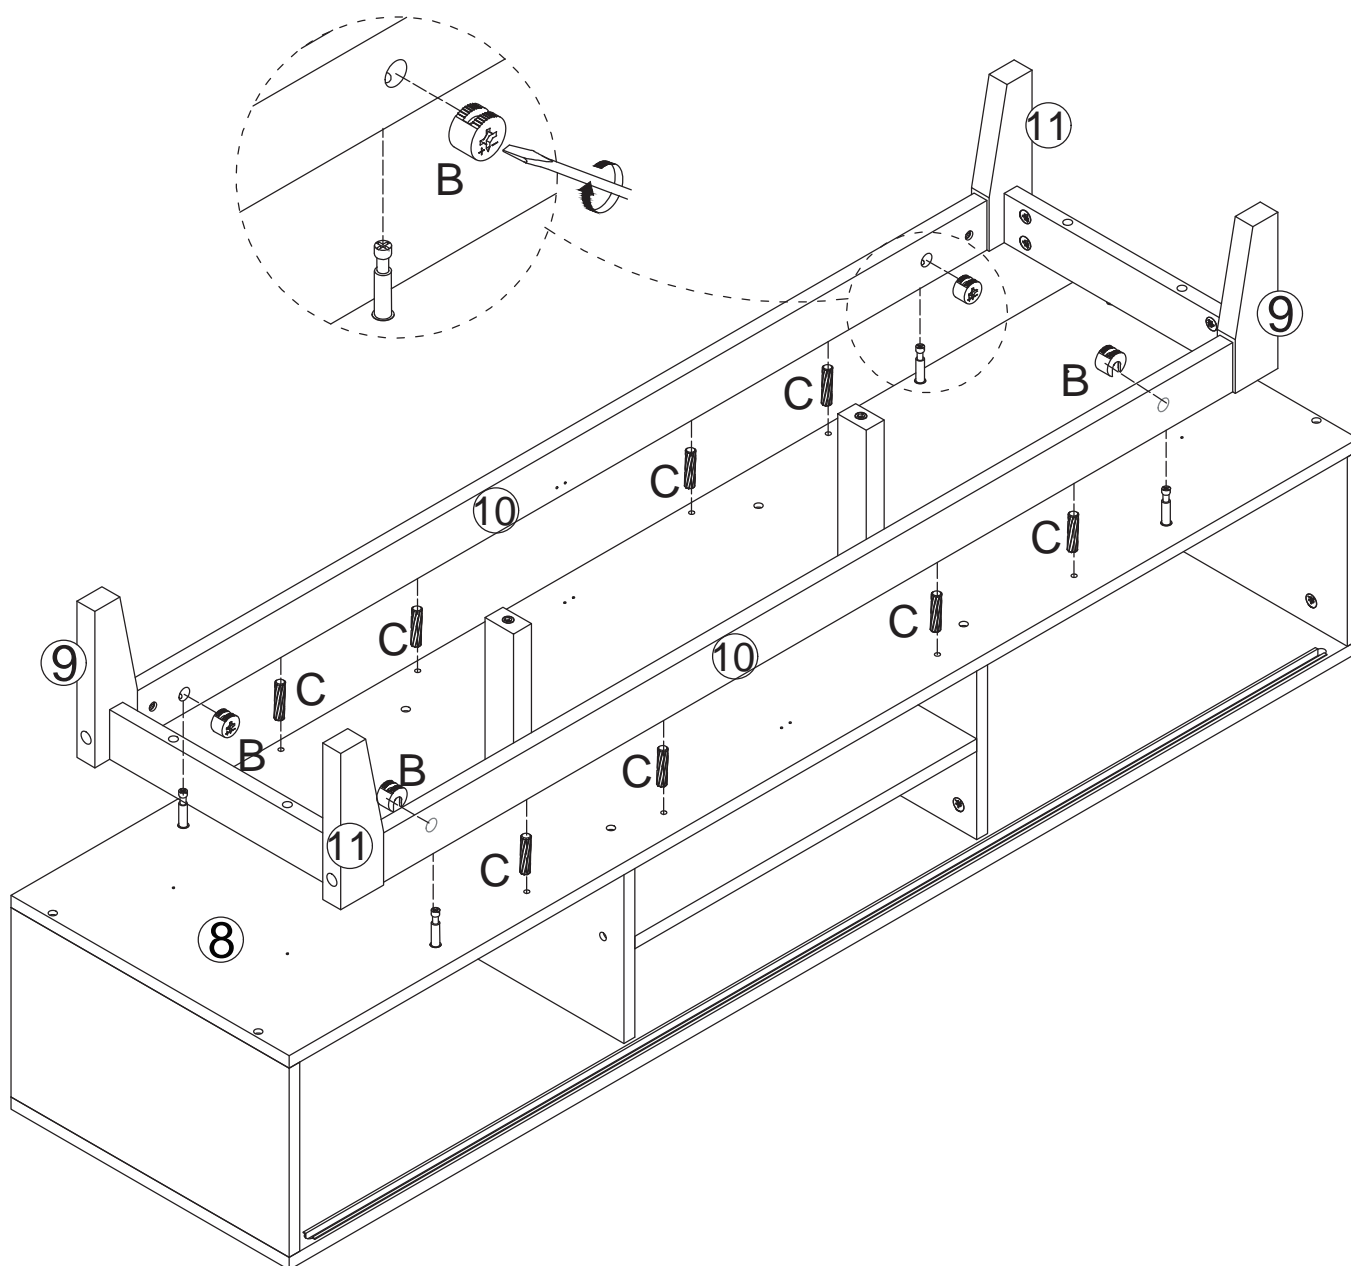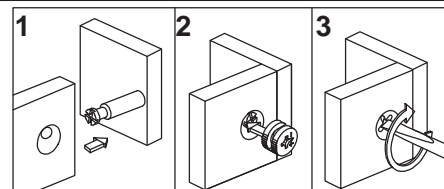  

B X4



 
Ø15x10mm

C X8






Ø6x30mm


13


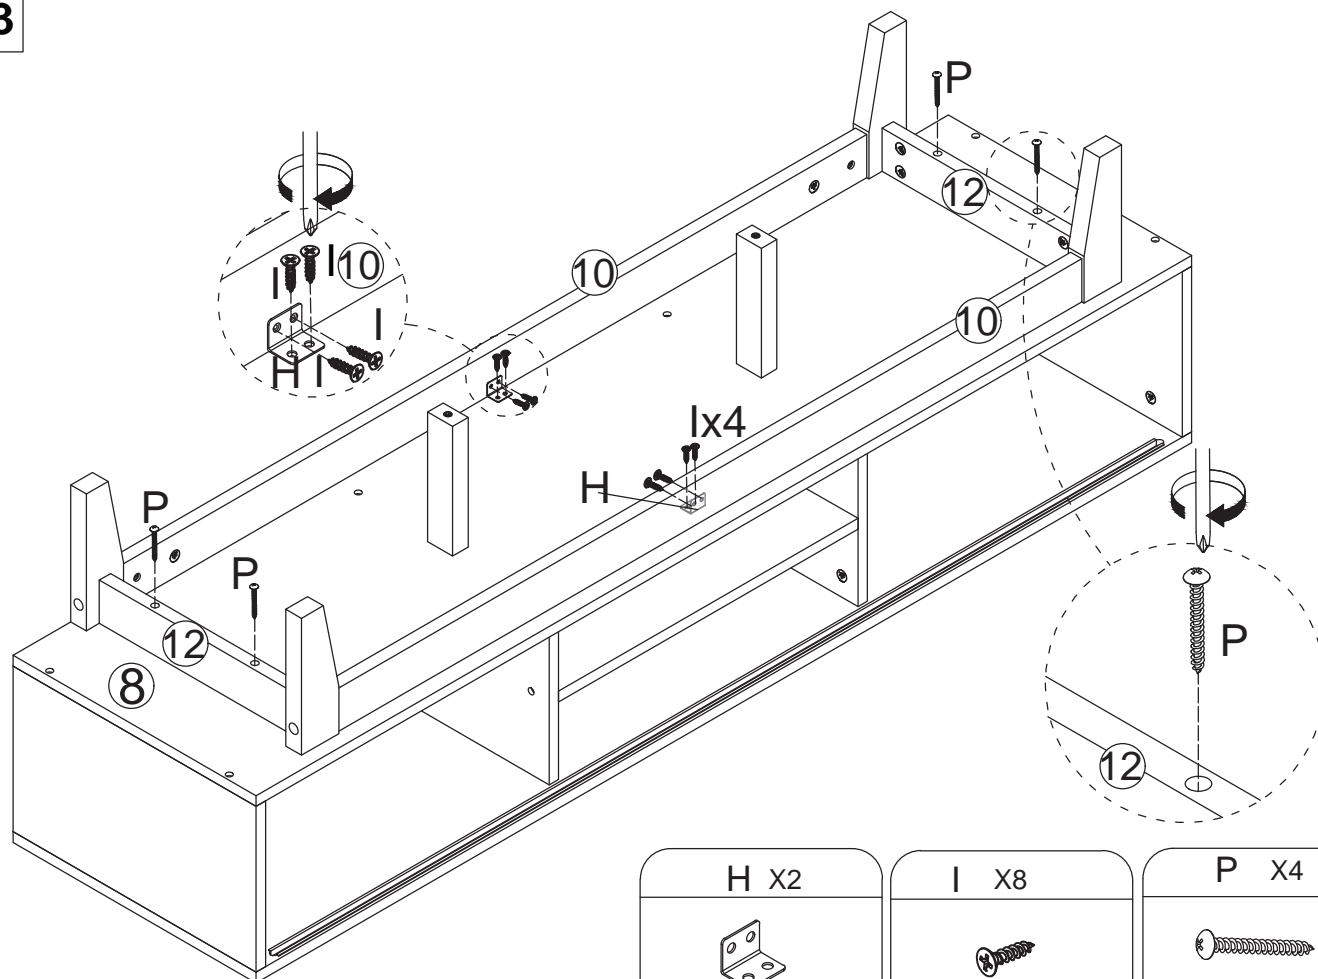


14


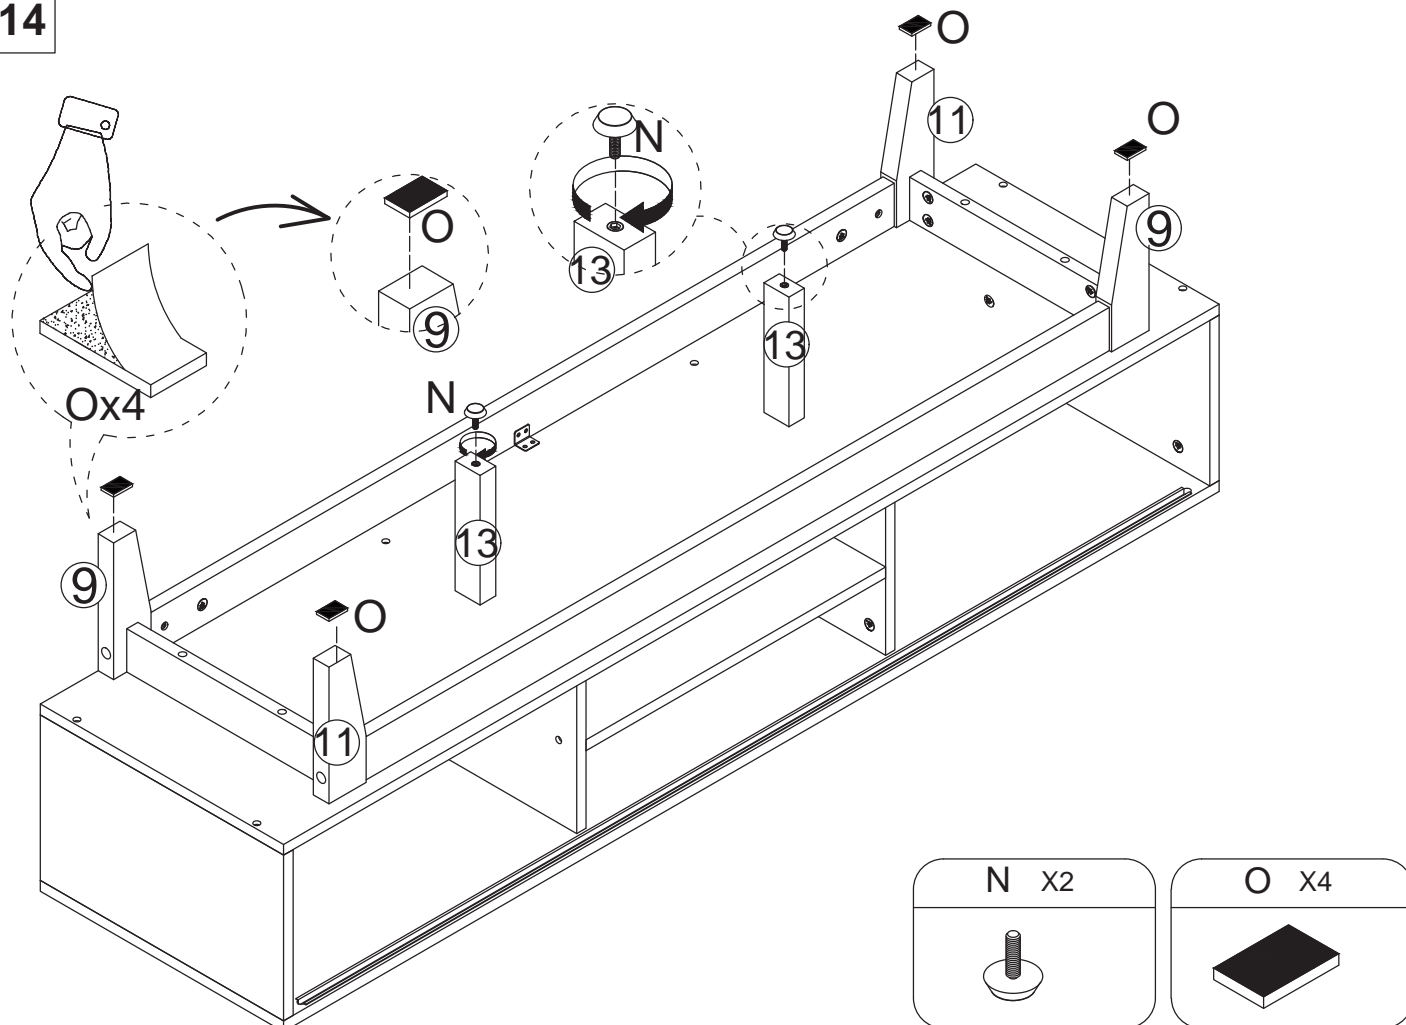 


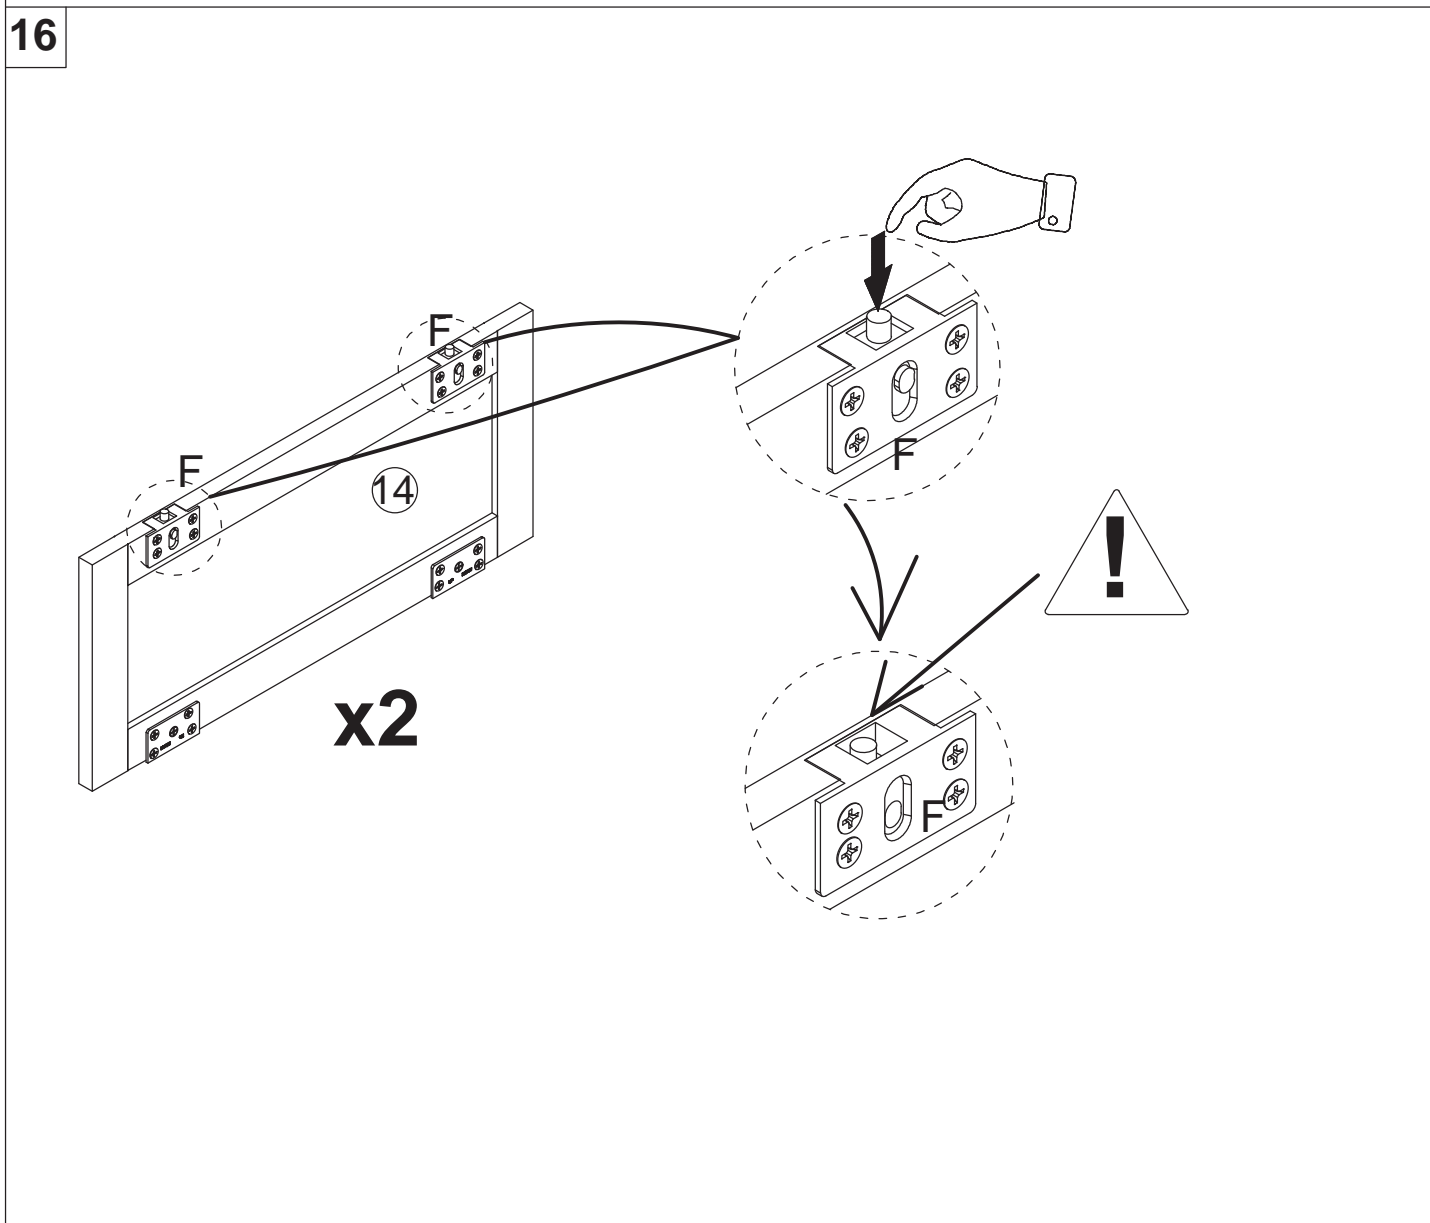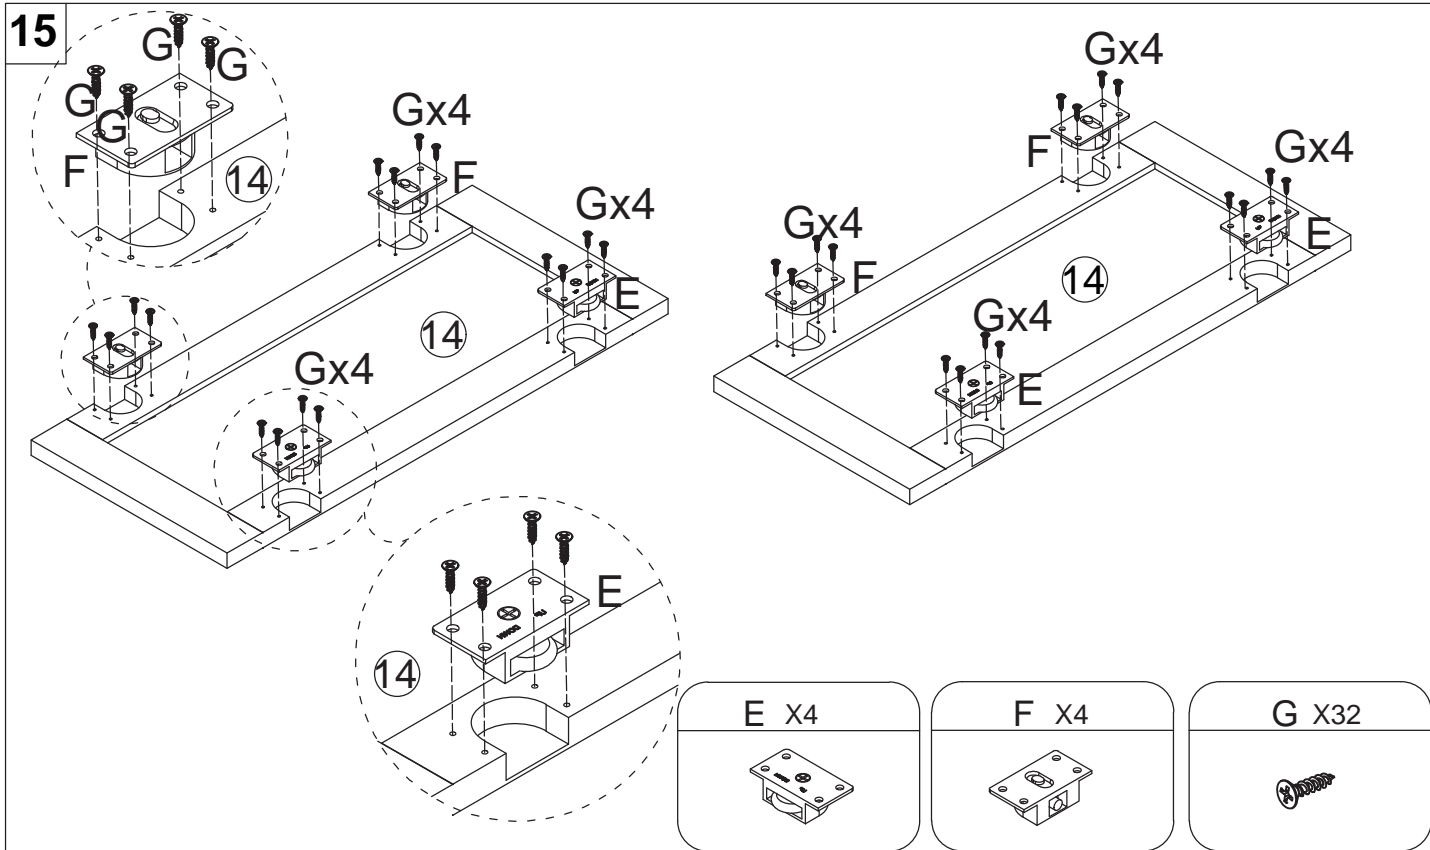  

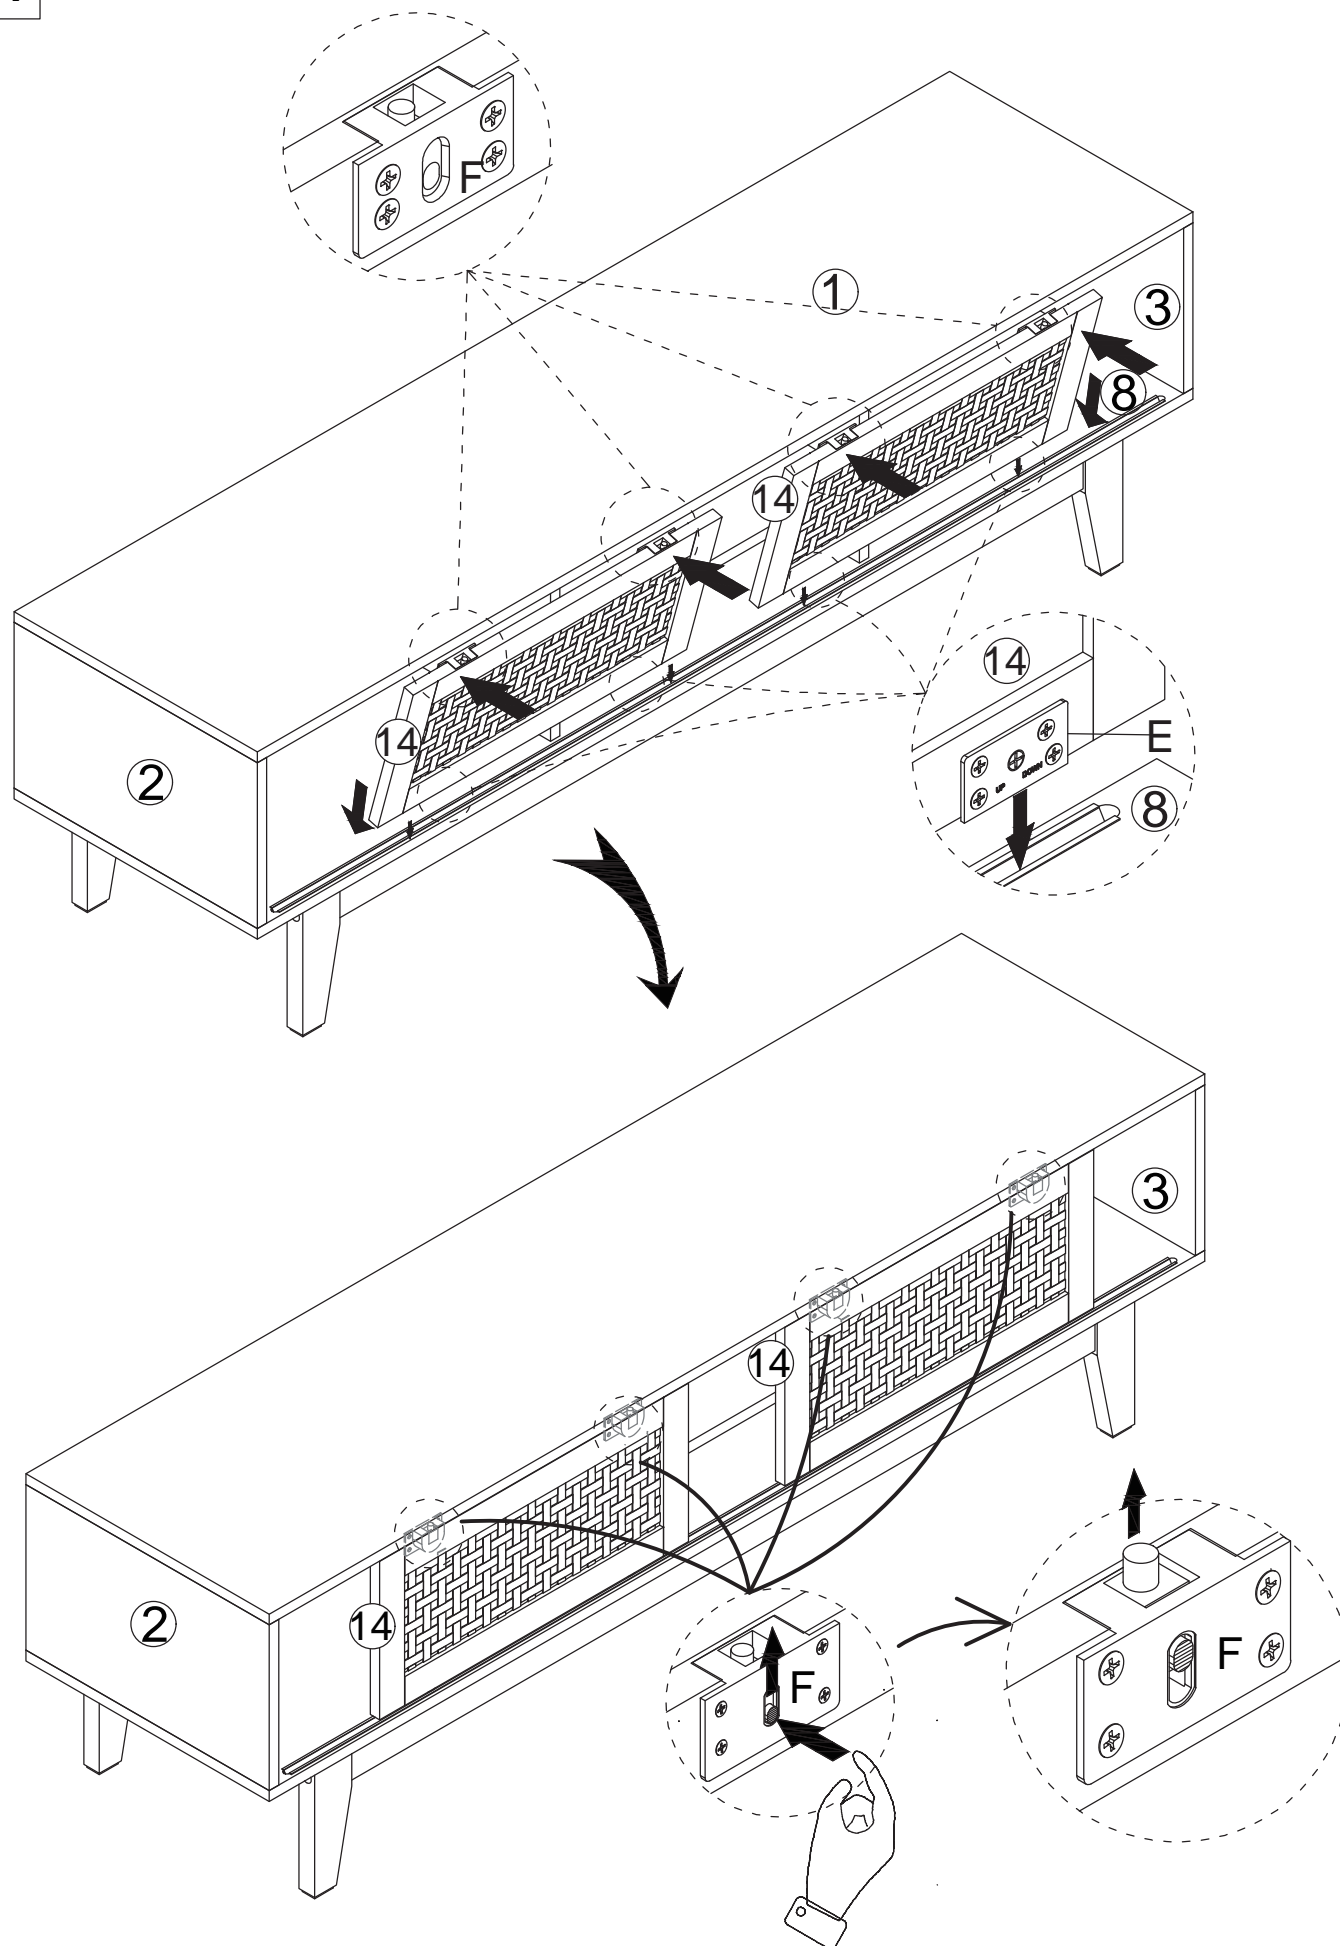 

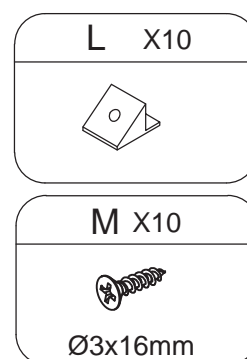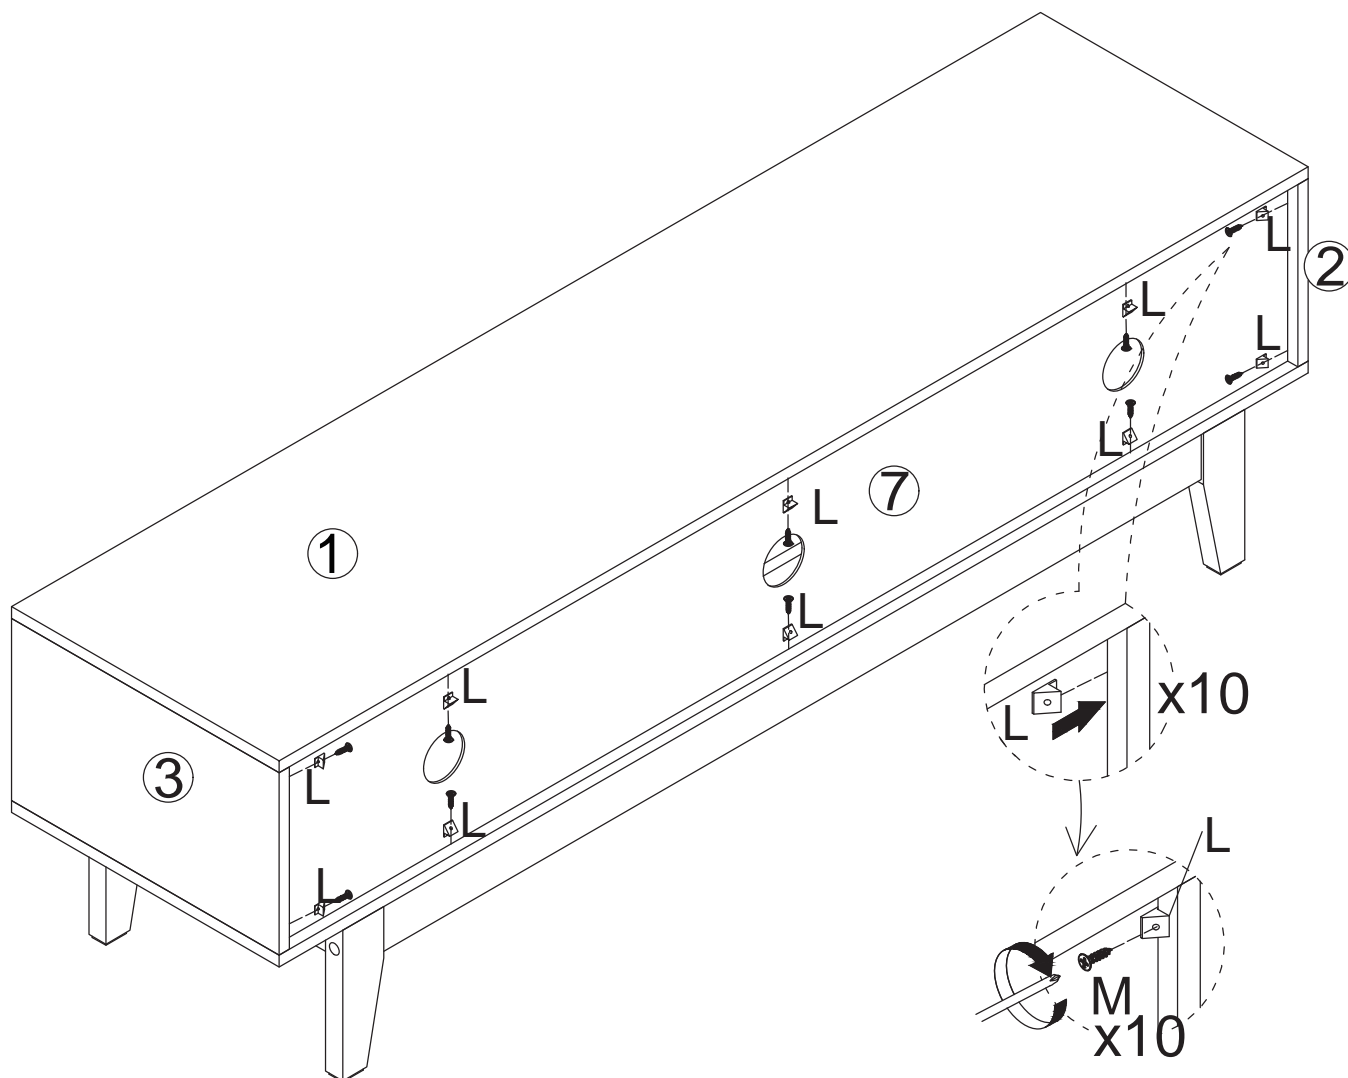    



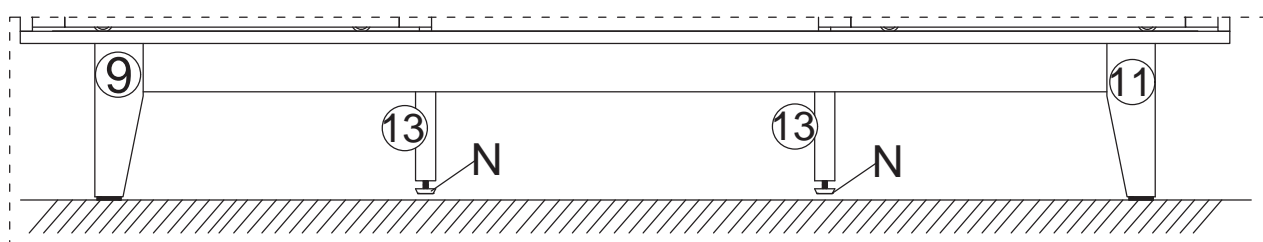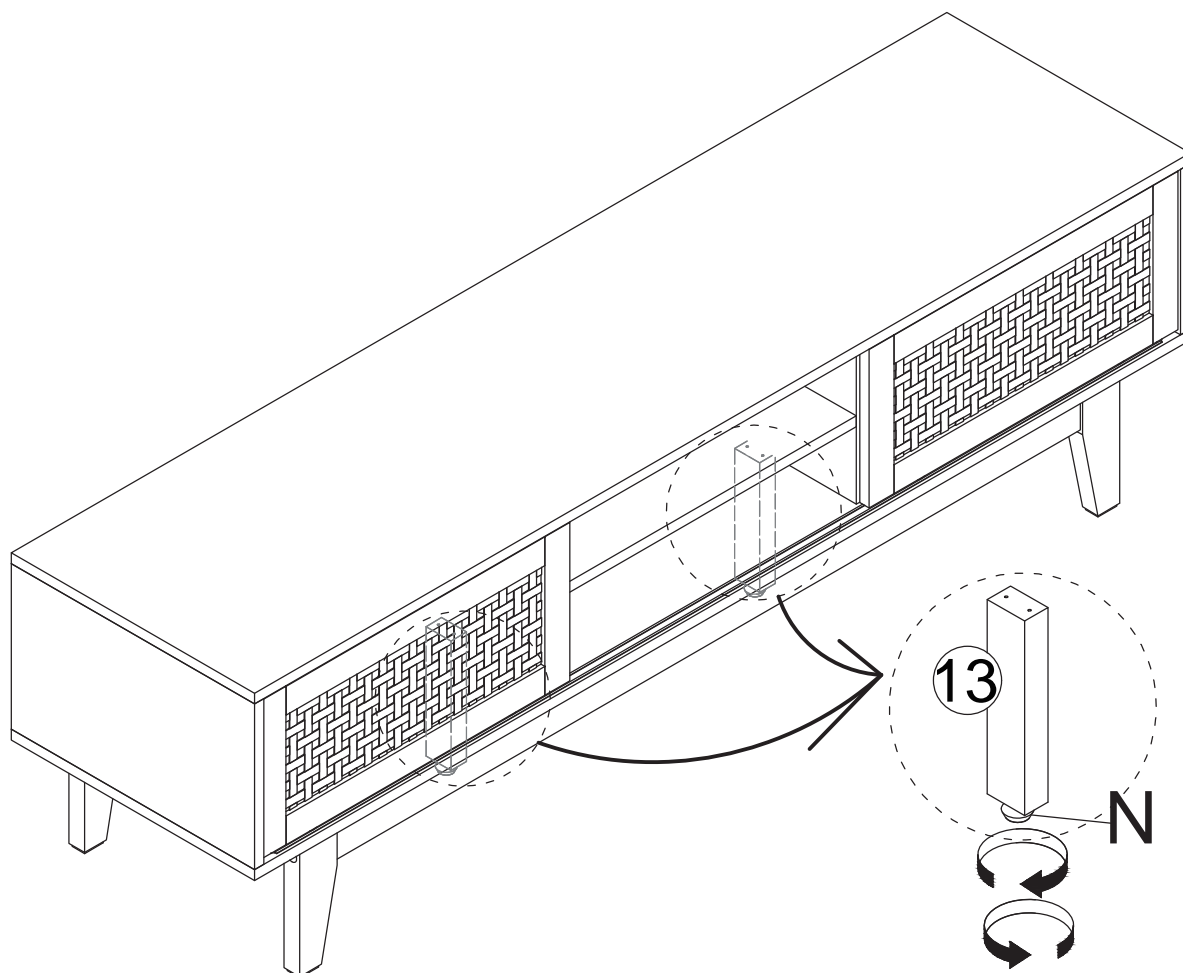

If the TV cabinet is unstable with the ground, please rotate the 13 # adjusting foot pad (N).

