


ASSEMBLY INSTRUCTIONS

A: TABLE LAMP

1. UNWRAP ALL PARTS. CAREFULLY REMOVE ALL PARTS FROM PACKING MATERIAL.
2. SCREW SOCKET ASSEMBLY ONTO LAMP BODY. BE CAREFUL NOT TO TWIST POWER CORD.
3. PLACE HARP ONTO SADDLE.
4. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.
5. PLEASE USE MAX 3-WAY 100W TYPE "A" BULB (BULB NOT INCLUDED)

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

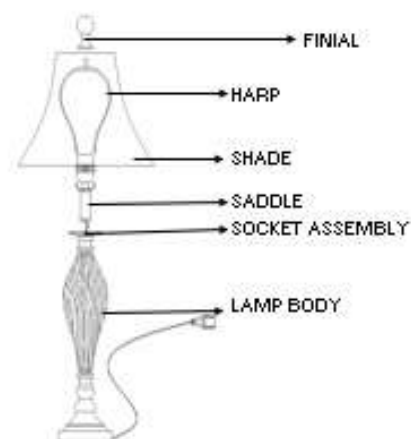

B: FLOOR LAMP

1. UNWRAP ALL PARTS. CAREFULLY REMOVE ALL PARTS FROM PACKING MATERIAL.
2. SCREW TUBE 1 ONTO BASE.
3. SCREW TUBE 2 ONTO TUBE 1.
4. SCREW TUBE 3 ONTO TUBE 2.
5. FASTEN SOCKET ASSEMBLY ONTO TUBE 3. BE CAREFUL NOT TO TWIST POWER CORD.
6. PLACE HARP ONTO SADDLE.
7. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.
8. UTILISER UNE AMPOULE 3-WAY 100 WATTS MARCHE/ARRÊT SUR LA LAMPE (AMPOULE NON INCLUSE).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

