

ASSEMBLY INSTRUCTIONS

 
DINING TABLE

ASSEMBLY
REQUIREMENTS

2-Person
Assembly

Assembly Time: 30 minutes
(Approximate)

Tools Required: Phillips Screwdriver
(Not Provided)




Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS
ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS

We appreciate your business!

**THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD
USE ONLY – NOT FOR COMMERCIAL USE.**

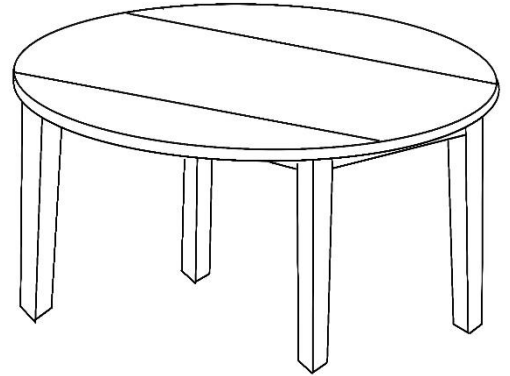

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.







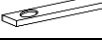
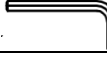


TIPS FOR ASSEMBLY

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

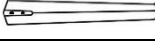ASSEMBLY INSTRUCTIONS DINING TABLE

Parts List				Hardware List				
NO	DESCRIPTION	PART	QTY	NO	DESCRIPTION	PART	QTY	EXTRA
1	TABLE TOP		1 PC	A	JCBC BOLT M8 X 60MM		8 PCS	1 PC
2	LEAF TOP		2 PCS	B	FLAT WASHER		8 PCS	1 PC
3	TABLE LEG		4 PCS	C	SPRING WASHER		8 PCS	1 PC
4	RUNNER RAIL		4 PCS	D	M5 ALLEN KEY		1 PC	
				E	M3.5 X 16MM CHIPBOARD SCREW		12 PCS	1 PC
				F	NAIL LEG			2 PCS


*Extra Hardware For Spare Use

STEP 1

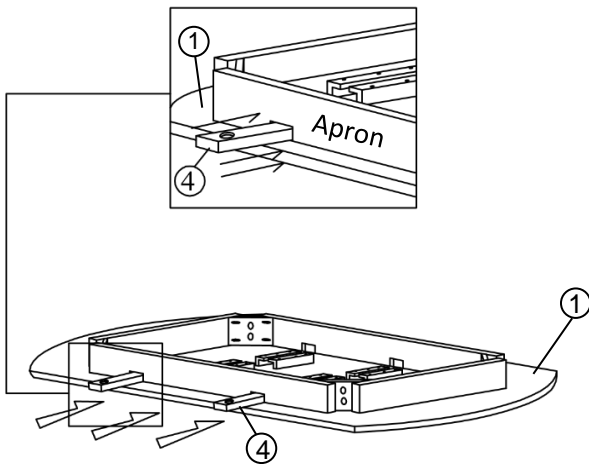


- a) With assistance, lay Table Top (1) flat as shown on a material that does not damage the part.
- b) Insert and fit the Runner Rail (4) through the 4 slots on the table apron.

STEP 2

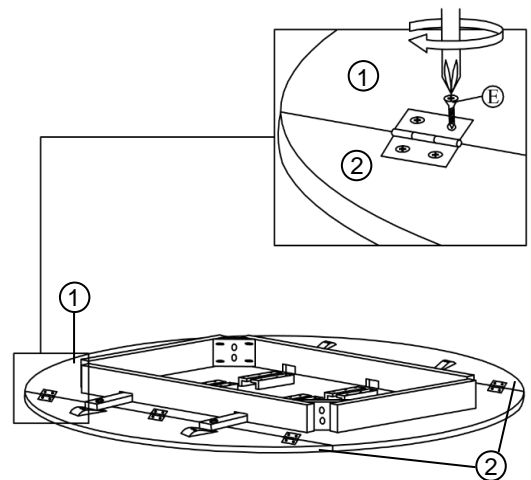


- a) Position and align each Leaf Top (2) to Table Top and use Screw (E) to fasten hinge on (2) to (1). Do not tighten (E) completely until all of the screws are in place on (1).

STEP 3

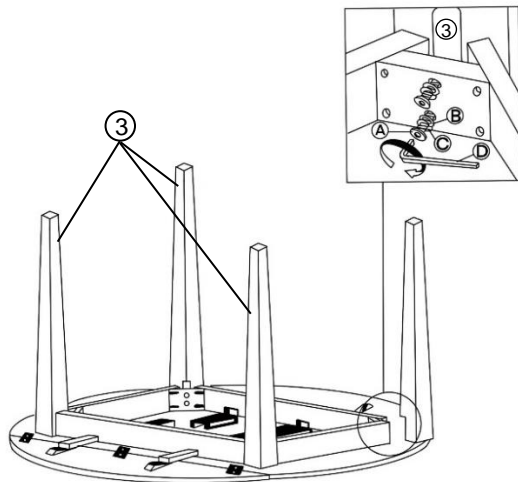

- a) Position a Table Leg (3) as shown and align the screw holes on (3) to the screw holes on the corner block
- b) Insert Bolt (A) fitted with Spring Washer (C) and Flat Washer (B) through each hole on the corner block into screw hole on (3). Use Allen Key (D) to drive (A). Do not tighten (1) completely until both screws are in place on each leg. Do not over-tighten.

STEP 4

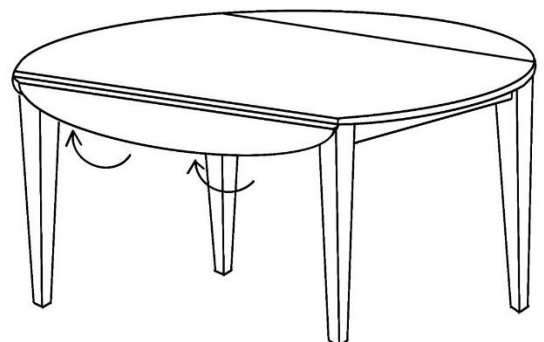

- a) With assistance, set the table from STEP 3, right-side up.
- b) Retract or extend Runner Rail (4) on underside of Table Top to drop down or use Leaf Top feature respectively.

The assembly of the drop-leaf table is complete.