

## Matters need attention

The washing machine should be placed indoors in a ventilated and dry place, the ground should be flat.		The installation height of the drainage pipe from the ground should be less than 15cm for drainage.	
Avoid direct sunlight, otherwise, the color and shape of plastic will change.		When the washing machine is not in use, don't put it in a place with much warm air and close to the fire, so as not to damage the machine.	
The ground wire end of the power socket must be firmly grounded separately. Do not change the plug.		To prevent electric shock, do not splash water on the control board and switches.	
To prevent the deformation of the barrel, please do not pour water above 40 directly into the barrel.		When dehydrated, the cover must be used to prevent clothing from flying out.	
Please do not wash and dehydrate clothes with a lot of alcohol, gasoline, and organic solvents. Because these volatile substances are mixed with air, there is a risk of fire and explosion.		Children are not allowed to climb on the washing machine to play, it is too dangerous to fall.	
Do not place hot, heavy items on the washing machine to prevent the deformation of plastic parts or damage to parts.		When the dehydration bucket is rotating, it is strictly prohibited to reach in or touch it to prevent injury.	
When inserting or removing the power cable, connect the plug "Y" to the handle. The power cable is damaged. Do not replace it by yourself. Please contact the maintenance department.		To remove dirt from the washing machine, use a soft cloth with neutral detergent. Do not use acid or alkali products.	


-5-

# Double-tub Washing Machine

## User Manual

SKU:DSN090BL303A

SKU:DSN090GN302A

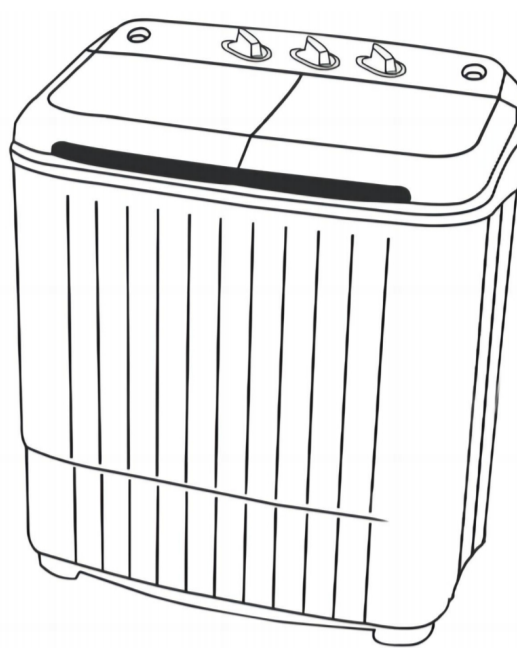

- Thank you very much for your purchase of this series of products
- Please read the instructions carefully before using the product
- Please keep this instruction manual properly

## Rinse and wash

★ Repeat the above washing procedure twice, washing dehydration washing dehydration. (Generally, rinse twice and dehydrate twice)

Rinse can be washed with water after drainage, or can be dehydrated before rinsing. The latter is easy to rinse clean, and saves electricity and water.

## Pay attention to dehydration


★ Clothes with high water absorption, such as down jackets, are prohibited from being placed in the dehydrator.



- ★ The garment press plate should be pressed correctly, otherwise, the garment will collide with the box during high-speed rotation and fail during dehydration.
- ★ Do not dehydrate and drain at the same time, you must wait for the water to be drained, and then transfer the clothes to the bucket, otherwise, the bucket will store water so that dehydration can not be normal. It is also easy to damage the machine parts.

★ If there is an abnormal impact sound when the dehydrator is in operation, the clothes are not placed evenly or the pressure plate is not properly placed. Please open the dehydrator cover plate, place the clothes evenly and press the pressure plate tightly, and then close the dehydrator cover plate.

★ It is forbidden to put your hands into the rotating dehydrating bucket, especially for children.

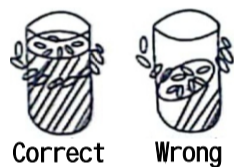

## After washing

- ★ Unplug the power cord, turn off the tap and then hang up the drain pipe.
- ★ Get rid of the debris in the bucket, dry the water marks and open the door cover to let the internal moisture out.

## Special Suggestion


The washing machine suddenly stopped working?  
It's probably the heat protector that's keeping you safe!  
When the washing machine is overheated (such as too much clothing, poor ventilation) or abnormal load (such as clothing entanglement), the thermal protector will automatically cut off the power to prevent motor damage.  
In this case please:  
1. Suspend the use until the motor is cooled for more than 3 hours (the thermal protector automatically resets);  
2. Take out some clothes to avoid overload;  
3. Clean the vents at the bottom to ensure heat dissipation.  
Daily attention: the amount of laundry should not exceed the fixed capacity, and regular cleaning of the filter screen and ventilation holes can effectively prevent abnormal shutdown.

## Packing list

1. Washing machine: 1 unit
2. Inlet pipe: 1 piece
3. Clothes presser: 1 piece
4. User manual: 1 copy

-4-

## Component name

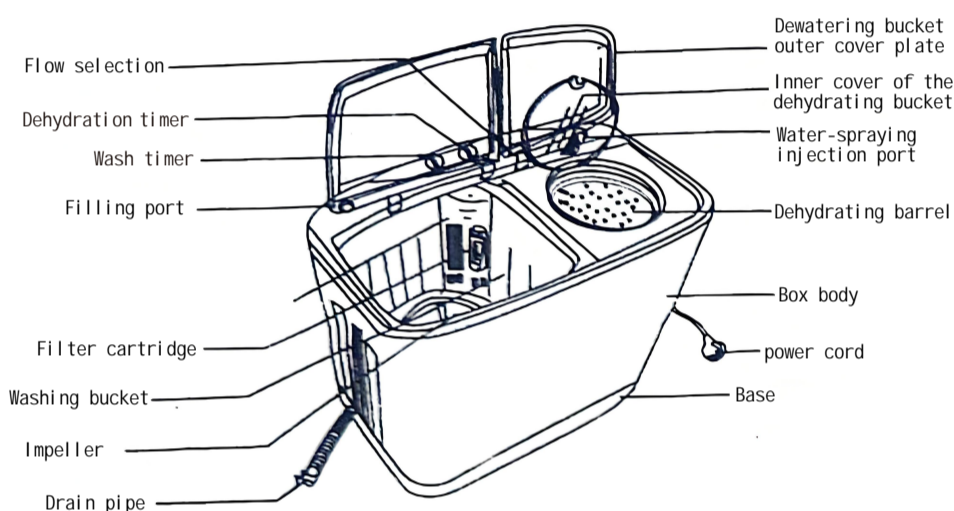

Note: The pictures in this manual are schematic diagrams. If there are any discrepancies, the actual object shall prevail.

## Install in a firm and flat place

- ★ The washing machine should be placed on a solid and flat ground. The maximum allowable inclination angle is 2°.
- ★ The washing machine should be placed more than 5cm away from the wall to prevent noise during operation.




## Ground connection

1. This machine uses a non-reconnectable three-prong power plug (flat foot) with a grounding wire. The grounding pole on the power plug is connected to the grounding screw on the box, and the power plug cannot be changed by yourself.
2. Please use the corresponding three-level power socket with a properly connected ground wire for power supply. The phase line of the power socket is L, the neutral line is N, and the ground line is E should be consistent with the power supply. Otherwise it may produce induced electricity.
3. Do not disassemble the back of the washing machine by yourself. Ⓢ marked grounding screw.
4. The power cord of this machine is connected in Y type. If the power cord is damaged during the use of the washing machine, please go to the maintenance point designated by our company and replace it by professionals.

-1-

## Wash timer

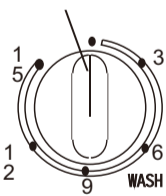

- Set the washing mode (rotate the "SWITCH SELECTOR" button)

Rotate the "SWITCH SELECTOR" button and select the middle position.

- Set the washing time (rotate the "WASH TIMER" button)

When the incoming water reaches the set water level, rotate the "WASH TIMER" button clockwise to set the required time, and the washing machine will start to work.

Washing selection	Standard		
Clothing materials	Goods and high-grade clothing Silk fabrics, plush fabrics	Ordinary cotton and linen products	Clothes that are dirty
Wash time	3-5 minutes	5-9 minutes	9-15 minutes

- drain water (rotate the "drain switch" button)

When the washing is finished, turn the "drain switch" button to the "drain" position and drain water.

- Set the dehydration time (rotate the "Dehydration Timing" button)

★ After the drainage is completed, move the clothes to the bucket and press the clothes sheet onto the clothes. Cover the inner dewatering cover and dewatering cover.  
Turn the "Dewatering timing" button clockwise to the required dewatering time, and the washing machine starts to work.

Clothing categories	Dehydration time
Shirts (synthetic fiber)	1-2 minutes
Underwear	3-5 minutes
Working clothes	5 minutes

-3-

## Preparation before washing

	Take out keys, pins and coins from your clothes.		Clothes stained with chemical reagents should not be washed in the laundry bucket.
	When washing fur clothes, turn the inside out.		It is best to wash high-grade clothes in a washing net bag.

## Washing procedure

	Connect the tap and insert the other end into the water injection port.		Plug the power cord into the socket. The three-pole socket must be reliably grounded.
	Remove the drain pipe.		Put in the clothes and add an appropriate amount of laundry detergent.

## Extension of drain pipe

1. When there are obstacles with a height of less than 15cm on the way, the extension length is less than 1m.



2. When there is no obstacle on the way, the allowable extension length is within 2m.

-2-