


Side Knob Function Description

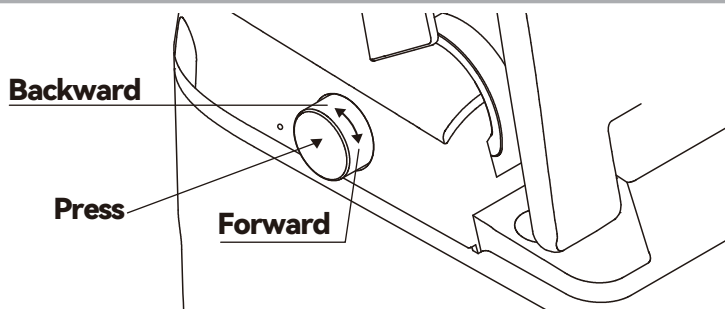

Knob function description
No need to reset the side knob after use

User sitting

- Hip wash: Knob forward, spray bar extend, hip wash works.
- Female wash: Knob backward, spray bar extend, female wash works.
- Mobile Wash: Under hip/female wash, twist the side knob forward or backward to start the nozzle moving and wash.
- Stop: Under wash working status, press the knob to stop current working function.

Not user sitting

- Press the knob to flush.
- Turn on /off ambient lighting: Knob forward.

Foot Kicking

- When the lid and seat are closed, foot kick the button to open the seat lid.
- When the lid open, seat closed, foot kick the button, the seat automatically opens;
- When the lid and seat are open, foot kick the button to activate the flushing function.

Remote Control Sync

This remote is pre-synced with current smart toilet at the factory. Normally, no additional syncing is needed.

If the remote is not working, you can try to re-sync it using the method below:



1. Restart the smart toilet (Turn off power and turn on power)
2. Rotate the knob on the side clockwise until you see the toilet LED screen flash.
3. Press any button on the remote.

Remote Function Description

The remote utilizes a dual-action press design for efficient control:
Short Press: Instantly activates the primary function labeled on the button.
Long Press (hold for 3-5 seconds): Activates a secondary, extended function associated with that button.

