TV STAND

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective . Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

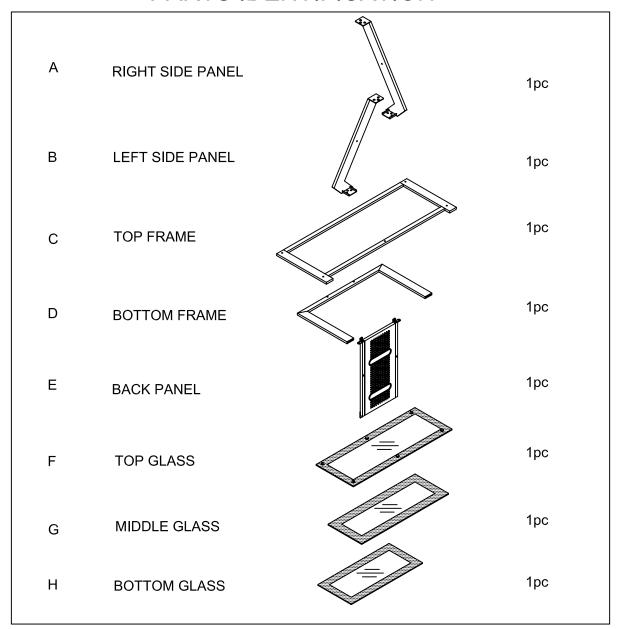


Page 2 of 8

ASSEMBLY INSTRUCTION


Z	HARDWARE PACKAGE		
	DESCRIPTION	FIGURE	Q'TY
1	ALLEN BOLT - EXTRA LARGE		2pcs
2	ALLEN BOLT - LARGE		5pcs
3	ALLEN BOLT - MEDIUM	(1) (1)	14pcs
4	ALLEN BOLT - SMALL		4pcs
5	WASHER	©	17pcs
6	GLASS CLIP		4pcs
7	ADJUSTABLE LEVELER		4pcs
8	RUBBER BUMPER		5pcs
9	ANCHOR		1pc
10	CONNECTION IRON		2pcs
11	TIPPING RESTRAINT	D	1pc
12	SCREW	Quinin-	1pc
13	ALLEN WRENCH		1pc

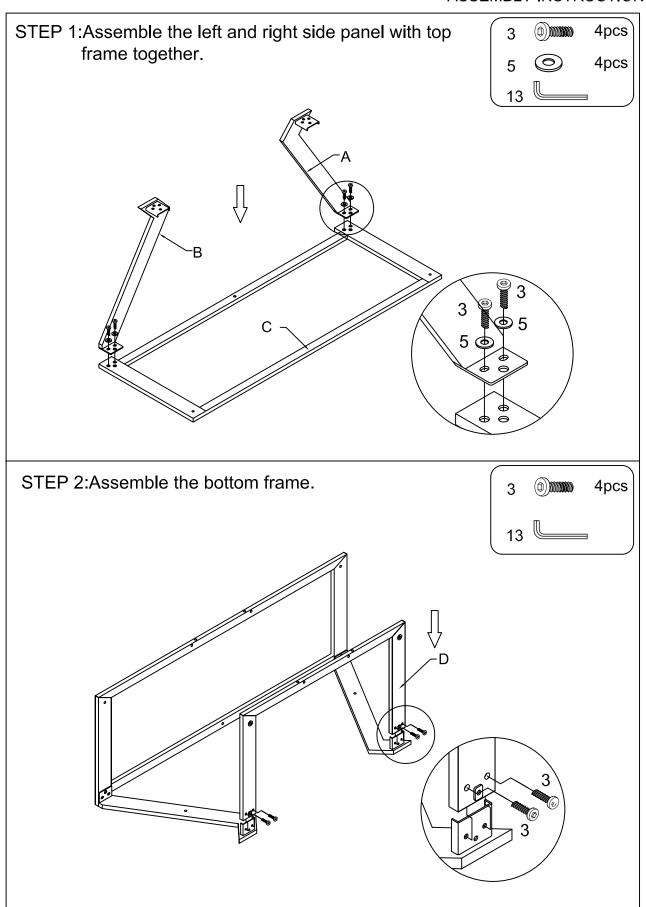


Page 4 of 8

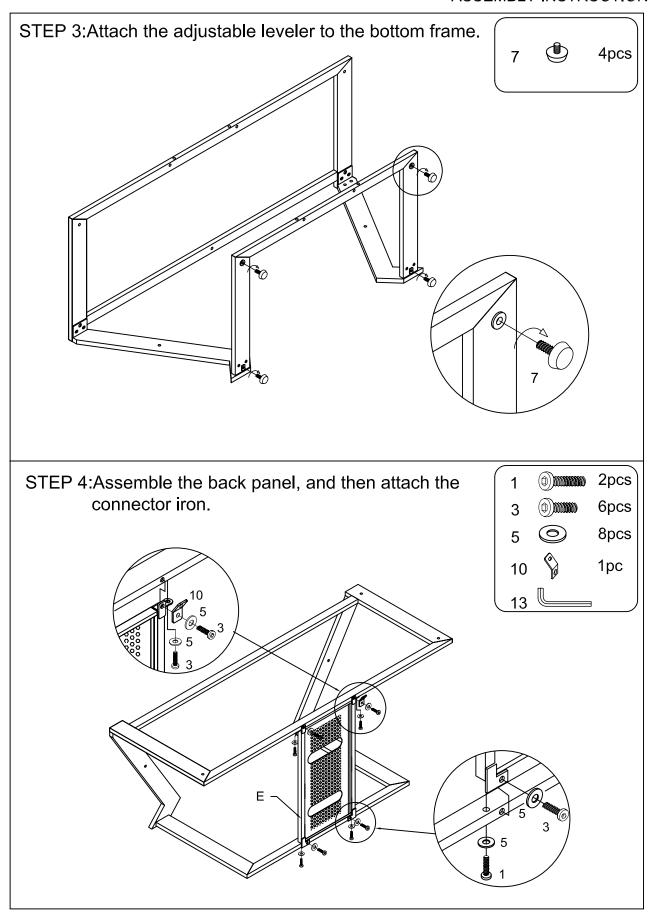

Page 5 of 8

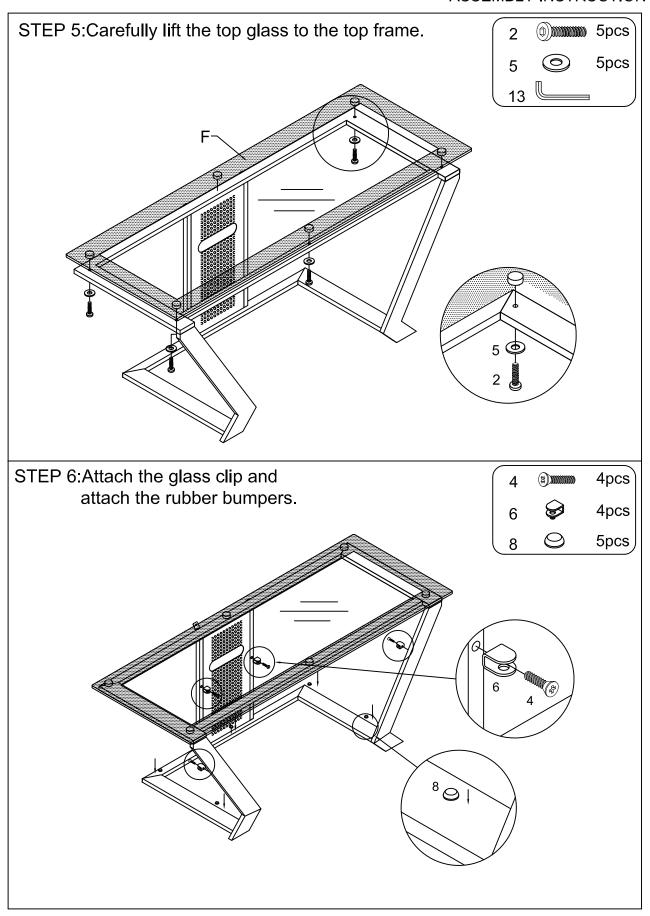

Page 6 of 8

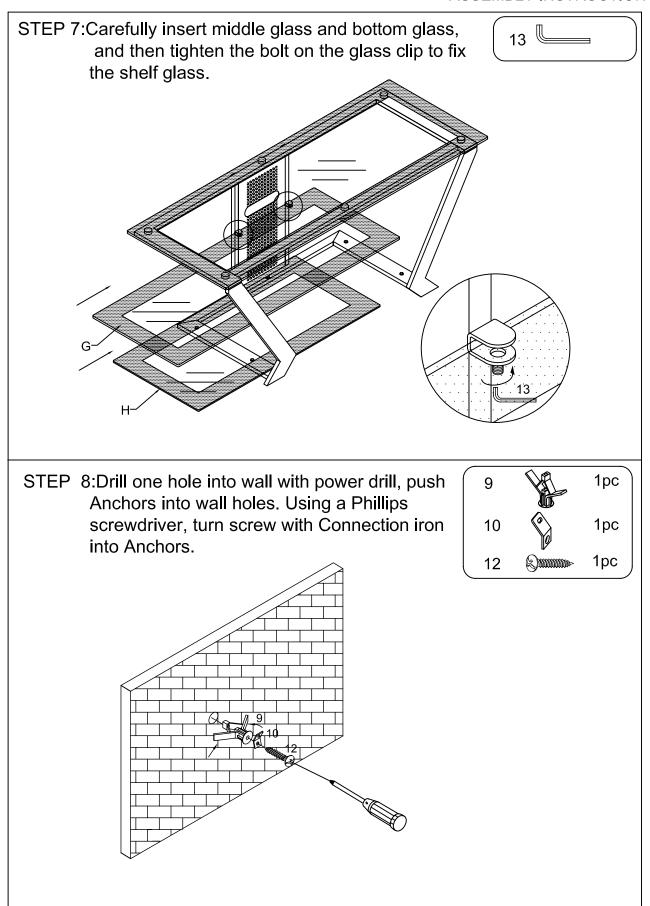

Page 7 of 8

STEP 9:We have included one Tipping Restraint for this unit. You must connect this one to prevent accidents or injuries. When properly connected, this Tipping Restraint can provide protection against unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this Tipping Restraint to a wall stud and your Unit.

