 


1(' , ^

1100*140 mm

印刷: 单黑双面印刷

装订方式: 折页



User Manual
LED Floor Lamp

Introduction

Thank you for choosing our LED Floor Lamp. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your Amazon order number and details.

Package Contents

- 1 x Power Adapter with Cable
- 1 x Lamp Base
- 1 x User Manual
- 6 x Iron Pipes
- 1 x Lamp head
- 1 x Remote Controller with AAA battery

Characteristics


The ACODO Montage floor lamp can fit most decor types, such as industrial, modern, traditional, and especially mid century modern and farmhouse

Specification

Model	MF18826
Material	Iron + PC
Power Consumption	22+7W
Luminous Flux	2000+500lm
Color Temperature	3000K-6500K
Lifespan	50,000Hrs
Bulb Input Voltage	AC120V 60 Hz
Battery for Control	AAAx2
Dimmable	10%-100%
Adapter Voltage	DC24V 1.5A

Installation

It's very easy to install, as shown below:

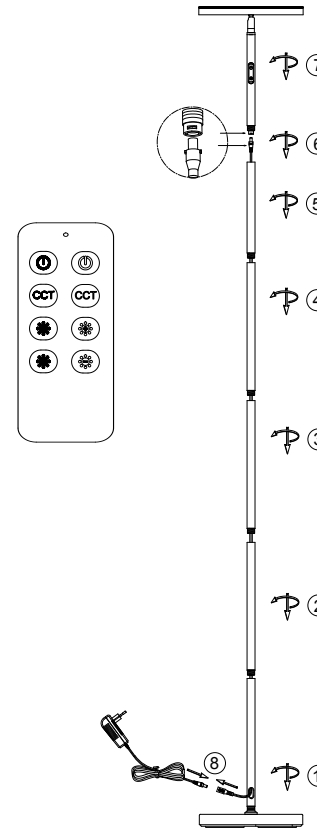

Usage

There are two ways to control : Touch control or Remote control .


Remote Control

The left vertical row controls the upward-lit overhead light, and the right vertical row controls the downward-lit reading light

	ON/OFF Button: Short press this button to turn on the light , press it again to turn off .
	CCT-Color Temperature: Short press/long press, adjust color temperature (3000K-6500K)
	Brightness +: Short press/long press to increase brightness
	Brightness -: Short press/long press to reduce brightness.

Touch control

Please touch the button of the touch bar to control the lamp

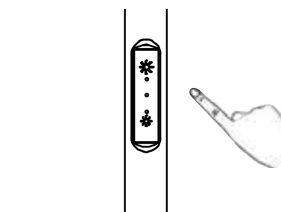

- Short press to adjust color temperature (3000K-6500k)
- Long Press to adjust brightness
- Short press to adjust color temperature (3000K-6500k)
- Long Press to adjust brightness

Product Care

- Please do not bend violently the lamp head to avoid damage when adjusting the angle of the lamp.
- Please read the user manual before use.
- Suggest Indoor use. It is non waterproof. Do not use this product in humid environments or at high temperatures.
- Cut off the power when cleaning it or not using it.
- Do not use it exceed the voltage, the proper voltage for US is AC110-120V, 60Hz.
- Do not plug or unplug the power cord with wet hands.
- Please stop use it if there is any defective issues found in the product.

Guarantee

Remote Control Floor Uplight lamp is backed by 12 MONTHS product warranty. For questions, assistance, or support, please contact the Customer Service by e-mail with your order number and product model number. We will send you further information about the return or the exchange.

