

Assembly Instructions

 
Caution: You must read this Assembly Instructions before you proceed

Care & Maintenance






-   • Not for commercial use. For residential use only.
-   • Do not put hot items directly on furniture surface.
-   • Do not clean furniture with harsh cleansers or polish.
-   • To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.
-   • Children should not climb or jump on the furniture.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Dust and pick-up spills using a clean, non-colored, lint- free cloth.

Please look underneath the Leg Frame for hardware packs.




DINING CHAIR

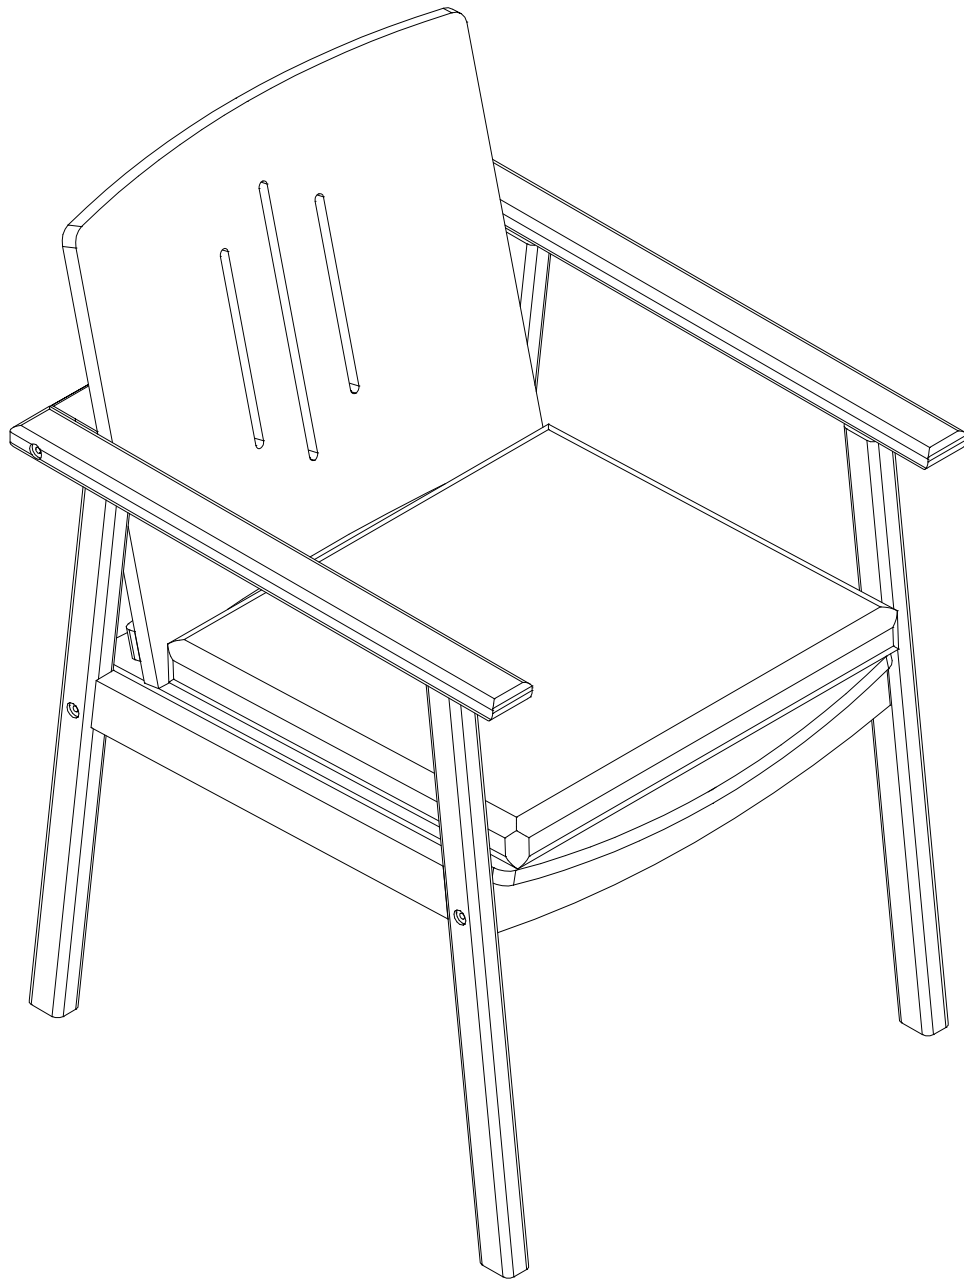

     Caution: This Dining Chair is NOT a TOY.
Keep children away from the assembly area.
Whenever moving/lifting the Dining Chair and to prevent damage to the Dining Chair, two adult partners may be needed to execute these actions.

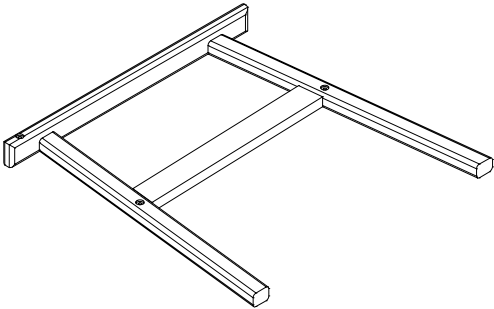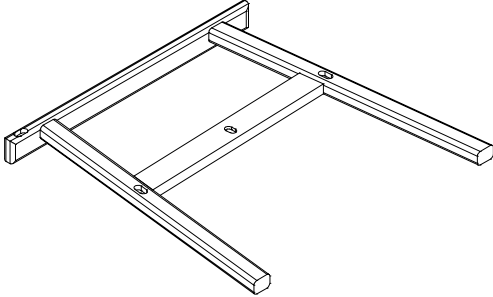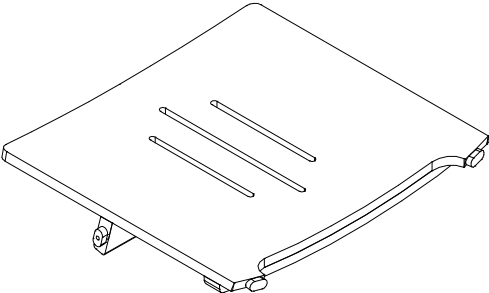
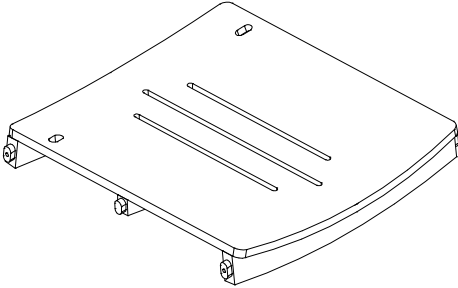
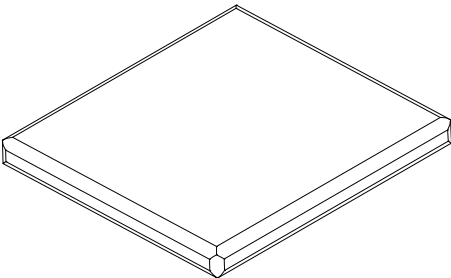
Parts List:			
Label	Picture	Description	QTY
A		Left Leg Frame	1
B		Right Leg Frame	1
C		Backrest Panel	1
D		Seat Panel	1
E		Cushion	1

   Hardware List:

No	Picture	Description	QTY
①		Screws (M6x70mm)	3
②		Screws (M6x60mm)	5
③		Allen Wrench	1


Assembly Preparation:

   Before Beginning Assembly:

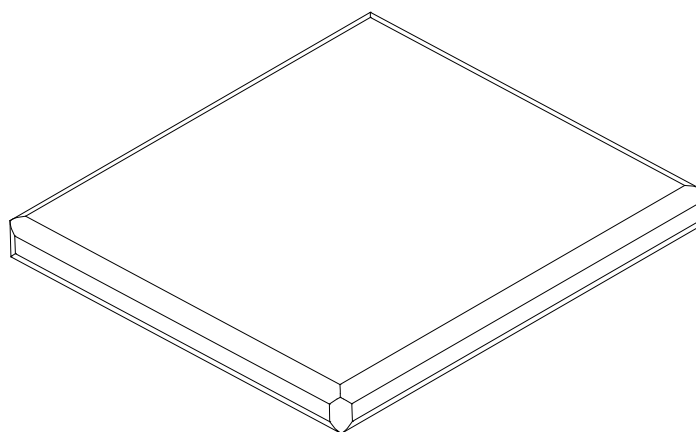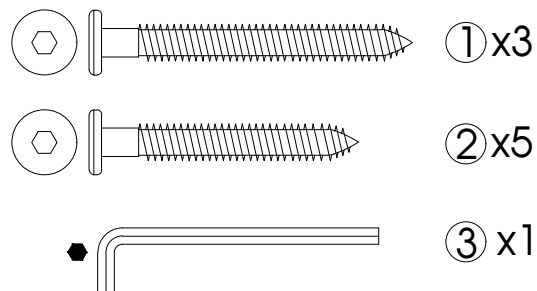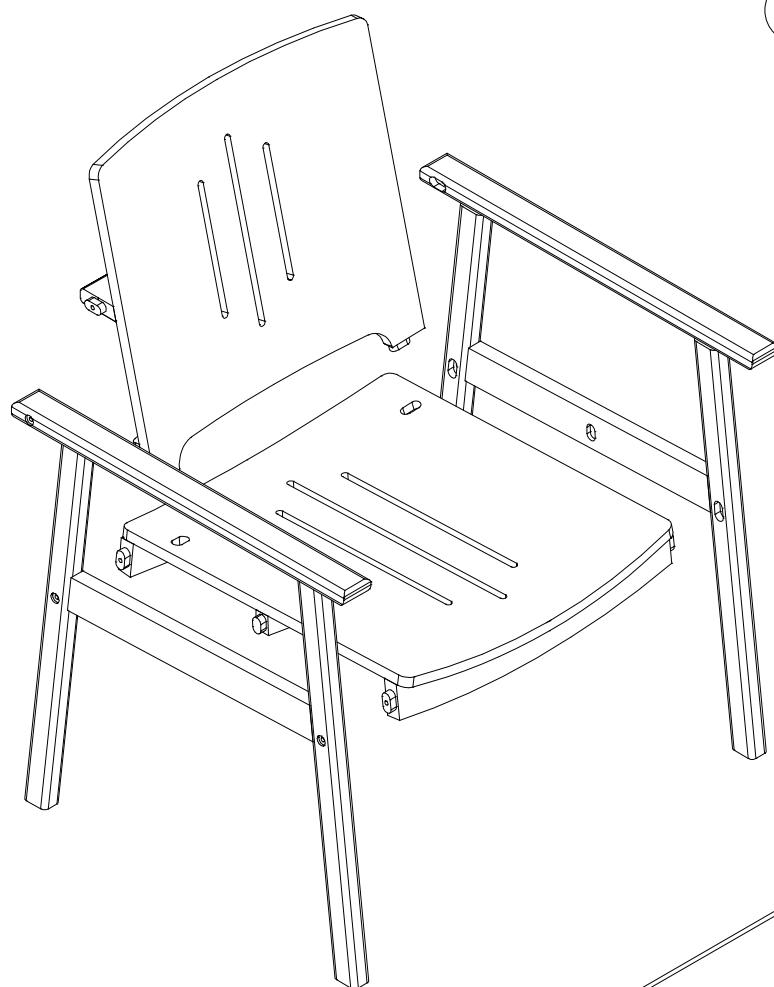

Assembly Steps:

 
Overview:

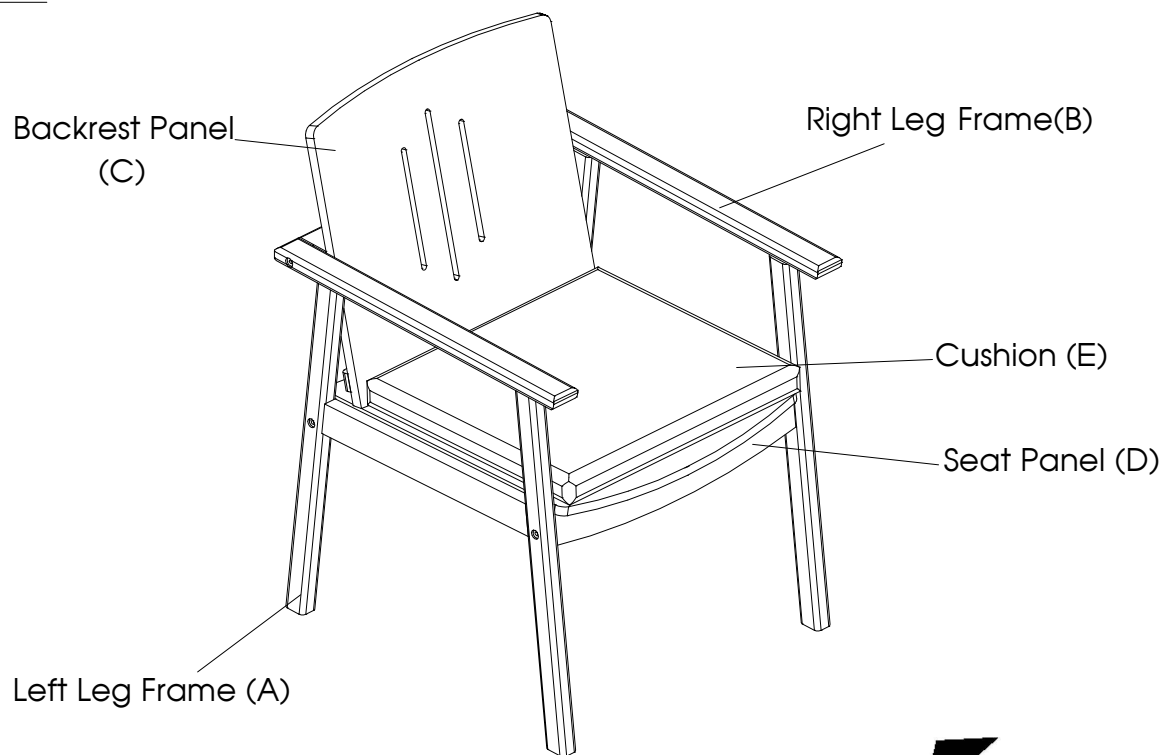

FRONT FACING


This Dining Chair has multiple parts and may require up to 15 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1:

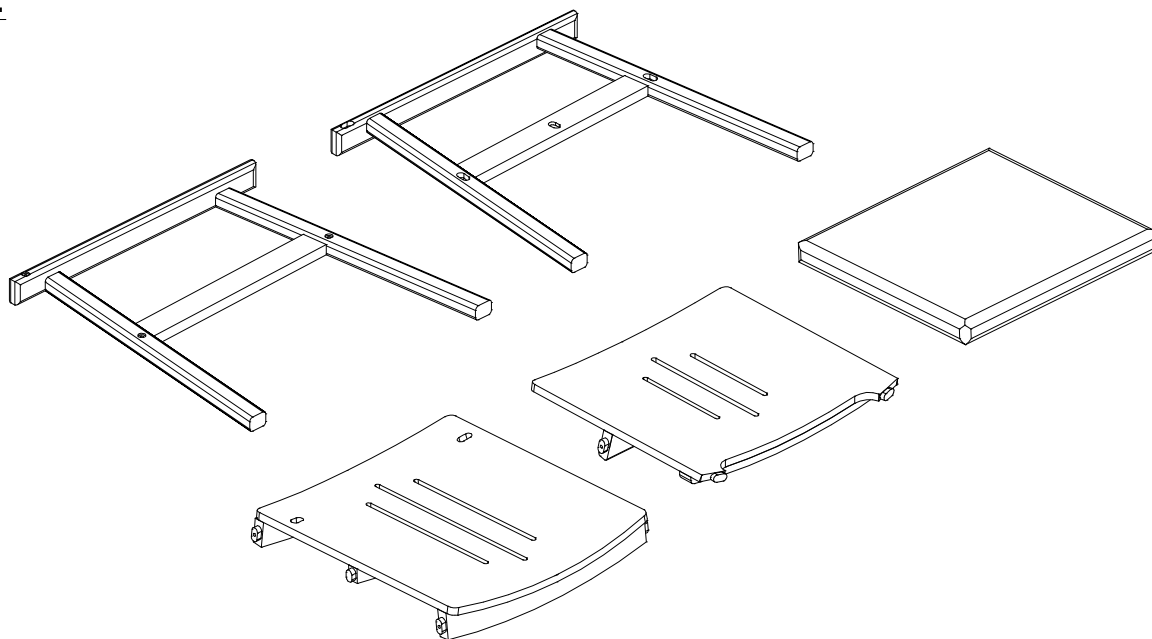

Unpack and place all parts on a clean, non-marring surface.

 Step 2:

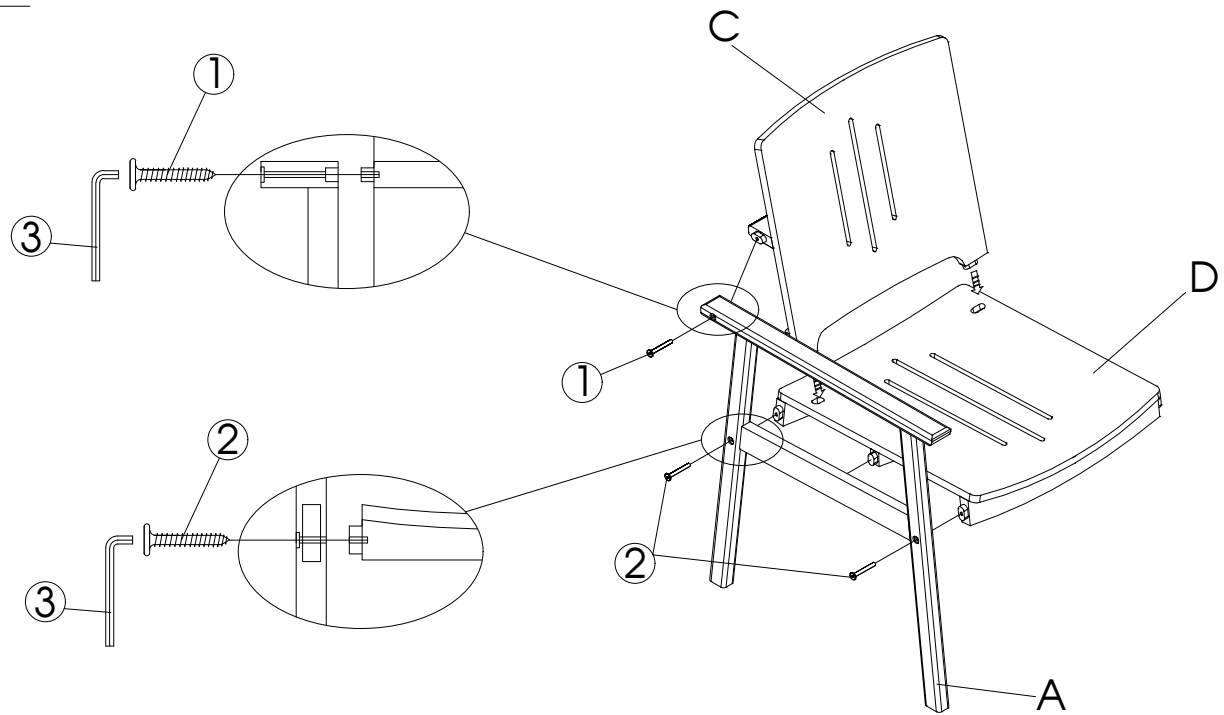


With the help of your adult partner, attach the Seat Panel (D) to the Left Leg Frame (A) by using 2 screws (2) and the Allen Wrench (3).

Secure the backrest to the seat as shown. Afterwards, attach the Backrest Panel (C) to the Left Leg Frame (A) by using screw (1) and the Allen Wrench (3).

DO NOT fully tighten the screws.

 
Step 3:

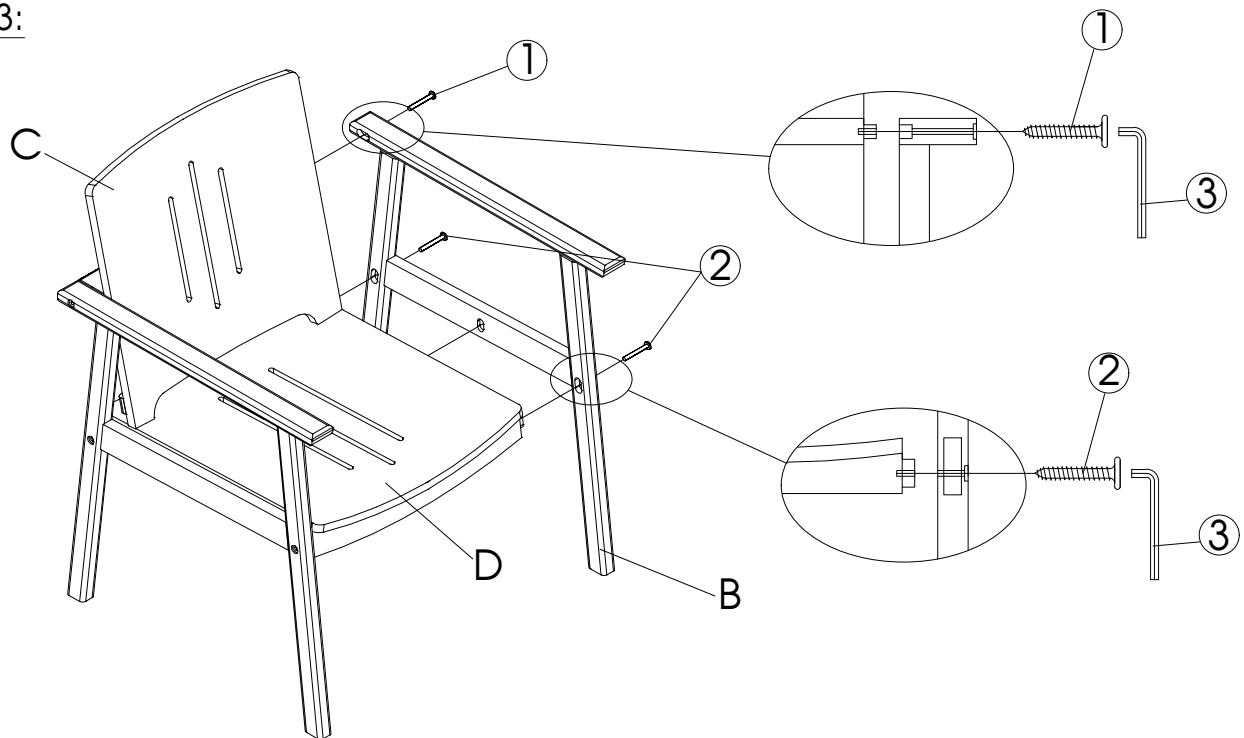

Attach the Right Leg Frame (B) to the pre-assembled part from Step 2 in position as shown by using screw (1) (2) and the Allen Wrench (3).

DO NOT fully tighten the screws.

 Step 4:

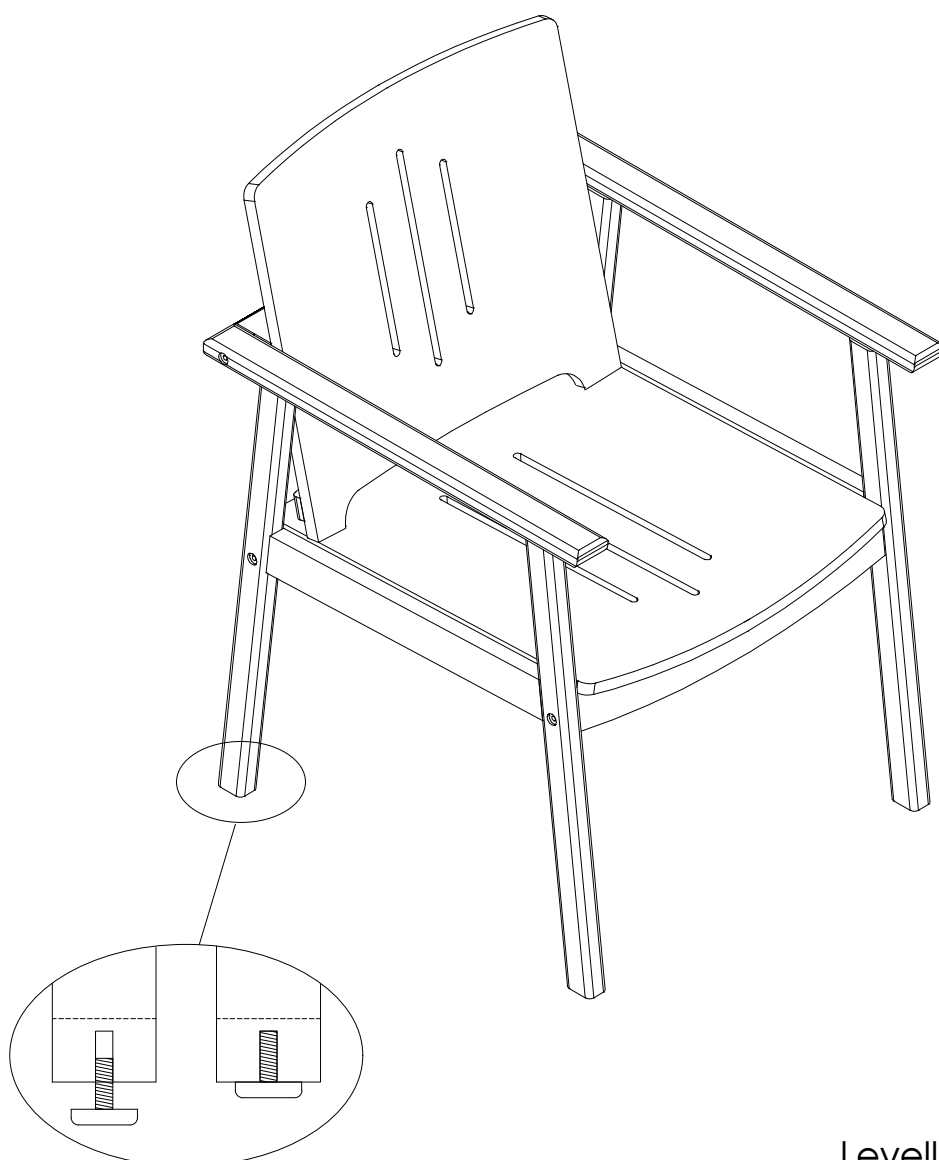

Leveller

 
 
Adjust high for balance

Adjust low for balance

Adjust Pre-installed Levelers height for balance

With the help of your adult partner, stand the Dining Chair up. Exert pressure floorwards, onto the Dining Chair with both your hands. This pressure will help the Legs and Dining Chair Top reach full alignment status. Check for wobbles on a LEVEL surface. If no wobbles are found proceed to tighten the Screws in a sequential manner, until evenly secured. When tightening the Bolts tighten sequentially. If there are still wobbles please loosen or tighten one or all leveller under legs and do the same above process when move the Dining Chair to another place. **WARNING!! IF THE DINING CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.**

Step 5:

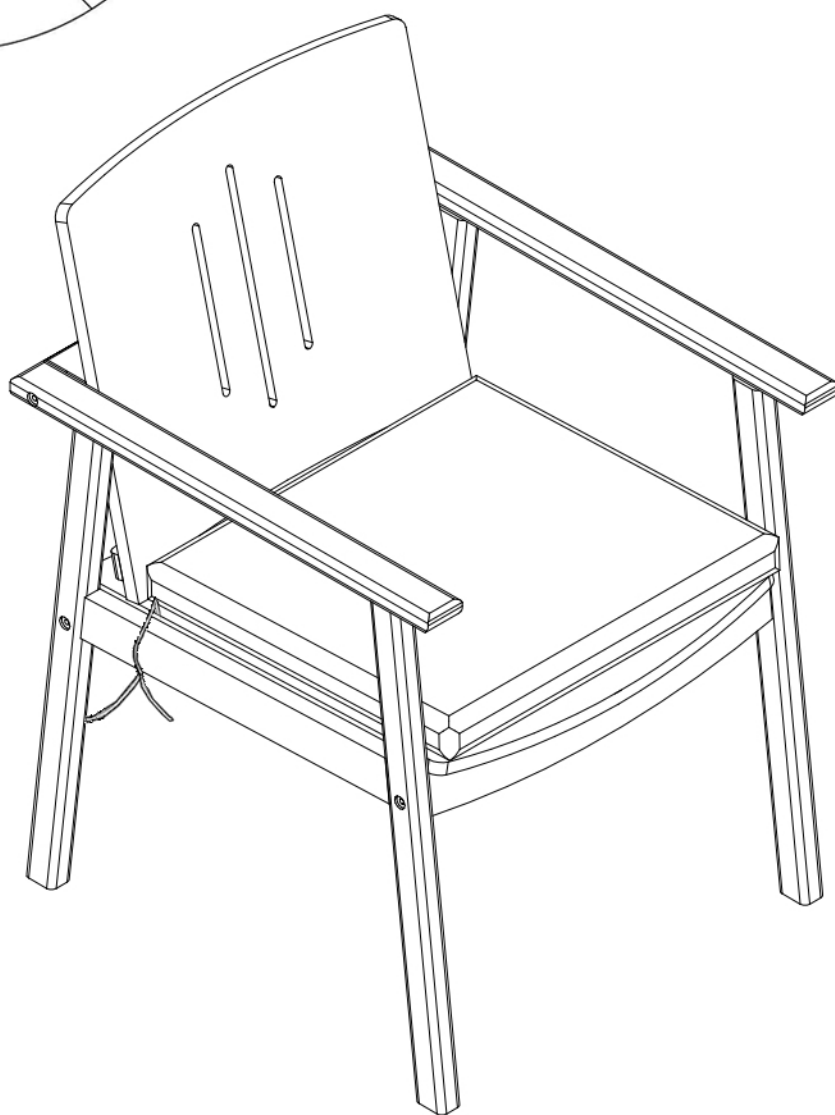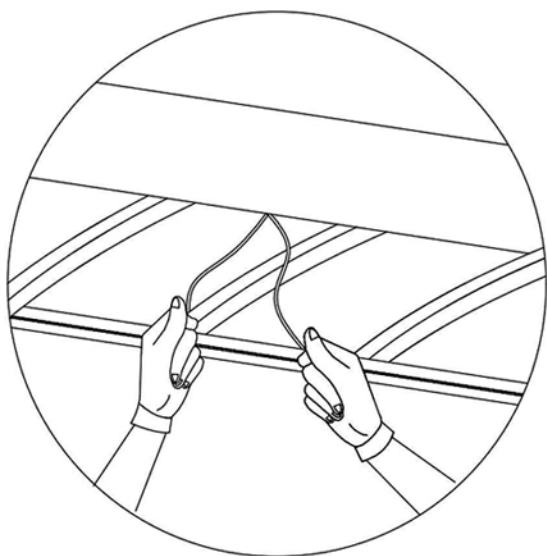

PUT THE CUSHION IN PLACE AND SECURE IT TO THE SEAT FLATS USING CUSHION TIES.
Your Dining Chair is ready for use.
This Dining Chair can only be used on a flat, level surface.