INFRARED HEATER Model: HT1109 UNIT LEGS ARE LOCATED UNDERNEATH THE UNIT ONCE LIFTED OUT OF THE PACKAGING ATTACH YOUR RECEIPT HERE Purchase Date ______ Serial Number (located on rating label)

TABLE OF CONTENTS Troubleshooting 9 Remote Control......11

CARE AND MAINTENANCE

A WARNING: Before performing any maintenance task, turn off the power, unplug the unit, and allow

16

Printed in China

REV1-072723


PACKAGE CONTENTS

- 1. To keep the heater clean, clean the outer shell with a soft, damp cloth. Use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: DO NOT let liquid enter the heater.
- 2. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- 3. DO NOT immerse the heater in water.
- 4. Wait until the unit is completely dry before use. 5. Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

A WARNING: Do not use the heater without all assembly in place.

CLEANING THE AIR INTAKE VENT

1. Clean the air intake or inside the unit after three months or if it appears to be blocking airflow. With the heater unplugged, use a vacuum hose attachment (B) or compressed air (A) to blow out or clean out any dirt, hair, or debris that may have built up around and inside the unit as this will obstruct airflow.

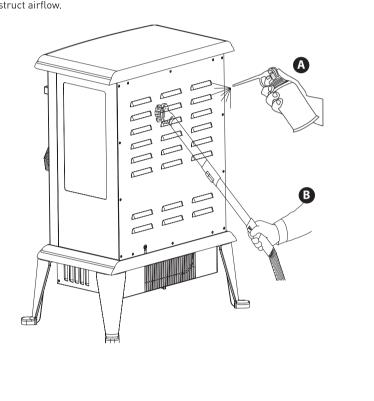

		0
PART	DESCRIPTION	QUANTITY
٨	Infrared Heater	1
Α	Illifared neater	
В	Remote Control	1
		1
В	Remote Control	1 1 1

Please read and understand this entire manual before attempting to assemble, operate, or install the product. IMPORTANT SAFETY INSTRUCTIONS

- **A** WARNING: POTENTIAL ELECTRICAL HAZARD IF NOT ADHERED TO. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, • This heater must be plugged into a 120 V, 15 amp (or more) circuit of its own. Do not plug anything else
- into the same circuit. If unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if
- Connect to a properly grounded, outlet only. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if not adhered to! • This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles (certain models) or wheels to move this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft. (0.9 m) from the front of the heater and keep them away from the sides and rear of the heater. • Extreme caution is necessary when any heater is used by or near children, invalids, pets, or when the heater is left operating unattended. • Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner. Contact the manufacturer for resolution options. • Do not use outdoors. Exposure to outdoor elements such as rain, snow, sun, wind, or extreme temperatures may cause the heater to become a safety hazard. • This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations, nor any locations that use GFCI outlets.
- Never place the heater where it may fall into a bathtub or other water receptacles. • Do not run the cord under carpet. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas and where it will not be tripped over. • The heater must be plugged into a wall outlet that is a dedicated circuit with a minimum 15 amp rating
- on that individual circuit. • To disconnect the heater, first turn the power button to the OFF position and then remove the plug from
- Do not allow foreign objects to enter or block any ventilation or exhaust opening as this may cause electric shock, fire, or damage the heater. • Allow at least 3 ft. of unobstructed space to the front and rear of the heater to allow for maximum heat,
- air, and ventilation flow. • A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored, nor use flammable solvents to clean the heater. Keep the heater
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

 • Do not use abrasive solvents to clean the heater as it may cause damage to the finish or casing.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where opening may become blocked. • Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, tum off the heater and seek medical attention.

• To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities. **SAVE THESE INSTRUCTIONS**

OPERATING INSTRUCTIONS

- 4. To set the timer to power off the heater, start the unit and press the Timer button on the control panel (C) or remote control (B). **Note:** The timer-power-off function can only
- The digital display on the control panel (C) changes from the set temperature readout to a time value for the timer. Press the TIMER button repeatedly to change the number

be set when the heater is in power-on


- value between a range of 0 to 12 hours (in 1-hour intervals). 5. To set the timer to power on the heater, first ensure the unit is powered off, then press the timer button on the control panel (C).
- Note: The timer-power-on function can only be set when the heater is in power-off mode. The digital display on the control panel (C)
- will indicate time value for the timer. Press the TIMER button repeatedly to change the number value between a range of 0 to 12 hours (in 1-hour intervals).


6. To power on or adjust the flame effect bright-

- control panel (C) or press the Flame Effect Button on the remote control (B) The unit will cycle between the four brightness levels.
- 7. To replace the batteries, remove the battery cover (1) from the remote (B) by applying pressure to the battery cover (1) and sliding it away from the remote (B). Insert two AAA batteries (not included) (2) and close the remote by placing the battery cover (1) back on
- Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (NiCad, ni-mh, etc) batteries Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Exhausted batter-ies


REMOTE CONTROL


are to be removed from the product.

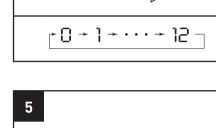

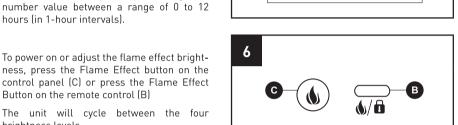

r0 → 1 → · · · → 12 •

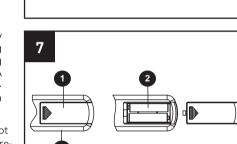

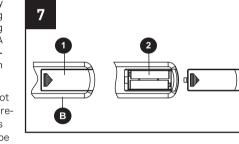

13

OPERATING INSTRUCTIONS

- 1. Turn the heater on or off by pressing the Power button on the control panel (C) or by pressing the Power button on the remote control Once the power is off, heating elements will stop working first. The fan will continue
- working for up to 90 seconds to dispense residual heat inside the heater. This is a normal function. 2. Select a heat setting by pressing the MODE
- remote control (B) to toggle between the two heat settings. Power for high is 1,500 W; low is 1,000 W. Note: The HIGH LOW LED light will only illuminate when the unit is heating and the


heating elements are engaged.


button on either the control panel (C) or the


3. Set the temperature by pressing the arrows on the control panel (C) or the remote control (B). You can set the temperature on the heater anywhere between 50°F and 90°F. Once you have chosen the desired temperature, the heater will remain on until the room


temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room


Note: To engage the child lock press and hold TEMP UP and TEMP DOWN button to-

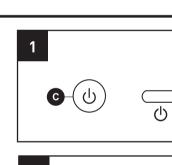


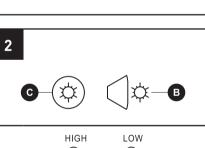

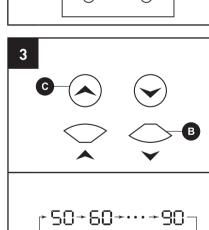

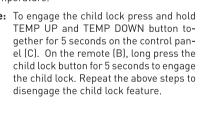

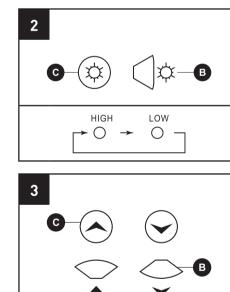


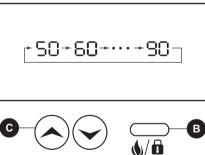

A SAFETY INFORMATION Child Lock Safety Feature

to use the heater again.


Press and hold the flame button on the remote control (B) for

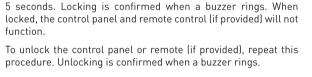



control (if provided) on the heater. Overheat Safety Feature This heater is equipped with an overheat safety feature. When the internal components of the heater reach a certain temperature that could cause overheating or possible fire, the heater will automatically shut off. If the unit has been overheated, you will need to unplug the unit from the wall and replug it in

A WARNING: TO PREVENT ELECTRICAL SHOCK, MATCH THE WIDE BLADE OF THE PLUG TO THE WIDE SLOT OF THE RECEPTACLE AND FULLY

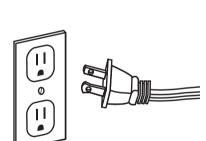

A WARNING: It is normal for the power cord to feel warm to the touch. However, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage. **Specifications**

В	

Voltage Rating 120 V (60 Hz) Power Consumption 1,000 W/1,500 W 16.60 in. (W) x 10.70 in. (D) x 22.44 in. (H) Unit Size Unit Weight

FREQUENTLY ASKED QUESTIONS

Please review these frequently asked questions on the next few pages prior to using your heater.

Q. My heater emits a strange odor when I first open the box and when I turn the heater on for the first **A**. This is normal. This heater is treated with a special heat safe/resistant coating. This odor will sometimes be present when the box is opened. When the coating is exposed to heat, it produces this

Q. If my heater runs on its max wattage setting, how many BTUs is that?

A. This heater is intended to be used as supplemental heat in areas most needed. It may take several minutes to several hours to heat your area, depending on various factors. The below chart provides BTU

particular odor during the first few hours of operation. This will dissipate after the break-in period. If

you are sensitive to odors, you may want to pre-burn the unit in a garage with the door open until the

WATTAGE	BTUS	
1,500	5,118	
1,000	3,412	
750	2,559	
500	1,706	

Q. Once I plug the unit in and turn it on, how long will it take to heat my room?

A. The heating process in the heater begins immediately upon powering on and setting the desired temperature above the ambient temperature. A noticeable change in the ambient temperature of the room will vary due to variables such as the location of the heater (in the home), floor plan and size of the room, how well the room is insulated, how many doors/windows, how much bare concrete (acts as a heat sink with any type of heating), the opening and closing of an exterior door, long hallways, high ceilings, etc. Customers with smaller rooms experience quick heat changes. Rooms with larger and open floor plans can expect up to 24 hours to completely heat up.

PART	NAME	DESCRIPTION
1	Temp Up Button	Increases the set temperature value
2	Heater Mode Button	Toggles between the two heat modes available
3	Temp Down Button	Decreases the set temperature value
4	Power Button	Powers the heater on or off
5 Flame/Lock Bu	Flame/Lock Button	Short Press Toggles the Flame Effect ON / OFF and between the varied flame effect brightnesses.
		Long press: for 5 seconds to activate lock function.
6	Timer Button	Engages the timer on or off

Printed in China

CONTROL PANEL

PART	NAME	DESCRIPTION
1	Heater Mode Button	Toggles between Hi / Low Heat Modes
2	Temp-Up Button	Increases the set temperature
3	Temp-Down Button	Decreases the set temperature
4	Short Press: Timer Button Long Press: Ambient Temp	Short Press Engages the on/off timer function Long Press for 5 seconds to Display Ambient Room Temperature
5	Short Pres: Flame Effect Button Long Press: C/F Button	Short Press Toggles the Flame Effect ON / OFF and between the varied flame effect brightnesses. Long Press for 5 Seconds to switch between Celsius and Fahrenheit
6	Power Switch Button	Powers the heater ON or OFF
7	Power Indicator Light	Indicates when the unit is receiving power.
8	Digital Display	Readout of the set room temperature or timer value
9	High Heat Indicator Light	Indicates when High Heat mode is on
10	Low Heat Indicator Light	Indicates when Low Heat mode is on

FREQUENTLY ASKED QUESTIONS

Q. The temperature on my heater does not match the temperature display on my wall, or external

A. This is completely normal. The temperature display on your heater may vary from the temperature display on another thermostat (like the one mounted to your wall or a purchased external thermostat). This is because the temperature sensor on the heater reads the temperature directly around the heater. With the heater near the cold floor (and heat rising), any readings on elevated or external thermostats will differ in readings on the heater. The best way to operate your heater is to set the unit on High and dial up to a temperature that feels comfortable to you. Then, leave it at that temperature, regardless of the mismatch. The heater will cycle off when the set temperature is met or exceeded slightly.

Q. Can I use more than one heater at a time? Can I use the heater and another appliance at the same

A. Yes, but make sure they are not plugged into the same circuit. Each heater requires its own minimum 15-amp circuit with no other items plugged into that circuit or outlet. This is because heaters are considered appliances and draw out high amperage. If you are unsure your circuit meets these requirements, verify with a certified electrician.

A WARNING: Risk of fire, damage to property, or injury may result if requirements are not met. Q. Why does my heater's fan continue to run after the set temperature is reached or the power is turned

A. This is normal. The heater's fan will continue to run even after the heater automatically cycles down. The fan continues to run so that every last bit of heat is blown out of the heat chamber while allowing the unit to continue filtering your air. Once the internal box/components cool completely, the fan should then shut off on its own. In this case, allow a few minutes after the heat cycles off (with power on). The fan will shut off faster when the power is turned off.

Q. My heater's display shows my ambient temperature to be in the 20s when I know it is warmer than A. The heater's display is defaulted to read the temperature as Fahrenheit. If your heater is definitely

heating but shows it is in the 20s you probably have the setting to read your temperature in Celsius rather than Fahrenheit. Q. My heater's power cord gets warm. My cord is showing signs of heat or melting at the outlet. Is

A. A warm power cord is normal. These power cords are rated safe for up to 105°C/ 221°F by the UL, CSA, or ETL. The exception is, if you detect heat, smoke, or signs of melting at the contact point of the wall outlet, it may be due to loose or worn wall contacts (or arcing). Please stop using the heater immediately, and have a certified electrician replace the wall outlet as soon as possible.


Place the heater on a firm, level surface and plug into a grounded 120 V, 60 Hz power outlet and turn on the unit. Only operate heater in upright position.

Insert two AAA batteries into the remote control before using (batteries not included). *(Not all products will include a remote control.)

Please note that infrared heaters do not heat like a traditional space heater. You should not expect infrared heaters to blow hot air like a traditional space heater. Infrared heaters heat objects not air. Infrared heaters are intended to supplement an already heated, insulated room. Square footage specifications assume a single enclosed room not an entire home. Infrared heaters do not heat through walls, floors, and are not intended to replace a main heat source. Infrared heat can take at least 24 hours to warm a room but operate much more efficiently to maintain the desired temperature. Infrared heaters will not work well in uninsulated unheated spaces like screened in porches, RV's, garages, unheated basements, etc.

To assemble the unit feet align the foot to the mounting bracket and press up firmly until secured with a "CLICK" sound. For permanent attachment you can secure the leg by adding a screw into the pre-drilled hole (1 per leg).

UNIT LEG ASSEMBLY

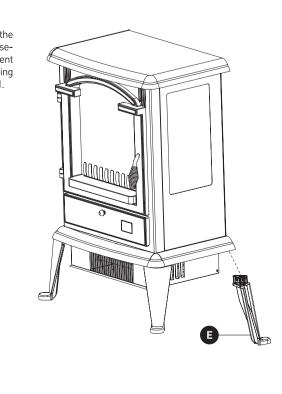

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The heater does not turn	1. The power cord is not plugged in.	Plug the power cord into an electrical outlet.
on.	The electricity at the main fuse box is not working.	Check the electricity at the main fuse box.
The flame effect does not turn on	The flame intensity is low.	Increase the flame intensity with the flame button.
There is no heat from the unit	The thermostat on the heater is set lower than the room temperature.	Increase the thermostat temperature on the heater to a higher heat setting.
	2. The switch for heat is not on.	Select High or Low heat setting and increase the thermostat temperature to a higher setting.
The heater shutoff unexpectedly	1. The heater has overheated.	Unplug the heater from the wall, wait a few seconds then plug the power cord back in.
	2. Insufficient power to the unit	Make sure the unit is plugged into a dedicated 3-prong outlet, with no extension cords or surge protectors.
	3. The air vent is clogged.	3. Clean the air vent located on the back of the unit. see page 14.
	4. Insufficient air flow to the heater.	4. Move the unit at least 3ft from the wall.
The heater displays an error code "E2"	Temperature sensor not functioning properly.	Please contact technical support.