

INSTRUCTIONS

1、 MODEL

94

2、 SPECIFICATION

VOLTAGE: 110V/220V

FREQUENCY: 60Hz

POWER:1200W

WEIGHT:2.4KG

TEMPERATURE RANGE:1-5

PAD MEASUREMENT:205 x 118 (mm)

3、 INSTRUCTION

Now that your iron is properly set-up,please read the following tips for pressing with professional results:

- ▶ Initially,to allow water to enter into the iron,press the steam switch.This may take a few seconds,then you will see steam.

- ▶ Begin to press.
- ▶ For best results,it is only necessary to press the steam switch for a few seconds at a time.It is not necessary to activate switch continuously
- ▶ There are several settings on your temperature dial
Recommended temperature settings are as follows.
#1,2-Preheat
#3-Silk and delicate fabric (low temperature)
#4-Cotton and wool (medium temperature)
#5-Linen,yarn & thick fabric (high temperature)
- ▶ A Teflon shoe is recommended to prevent garment shine and starch build-up and is available from your distributor
- ▶ While operating iron,it must be very hot.So,you must put it on the silicone iron rest.
- ▶ When unattended or not in use,always turn off and unplug your iron.

products construction picture



MADE IN CHINA

INSTRUCTION BOOK

Bottle-type
Electric Steam Iron

Instruction Book



Implementation of standards:

Read through carefully and understand this instruction before operate

INSTRUCTIONS

1、NAME

94AL Bottle-type Electric Steam Iron

2、APPLICATION

This iron used in the garment industry for clothing ironing.

3、MODEL

94AL

4、SPECIFICATION

VOLTAGE: 110V/220V
FREQUENCY: 50 HZ
POWER: 1500W
WEIGHT: 2.4 KG
TEMPERATURE RANGE: 1-5
BOTTOM PLATE SIZE: 227*138 (mm)

5、PREPARATION

- Hang the full water bottle on the support which above the ironing table, about 1 metre height.
- Attach one end of silicone hose (with spring) to iron electromagnetic valve. Then the same to the hose and water bottle.
- Release the drainage switch, wait for water filling with the pipe to rush air out.

6、USAGE METHODS

- Plug in the power, switch to the "ON"
- Let the thermostat against the "↑" on the cover to preheat. When indicator off, then turn thermostat to meet the needed stall "↑" on the cover. After 2-4 minutes charged, the indicator will off, press the steam switch and steam exhaust.
- After the intermittent, again ironing. Steam must be exhausted first.

Then the bottom plate can contact clothing.

- Use end. Close the drainage switch, pluck the hose and switch to "OFF" after continuously press the steam switch to make the remaining water vaporized in iron. Then pull out the power plug and put iron on the dashboard to make it natural cooling.

7、MAINTENANCE AND REPAIR

- If the steam get smaller, the water scale may block the steam channel: open the jet plate, then clear the scale or use needle to dredge it.
- If no steam exhaust, check whether the water flow into the vaporizer. Steam switch and power switch is connected, the electromagnetic valve is damaged, such as the damage, need to change.
- No heat. Please check the power is accessing, the power switch is "ON", if it access, check whether the heater is damaged, is damaged, need to change.

8、ATTENTION AND WARINESS

- In the poor quality of water areas, please use scale powder, the ratio of scale powder and water should according to instructions which will improve the reliability of iron.
- For best result, recommended temperature settings are as follow:
 - # 1,2-Preheat
 - # 3-Silk and felicate fabric (low temperature)
 - # 4-Cotton and wool (medium temperature)
 - # 5-linen (high temperature)
- Power cord in yellow and green color as the earth wire must be reliably grounded.
- Do not use the power cord in wet, wet hand do not operate.
- When left, must unplug the supply.
- Check the water bottle regularly to keep water clean.
- Do not indiscriminate demolition when iron malfunction, with purchase invoices to the maintenance of our authorized service point (our designated distributo) or to the maintenance of our maintenance department.

Irons produced by our company, all parts are supplied