

ASSEMBLY INSTRUCTION

Safety Warnings:

- This product is designed for indoor use only. Keep away from fire sources, sharp objects, and damp environments.
- Children must use under adult supervision. Avoid climbing or jumping on the product.
- When opening the compressed packaging, carefully cut with scissors. Do not use knives to prevent damage to inner materials.

Return and Warranty Policy :

● We strive to provide the highest quality products and also make every effort to meet the needs of every customer who orders from us, providing replacement parts or services as needed.

● If the item is damaged or defective, please take a photo as evidence of replacement and refund.

If you have any problems using this product, please do not return to the store and contact the seller. please contact HABBY0101@163.com

Be careful:

- This product is divided into two cartons-A Box and B Box to ship. if you only receive one carton, please wait patiently, the other one is on the way and will arrive soon, thanks!

TIPS 1 : Unboxing and Assembly Instructions

1. Unboxing Preparation

Place the package on a clean, flat surface and inspect the outer packaging for any damage. Prepare scissors (for opening the packaging) and gloves (optional, to prevent friction).

2. Unpacking the Compressed Packaging


Carefully open the carton box, Gently remove the compressed sofa body (avoid rapid pulling to prevent deformation)

3. Unfolding and Restoring Shape

Lay the sofa flat and let it sit for 72 hours (the duration may vary depending on environmental humidity). The foam will gradually expand to its designed volume.

After unfolding, wrinkles may appear on the sofa, which is normal. Wait for 72 hours for the wrinkles to disappear, or use an iron to steam them lightly.

If the sofa does not fully expand, gently pat the surface or place it in a warm, well-ventilated area to speed up recovery.

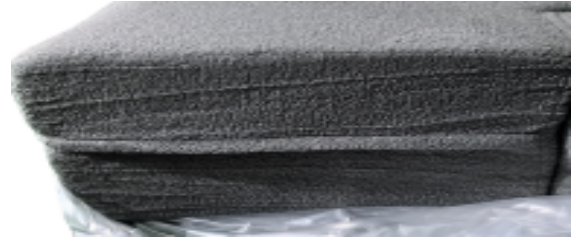

After carefully opening the cardboard box,
you will receive

Waiting for the sofa to
rebound



Be careful when opening the
outer plastic bag



After 72 hours, you will have a
complete sofa.

If there are still some wrinkles, you can use an iron to
smooth them out, until the wrinkles are gone.

TIPS 2 :

When you receive this tumbler backrest; The bottom of the anti slip pad has a layer of black fabric to protect the Velcro on both sides of the bottom from scratching the packaging bag.

After opening the sofa, tear off the black fabric. Velcro is used to increase the friction between the backrest of the tumbler and the sofa, enhance stability, and make the backrest less likely to move.



When you receive the tumbler backrest black fabric is attached to the Velcro



Carefully tear off the black fabric, revealing the Velcro and it can be used normally