 



Attention:  
Two people are required for assembly and lifting unit.

## ASSEMBLY INSTRUCTION

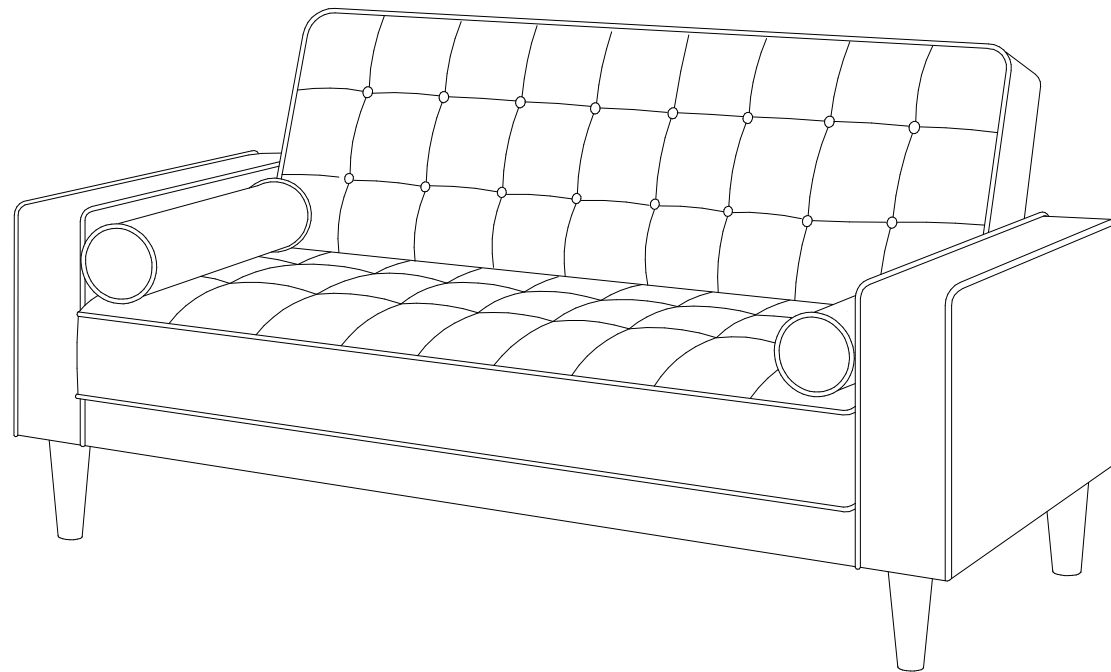

 
# ASSEMBLY PART & HARDWARE LIST

1.

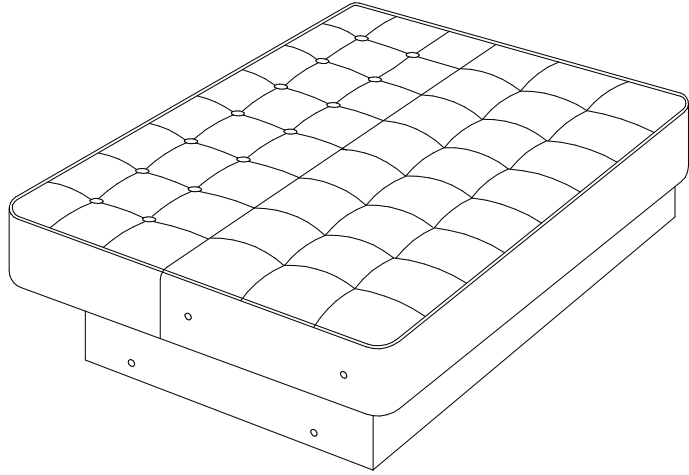


SEAT PANEL & SEAT CUSHION (1PC)

 2.

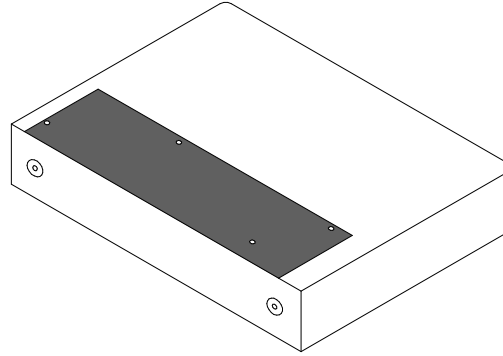


LEFT ARM (L) (1PC)

 3.

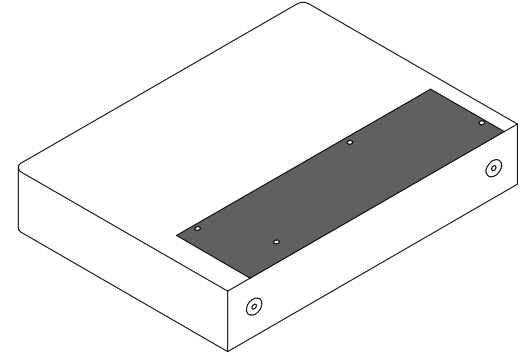

RIGHT ARM (R) (1PC)

 4.




PILLOW (2PCS)

5.



 
LEG (4PCS)



A

8PCS

 
5/16 x 80mm



B

8PCS

 
Spring Washer 5/16

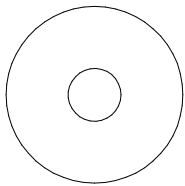


C

8PCS

 Flat Washer 5/ 16 x 22mm




D

 

8PCS

 5/16 x 12mm




E

1PC

T Spanner

 1 : 1






# ASSEMBLY INSTRUCTION

STEP 2.

 Push back upward.

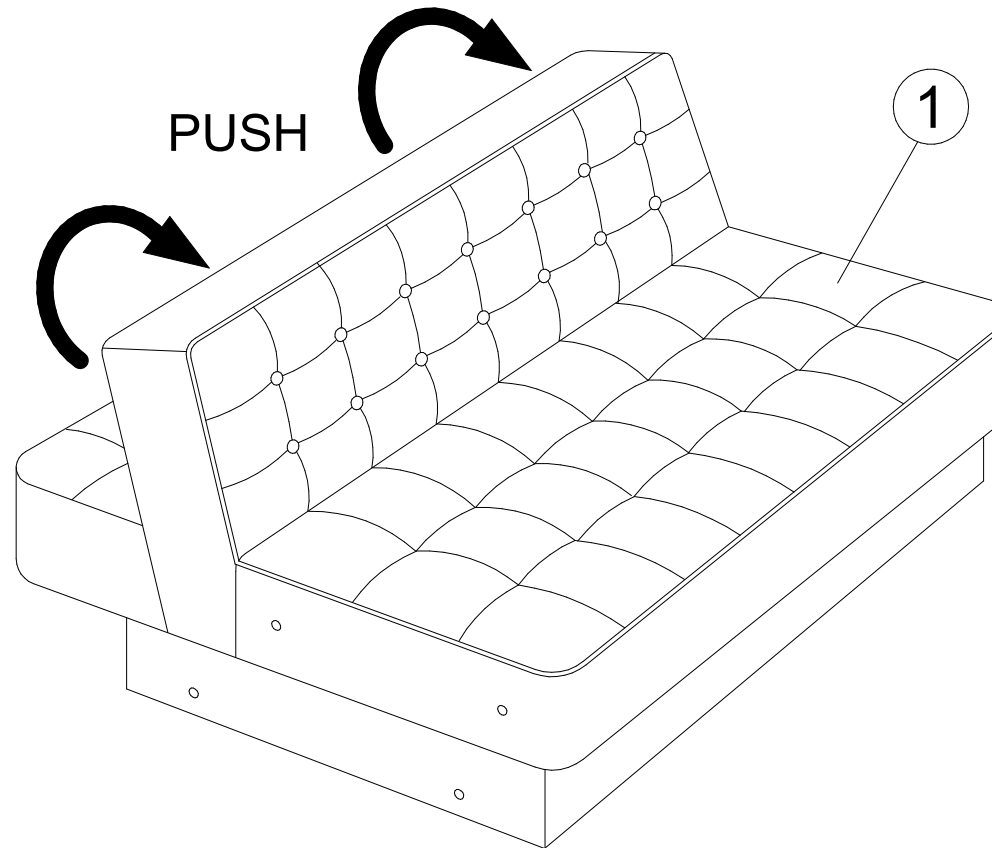


# ASSEMBLY INSTRUCTION

## STEP 3.

Attach 5/16 x 80mm (A) (8pcs) to the Left Arm (L) (2) and Right Arm (R) (3).

 
Attach Legs (5) (4pcs) to the Left Arm (L) (2) and Right Arm (R) (3). Legs should be tightened.

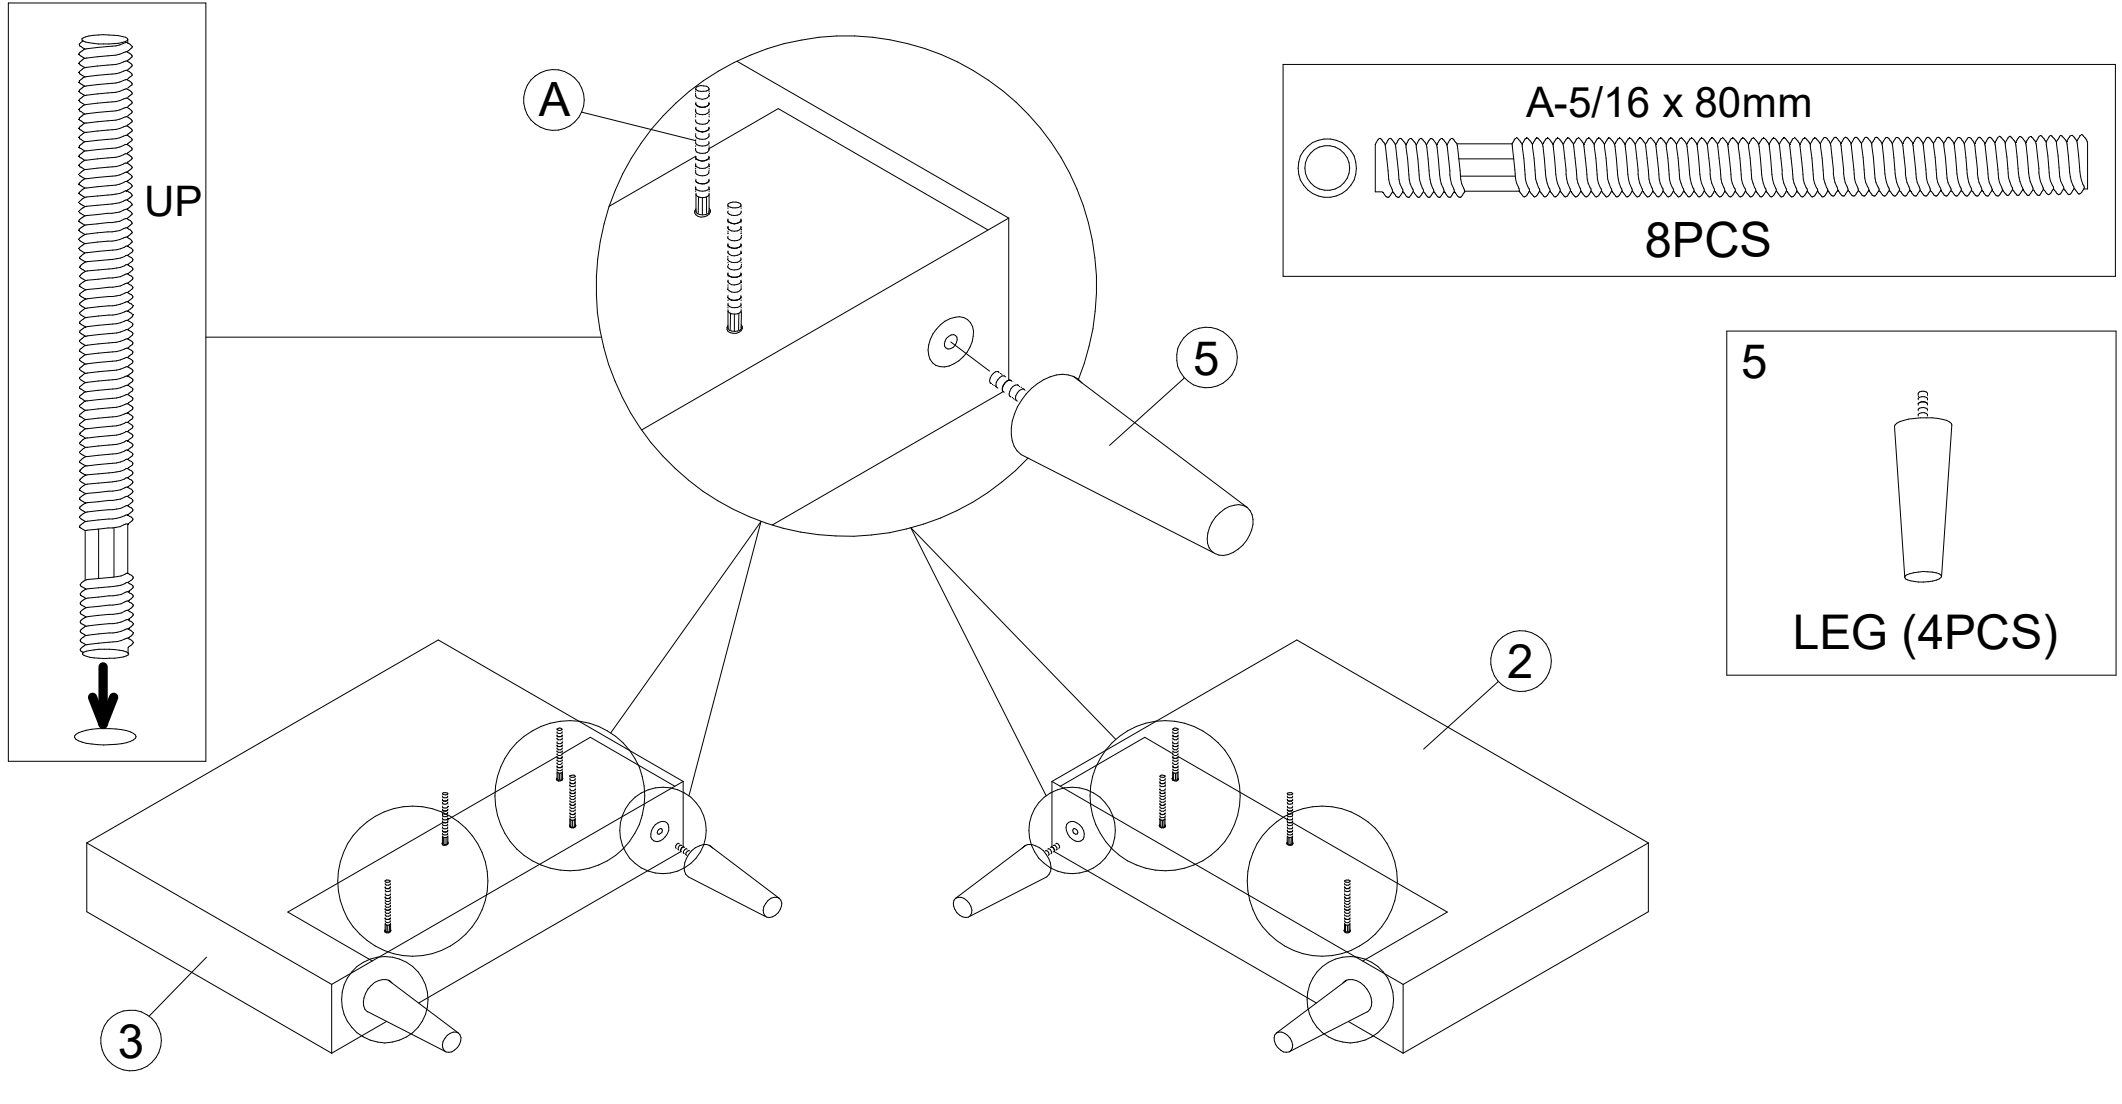


# ASSEMBLY INSTRUCTION

## STEP 4.

 Attach the Left Arm (R) (3) to Seat Panel and Seat Cushion (1). Use Spring Washer 5/16 (B) (4pcs), Flat Washer 5/ 16 x 22mm (C) (4pcs), 5/16 x 12mm (D) (4pcs) and T Spanner (E) to fix.

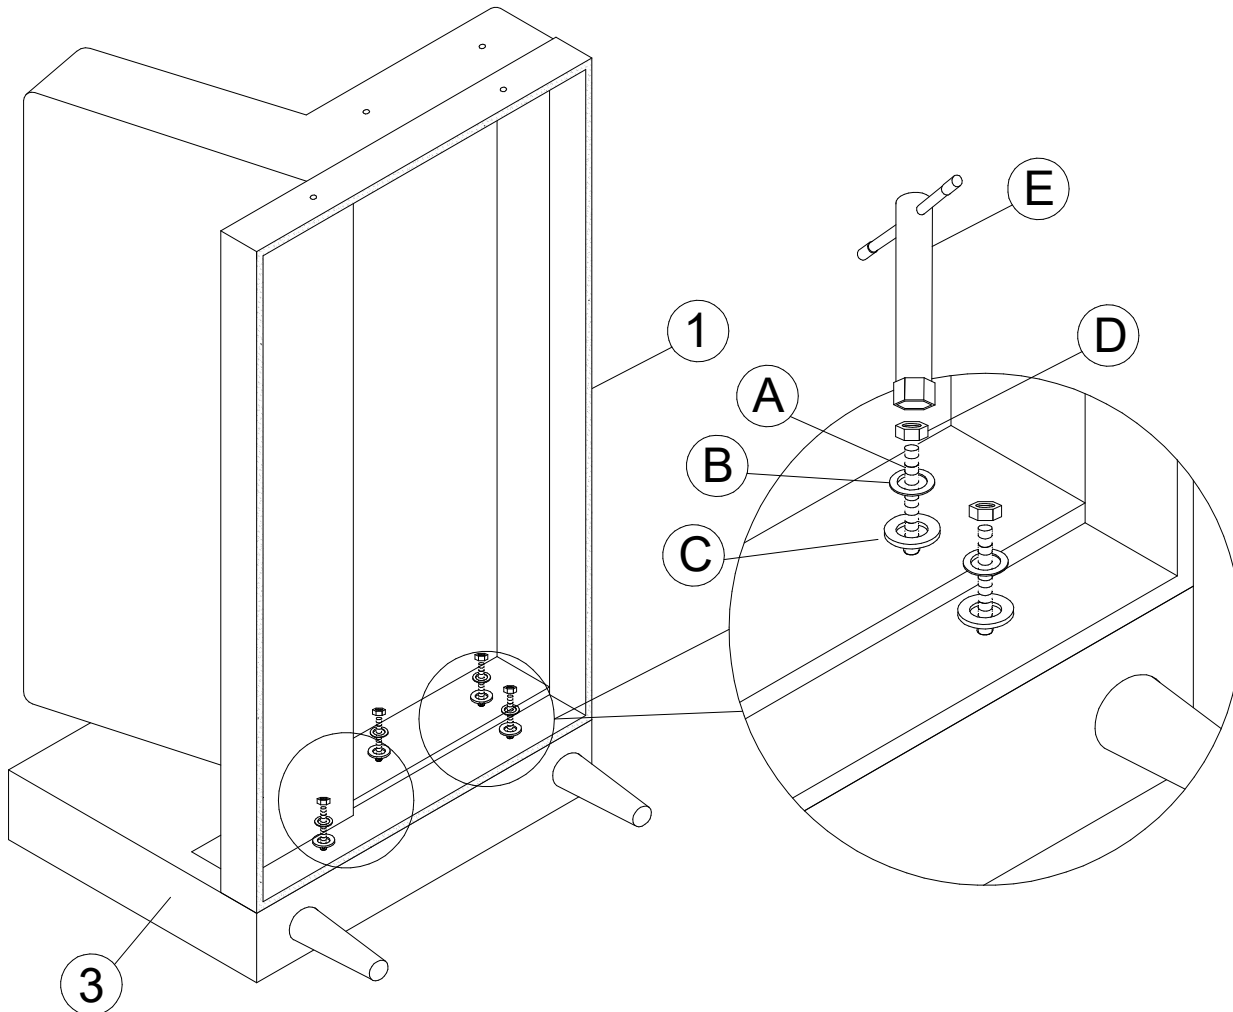


B-Spring Washer 5/16

 


4PCS

 C-Flat Washer 5/ 16 x 22mm

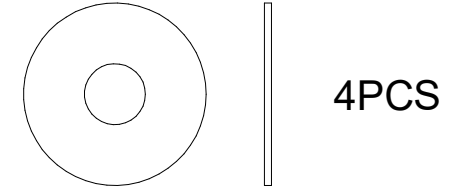


4PCS

 D-5/16 x 12mm



4PCS

 E-T Spanner

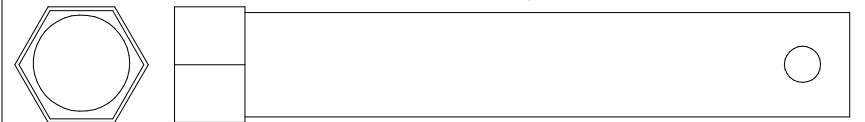


1PC

# ASSEMBLY INSTRUCTION

 
## STEP 5.

Attach the Left Arm (L) (2) to Seat Panel and Seat Cushion (1). Use Spring Washer 5/16 (B) (4pcs), Flat Washer 5/ 16 x 22mm (C) (4pcs), 5/16 x 12mm (D) (4pcs) and T Spanner (E) to fix.


B-Spring Washer 5/16




C-Flat Washer 5/ 16 x 22mm

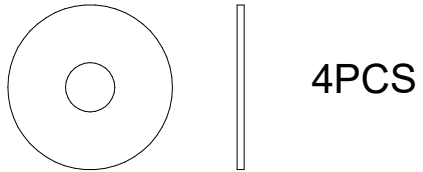 


D-5/16 x 12mm

 

E-T Spanner

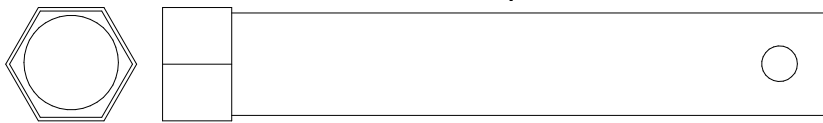 


1PC

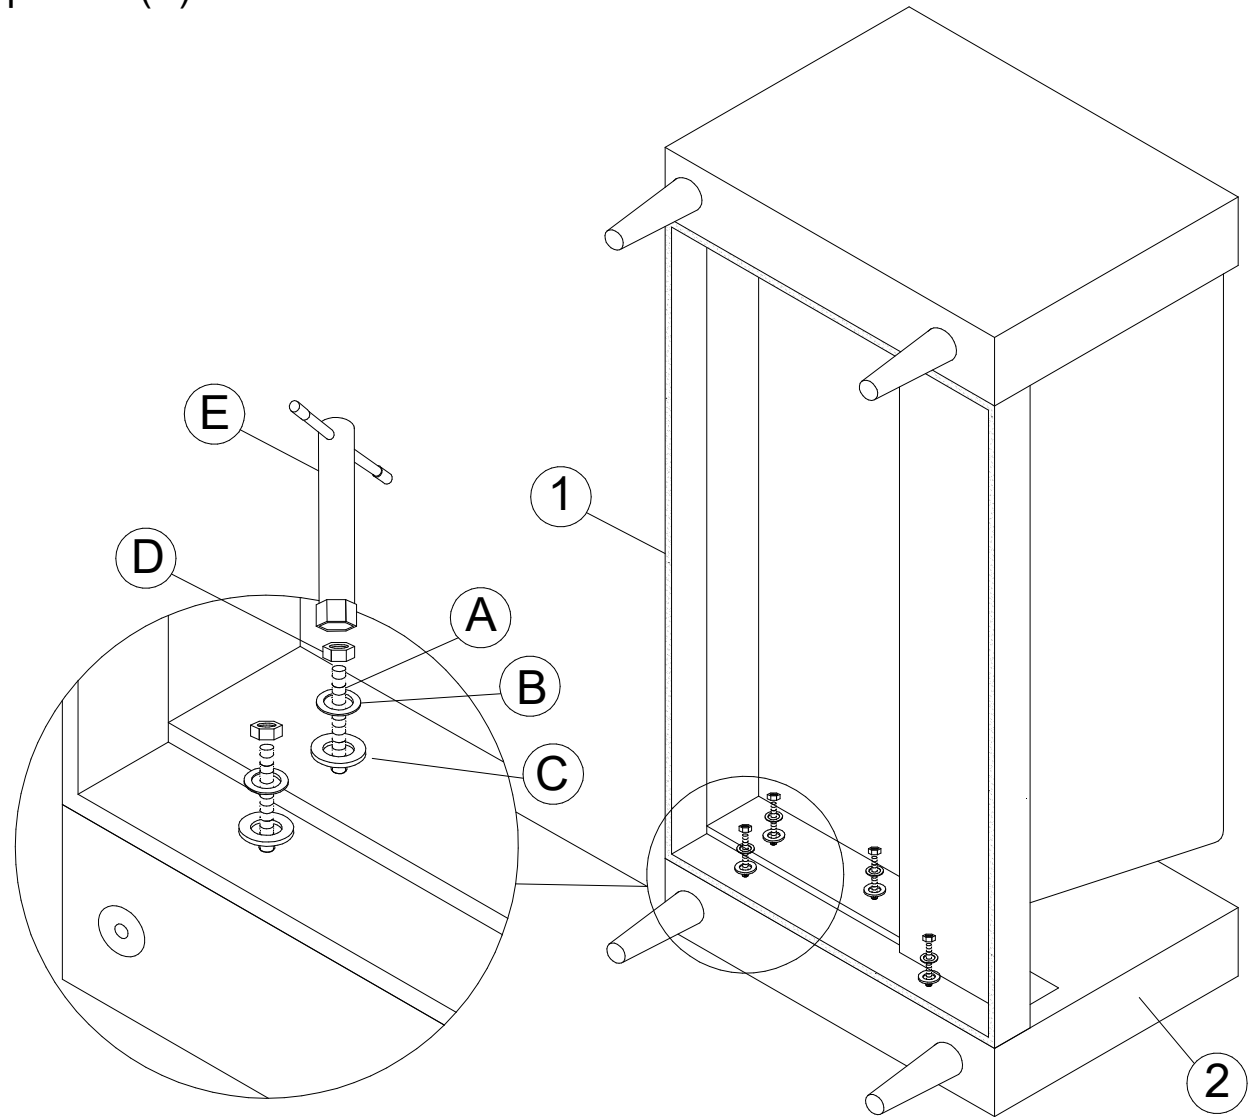 


# ASSEMBLY INSTRUCTION

 STEP 6.

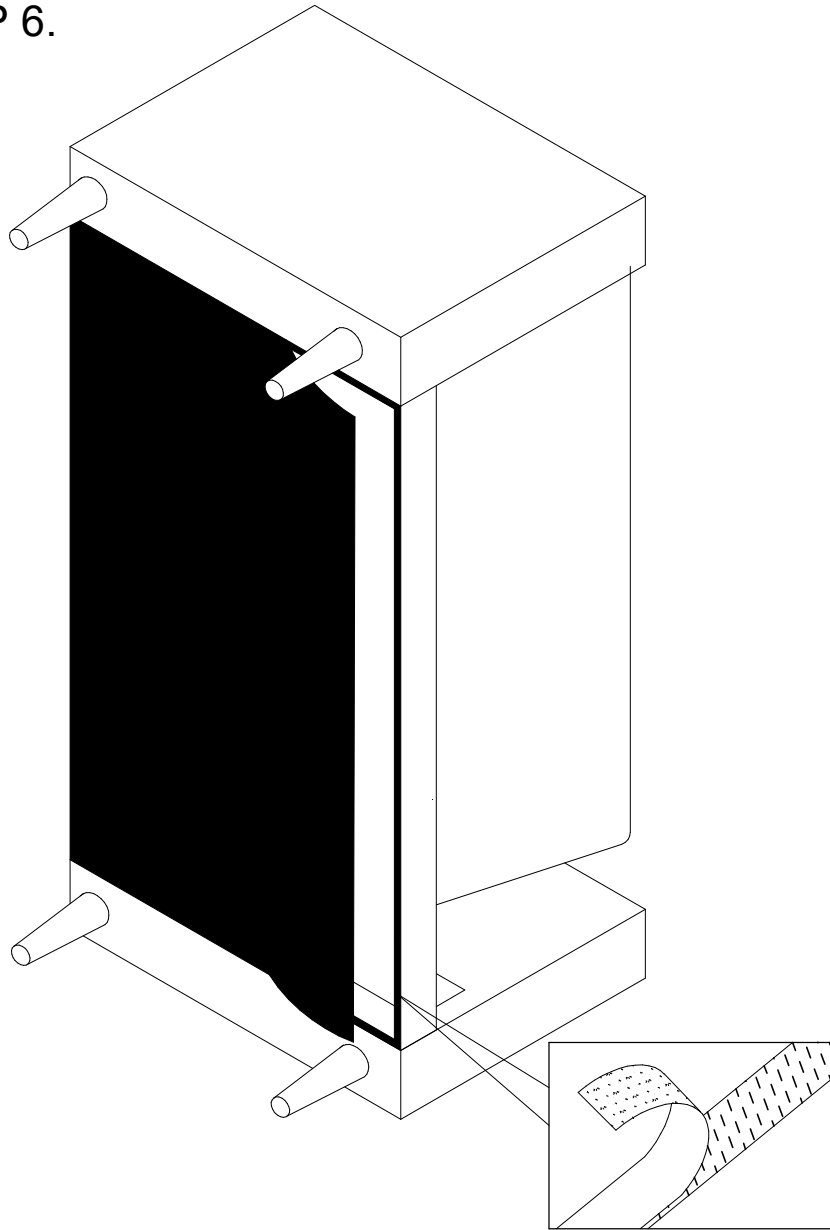

Take a Cover Cloth and closed with velcro.

 
STEP 7.

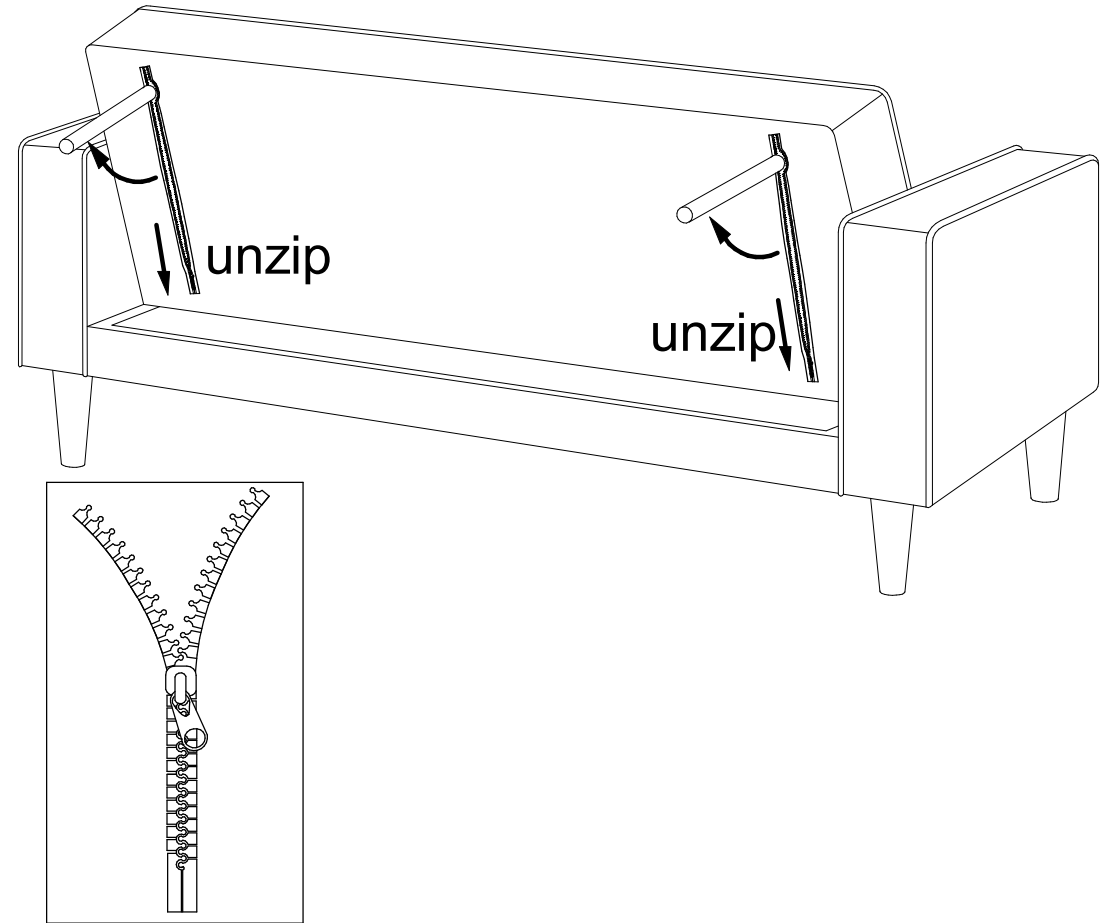


Open the zip and pull the legs out. Re-zip when leg pulled out.

# ASSEMBLY INSTRUCTION

 STEP 8.

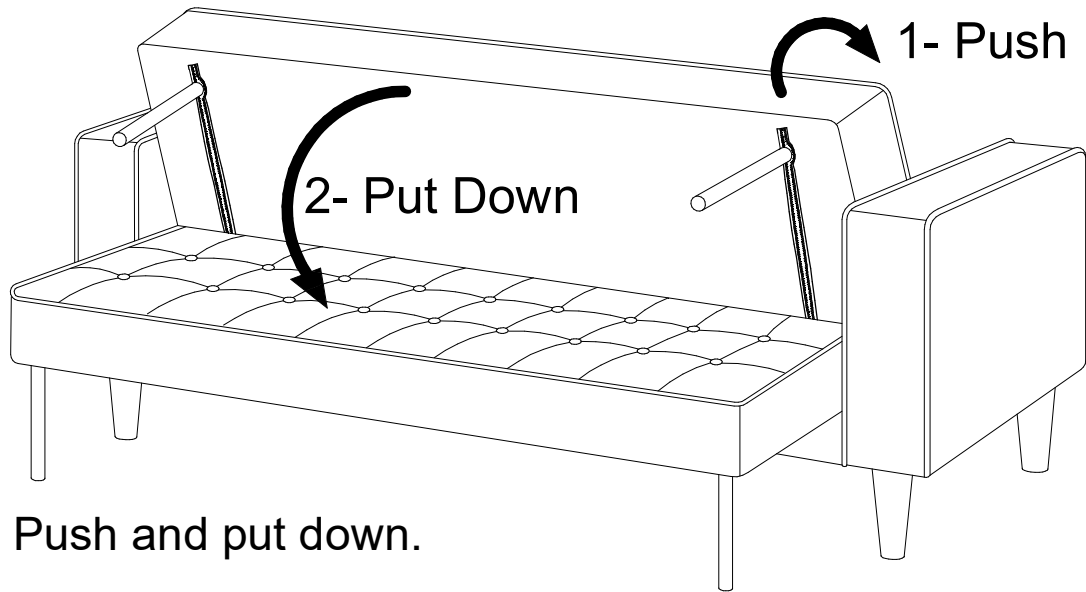

 STEP 9.

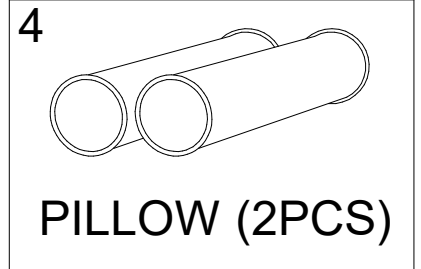

Lay Pillows (4) (2pcs).

