

140mm

140mm

210mm


NEED HELP ? CONTACT US!

CUSTOMER SUPPORT

- Email: support@sylliera.com
- Tel: 2137969388
- Web: sylliera.com

**PRECISION SELECT
4 SLICE TOASTER**

USER MANUAL
LD-T7023A



**PRECISE.
TOASTING.
PERFECT.
RESULTS.**

Warranty

2 YEARS

2 Years Limited Warranty
With lifelong technical support and 24/7 customer service

Your purchase comes with a 100% satisfaction guarantee from Sylliera. Sylliera supports free replacement for any problems or full refund for dissatisfaction under warranty. We will take care of all quality-related issues with a replacement or full refund including any return shipping costs. If your product is defective and under warranty, please contact us at [Email: support@sylliera.com](mailto:support@sylliera.com).

More Sylliera Products
If you're happy with this kettle, the line doesn't stop here. Check out <https://sylliera.com> for a line of all our beautiful and thoughtfully designed appliances. They might be right at home in your kitchen, too!

Note

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster

Warning

Do not immerse the toaster or power cord in water or any other liquid.

Warning

Do not use the toaster without the slide-out crumb tray(s) in position. Do not allow crumbs to build up in the crumb tray(s). Failure to clean the crumb tray(s) regularly may result in a fire hazard.

Note

Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the toaster. If the toaster is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the exterior surface of the toaster. Dry thoroughly before use.

**QUESTIONS
OR
CONCERNS**

Longdeem supports free replacement for any problems or refund for any dissatisfaction under warranty.

CONTACT US

Email: support@sylliera.com
Tel: 2137969388
Web: <https://sylliera.com/>

CANCEL BUTTON

The toasting and defrosting cycles can be cancelled at any time by pressing the CANCEL button. When the CANCEL button is pressed, the toaster will turn off and automatically raise the toast.

Care, Cleaning & Storage

CARE AND CLEANING

- Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
- The crumb trays will need to be cleaned regularly to avoid bread-crumbs, dried fruits, crusts etc. accumulating in the bottom of the toaster.
- To remove the crumbs from the toaster, slide the crumb trays out from under the toaster carriage by pulling outwards away from the toaster.
- Discard the crumbs and wipe trays over with a soft, damp cloth and dry thoroughly.
- To remove any additional crumbs that have accumulated in the toasting carriages, turn the toaster upside down over a sink or bin and shake crumbs free.
- Ensure crumb trays are dried thoroughly. Place crumb trays back into position by sliding the tray back and push in until completely locked into place.
- Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.

Table Of Contents

Longdeem Recommends Safety First	02
Important Safeguards	03
Component	09
Functions	10
Care, Cleaning & Storage	13
Warranty	15

event that the bread, crumpet or muffins become jammed, switch the power off at the power outlet, then remove the power plug from the power outlet and use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

BAGEL FUNCTION

The bagel setting works great for English muffins, too!

- Place one half in toasting slot with the cut sides facing the side.
- Set the browning control to desired setting.
- Press the push-down lever down until it engages. The LED on the Cancel button lights up.
- Press the BAGEL button. The bagel indicator will light up. Ensure bagel doesn't burn.
- The loading lever will rise automatically when the toasting cycle is complete.

FROZEN BREAD SETTING

To toast frozen bread

- Place the frozen bread into the toasting slots.
- Select the browning setting you would normally select if the bread was fresh.
- Lower the carriage control lever until it locks into position.
- Press the FROZEN button and The LED on the button will light up.
- Once the toasting cycle has finished, the carriage will rise automatically.
- Remove the toast.

Longdeem Recommends Safety First

At Longdeem we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or

Longdeem Recommends Safety First

At Longdeem we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions. Misuse can cause potential injuries.

- while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the toaster.
- Do not move the toaster whilst in operation or when hot.
- The temperature of accessible surfaces may be high when the toaster is in operation and also for some time after use.
- When operating the toaster, keep a minimum distance of 3.39 inch of space from the surrounding sides & 7.82 inch above.
- Do not place the toaster in enclosed areas.
- Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element but cause electrocution.
- Do not touch hot surfaces. Use side areas and oven mitt for lifting and carrying the toaster.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the toaster, when the toaster is not in use and before cleaning or storing.
- Do not operate the toaster without the removable crumb trays in place.
- The crumb trays should be regularly cleaned. Do not allow bread-crumbs to accumulate in the bottom of the toaster. Failure to clean the crumb trays regularly may result in a fire hazard. To clean any additional crumbs, turn the toaster upside down over a sink and shake crumbs free.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Do not place the toaster in direct sunlight. Colour fading and discolouration may occur when the toaster is consistently exposed to UV light.

Note

If the toaster is not plugged in and switched on at the power outlet, the carriage control lever will not lock into position.

The toaster stops toasting when it has reached the end of the selected browning cycle. The toast will automatically rise in the slots. The toasting process can be stopped at any time by pressing the CANCEL button

Warning

Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast, crumpets or muffins or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but can cause electrocution.

HIGH LIFT FEATURE

Once the toasting cycle has completed, to remove smaller items such as crumpets and muffins, lift the carriage control level to the HIGH LIFT position, approximately 1cm above the starting position. In the unlikely

Functions

BEFORE FIRST USE

Before first use, remove any packaging material or promotional labels attached to your toaster.

- Place the toaster on a dry, level heat resistant surface and
- unwrap the power cord from the base of the toaster.
- Insert the power plug into a 120 volt power outlet and then turn the power on.

Note

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

- Place only 1 slice of bread into each of the toasting slots. Ensure the bread slices are not too large or thick to fit the slots. If less than 4 slices are inserted, the usual browning setting may need to be reduced to avoid the toast burning.
- Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '6' darkest.

Note


When using the toaster for the first time, we suggest toasting the bread on setting 3 or 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

Important Safeguards

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or

Component

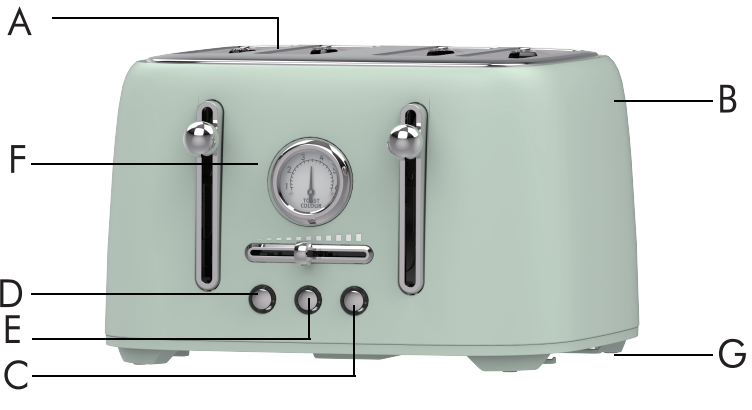

A Self-centring, extra wide and deep toasting slots.
B HIGH LIFT Once the toasting cycle has completed, raise the high lift lever to make it easier to remove smaller items.
C BAGEL The bagel setting works great for English muffins, too!
D DEFROST button Press to thoroughly toast frozen bread with an extended toasting cycle.
E CANCEL button Press to cancel the toasting cycle.
F Browning Control Dial Select the desired browning setting from '1' lightest to '6' darkest.
G Non-slip feet.

Note

This Breville 4 Slice Toaster is electronically controlled and will not operate until the toaster is plugged into a 120V power point, switched on and the lever latched down.

Warning

- Never operate the toaster on its side.
- Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire.
- This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or a fire.

Warning

Do not carry or move the toaster by holding the top metal cover between toasting slots as sharp edges may cause injury.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Connect only to a 120V power outlet.
- The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 8inch away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. May cause injury.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or

Warning

- Keep the toaster clean. Follow the cleaning instructions provided in this book.

- allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning can be contacted through email at support@longdeem.com.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.