 


ASSEMBLY INSTRUCTIONS

 
 
 
 
 
 
 
TV STAND

Steyle#E007

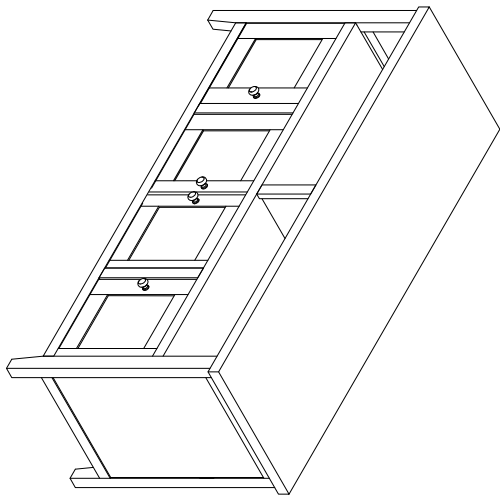

Please read instruction before assembly.
This unit must be assembly by two peoples.


Parts List

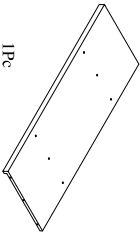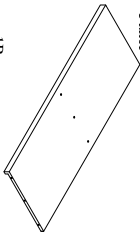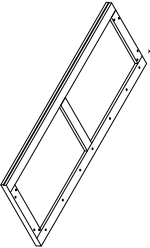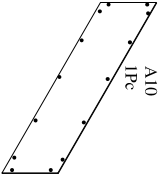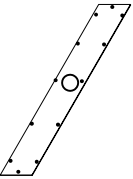A1:Bottom Panel	A2(L&R): Bottom Center Partition	A3: Middle Shelf Panel	A4:Top Center Partition
 1Pc	 2Pc	 1Pc	 1Pc
A5(L&R):Side frame	A6:Top Panel	A7	A8(L&R):Middle Door
 1Pc	 2Pc	 2Pc	 2Pc
A9(L&R): Side Door	A10	A11:Top Back Panel	A12:Foot
 2Pc	 1Pc	 1Pc	 2Pc


Hardware List

B1:Wood Dowel 15Pcs	B2:Cam Bolt 20Pcs	B3 Magnet 1sets	B4 Magnet 2sets
			
B5:Flat Head Screw 4Pcs	B6 Head Screw 4Pcs	B7:Round Head Screw 21Pcs	B8:Door Knob 4Sets
			
B9:Flat Head Screw 16Pcs	Glue 1Pc	Allen key	
			

 
Note: Please don't over tighten all the cam screws, assure the cam screw just fit in the plastic threaded insert, otherwise, the cannot might not be able to catch the cam screws.

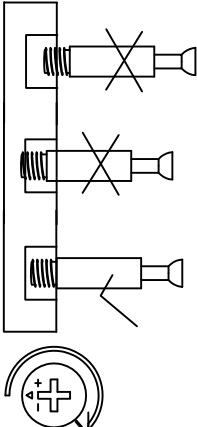

 
STEP 1

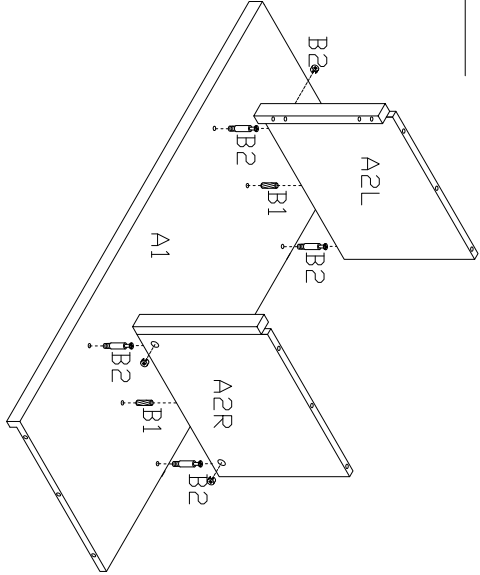

 
STEP 2

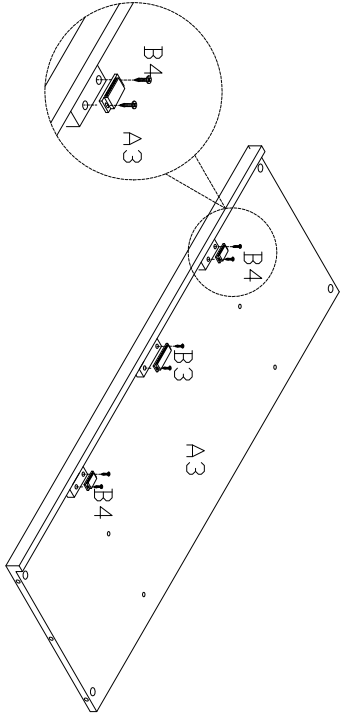

 
STEP 3

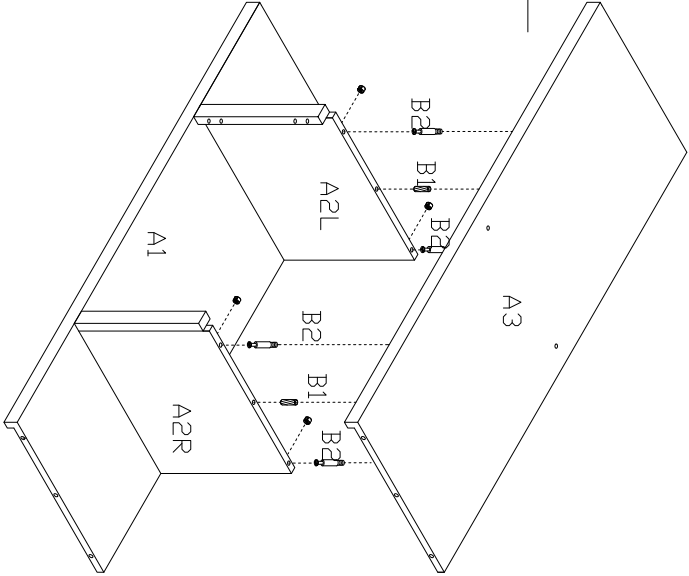

 
STEP 4

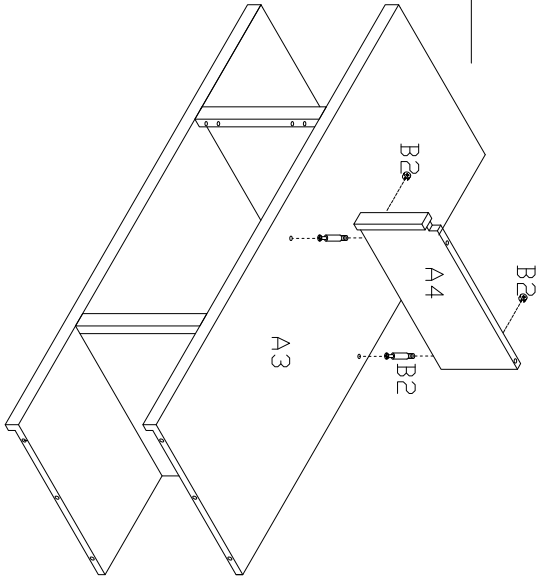

 
STEP 5

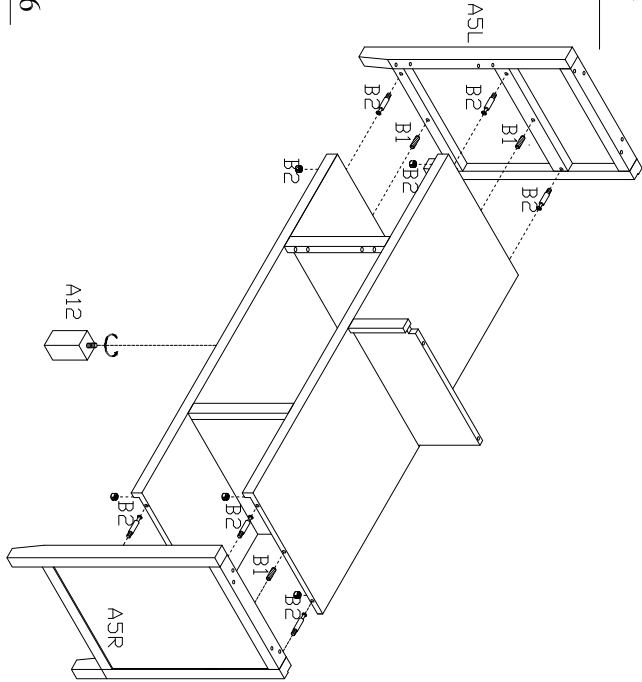

 
STEP 6

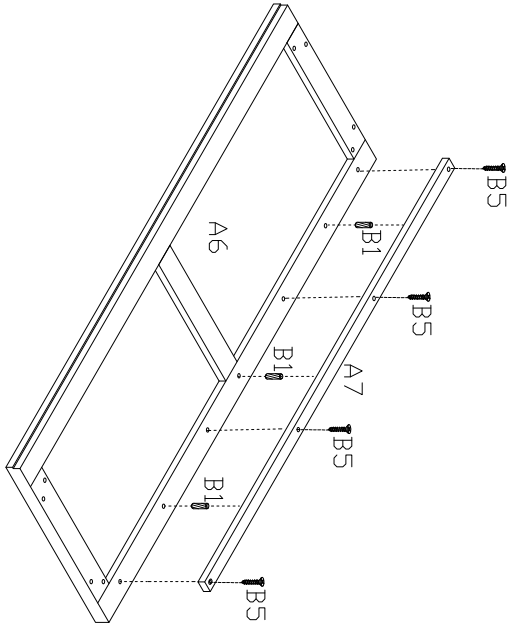

 
STEP 7

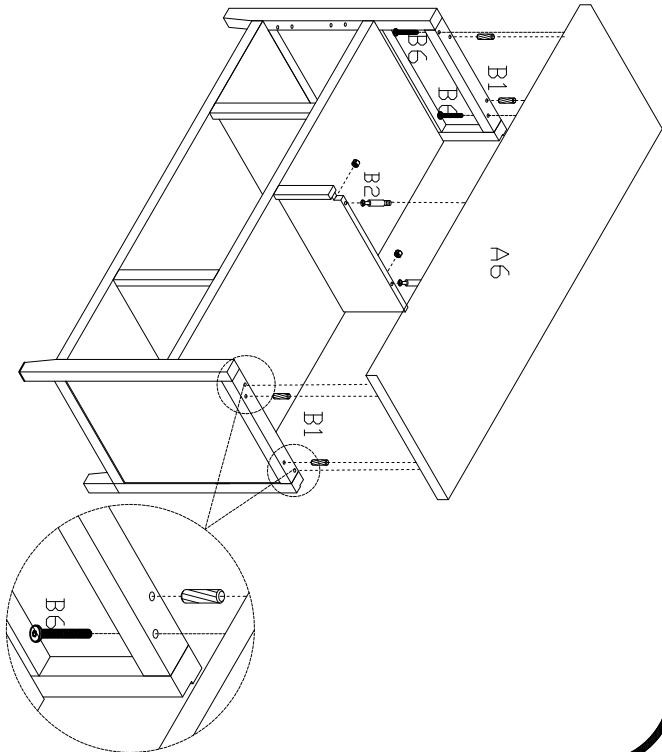

 STEP 8

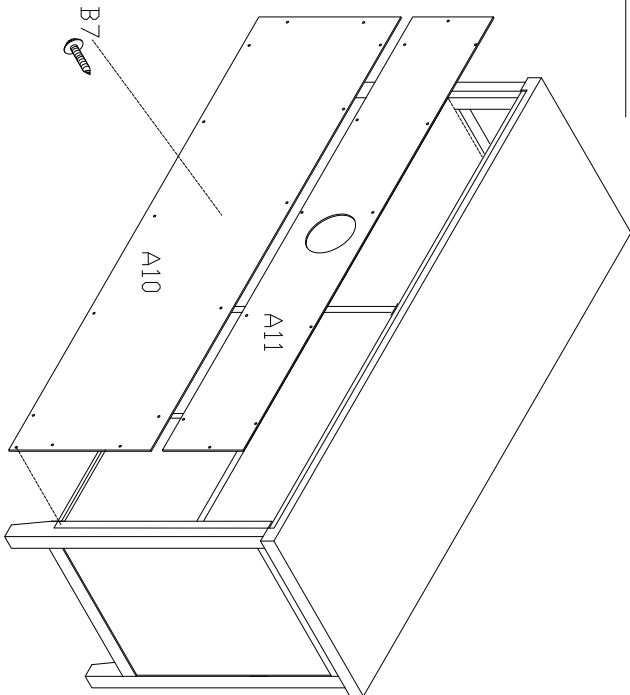

 STEP 9

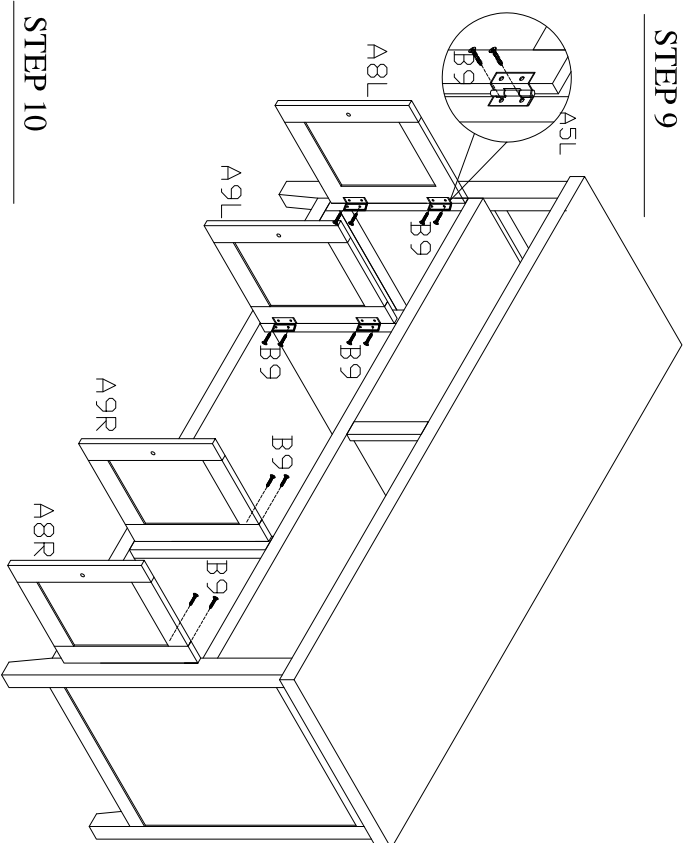

STEP 10

